

## Memory Content

000 Si570 startup frequency....YOU SET for your Si570 part

001 Plus or Minus Frequency Out Offset

002 Startup Memory Location

003 Startup Digit Position Selection

004 Frequency Out Multiplier (for SoftRock)

005 Frequency Out Divisor (for SoftRock)

006 Encoder pulses per increment (dial speed)

007 Encoder dial rotation direction

008-019 Reserved

020-999 Your Saved Frequencies

1xx-8yy Selects 3-bit encoded BandSwitch 1-8

USE 1) Initialize once by holding PB in while powering up. Micro will show level, reset EEPROM, and initialize

2) Hold knob in and rotate to select digit

3) Release and tune

4) Hold knob in for 3 sec to save freq in indicated mem location

5) Momentary push for Lock/Unlock

6) OFF/ON to activate changes

