

TC-K333ESA/K990ES

SERVICE MANUAL

AEP Model
TC-K990ES

E Model
TC-K333ESA



* Dolby noise reduction and HX Pro headroom extension manufactured under license from Dolby Laboratories Licensing Corporation. HX Pro originated by Bang & Olufsen.

"DOLBY", the double-D symbol  and "HX PRO" are trademarks of Dolby Laboratories Licensing Corporation.

SPECIFICATIONS

Recording system 4-track 2-channel stereo
Fast winding time Approx. 90 sec. (with Sony C-60 cassette)
Bias AC bias
Erasing head × 1 (S&F head)
Recording head × 1 (LA head)
Playback head × 1 (LA head)
Motors Capstan motor × 1
(direct-drive linear torque BSL motor)
Reel motor × 1 (DC motor)

Signal-to-noise ratio (at peak level)

Cassette (Dolby NR OFF)	Type IV (Sony Metal-S)	Type II (Sony UX-S)	Type I (Sony HF-S)
	61 dB	59 dB	57 dB

Measured at peak level weighted without NR. The S/N is improved by about 15 dB at 500 Hz and by about 20 dB about 1 kHz with Dolby-C NR on, and by 5 dB at 1 kHz and by 10 dB about 5 kHz with Dolby-B NR on.

Harmonic distortion 1.3% (with Sony Metal-S 250 nWb/m, 315 Hz, 3rd H.D.)

Frequency response (Dolby NR OFF)

Type IV cassette (Sony Metal-S)	15 - 22,000 Hz (±3 dB, IEC) 15 - 16,000 Hz [±3 dB (-4dB recording)]
Type II cassette (Sony UX-S)	15 - 20,000 Hz (±3 dB, IEC)
Type I cassette (Sony HF-S)	15 - 18,000 Hz (±3 dB, IEC)

Wow and flutter ± 0.04% W.Peak (IEC)
0.022% W.RMS (NAB)
± 0.065% W.Peak (DIN)

Inputs

Line inputs (phono jacks)	Sensitivity	0.16 V
	Input impedance	47 k ohms
CD DIRECT INPUT	Input impedance	47 k ohms

Model Name Using Similar Mechanism	TC-K333ESG
Tape Transport Mechanism Type	TCM-200D10

Outputs

Line outputs (phono jacks)	Rated output level	0.5 V at a load impedance of 47 k ohms
	Load impedance	Over 10 k ohms
Headphones (stereo phone jack)	Output level	0 - 3 mW at a load impedance of 32 ohms

General

Power requirements

AEP model:
220 - 230 V AC, (or 240 V AC
adjustable by Sony personnel),
50/60 Hz

E model:
120, 220, or 240 V AC adjustable,
50/60 Hz

Power consumption 31 W
Dimensions

Approx. 470 × 140 × 380 mm (w/h/d)
(18 5/8 × 5 5/8 × 15 inches)

including projecting parts and controls

Weight

Approx. 12.0 kg (26 lbs 8 oz)

Model for other countries: Approx. 11.2 kg

Supplied accessories

Audio connecting cords (2)
Screws (8)
Wireless remote commander (1)*
Sony SUM-3(NS) batteries (2)*

* Not supplied with model for European countries

Design and specifications are subject to change without notice.

Note

This appliance conforms with EEC Directive 87/308/EEC regarding interference suppression.

STEREO CASSETTE DECK
SONY®

TABLE OF CONTENTS

Section	Title	Page
Specifications		1
Servicing Note		2
Model Identification		3
SECTION 1. GENERAL		4
SECTION 2. DISASSEMBLY		8
SECTION 3. ADJUSTMENTS		
3-1. Mechanical Adjustments		10
3-2. Electrical Adjustments		12
SECTION 4. DIAGRAMS		
4-1-1. IC502, 505 (CX20188) Pin Functions		17
4-1-2. IC601 (M50940-313SP) Pin Functions		18
4-1-3. IC801 (M50964-226SP) Pin Functions		19
4-1-4. IC881 (HD404240A31S) Pin Functions		20
4-2. Circuit Boards Location		20
4-3. IC Block Diagrams		21
4-4. Semiconductor Lead Layouts		22
4-5. Block Diagram		23
4-6. Printed Wiring Boards (Audio Section)		27
4-7. Schematic Diagram (Audio Section)		31
4-8. Schematic Diagram (Syscon Section)		35
4-6. Printed Wiring Boards (Syscon Section)	...	39
SECTION 5. EXPLODED VIEWS		
5-1. Overall Section		43
5-2. Front Panel Section		44
5-3. Chassis Section		45
5-4. Mechanism Section -1 (TCM-200D10)		46
5-5. Mechanism Section -2 (TCM-200D10)		47
SECTION 6. ELECTRICAL PARTS LIST		48

SERVICING NOTE

Flexible Circuit Board Repairing

- Keep the temperature of the soldering iron around 270°C during repairing.
- Do not touch the soldering iron on the same conductor of the circuit board (within 3 times).
- Be careful not to apply force on the conductor when soldering or unsoldering.

Notes on chip component replacement

- Never reuse a disconnected chip component.
- Notice that the minus side of a tantalum capacitor may be damaged by heat.

TC-K333ESA Model

Checking the Operating Voltage

- Before operating the unit, be sure that the operating voltage of your unit is identical with that of your local power supply.

Where purchased	Operating voltage
European countries	220 - 230 V AC, 50/60 Hz
Other countries	120, 220 or 240 V AC adjustable, 50/60 Hz A voltage selector is located on the rear panel. If the selector must be reset, disconnect the AC power cord and set the selector to the appropriate voltage.

VOLTAGE selector

SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY MARK OR DOTTED LINE WITH MARK ON THE SCHEMATIC DIAGRAMS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

For higher quality recording/playback


- **The Dolby HX PRO* system** which improves the linearity of the tape's high-range response during recording.
- **Bias and recording level calibration** which ensures optimum recording conditions to bring out the best in every tape.
- **Three-head system (separate recording, playback and erase heads)** which allows you to instantly check the recorded sound while recording is in progress.
- **Ceramic cassette holder** for improved stability of tape running during playback and recording.
- **Professional-level deck design** for high mechanical stability and maximum performance.

For your convenience

- **The AMS and Memory Play functions** which provide easy access to a desired selection.
- **Timer-activated playback and recording** through the use of an optional timer.

For easier operation

- **Easy-to-read linear counter** which shows the elapsed recording or playing time.

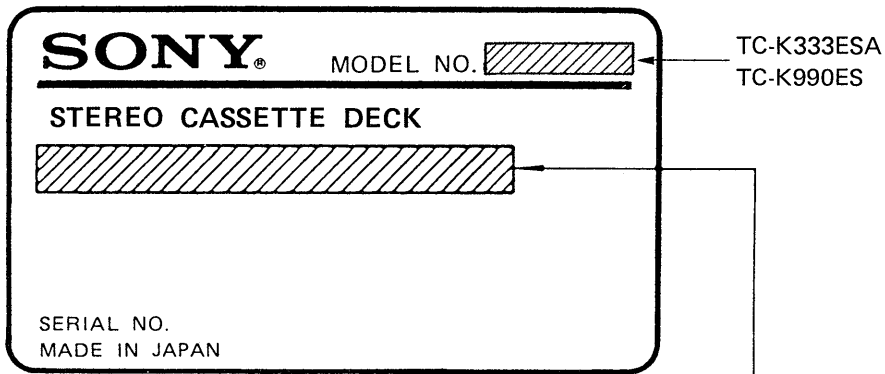MODEL IDENTIFICATION*—Specification Label—*


AEP, Germany Model: AC: 220–230V ~ 50/60Hz

E Model: AC: 120, 220–240V ~ 50/60Hz


SECTION 1 GENERAL

This section is extracted from instruction manual.

Identifying the Parts

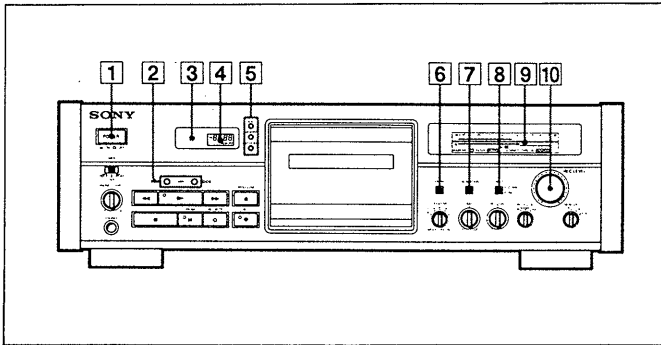

Identifying the Parts

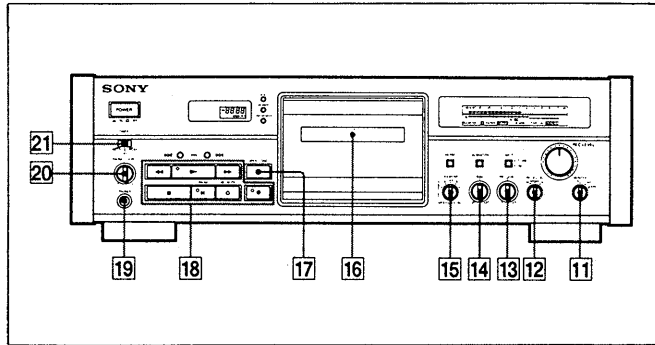

Front Panel

For details, refer to the page number indicated in parenthesis .

- 1 POWER switch
- 2 AMS (Automatic Music Sensor) buttons (24)
- 3 Remote control sensor
You can remotely control this cassette deck with:
— The supplied remote commander.
— A remote commander that came with a Sony amplifier or receiver if it has the  mark and cassette deck control capability.
— An optional Sony remote commander with the  mark and cassette deck control capability.
- 4 LINEAR COUNTER (28)
- 5 Counter buttons
RESET button (28)
MEMORY button (26, 28)
DISPLAY MODE button (20)
- 6 Dolby HX PRO button (48)
- 7 CALIBRATION button (42)
- 8 INPUT button (30)
- 9 PEAK PROGRAM METER (34)
- 10 REC (recording) LEVEL control (30, 34)

(Continued on next page.)

Front Panel


For details, refer to the page number indicated in (parenthesis) .

(Continued from previous page.)

- 11 MONITOR switch (36)
- 12 REC EQ CAL (recording equalizing calibration) switch (LOW, NORMAL, HIGH) (44)
- 13 REC (recording) LEVEL control for calibration (38, 42)
- 14 BIAS control (38, 42)
- 15 DOLBY NR (noise reduction) /MPX FILTER switch (20, 30)
- 16 Cassette holder
- 17  OPEN/CLOSE button
- 18 Tape operation buttons and indicators
◀ (rewind) button
■ (stop) button
▶ (play) button and indicator
▶▶ (fast-forward) button
● REC (recording) button and indicator
|| PAUSE button and indicator
○ REC MUTE (record muting) button (50)
- 19 PHONES jack (stereo phone jack) (22)
- 20 PHONE (headphones) LEVEL control
- 21 TIMER switch (54)

Identifying the Parts

(Except for European model)

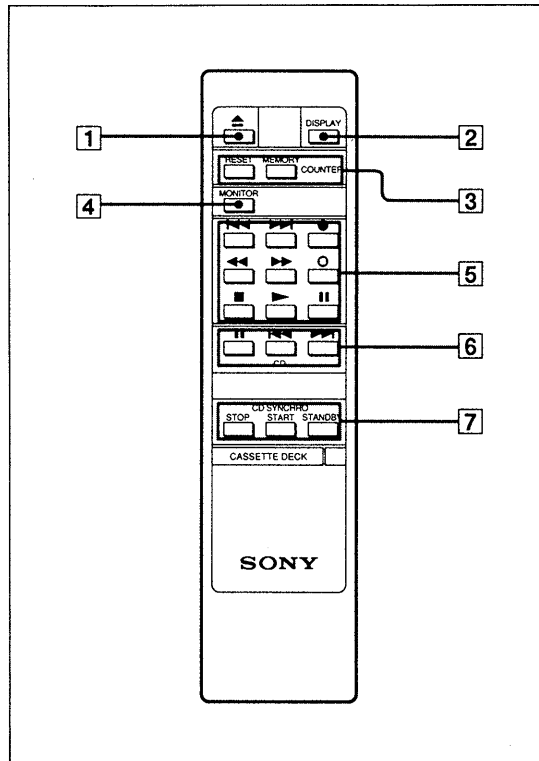

REMOTE Commander

The controls on the REMOTE commander are identical in function and operation to those with the same name on the main unit.


For details, refer to the page number indicated in (parenthesis).

- 1 ▲ (open/close) button
- 2 DISPLAY button
- 3 Counter buttons
- 4 MONITOR button
- 5 Tape operation buttons
- 6 CD (Compact Disc) buttons
for controlling Sony CD players
- II (pause) button
- ◀▶ / ▶▶ buttons for locating selections sequentially
- 7 CD SYNCHRO buttons
for synchronized recording with a Sony CD player

Making an Optimum Recording


Bias and Recording Level Calibration

There are many different types of cassettes on the market, each with varying magnetic properties. Although your unit is equipped with the ATS (Automatic Tape Selection) system which sets the appropriate equalization characteristics and bias current for each tape type, an additional calibration adjustment can often produce even better results. Use the bias current and recording level calibration function to obtain the optimum recording conditions for your tape.

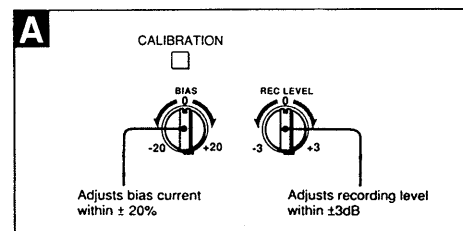

Bias calibration

Choosing the optimum bias current for a tape ensures minimum distortion and flat frequency response. Lowering the bias current boosts high-frequency response, but also results in higher distortion. Raising the bias, on the other hand, reduces distortion, but also dampens high-frequency response. Optimum bias is thus obtained when the bias current and high-frequency response are well balanced.

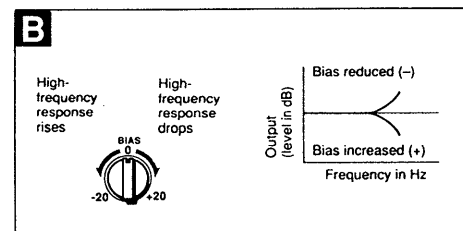


- If the bias current is higher or lower than the optimum setting for a certain tape, the frequency response changes as shown in the Chart in Fig. B. Changing the bias can thus be used to tailor the response to your liking, for example by slightly emphasizing the upper or lower end.
- The frequency response of metal tapes is much less affected by changes in the bias current than other tape types. With some tapes, the adjustment range of this deck ($\pm 20\%$) may therefore not be sufficient to cover every possible requirement.


Recording level calibration

Even when the recording level is adjusted correctly, using a tape with low sensitivity will result in a low playback level. The REC LEVEL calibration control allows you to compensate for sensitivity differences among tapes to equalize both recording and playback levels. This is especially important when using the Dolby NR system, since it is most effective when recording and playback levels are the same.

Making an Optimum Recording

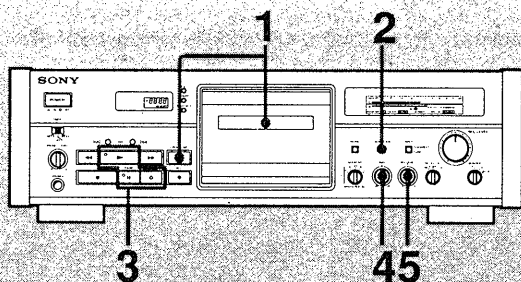

1

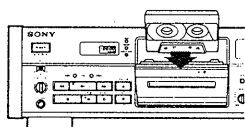


2


CALIBRATION




3

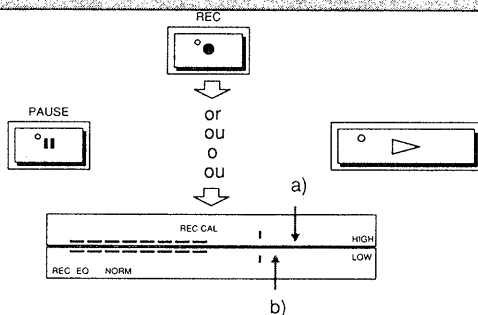

4

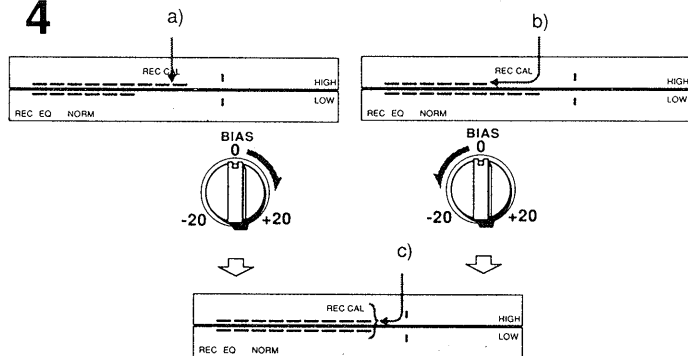

5

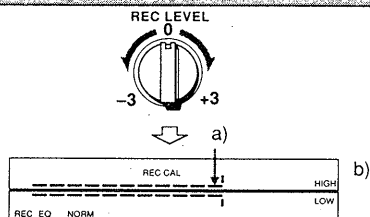

1 Insert the cassette to be used for recording.

2 Press CALIBRATION.

3 Press ●, then || or ► to activate the recording test tone.

- a) Playback level for an 8-kHz signal
- b) Playback level for a 400-Hz signal

Note

- The sound cannot be monitored during the calibration operation.
- It takes 2 to 3 seconds for the test tone level to stabilize.

4 Adjust BIAS until both meters indicate equal playback levels.

- a) A high reading on the upper meter indicates a low bias current.
- b) A low reading on the upper meter indicates a high bias current.
- c) An equal reading on both meters indicates the optimum bias current condition.


5 Adjust REC LEVEL CALIBRATION until both meters reach the recommended level (REC CAL).

- a) Recommended level
- b) The bias current is now adjusted to the optimum level and the tape sensitivity compensation has been set. Press ■, then set CALIBRATION to OFF. Rewind the tape and start the actual recording.

Making an Optimum Recording

Recording Equalization Calibration

Although bias current and equalization are automatically set by the Automatic Tape Selection (ATS) function for the tape being used, you can use the REC EQ CAL switch to change the recording characteristics according to the nature of the source material or to compensate for the particular characteristics of the tape.

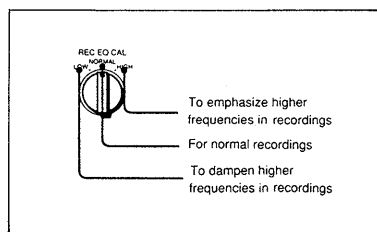

Bias Calibration Recording

Use the REC EQ CAL switch in conjunction with the BIAS control to modify bands of sound and record according to the tape's characteristics.

- When recording music which has strong middle and low frequencies**
 Set the bias at flat with the REC EQ CAL switch set in the HIGH position to increase the bias current.
 Adjust the BIAS control so that the HIGH and LOW meters indicate equal readings.
- When recording music which has strong high frequencies**
 Set the bias at flat with the REC EQ CAL switch set in the LOW position to decrease the bias current.
 Adjust the BIAS control so that the HIGH and LOW meters indicate equal readings.

Note

With metal tape, because the amount of frequency characteristic modulation is not in proportion to that of the bias, the optimum bias current may not be obtained using the methods above.

Another use of the REC EQ CAL switch


When using special tapes, adjusting the BIAS control with the REC EQ CAL switch set in the NORMAL position may not result in equal readings on the HIGH and LOW meters. If this occurs, adjust the BIAS control after setting the REC EQ CAL switch to HIGH or LOW.

Recording


What is the Dolby HX PRO System?

The Dolby HX PRO system provides improved linearity in high-range frequency response during recording. Tapes recorded with this system retain the same high quality even when played back on other tape decks.

As shown in Fig. A, characteristics such as output level and distortion differ widely according to the bias (high-frequency) current.

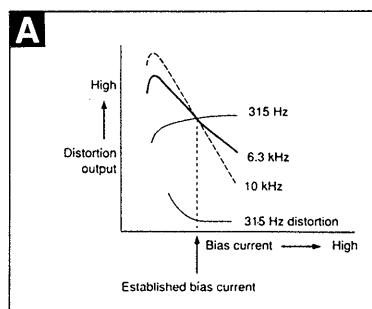

In conventional systems (see Fig. B), the bias current is susceptible to variations in certain recording signals which may cause fluctuations in frequency response, distortion, or other unwanted characteristics.

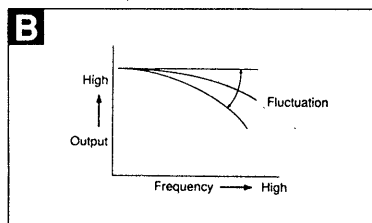


With the Dolby HX PRO system, the effective bias amount added to the bias current is controlled in millisecond units to greatly reduce distortion, improving linearity in high-range response and ensuring high-intensity recording with minimal distortion and noise.


SECTION 2 DISASSEMBLY

Note: Follow the disassembly procedure in the numerical order given.

Cassette Holder

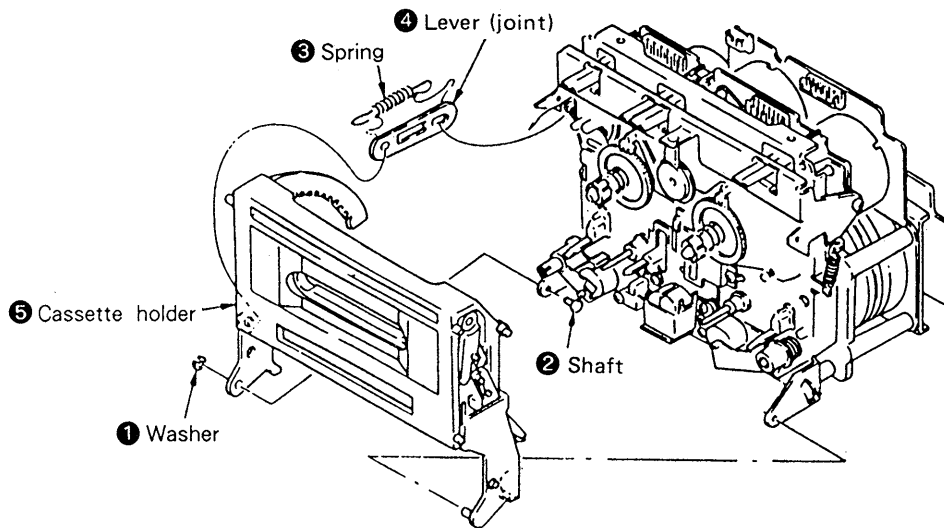


Ornamental Plate


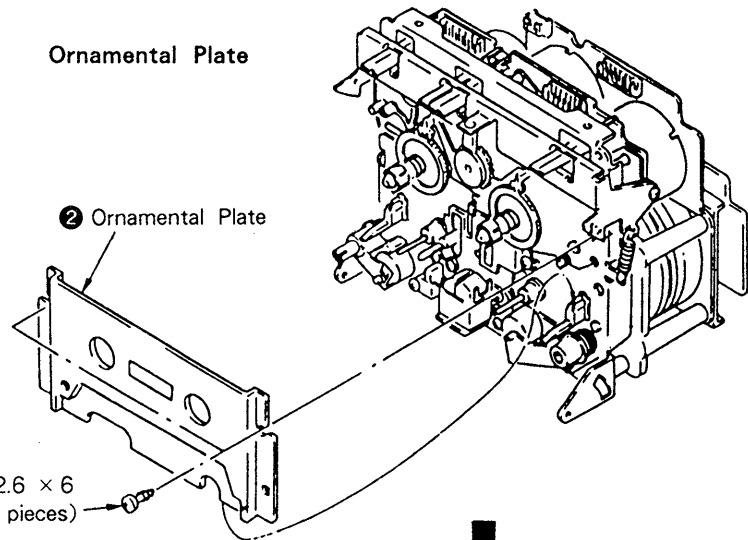


Pinch Lever/Lever FR

- ①-④ : Pinch lever S
 ① and ② : Pinch lever T
 △ and △ : Lever FR

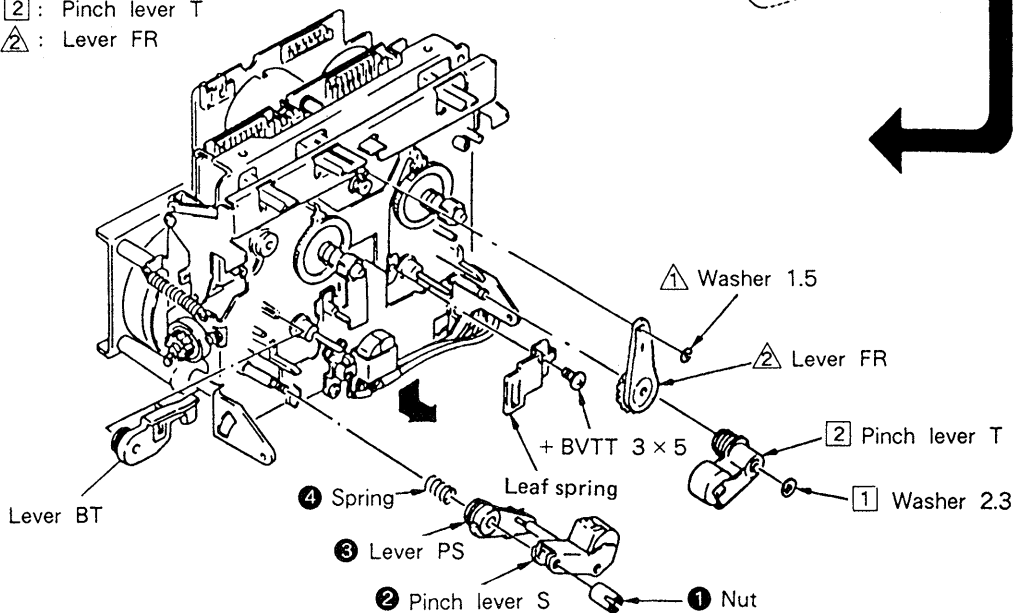

Comparator Board/Capstan Board/Flywheel/FG Board

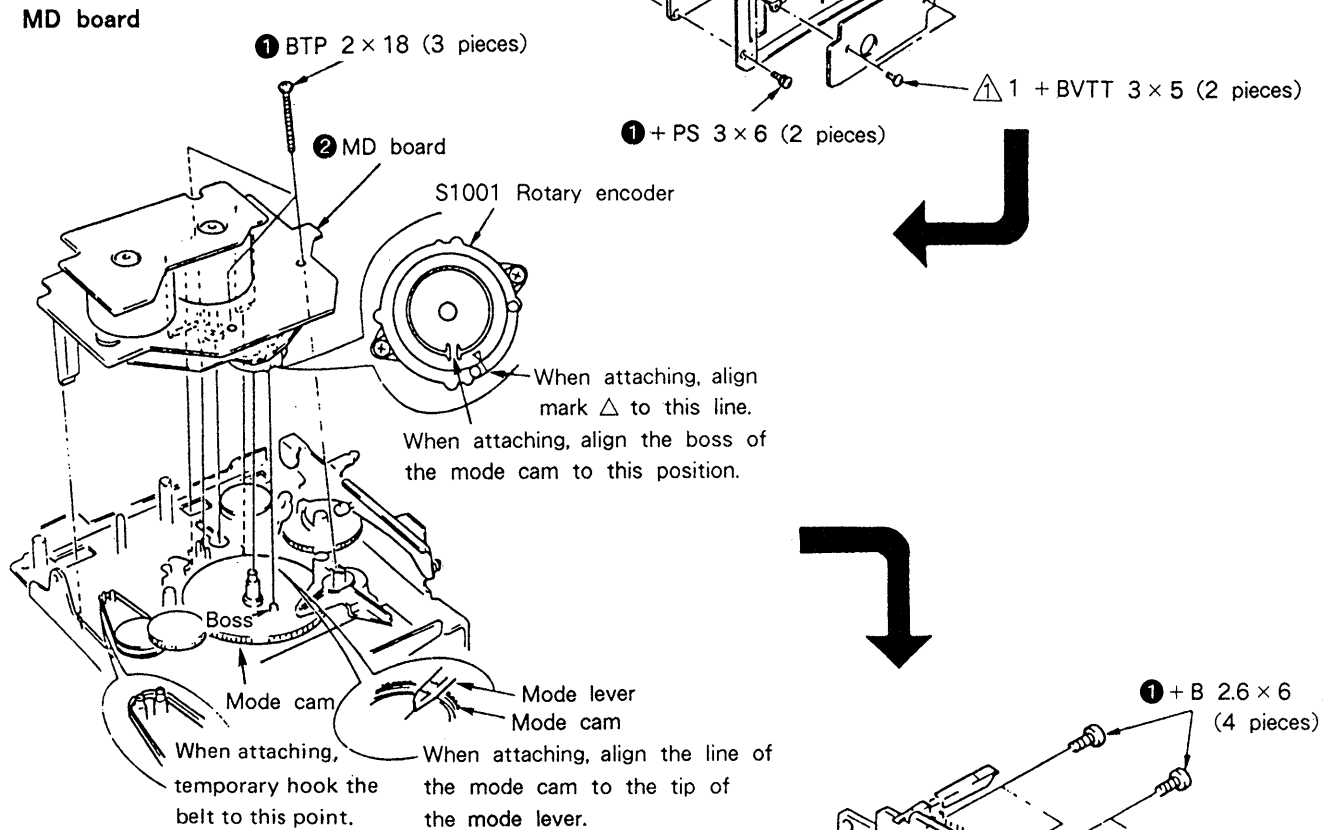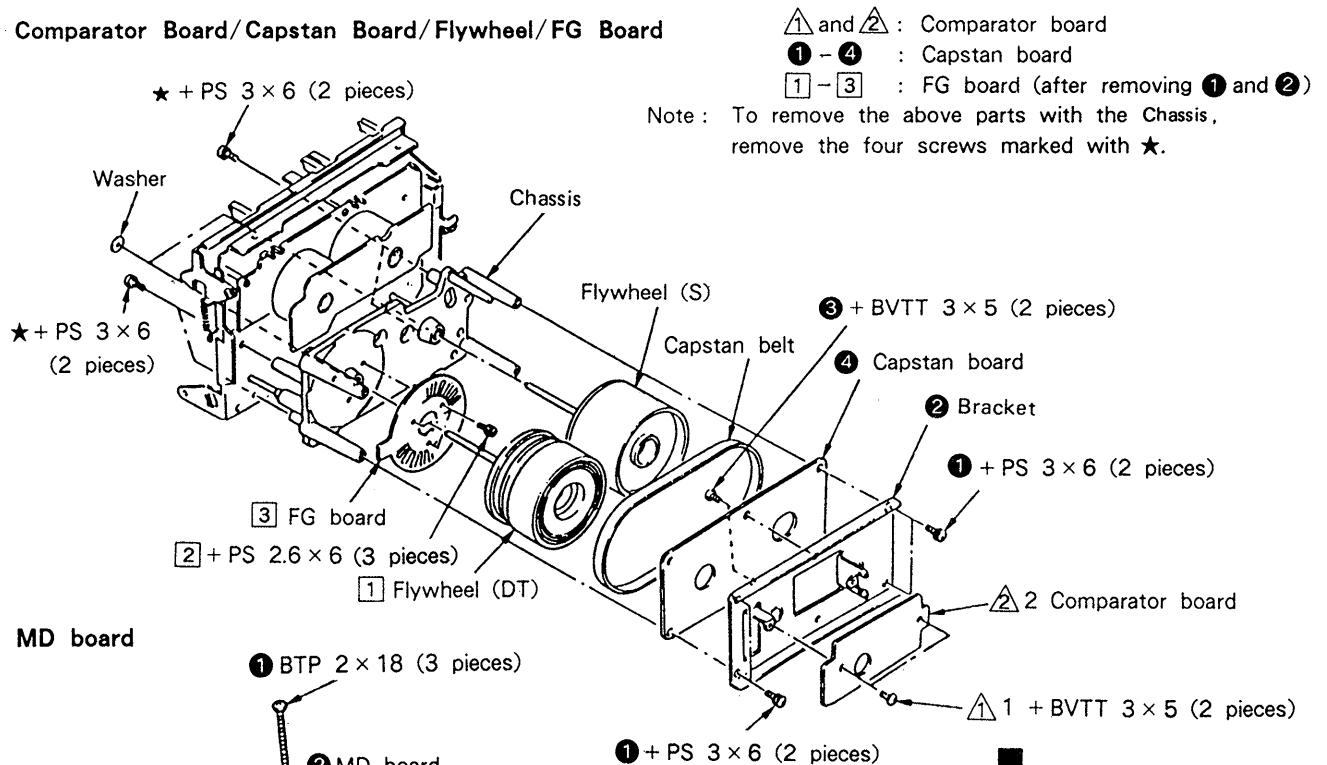


SECTION 3 ADJUSTMENTS

3-1. MECHANICAL ADJUSTMENTS

PRECAUTION



1. Clean the following parts with a denatured alcohol-moistened swab:

record/playback head	pinch roller
erase head	rubber belts
capstan	idlers
2. Demagnetize the record/playback and erase head with a head demagnetizer.
3. Do not use a magnetized screwdriver for the adjustments.
4. After the adjustments, apply suitable locking compound to the parts adjusted.
5. The adjustments should be performed with the rated power supply voltage unless otherwise noted.

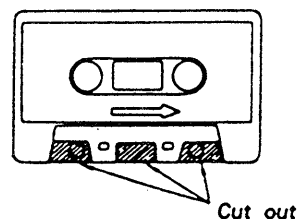

2. Phillips screwdriver (medium-size):
For the head adjustment screws
Blade-type screwdriver (large-size):
For the supply pinch roller adjustment screws
3. Pen light
4. WS-48B(3 kHz, 0 dB)
5. P-4-A100(10kHz, -10dB)

Definition of Terms: The figures are of a record/playback head.

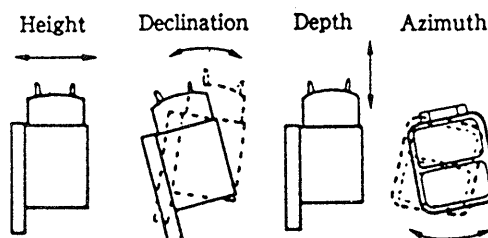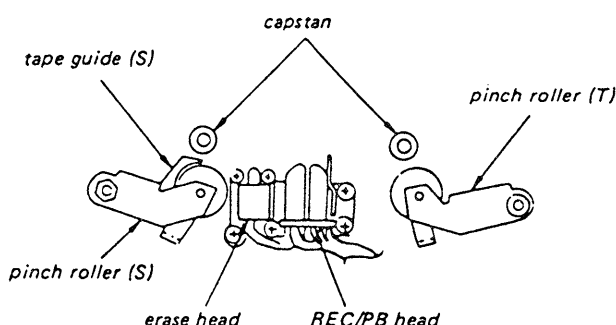

Adjustment method:

Supply Pinch Roller

Note: Only perform this adjustment when the supply pinch roller is to be replaced.

1. Insert the mirror cassette and put the unit in record/playback mode.
2. Check to see whether the tape is curling at the record/playback head guide or the pinch roller guide.
If it is curling, remove the curl by adjusting the (A) tape curl adjustment screw. Then, check that the tape is running past the middle of the erasehead.

Record/playback Head

Note: Only perform this adjustment when the record/playback head is to be replaced.

1. Insert the mirror cassette and put the unit in record/playback mode.
2. **(Height Adjustment)** Check to see if the tape is curling at the tape guide of the head. If it is curling, tighten screws (A), (B), and (C), respectively by the same angle, moving the head so that it remains at the same angle throughout the

Tape Path Adjustment

•Refer to Adjustment Position on page 12.


Note: When using the adjustment methods for other than replacement reasons, please do not tamper unnecessary with the adjustment screws or the erasehead because either the supply pinch roller guide or the record/playback head will be made the standard tape paths. Moreover, when it is necessary to adjust and replace two or more of any of the heads and/or pinch rollers, replace them one by one, completely taking out first tape path, and then replacing second one.

Preparation:

1. Mirror cassette CQ009C 8-909-708-01
(or CQ012C 8-909-708-02)

If one does not have this, cut out the sections of a 120-minute cassette shell as indicated below and use that cassette.

procedure, If it curls on the bottom side of the mirror cassette (actually the inner side), tighten all the screws equally; but loosen them if the tape begins to curl on the top side(other side).

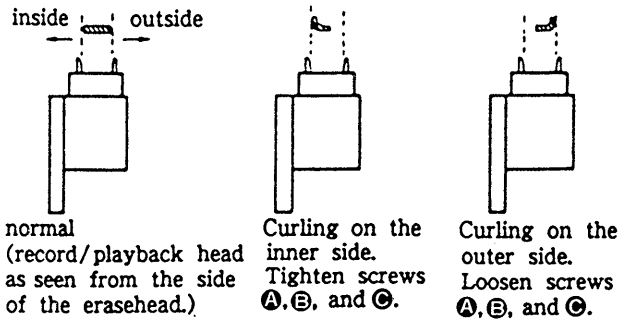

3. **(Declination Adjustment)** While in the record/playback position, set the back tension to 0 (wind the supply reel with something thin like a pencil in counterclockwise direction) and make sure there is no curling or shifting (shifting up/shifting down) at the guide of the record/playback head. Because shifting can only occur due to a difference in the width of the tape and that of the tape guides (curling will otherwise occur), it is necessary to pay close attention since it can be easily overlooked.

When there is a shift, tighten screws B and C equally and change the declination of the head. If the tape is shifting up, tighten the screws, and if it is shifting down, loosen them.

4. Repeat the adjustments in steps 2 and 3 and fine adjust the height and the declination.


5. **(Preliminary Azimuth Adjustment)**

After demagnetizing and cleaning the adjustment head, play back WS-48B (3kHz, 0dB).

Turn screw C so that the reading on the level meter of the unit or that of the level meter connected to LINE OUT is maximized.

If the screw is turned at least half a revolution, repeat the adjustments from step 1.


6. **(Tape Path Check)** Connect the oscilloscope to LINE OUT and play back P-4-A100 (10kHz, -10dB) to display a resurge waveform. After 20 seconds of record/playback (after the tension within the loop has been increased sufficiently), make sure the variation in the resurge is within ± 90 degrees (within ± 45 degrees is desired). If the variation is greater than this, it is because the declination and/or the height adjustment is not perfect. Repeat the adjustment from step 1.

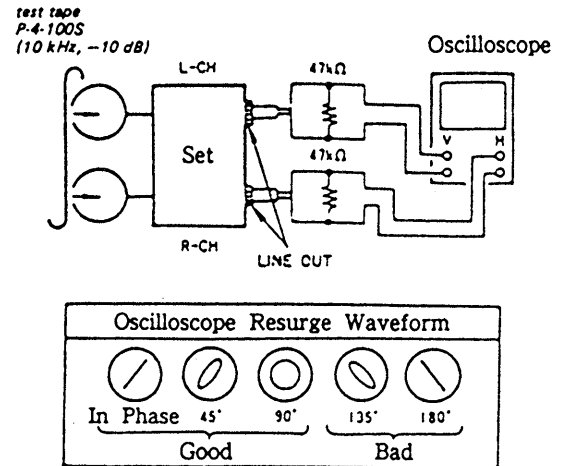


Erasehead

Note: Only perform this adjustment when the erasehead is to be replaced.


1. Insert the mirror cassette and put the unit in record/playback mode.
2. **(Azimuth Adjustment)** Adjust the azimuth of the erasehead by adjusting screws E and F so that the runs are as evenly as possible.

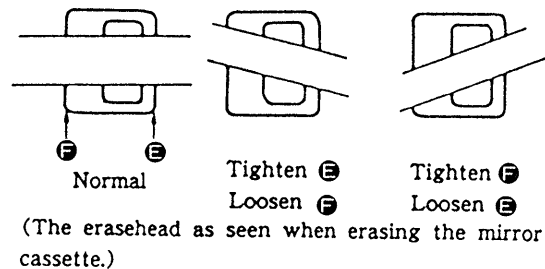

3. **(Height adjustment)** Turn screws D, E, and F all by the same angle so that the portions of the erasehead visible at top and bottom are nearly of equal width. If the width at the top is greater, tighten the screws; if the width at the bottom is greater, loosen the screws.

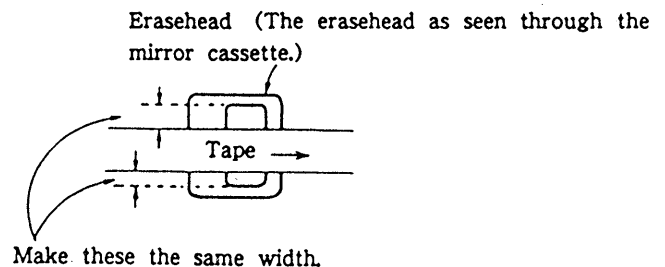


4. **(Declination Adjustment)** Leaving it in the playback position, put the back tension to 0 and make certain the erasehead part and supply pinch roller guide part do not shift. If there is a shift, turn the screw ⑤ and change the declination. Looking at it using the mirror cassette, if the tape shifts up, tighten the screw, and if it shifts down, loosen the screw.
5. Repeat the adjustments beginning with step 2 and fine adjust the height and declination. And make sure the tape does not curl up on the pinch roller guide or the guide part of the record/playback head.
6. **(Depth Adjustment)** In order to make the entire head play the tape smoothly, and to make sure the depth of the erasehead is neither too shallow nor too deep, loosen screw ⑥ a bit.

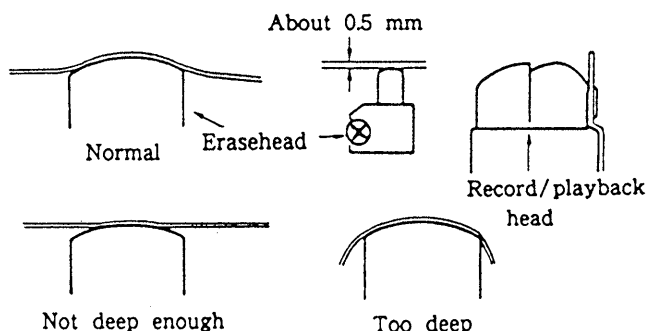

Check

1. Check to make sure that there are no curls or shifts throughout the whole tape path and that the tape runs smoothly.
2. Reapply the locking compound to the adjusted screws. (The locking compound should only be applied to screw ⑥ after the azimuth has been adjusted.)

Adjustment Position: As seen from the cassette, side (top) and MD as seen head on (bottom).

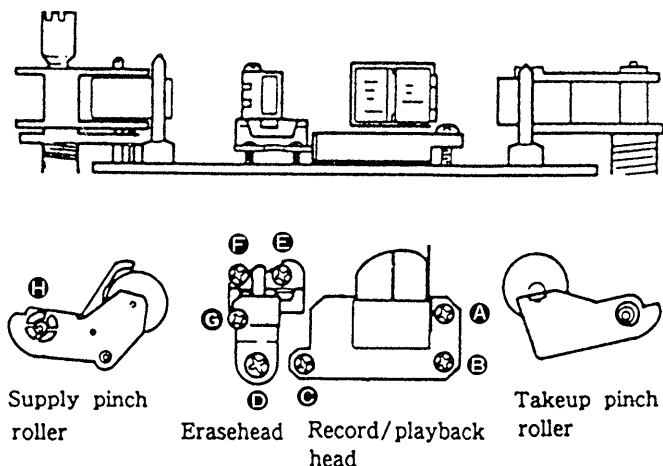

Pinch Roller Pressing Force Measurement


Mode: playback

Hook needle of the tension gauge to the pinch roller shaft and push back pinch roller to detach it from capstan. Then, return it gradually to capstan and read the gauge when the pinch roller begins turning.

Standard Limits:

Tape-up side: 270 – 350 g(9.5 – 12oz)

Supply side: 180 – 280g(6.4 – 9.9oz)

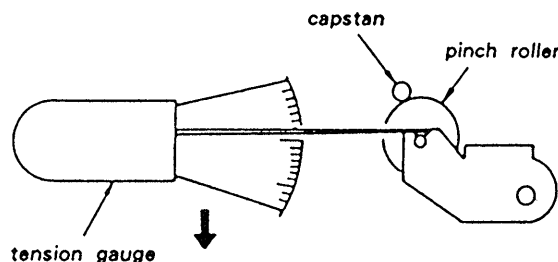

Torque Adjustment and Measurement

1. Insert a tape for torque measurement, CQ-102C, and put the set to PLAY mode. Adjust RV801 so that the reading of the torque meter is 40 ± 5 g.cm.
2. After the adjustment, measure the back-tension and the FF/REW torque and check that the following specifications are satisfied.

Torque	Torque Meter	Reading
FWD	CQ102C	30 – 60g·cm (0.42 – 0.83oz·inch)
FWD Back tension	CQ-102C	7 – 11g·cm (0.09 ± 0.015oz·inch)
FF/REW	CQ-201B	65 – 90g·cm (0.90 – 1.25oz·inch)

3-2. ELECTRICAL ADJUSTMENTS

Note: The adjustment should be performed in the order given in this service manual.

The adjustment should be performed for both L-CH and R-CH.

- Simultaneous REC/PB Mode:
Input the signals to LINE IN terminal and set to REC mode. Set the monitor switch to TAPE, and monitor the recorded signal from LINE OUT terminal.
- Switch Position:
DOLBY NR OFF
TIMER OFF
MONITOR TAPE
HX PRO OFF
CALIBRATION OFF
CD DIRECT OFF
BIAS CENTER CLICK
REC LEVEL CENTER CLICK

● Standard Record:


Deliver the standard input signal level to the input jack and set the REC LEVEL control to obtain the standard output signal level.

Standard Input Level

Input Terminal	LINE IN
source impedance	10k Ω
input level	0.25 V (-10 dB)

Standard Output Level

Output Terminal	LINE OUT
load impedance	47k Ω
output level	0.44 V (-5 dB)

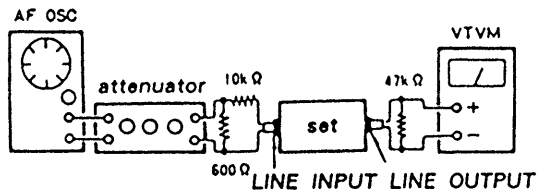


MPX FILTER Check

Setting: DOLBY switch: OFF
MPX FILTER switch: OFF

Procedure:

1. Mode: stop

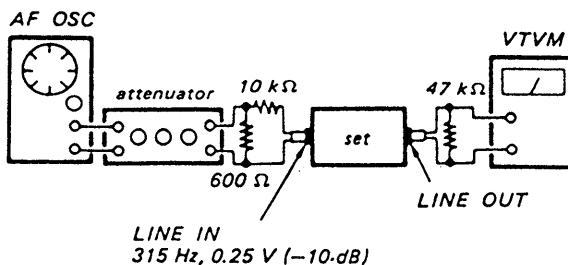

2. Apply 315Hz, 0.25V(-10dB)signal and adjust REC LEVEL(RV501) control so that the LINE OUT level is 0.44V(-5dB).
3. Apply 19kHz 0.25V(-10dB)signal and confirm that the LINE OUT level is 0.013V(-35dB)or less.


Adjustment Limits:

DOLBY NR switch: B or C
MPX FILTER switch: Line output level when ON.
315Hz: Within 0.49 to 0.39V(within -4dB to -6dB)
19kHz: 0.013V(-35dB)or less.


Record/Playback Head Azimuth Adjustment

Procedure:


1. Mode: playback

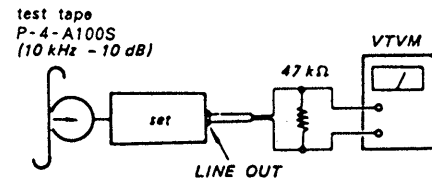

2. Turn the adjustment screw for the maximum output levels. If these levels do not match, turn the adjustment screw until both of output levels match together within 0.5dB.

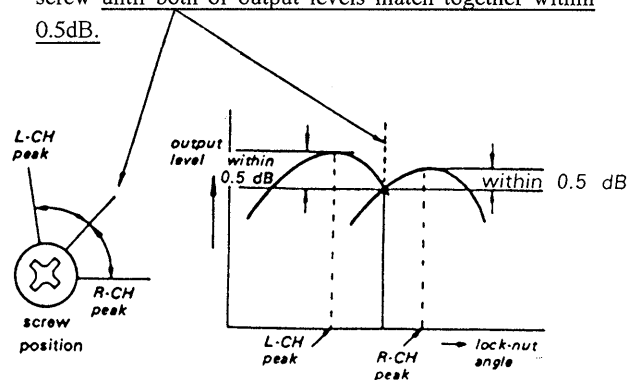


Adjustment Location:

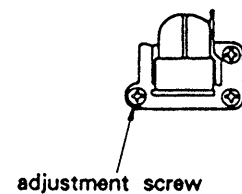

Playback Level Adjustment

Procedure:

Mode: playback

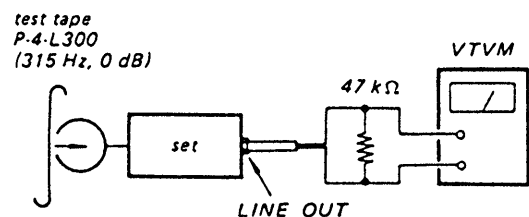

Adjust RV101(L-CH)andRV201(R-CH)to obtain the specified LINE OUT level.

Adjustment Limits:

LINE OUT level: 0.301 to 0.338V

(-8.2 to -7.2dB)

Level difference between channels:

less than 0.5dB

Check that the LINE OUT level does not change in playback mode while changing the mode from playback to stop several times.


3. Phase check

— Play mode —


Reference tape for adjustment

P-4-A100

(10kHz, -10dB)

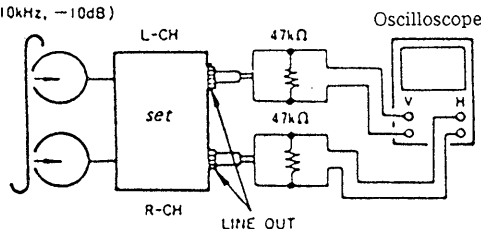


- Check that the phase difference between L-ch and R-ch is within 0 ~ (same to 90°)

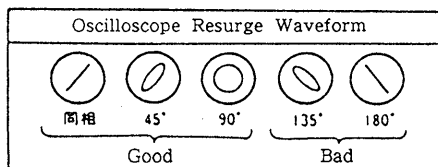

Bias OSC Frequency Adjustment

Procedure:

- Record mode

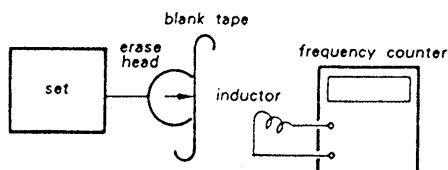

- Connect the frequency counter to the inductor which functions at 10mH. (When the inductor is a closed magnetic circuit, redesign the inductor to be an open magnetic circuit.)
- Remove the cassette lid, insert the cassette, and put the unit into REC mode.

- Move the inductor from the side in close to the erase head to check the value of the bias.
- Adjust CP501 so that the reading on the frequency counter is 105kHz ± 1kHz.

Bias current adjustment

- Set the HX PRO switch to ON and insert the METAL tape.
- Set RV104, RV204, RV105, RV205, RV106, and RV206 to be in the center position.
- Connect a digital voltmeter to CNE504 (between 2-1 and 2-3) and adjust the adjustment cores of T101 and T201 so that the voltage is minimized.

CrO₂ Bias and Record Level Adjustment

Note: This adjustment should be made before Record Bias Adjustment.

Setting:


REC LEVEL knob: standard record position.

(See page 12.)

HX PRO switch: ON

Procedure:

- Mode: simultaneous REC/PB

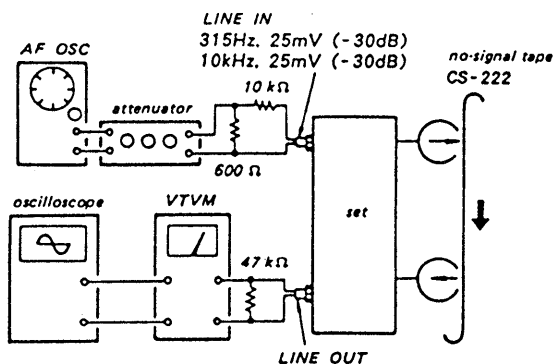

- Adjust RV106(L-CH) and RV206(R-CH) so that the playback output level of 10kHz signal is 0.3dB -0.3dB with respect to that 315Hz. ••• Record Bias Adjustment.
- Adjust RV102(L-CH) and RV202(R-CH) so that the playback output level of 315Hz is -25.3dB to -24.7dB. ••• Record Level Adjustment.


Metal Bias Adjustment

Setting:

REC LEVEL knob: standard record position.
(See page 12.)

Procedure:

1. Mode: simultaneous REC/PB

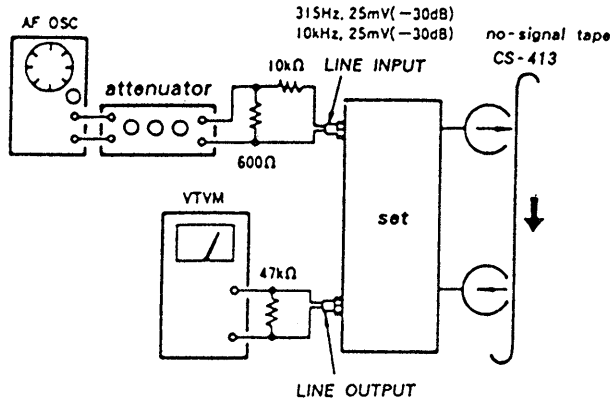

2. Adjust RV510(L-CH) and RV205(R-CH) so that the difference between the playback output at 315Hz and that of 10kHz in R-CH is within 0.5dB to -0.5dB.


Normal Bias Adjustment

Setting:

REC LEVEL knob: standard record position.
(See page 12.)

Procedure:

1. Mode: simultaneous REC/PB

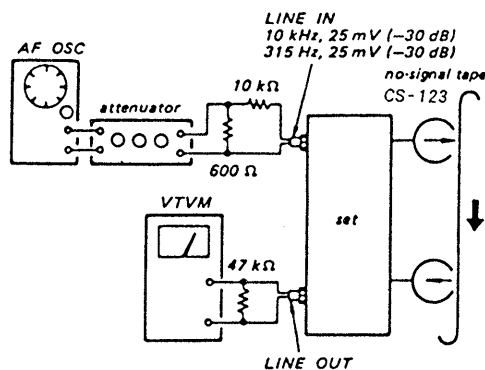

2. Set the HXPRO switch to ON.

3. Adjust RV103(L-CH) and RV203(R-CH) so that the difference between the playback output at 315Hz and that of 10kHz in R-CH is within 0.5dB to -0.5dB.

4. Set the HXPRO switch to OFF.

5. Adjust RV104(L-CH) and RV204(R-CH) so that the difference between the playback output at 10kHz when the HXPRO is ON and that of 10kHz when ON is within 0.5dB to -0.5dB.


Meter Level Adjustment

Setting:

REC LEVEL knob: standard record position.
(See page 12.)

Procedure:

1. Stop mode

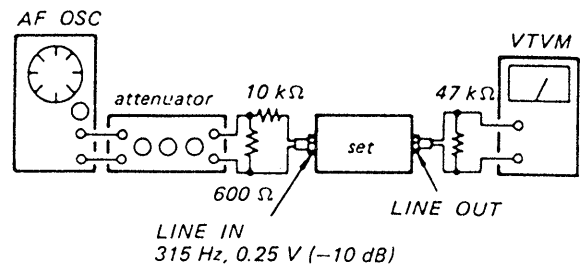


2. Adjust RV107(L-CH) and RV207(R-CH) so that a reading of the meter is set to 0VU and the lamp is lit.
3. Adjust REC level so that the LINE OUT level is set to +10dB and check that all the lamps are lit.

Calibration OSC and Calibration Meter Adjustment

Setting: CALIBRATION switch: ON

Procedure(OSC OUT LEVEL):

1. Mode: record(no-signal(LINE INPUT))

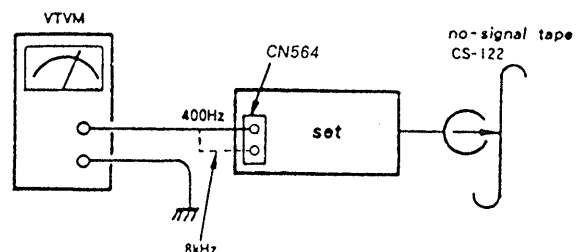


2. Adjust RV504 so that a check-point level at 400Hz is +10dB.
3. Adjust RV503 so that a check-point level at 8kHz is +10dB.



Procedure(CAL METER ADJ):

1. Put the set in record mode and adjust RV208(HIGH)so that HIGH FREQ segments in the CAL LEVEL meter light thoroughly up to 0VU as shown in the figure below. Segment(a)may flicker.

2. Preset RV108(LOW)so that segment(a)in LOW FREQ CAL LEVEL meter lights. Then adjust RV204 to the point where segment (a)goes out.

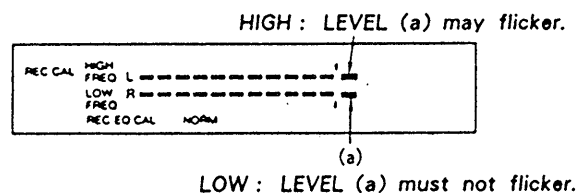

Location Diagram of the Adjustment Parts

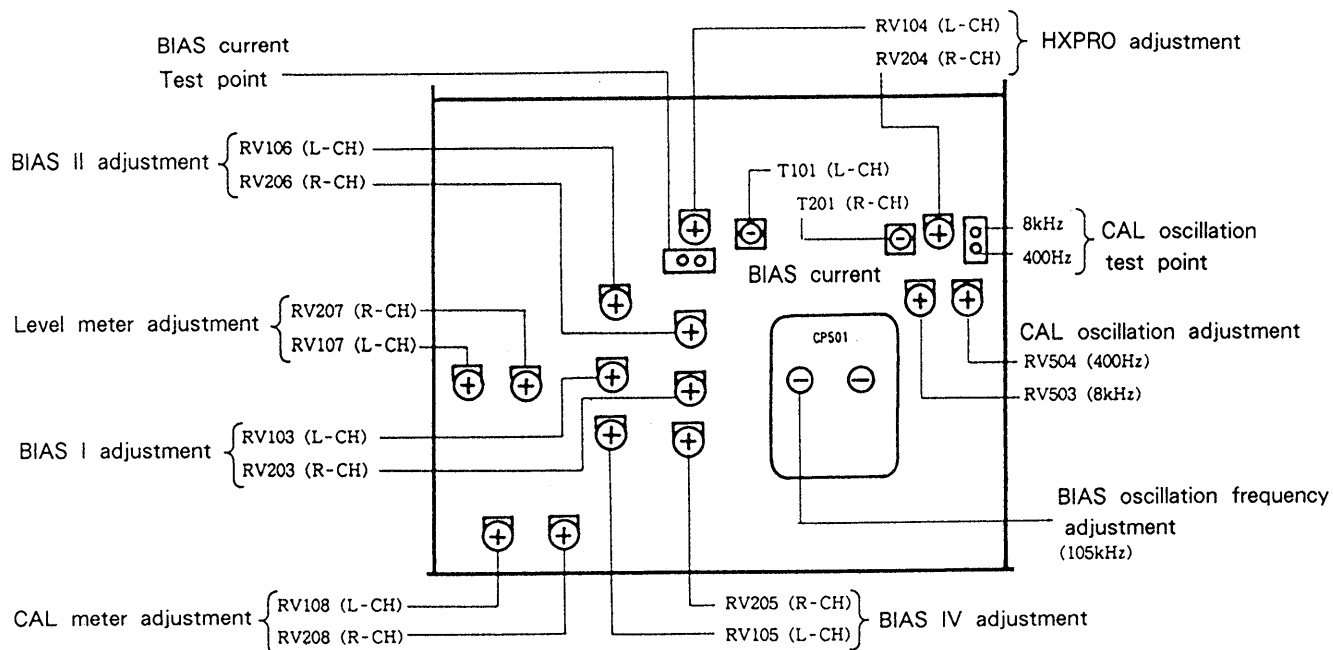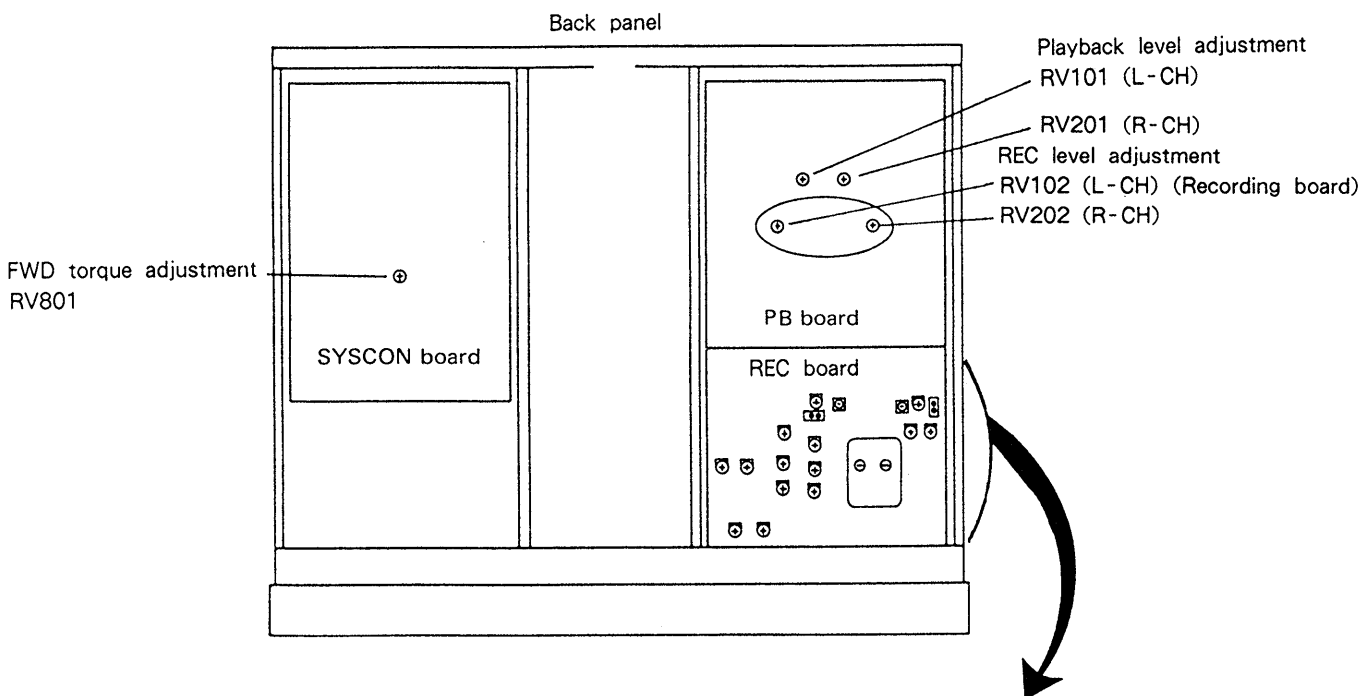

SECTION 4 DIAGRAMS

4-1-1. IC502, 505 (CX20188) PIN FUNCTIONS

An electronic switch circuit for the operation mode control is included. Controls are performed by adding direct current voltages VH, VM, and VL to Dolby OFF/B/C and calibration/REC/Playback terminals.

CX20188	Pin name	Description
Pin No.		
1.	Vcc	Positive power supply terminal.
2, 41.	REC IN	Recording input terminal.
3.	I REF	Reference current input terminal.
4, 39.	PB IN	Playback input terminal.
5.	CAL/REC/PB	Calibration/recording/playback select terminal
6, 37.	PB FB	Playback feedback terminal.
7, 36.	REC FB	Recording feedback terminal.
8, 35.	GND	GND terminal.
9, 34.	LINE OUT	Line output (decode output) terminal.
10, 33.	SSK	Spectral skewing switch terminal.
11, 32.	VF IN	Encode circuit input terminal.
12, 31.	HPF H	HLS high-pass filter terminal.
13, 30.	TCH 2	HLS detector time constant terminal 2.
14, 29.	TCH 1	HLS detector time constant terminal 1.
15, 28.	WT H	HLS encoder error reduction terminal.
16, 27.	TCL 2	LLS detector time constant terminal 2.
17, 26.	TCL 1	LLS detector time constant terminal 1.
18, 25.	WT L	LLS encoder error reduction terminal.
19, 24.	HPF L	LLS high-pass filter terminal.
20, 23.	ANT S	Anti-saturation terminal.
21, 22.	REC OUT	Recording output (encode output) terminal.
38.	OFF/B/C	Dolby NR off/B type/C type select terminal.
40.	CAL IN	Calibration input terminal.
42.	Vee	Negative power supply terminal.

MODE	VOLT
VH	3 to 9.9V
VH	-0.7 to 0.7V
VL	-9.9 to -3

4-1-2. IC601 (M50940-313SP) PIN FUNCTIONS

Level meter display of 24-segment fluorescent display, etc., are performed by receiving direction from the master microcomputer (IC801).

Pin No.	Pin name	I/O	Description
1.	Vref	I	A/D input-port reference voltage input(+5V)
2.	ϕL	I	Not used. (Connected to +5V)
3.	ϕR	I	Not used. (Connected to +5V)
4.	DATA	I	Data input from the master microcomputer(IC801)(analog)
5.~6.	ADE1~ADRO	I	Data input from the master microcomputer(IC801)(analog)
7.	KEY	I	Not used. (Connected to +5V)
8.	LEVEL L	I	Level meter L-CH input(analog) from the meter amplifier(IC514)
9.	LEVEL R	I	Level meter R-CH input(analog) from the meter amplifier(IC514)
10.~13.	GRID6~GRID3	O	Not used.
14.~15.	GRID2~GRID1	O	Fluorescent display grid output
16.	COO	O	Not used.
17.	PLAY	O	Not used. (Connected to pin ⑩.)
18.	PLAY	O	Not used.
19.	PAUSE	O	Not used.
20.	REC	O	Not used.
21.	TAPE	O	Fluorescent display segment output("TAPE" displayed). "L": TAPE displayed. "H": SOURCE displayed.
22.	OVER LEVEL	O	Fluorescent display segment output("OVER LEVEL" displayed). It is displayed when "L".
23.	TYPE I	O	Fluorescent display segment output("TYPE I" displayed). It is displayed when "L".
24.	TYPE II	O	Fluorescent display segment output("TYPE II" displayed). It is displayed when "L".
25.	TYPE IV	O	Fluorescent display segment output("TYPE III" displayed). It is displayed when "L".
26.	CNVss	-	Power supply terminal(GND)
27.	RESET	I	Reset input
28.	XIN	I	Clock input(4MHz)
29.	XOUT	O	Clock outupt.
30.	XCIN	-	Not used. (Connected to GND)
31.	XCOUT	-	Not used.
32.	Vss	-	Power supply terminal(GND)
33.	Φ	O	Not used.
34.	VER	I	Version switching input(Always set to "L")
35.	TEST	I	Test mode input. "L": All the lamps of the meter are lit.
36.	CAL	I	Calibration switch(S602) input. "L": CAL mode. "H": Normal mode.
37.	IN	I	Not used. (Connected to GND.)
38.	VP	I	Fluorescent display segment output's pull-down power supply terminal(-22V)
39.~62.	S23~S0	O	Fluorescent display segment output(meter display)
63.	AVcc	-	Power supply terminal(+5V)
64.	Vcc	-	Power supply terminal(+5V)


4-1-3. IC801 (M50964-226SP) PIN FUNCTIONS

Pin No.	Pin name	I/O	Description
1.	VCC	-	Power supply: +5V.
2.	AV _{ss}	-	Power supply: GND.
3.	Vref	I	A/D port reference voltage input.
4.	DATA	O	Data output (Analog) to Display Microcomputer.
5.	PWM	-	Not used for this model.
6.	ADDRO	O	Data output to Display Microcomputer (IC601).
7.	REC	O	REC LED output.
8.	PAUSE	O	PAUSE LED output.
9.	PLAY	O	PLAY LED output.
10.	AD7	I	Key input. 0V=  , 1V=  , 2V=  , 3V=  , 4V= 
11.	AD6	I	Key input. 0V=  , 1V=  , 2V=  , 3V=  , 4V= 
12.	AD5	I	Key input. 0V=RESET, 1V=MEMORY, 2V=DISPLAY MODE
13.	TIMER SW	I	Timer switch input (Analog). 0V=REC, 1V=PLAY, 2V=OFF.
14.	T-PULS	I	Take-up reel base sensor input.
15.	S-PULS	I	Supply reel base sensor input.
16.	COUNT 0	I	Not used for this model (Connected to GND).
17.	-	-	Not used for this model (Connected to GND).
18.	RSTOUT	O	Reset output to counter Microcomputer (IC881).
19.	S-CLOCK	O	Shift clock output (250kHz) to Counter Microcomputer (IC881).
20.	S-OUT	O	Serial data output to Counter Microcomputer (IC881).
21.	S-IN	I	Not used for this model (Connected to S-OUT).
22.	SIRCS-L	I	SIRCS phase input.
23.	SIRCS-E	I	SIRCS negative phase input.
24.	POW-OUT	O	Not used for this model (Connected to GND).
25.	POWER IN	I	Power down detection input.
26.	INT1	I	Power down detection input.
27.	CN V _{ss}	-	Power supply: GND.
28.	RESET	I	Reset input.
29.	XIN	I	Clock input (4MHz).
30.	XOUT	O	Clock output (4MHz).
31.	φ OUT	-	Not used for this model.
32.	V _{ss}	-	Power supply: GND.
33.	PAT3	I	Rotary encoder input to detect the position of the head base of the mechanical block.
34.	PAT2	I	Rotary encoder input to detect the position of the head base of the mechanical block.
35.	PAT1	I	Rotary encoder input to detect the position of the head base of the mechanical block.
36.	PAT0	I	Rotary encoder input to detect the position of the head base of the mechanical block.
37.	OPEN SW	I	OPEN switch input of the mechanical block.
38.	CLOSE SW	I	CLOSE switch input of the mechanical block.
39.	DOOR SW	I	DOOR switch input of the mechanical block.
40.	REC SW	I	REC switch input of the mechanical block.
41.	70 μ SW	I	70 μ switch input of the mechanical block.
42.	HALF SW	I	HALF switch.
43.	METAL SW	I	METAL switch.
44.	-	-	Not used for this model (Connected to GND).
45.	CAM DOWN	O	Head base DOWN output of the mechanical block.
46.	CAM UP	O	Head base UP output of the mechanical block.
47.	M-FWD	O	Reel motor rotate with FWD.
48.	M-REV	O	Reel motor rotate with REV.
49.	M-PLAY	O	Reel motor rotate at PLAY speed.
50.	M-FAST	O	Reel motor rotate at FF/REW speed.
51.	BIAS	O	Bias oscillation on and off control.
52.	REC MUTE	O	REC MUTE control output.
53.	MONITOR OUT	O	MONITOR switch output.
54.	LINE MUTE	O	Line mute control output.
55.	-	-	Not used for this model (Connected to GND).
56.	AMS MODE	O	AMS switch output.
57.	TYPE I	O	REC equalizer change output.
58.	TYPE II	O	REC equalizer change output.
59.	TYPE IV	O	REC equalizer change output.
60.	AMS SIG	I	AMS signal input. No song detected=Low. Song detected=High.
61.	SOURCE SW	I	MONITOR switch input.
62.	TAPE SW	I	MONITOR switch input.
63.	CAL SW	I	CALIBRATION switch input.
64.	ADDR1	O	Data output to Display Microcomputer.

4-1-4. IC881 (HD404240A31S) PIN FUNCTIONS


Fluorescent dynamic display is performed by receiving count data from the master microcomputer (IC801)

Pin No.	Pin name	I/O	Description
1.	G3	0	Fluorescent display grid output
2.	G4	0	Fluorescent display grid output
3.	dot	0	Fluorescent display segment output
4.	P DWN	I	Pull-down power supply terminal for fluorescent display segment output (-22V)
5. ~11.	g~a	0	Fluorescent display segment output
12.	-	-	Not used.
13. ~16.	DIM1~DIM4	I	Dimmer input (Pins ⑭ and ⑯ are "H". Others are opened and fixed: Blanking time 550usec; grid ON time 450usec.)
17. ~20.	-	-	Not used.
21.	Vcc	-	Power supply terminal (+5V)
22.	SCK	I	Shift clock input (250kHz) from the master microcomputer (IC801)
23.	SI	I	Serial data input (Data are sent by 1 byte every 6msec.) from the master microcomputer (IC801)
24. ~25.	-	-	Not used.
26.	RESET	I	Reset input from the master microcomputer (IC801). Reset when "H".
27.	TEST	I	Connected to +5V.
28.	OSC1	I	Clock input (4MHz)
29.	OSC2	I	Clock input (4MHz)
30.	GND	-	Power supply terminal (GND)
31. ~34.	-	-	Not used.
35.	MLED	0	Not used. (Connected to +5V)
36. ~40.	-	-	Not used.
41.	G2	0	Fluorescent display grid output
42.	G1	0	Fluorescent display grid output

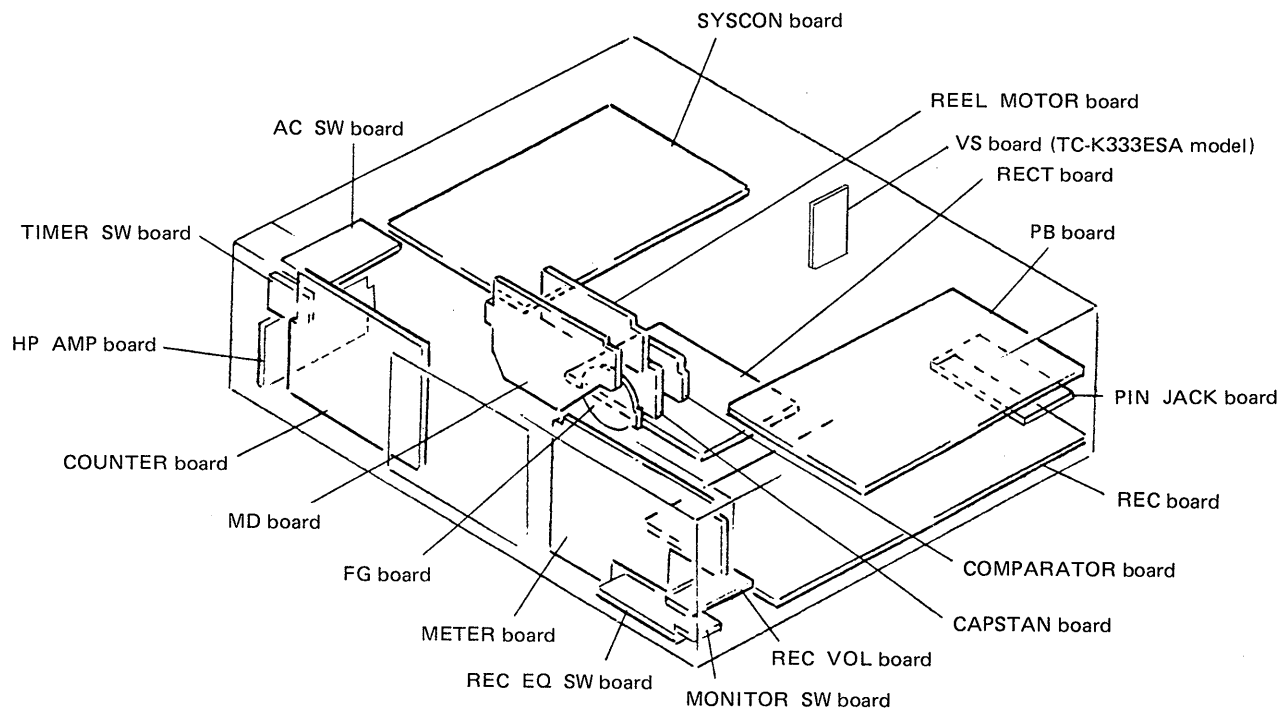
4-2. CIRCUIT BOARDS LOCATION


4-3. IC BLOCK DIAGRAMS


IC502, 505 CX20188

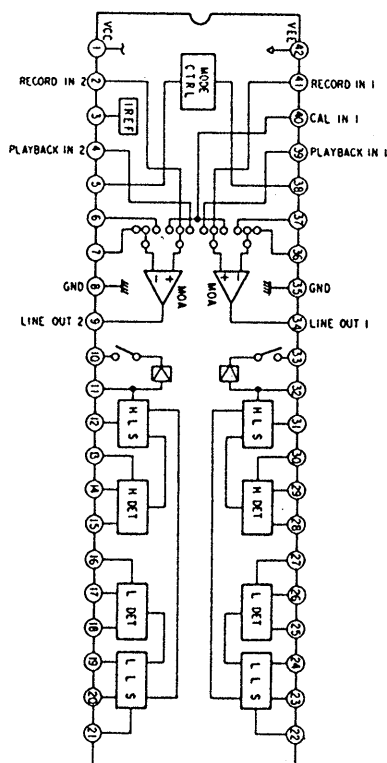


IC902 CX20174

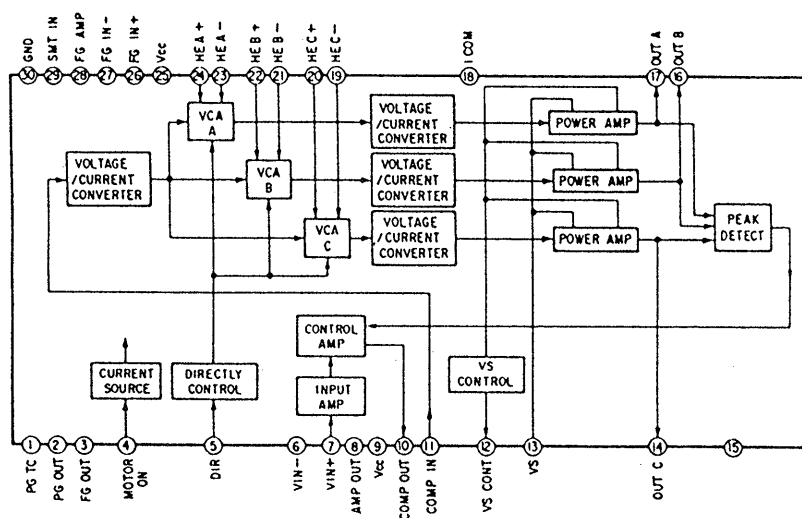

IC952 TC9142P

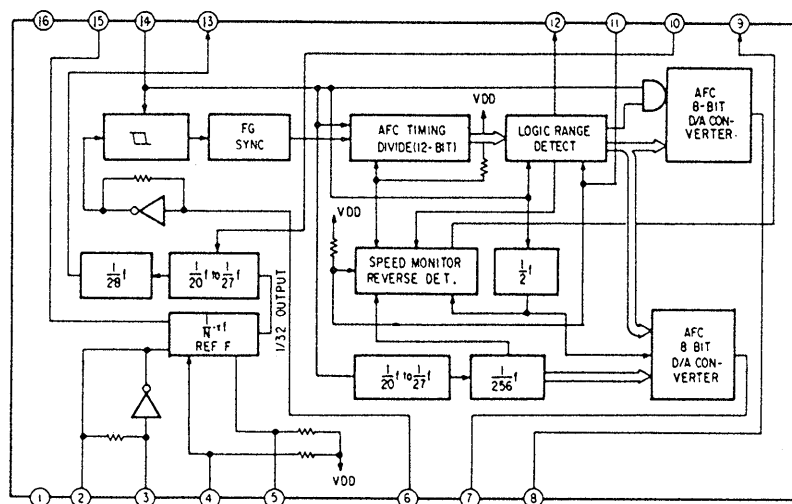


IC508 μ PC1297CA

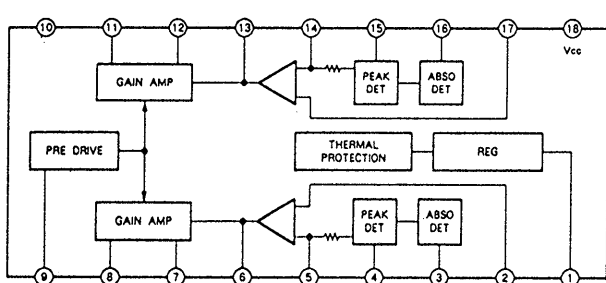


IC802 BA6219B

IC803 LB1641

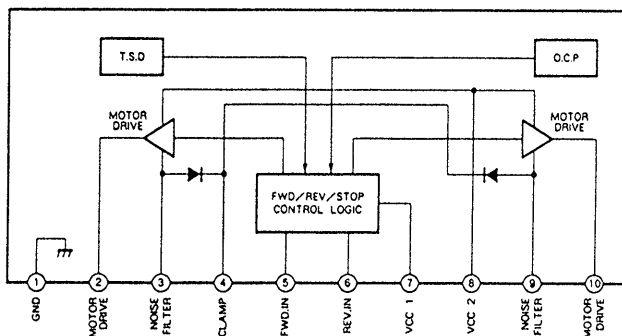


4-4. SEMICONDUCTOR LEAD LAYOUTS


BA6219B
LB1641

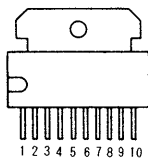


M5F7807

 

M5F7907

 

NJM79L12A

 


RC78L12L




DTA114ES
DTA144ES
DTC114ES
DTC124ES
DTC143TS
2SC2603-EF



 
DTC144ES
2SA1175-HFE
2SC3623A-LK
2SD1020-HFE




2SA985A
2SB1094-LK
2SC2275A
2SD2012

 

 
2SB646C
2SB1116A-L
2SC945-P
2SC1815-GR
2SD756




2SK170

 


2SK246-GR2

 


GP2S22B

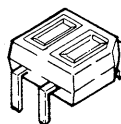


HZ6B2L
HZ12B2L
1N4148M
10E2N

 

RD5.1JS-B1
HZS6C1L
HZS6C3L
UZL-6M2
UZL-24L
1SS202-1

 


30DF2

 


SEL4214S




SEL4414E-C

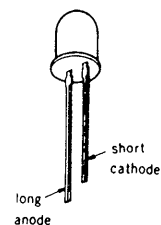


SEL4814A-CD

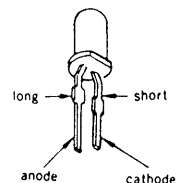

4-5. BLOCK DIAGRAM

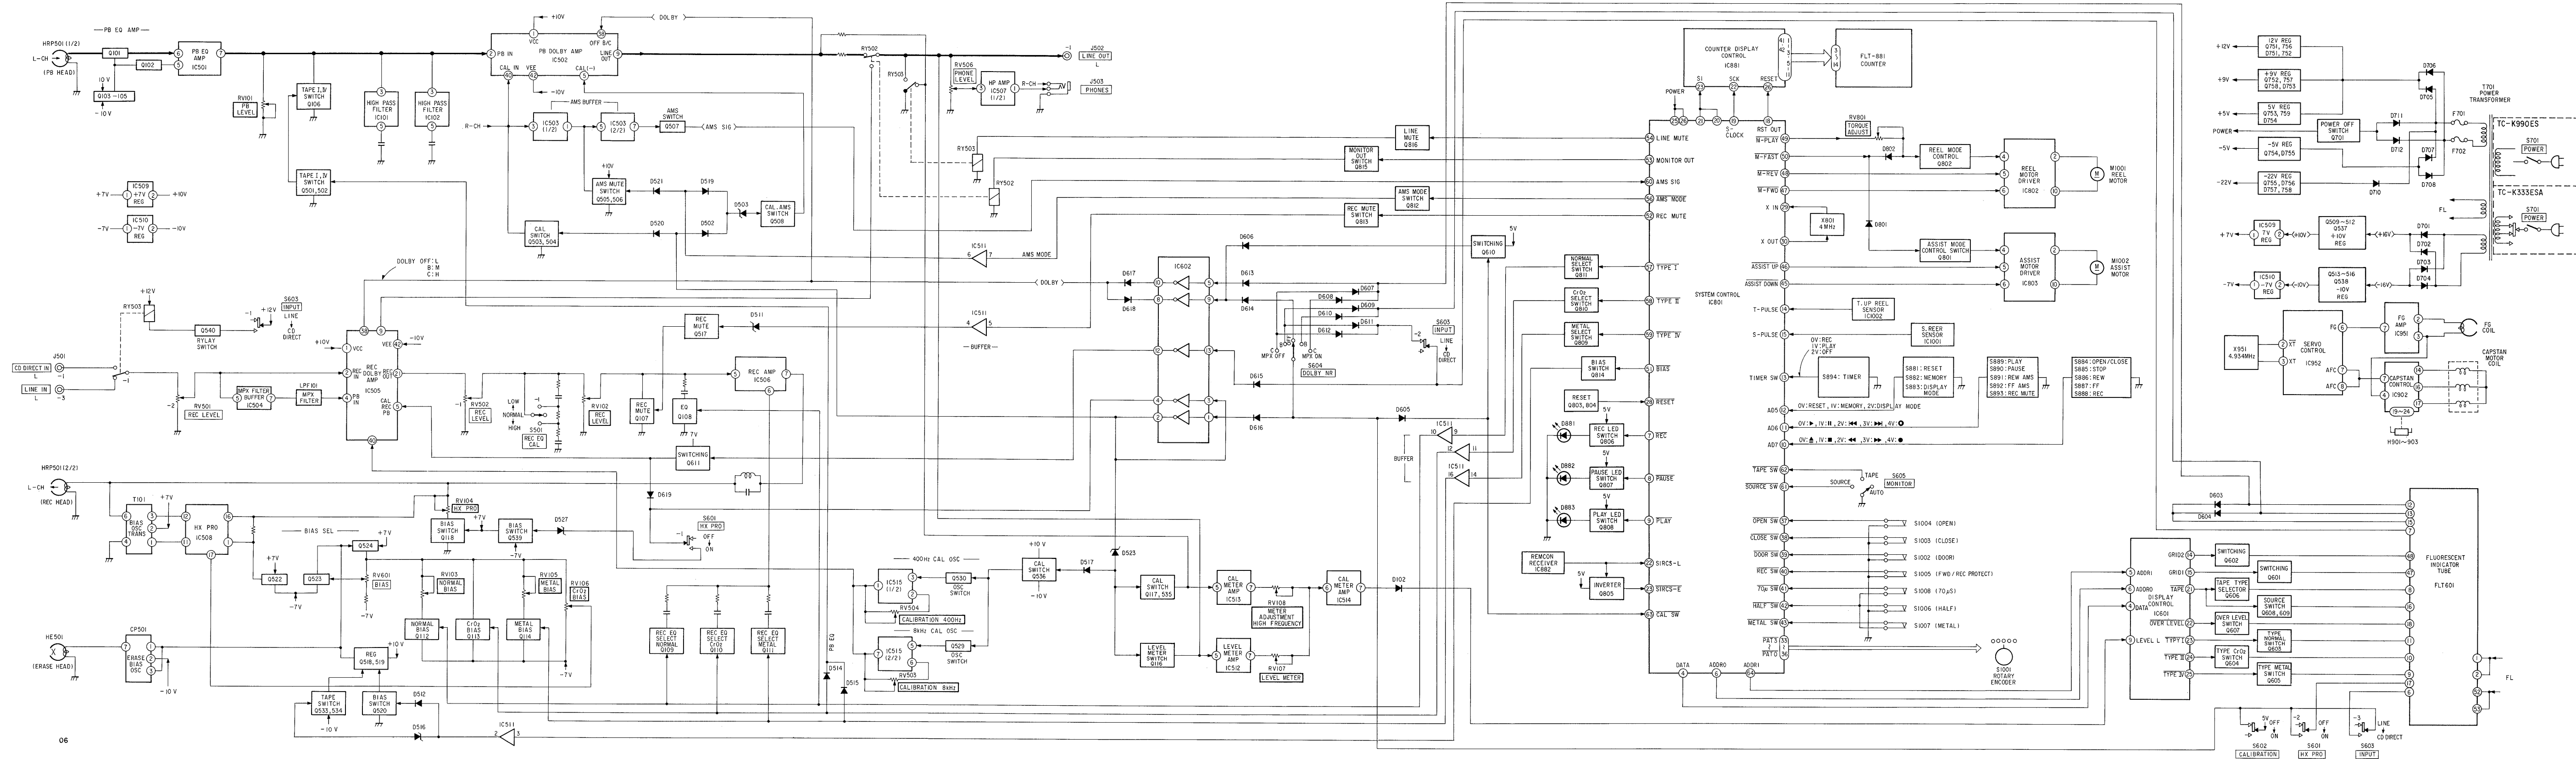

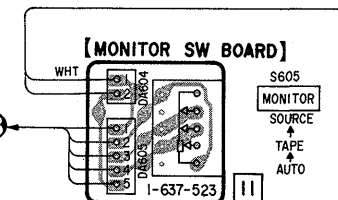


● Semiconductor Location			
Ref. No.	Location	Ref. No.	Location
D101	I-16	Q105	B-10
D102	I-16	Q106	A-12
D103	I-16	Q107	I-8
D201	H-15	Q108	H-9
D202	H-15	Q109	H-9
D203	H-16	Q110	H-9
D501	E-15	Q111	H-9
D502	A-15	Q112	H-14
D503	A-15	Q113	H-13
D509	C-9	Q114	H-14
D510	C-9	Q116	G-13
D511	H-8	Q117	G-14
D512	I-15	Q118	I-11
D514	H-8	Q201	D-11
D515	H-8	Q202	D-11
D516	J-16	Q203	D-10
D517	K-15	Q204	D-10
D519	A-14	Q205	D-10
D520	A-14	Q206	E-12
D521	A-14	Q207	J-8
D522	G-6	Q208	J-9
D523	G-8	Q209	J-9
D524	I-3	Q210	J-9
D525	H-11	Q211	J-9
D526	H-13	Q212	H-14
D527	G-10	Q213	H-13
D601	D-22	Q214	H-14
D602	D-22	Q216	G-13
D603	B-19	Q217	G-14
D604	B-19	Q218	J-11
D605	C-19	Q501	A-13
D606	B-22	Q502	A-13
D607	E-23	Q503	A-13
D608	E-23	Q504	D-14
D609	E-22	Q505	E-15
D610	E-22	Q506	A-14
D611	D-22	Q507	E-15
D612	D-22	Q508	A-15
D613	D-23	Q509	A-10
D614	C-22	Q510	B-9
D615	D-22	Q511	B-9
D616	D-23	Q512	A-9
D617	C-22	Q513	E-10
D618	C-22	Q514	D-9
D619	C-22	Q515	D-9
D620	D-20	Q516	E-9
		Q517	H-8
IC101	B-13	Q518	J-15
IC102	B-13	Q519	J-15
IC201	E-13	Q520	I-15
IC202	E-13	Q522	I-13
IC501	C-11	Q523	I-14
IC502	C-15	Q524	I-14
IC503	E-14	Q529	J-14
IC504	I-5	Q530	K-14
IC505	I-7	Q533	J-16
IC506	I-10	Q534	J-15
IC507	B-5	Q535	G-14
IC508	J-11	Q536	J-15
IC509	J-16	Q537	B-9
IC510	J-15	Q538	D-9
IC511	G-7	Q539	H-11
IC512	G-13	Q540	G-11
IC513	G-15	Q601	B-22
IC514	H-15	Q602	B-23
IC515	K-14	Q603	B-18
IC518	H-5	Q604	B-18
IC519	H-5	Q605	B-18
IC601	B-21	Q606	B-18
IC602	C-22	Q607	B-19
		Q608	B-19
Q101	B-11	Q609	B-19
Q102	B-11	Q610	B-19
Q103	B-10	Q611	B-22
Q104	B-10		

Note on Mounting Diagram:

 
- ○ — : parts extracted from the component side.





—38—

4-9. PRINTED WIRING BOARDS—SYSCON SECTION—

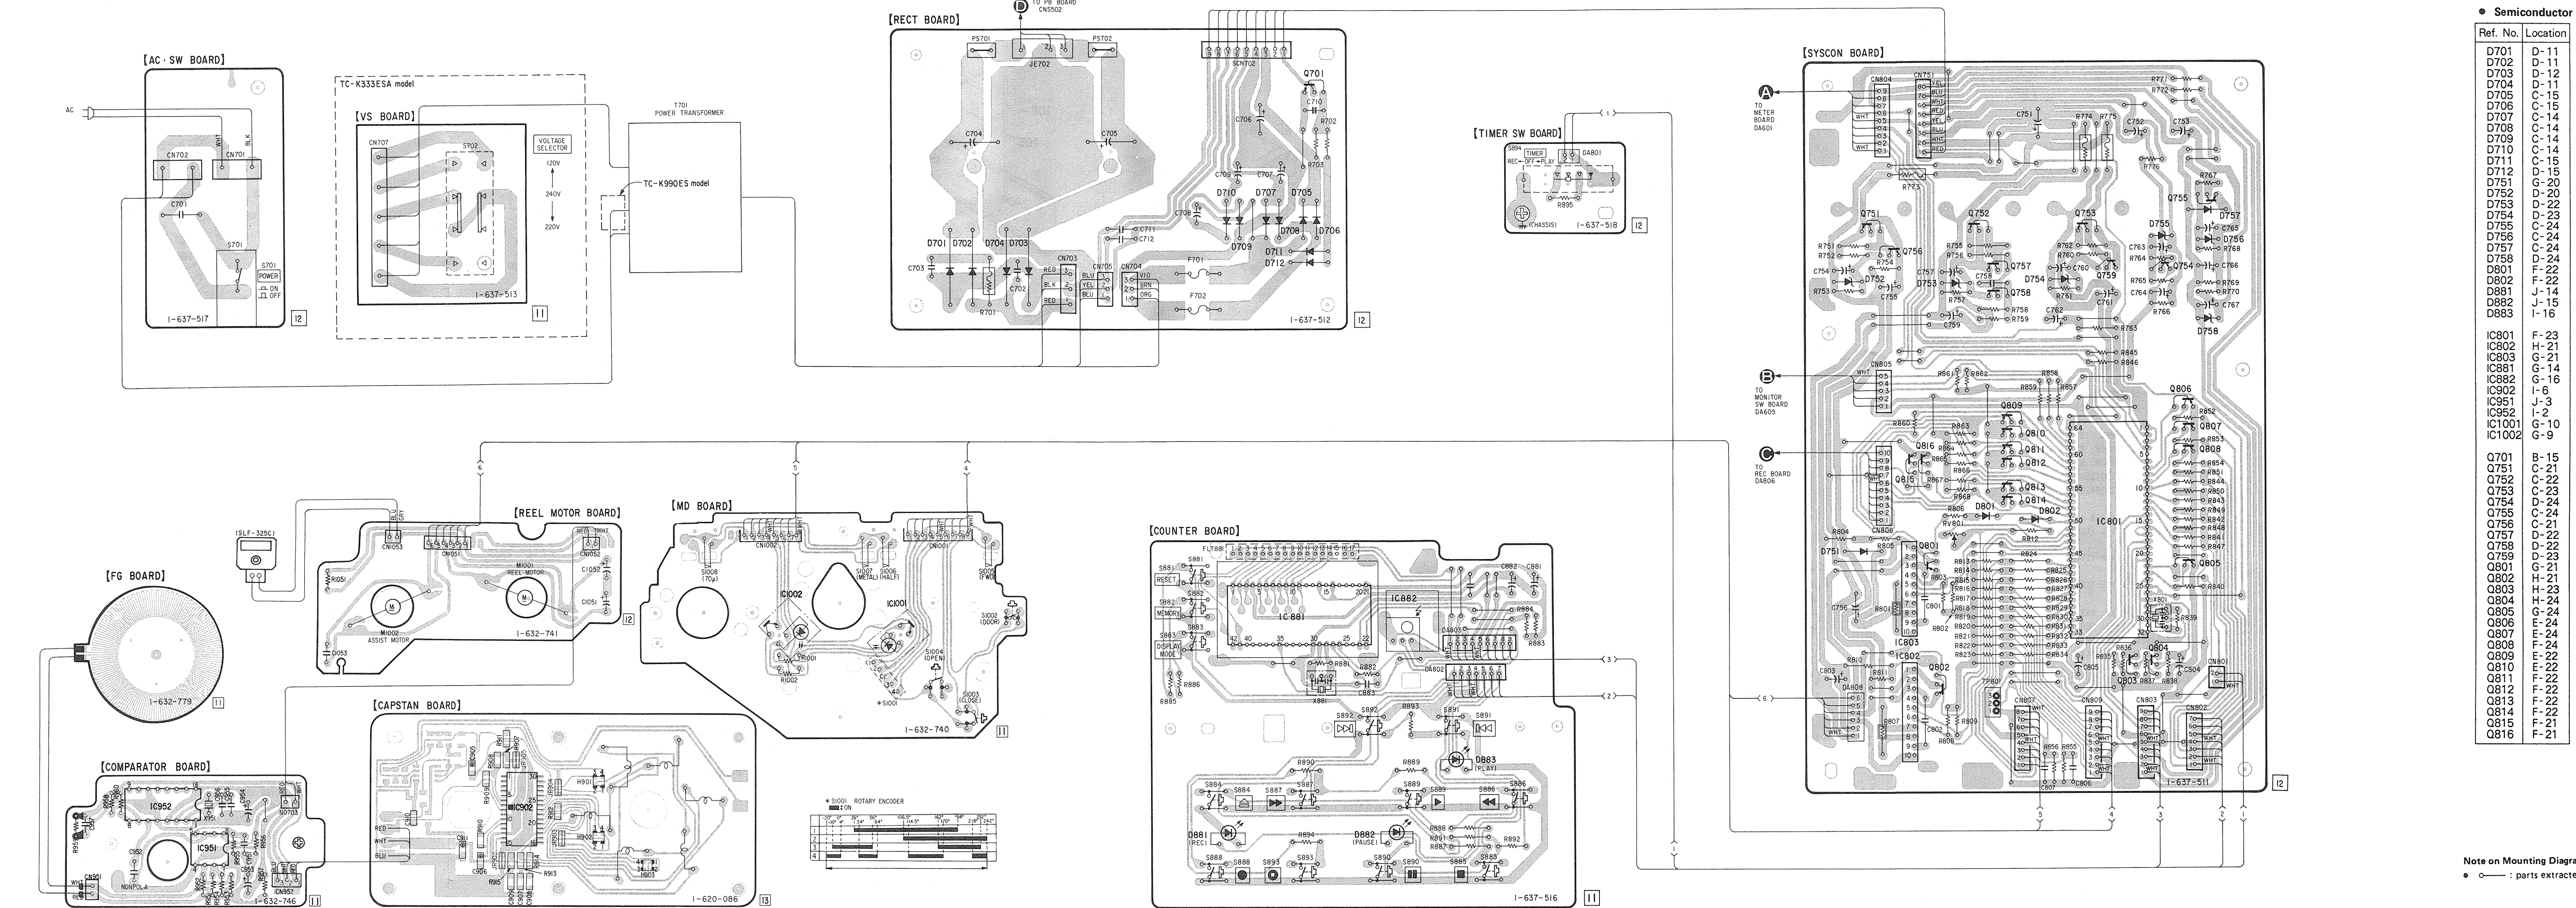

SECTION 5 EXPLODED VIEWS

NOTE:

- -XX,-X mean standardized parts, so they may have some difference from original one.

- Color indication of Appearance Parts.

Example:

KNOB,BALANCE (WHITE) ... (RED)

↑ ↑
Parts Cabinet's
Color Color


- Items marked " *" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

- The mechanical parts with no reference number in the exploded views are not supplied.

- Hardware (# mark) list is given in the last of this parts list.


The components identified by mark  or dotted line with mark  are critical for safety.
Replace only with part number specified.

5-1. OVERALL SECTION

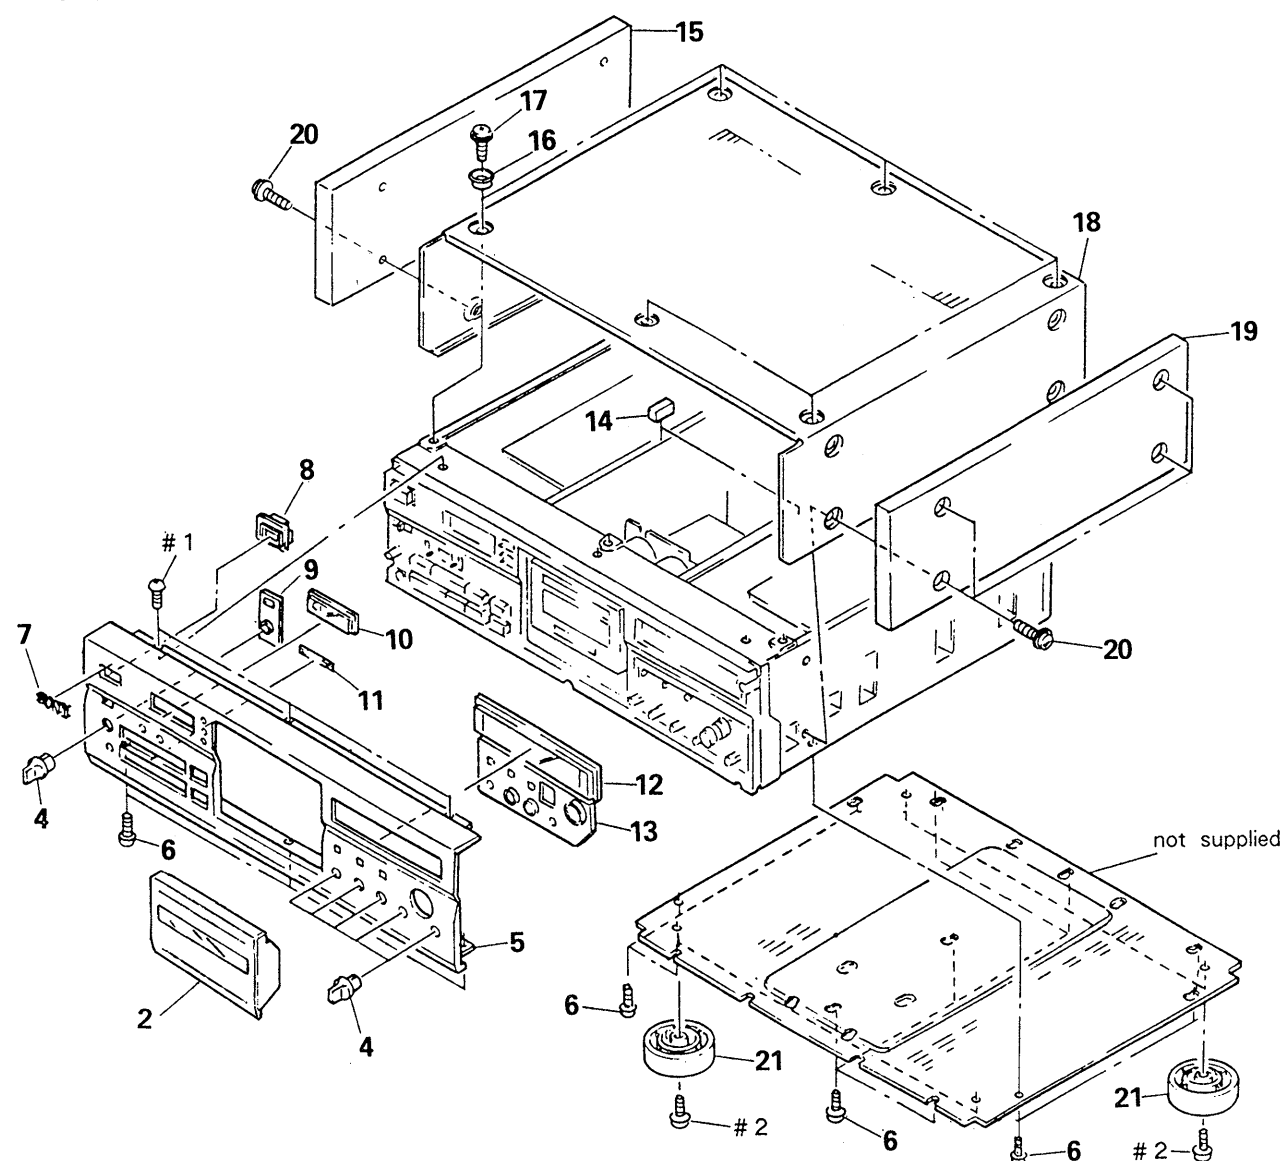

Ref. No.	Part No.	Description	Remark
2	X-3363-875-1	LID ASSY (A), CASSETTE (K333)	
2	X-3365-081-1	LID ASSY, CASSETTE (K990ES:BLACK)	
2	X-3365-082-1	LID ASSY, CASSETTE (K990ES:GOLD)	
4	X-3362-818-1	KNOB (DIA. 12) ASSY (B), FLAT (BLACK)	
4	X-3363-490-1	KNOB (DIA. 12) ASSY (B), FLAT (GOLD)	
5	3-373-923-01	PANEL, FRONT (K333)	
5	3-373-923-41	PANEL, FRONT (K990ES:GOLD)	
5	3-373-923-51	PANEL, FRONT (K990ES:BLACK)	
6	3-703-685-21	SCREW (+BV 3X8)	
7	4-908-848-01	EMBLEM, SONY (BLACK)	
7	4-908-848-21	EMBLEM, SONY (GOLD)	
8	4-908-044-11	ESCUTCHEON, POWER KNOB (BLACK)	
8	4-908-044-21	ESCUTCHEON, POWER KNOB (GOLD)	
9	3-364-444-01	ESCUTCHEON (L) (BLACK)	
9	3-364-444-11	ESCUTCHEON (L) (GOLD)	
10	3-364-442-01	WINDOW, COUNTER (K333)	
10	3-364-442-11	WINDOW, COUNTER (K990ES:BLACK)	
10	3-364-442-21	WINDOW, COUNTER (K990ES:GOLD)	
11	3-831-441-XX	PAPER, INTERCEPTION	
12	3-364-443-01	WINDOW, METER (BLACK)	
12	3-364-443-11	WINDOW, METER (GOLD)	
13	3-364-447-01	ESCUTCHEON (R) (BLACK)	
13	3-364-447-11	ESCUTCHEON (R) (GOLD)	
14	9-911-842-XX	CUSHION (S)	
15	X-3304-959-1	PANEL (LEFT) ASSY, SIDE (K333/K990ES:AEP:BLACK)	
15	X-3304-969-1	PANEL (LEFT) ASSY, SIDE (K990ES:Germany:BLACK)	
15	X-3363-492-2	PANEL (LEFT) ASSY, SIDE (K990ES:GOLD)	
16	4-923-474-01	RING, ORNAMENTAL (BLACK)	
16	4-923-474-11	RING, ORNAMENTAL (GOLD)	
17	3-704-366-01	SCREW (CASE) (M3X8) (BLACK)	
17	3-704-366-11	SCREW (CASE) (M3X8) (GOLD)	
* 18	3-350-489-11	CASE (BLACK)	
* 18	3-350-489-21	CASE (GOLD)	
19	X-3304-960-1	PANEL (RIGHT) ASSY, SIDE (K333/K990ES:AEP:BLACK)	
19	X-3304-970-1	PANEL (RIGHT) ASSY, SIDE (K990ES:Germany:BLACK)	
19	X-3363-493-2	PANEL (RIGHT) ASSY, SIDE (K990ES:GOLD)	
20	4-885-979-11	SCREW (4X25)	
21	X-3304-944-1	FOOT ASSY (BLACK)	
21	X-3363-489-1	FOOT ASSY (GOLD)	


5-2. FRONT PANEL SECTION

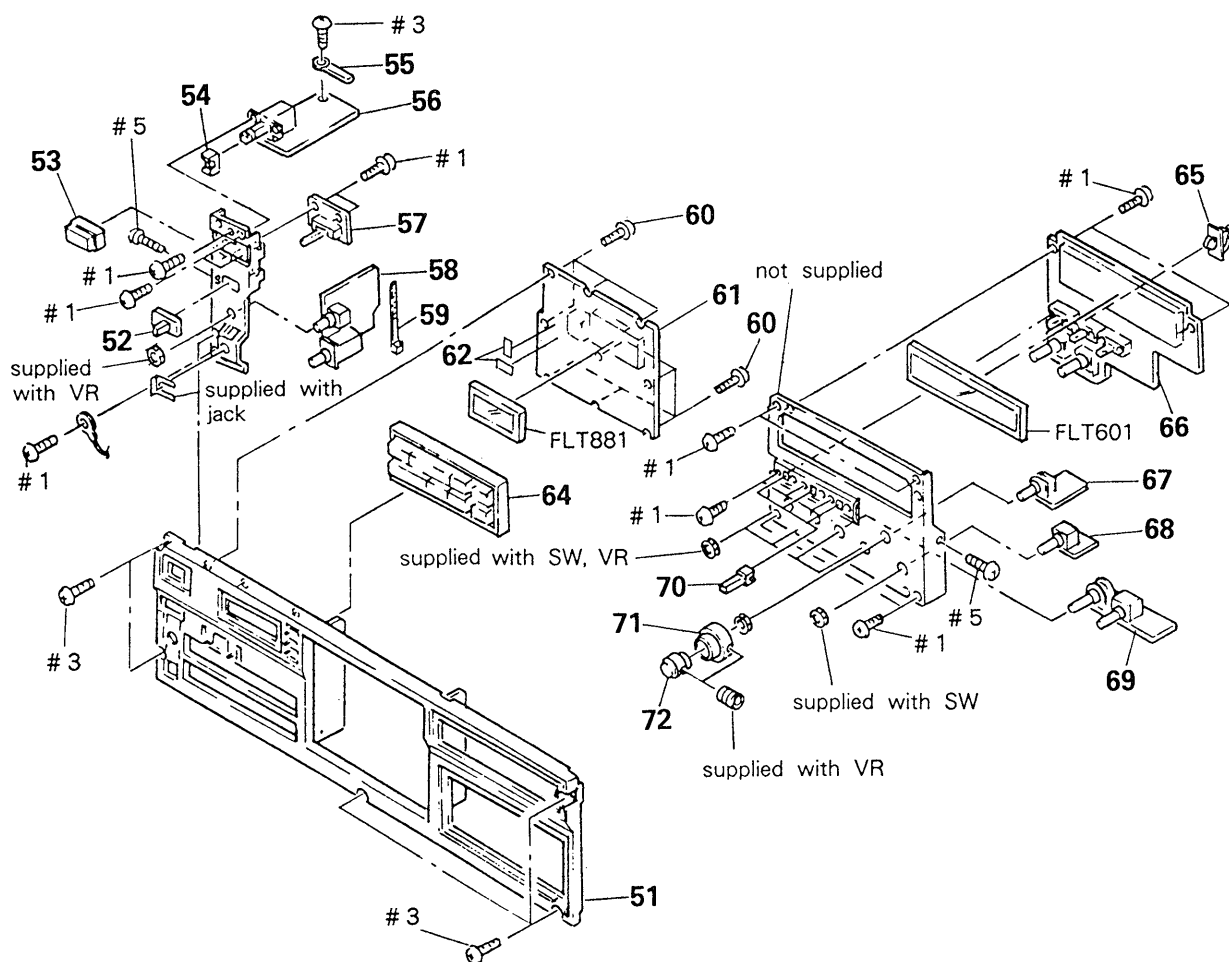

Ref.No.	Part No.	Description	Remark
* 51	3-364-474-01	PANEL (BASE) (BLACK)	
51	3-364-474-12	PANEL (BASE) (GOLD)	
52	4-922-518-11	KNOB (TIMER) (BLACK)	
52	4-922-518-62	KNOB (TIMER) (GOLD)	
53	4-908-046-01	KNOB, SQUARE (BLACK)	
53	4-908-046-81	KNOB, SQUARE (GOLD)	
54	4-864-307-00	RING	
55	3-703-150-11	STOPPER, WIRING	
* 56	1-637-517-11	AC SW BOARD	
* 57	1-637-518-11	TIMER SW BOARD	
* 58	1-637-521-11	H.P. AMP BOARD	
59	3-655-653-21	BAND (TAITON), BINDING	
60	4-928-635-01	SCREW, +BV (2.6X8) TAPPING	
61	* 1-637-516-11	COUNTER BOARD	
62	3-831-441-XX	PAPER, INTERCEPTION	

Ref.No.	Part No.	Description	Remark
64	X-3362-327-1	BUTTON ASSY (BLACK)	
64	X-3363-491-1	BUTTON ASSY (GOLD)	
65	2-132-434-01	CLIP, WIRE	
* 66	A-2006-652-A	METER BOARD, COMPLETE	
* 67	1-637-519-11	REC VOL BOARD	
* 68	1-637-523-11	MONITOR SW BOARD	
* 69	1-637-520-11	REC EQ SW BOARD	
70	3-364-441-01	BUTTON (BLACK)	
70	3-364-441-11	BUTTON (GOLD)	
71	3-364-440-01	KNOB (L) (BLACK)	
71	3-364-440-11	KNOB (L) (GOLD)	
72	3-364-439-01	KNOB (R) (BLACK)	
72	3-364-439-11	KNOB (R) (GOLD)	
FLT601	1-519-629-11	INDICATOR TUBE, FLUORESCENT	
FLT881	1-519-630-11	INDICATOR TUBE, FLUORESCENT	


5-3. CHASSIS SECTION

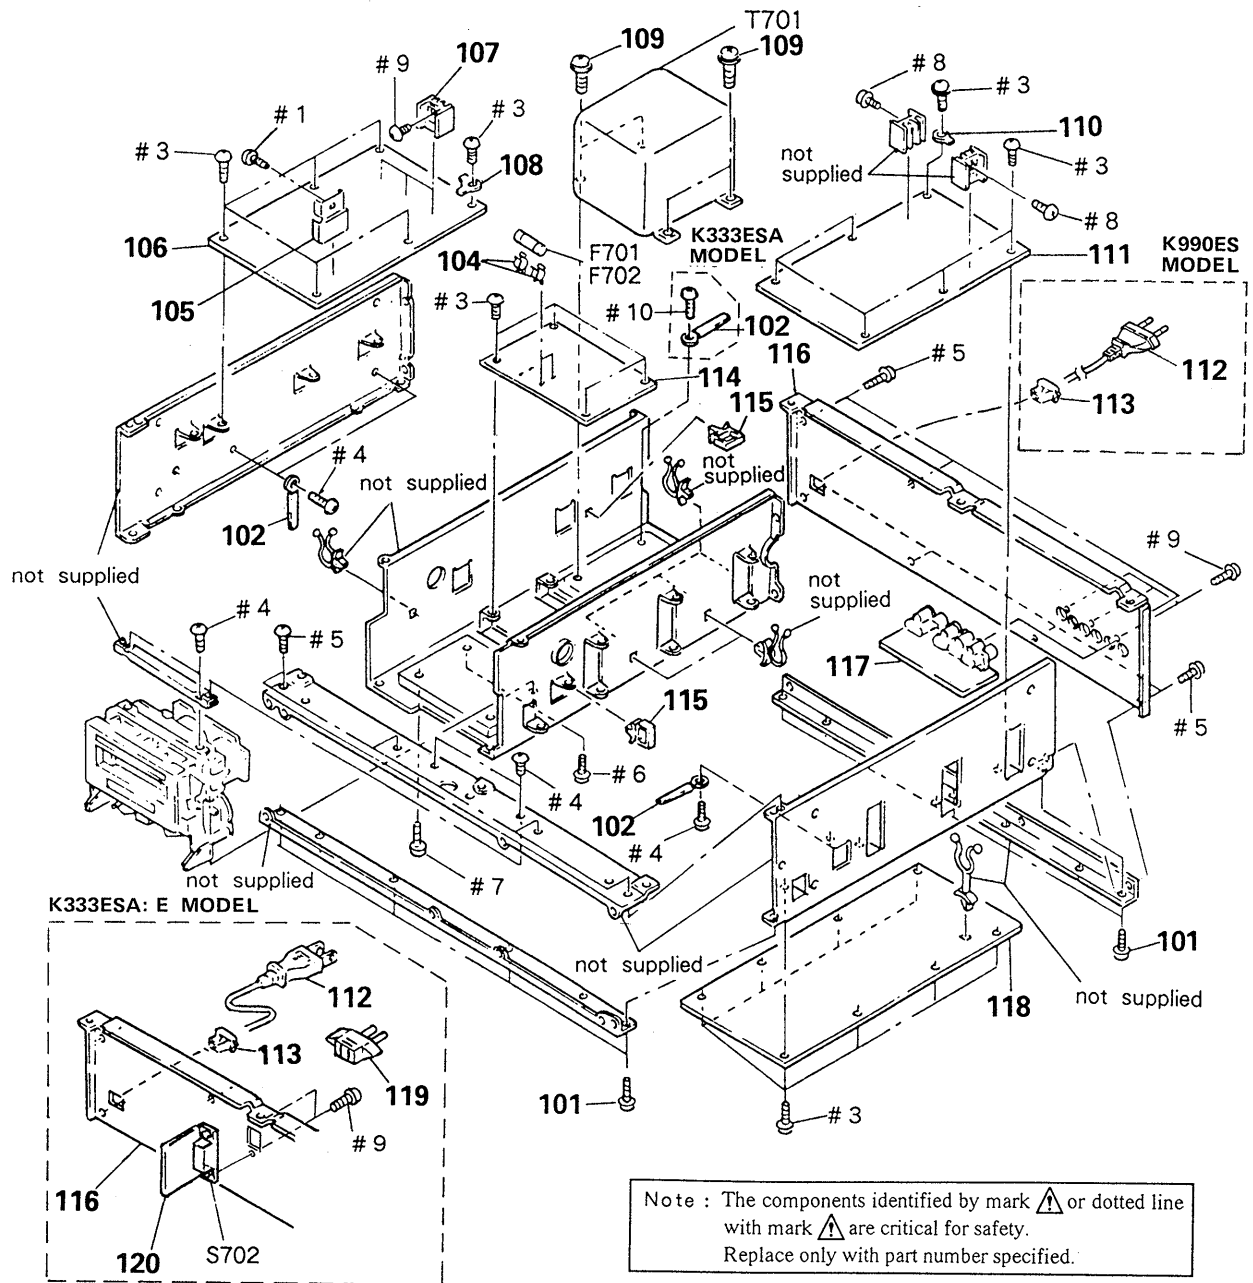

Note : The components identified by mark  or dotted line with mark  are critical for safety. Replace only with part number specified.

Ref.No.	Part No.	Description	Remark	Ref.No.	Part No.	Description	Remark
101	3-703-685-21	SCREW (+BV 3X8)		* 114	1-637-512-11	RECT. BOARD	
102	3-703-150-11	STOPPER, WIRING		* 115	3-329-937-02	CLIP, WIRE	
* 104	1-533-213-31	HOLDER, FUSE		* 116	3-350-482-51	PANEL, BACK (K990ES:BLACK)	
* 105	3-356-925-01	HEAT SINK		* 116	3-350-482-63	PANEL, BACK (K333ESA)	
* 106	A-2006-650-A	SYSCON BOARD, COMPLETE		* 116	3-350-482-71	PANEL, BACK (K990ES:GOLD)	
* 107	4-363-146-21	HEAT SINK, V. OUT		* 117	1-637-522-11	PIN JACK BOARD	
* 108	3-346-266-12	PLATE, GROUND		* 118	A-2006-640-A	REC BOARD, COMPLETE	
109	4-820-330-31	SCREW (K990ES)		 119	1-569-007-11	ADAPTER, CONVERSION 2P (K333ESA)	
109	4-886-821-11	SCREW, S TIGHT, +PTTWH 3X6 (K333ESA)		 F701	1-532-286-00	FUSE, TIME-LAG (2.5A)	
* 110	3-346-266-21	PLATE, GROUND		 F702	1-532-286-00	FUSE, TIME-LAG (2.5A)	
* 111	A-2006-641-A	PB BOARD, COMPLETE		 S702	1-572-009-11	SELECTOR, VOLTAGE (VOLTAGE SELECTOR)	
 112	1-559-297-31	CORD, POWER (K333ESA)		 T701	1-450-451-11	TRANSFORMER, POWER (K990ES)	
 112	1-574-383-11	CORD, POWER (K990ES)		 T701	1-450-453-11	TRANSFORMER, POWER (K333ESA)	
* 113	3-703-244-00	BUSHING (2104), CORD (K990ES)					
113	4-916-783-01	BUSHING, CORD (K333ESA)					


5-4. MECHANISM SECTION-1
TCM-200D10

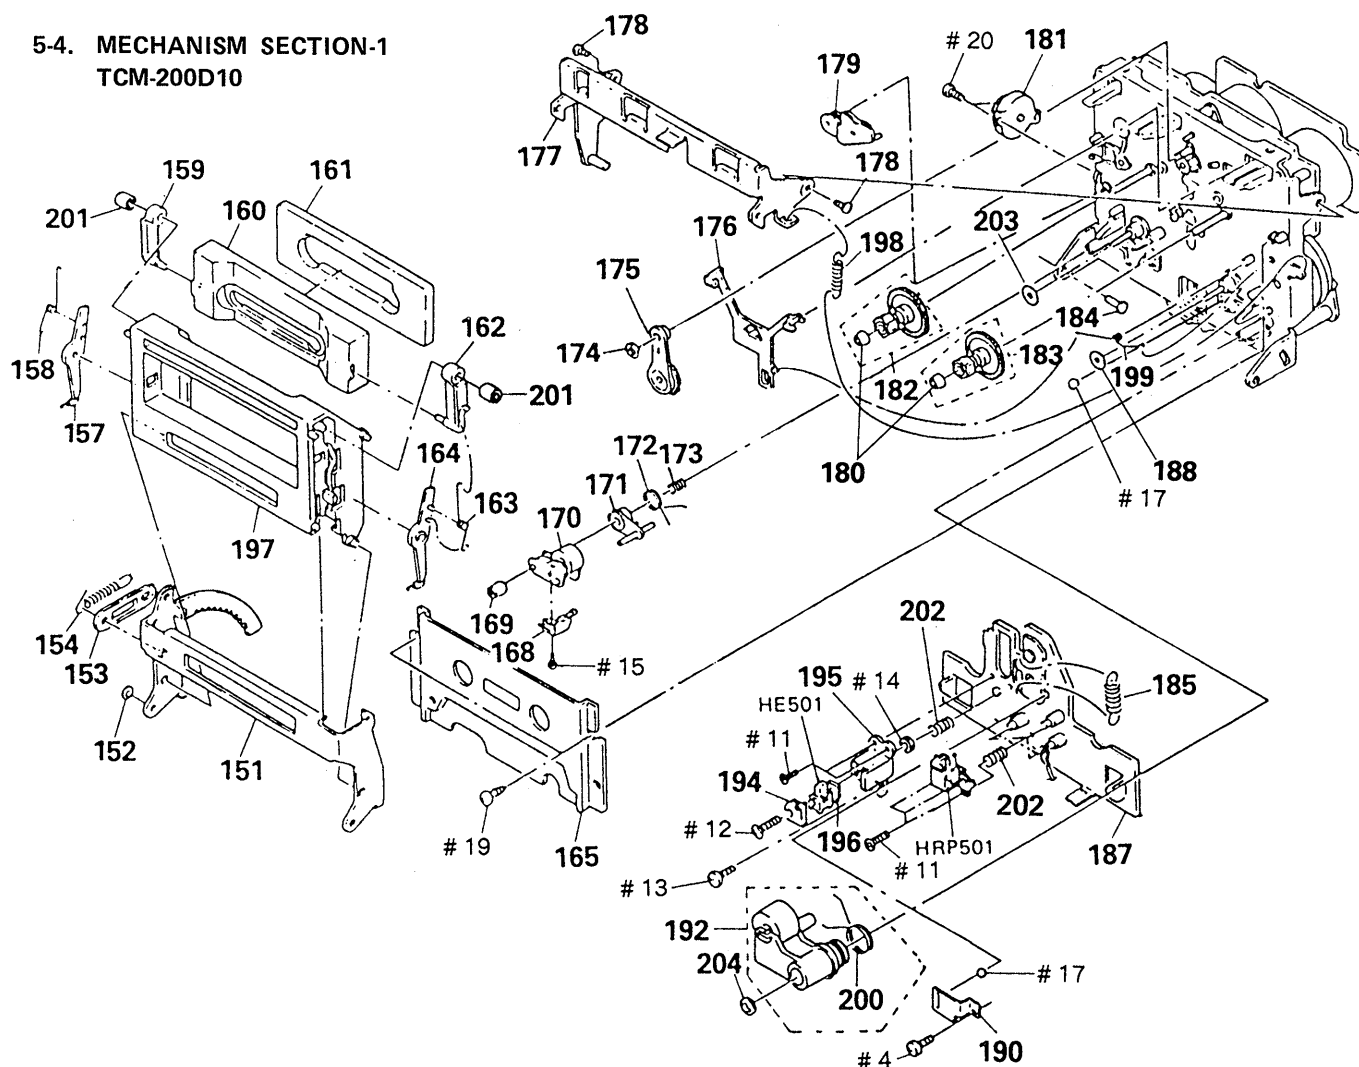

Ref. No.	Part No.	Description	Remark
151	X-3362-671-1	HOLDER (BG) ASSY, CASSETTE	
152	3-558-708-21	WASHER, STOPPER	
* 153	3-356-717-01	LEVER (JOINT)	
154	3-356-626-01	SPRING, TENSION	
157	3-356-932-01	LEVER (LA)	
158	3-356-927-01	SPRING (LEFT), TORSION	
159	3-356-933-01	LEVER (LB)	
160	3-356-928-01	PLATE (A), ORNAMENTAL	
* 161	3-356-929-01	ABSORBENT, VIBRATION	
162	3-356-931-01	LEVER (RB)	
163	3-356-926-01	SPRING (RIGHT), TORSION	
164	3-356-930-01	LEVER (RA)	
165	X-3356-613-1	PLATE ASSY, ORNAMENTAL	
168	3-564-138-00	GUIDE (S), TAPE	
169	3-356-652-01	NUT (PINCH LEVER S)	
170	X-3356-621-1	LEVER (PINCH LEVER S) ASSY	
171	3-356-660-01	LEVER (PS)	
172	3-356-661-01	SPRING (PINCH LEVER S), TORSION	
173	3-356-657-01	SPRING (PS), COMPRESSION	
174	3-669-465-00	WASHER (1.5), STOPPER	
175	X-3356-641-1	LEVER (FR2) ASSY	
176	3-356-614-01	SLIDER (BRAKE)	
* 177	X-3356-608-1	LEVER (LIFTER) ASSY	
178	3-356-601-11	SCREW, STEP	

Ref. No.	Part No.	Description	Remark
179	X-3356-623-1	LEVER (BT) ASSY	
180	3-362-308-01	CAP (REEL)	
181	3-319-224-41	DAMPER, SMALL	
182	X-3356-629-1	GEAR (S) ASSY	
183	X-3356-627-1	GEAR (T) ASSY	
184	3-356-710-01	SHAFT (LEFT) (CASSETTE HOLDER)	
185	3-356-658-01	SPRING (LIMITER H), TENSION	
* 187	X-3362-199-1	SLIDER (HEAD CHASSIS D) ASSY	
188	3-332-763-01	RING, OIL RESERVOIR	
190	3-356-656-01	SPRING (HEAD PC BOARD), LEAF	
192	X-3356-620-1	LEVER (PINCH LEVER T) ASSY	
194	3-318-433-01	SPRING	
* 195	3-576-977-00	BRACKET, E. HEAD	
* 196	1-608-268-00	PC BOARD, ERASE HEAD	
197	X-3365-065-1	HOLDER ASSY, CASSETTE	
198	3-376-854-01	SPRING, TENSION	
199	3-356-619-01	SPRING (B), TORSION	
200	3-356-672-01	SPRING (PINCH LEVER T), TORSION	
201	3-356-946-01	BUSHING	
202	3-564-121-00	SPRING, COMPRESSION	
203	3-356-713-01	WASHER	
204	3-669-596-00	WASHER (2.3), STOPPER	
HE501	1-543-836-11	HEAD, MAGNETIC (ERASE)	
HRP501	1-543-684-21	HEAD, MAGNETIC (REC/PB)	

5-5. MECHANISM SECTION-2
TCM-200D10

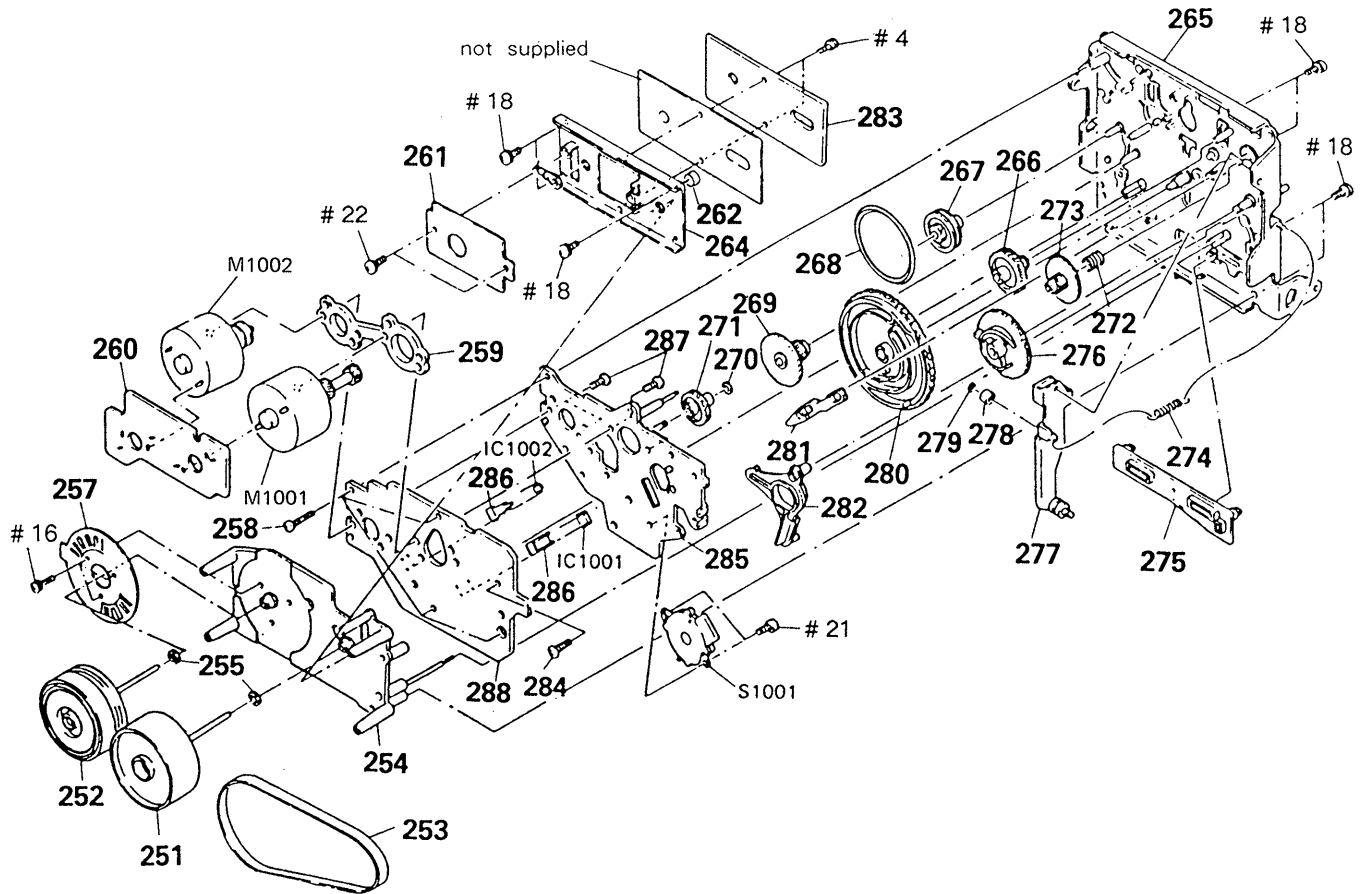

Ref.No.	Part No.	Description	Remark
251	X-3362-284-1	FLYWHEEL (S2.3) ASSY	
252	X-3356-619-1	FLYWHEEL (DT) ASSY	
253	3-364-600-01	BELT (CAPSTAN)	
254	X-3362-281-1	CHASSIS ASSY	
255	3-356-705-31	WASHER (CAPSTAN)	
257	1-632-779-11	PC BOARD, FG	
258	3-355-801-01	SCREW (BTP 2X18)	
* 259	3-356-628-01	SPACER (MOTOR)	
* 260	1-632-741-11	REEL MOTOR BOARD	
* 261	1-632-746-11	COMPARATOR BOARD	
262	3-364-135-01	RETAINER (S), THRUST	
* 264	X-3362-282-1	BRACKET (THRUST RETAINER) ASSY	
265	X-3356-622-1	CHASSIS (C) ASSY, MECHANICAL	
266	3-356-703-01	GEAR (COMMUNICATION C)	
267	3-356-607-01	PULLEY (MODE)	
268	3-356-603-01	BELT (MODE)	
269	3-356-606-01	GEAR (MODE)	
270	3-669-465-11	WASHER (1.5), STOPPER	
271	3-356-702-01	GEAR (COMMUNICATION B)	
272	3-356-605-01	SPRING, COMPRESSION	
273	3-356-609-01	GEAR (LOADING)	

Ref.No.	Part No.	Description	Remark
274	3-356-625-01	SPRING, TENSION	
275	3-356-653-01	SLIDER (PAUSE)	
276	3-356-616-01	GEAR (LOADING CAM)	
* 277	X-3356-606-1	LEVER (LOADING) ASSY	
278	3-356-630-01	ROLLER (LOADING)	
279	3-558-708-11	WASHER, STOPPER	
280	3-356-654-01	GEAR (MODE CAM C)	
281	3-356-617-01	LEVER (SELECTION)	
282	3-356-613-01	LEVER (MODE)	
283	A-2006-154-A	CAPSTAN BOARD, COMPLETE	
284	3-356-707-01	SCREW (+PTPWH 2X25)	
* 285	X-3356-616-1	BRACKET (MOTOR D) ASSY	
286	3-356-631-01	HOLDER (SENSOR)	
287	3-363-804-01	SCREW (+P 2.6X6.5)	
* 288	1-632-740-11	MD BOARD	
IC1001	8-749-920-97	IC PHOTO GP2S22B	
IC1002	8-749-920-97	IC PHOTO GP2S22B	
M1001	X-3356-638-1	MOTOR (REEL R) ASSY	
M1002	X-3356-604-1	MOTOR (ASSIST) ASSY	
S1001	1-466-238-11	ENCODER, ROTARY	

SECTION 6 ELECTRICAL PARTS LIST

NOTE:

- Due to standardization, replacements in the parts list may be different from the part specified in the diagrams or the components used on the set.
- -XX,-X mean standardized parts, so they may have some difference from original one.
- RESISTORS
All resistors are in ohms
METAL : Metal-film resistor
METAL OXIDE : Metal Oxide-film resistor
F : nonflammable

- Items marked " * " are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- SEMICONDUCTORS
In each case, u : μ , for example :
uA... : μ A..., uPA... : μ PA...,
uPB... : μ PB..., uPC... : μ PC...,
uPD... : μ PD...
- CAPACITORS
uF : μ F
- COILS
uH : μ H

The components identified by mark

⚠ or dotted line with mark ⚠ are critical for safety.

Replace only with part number specified.

When indicating parts by reference number, please include the board name.

Ref.No.	Part No.	Description	Remark
*	1-637-517-11	AC SW BOARD *****	
		< CAPACITOR >	
• C701	1-161-744-00	CERAMIC 0.01uF	400V
		< CONNECTOR >	
* CN701	1-564-321-00	PIN, CONNECTOR 2P	
* CN702	1-564-321-00	PIN, CONNECTOR 2P	
		< SWITCH >	
• S701	1-572-267-21	SWITCH, PUSH (AC POWER) (1 KEY) (POWER)	
*****		*****	
	A-2006-154-A	CAPSTAN BOARD, COMPLETE *****	
		< CAPACITOR >	
C905	1-124-779-00	ELECT CHIP 10uF	20% 16V
C906	1-135-091-00	TANTALUM CHIP 1uF	20% 16V
C907	1-163-077-00	CERAMIC CHIP 0.1uF	10% 25V
C908	1-163-077-00	CERAMIC CHIP 0.1uF	10% 25V
C909	1-163-077-00	CERAMIC CHIP 0.1uF	10% 25V
C910	1-163-205-00	CERAMIC CHIP 0.001uF	5% 50V
C911	1-124-779-00	ELECT CHIP 10uF	20% 16V
		< HOLE ELEMENT >	
H901	8-719-403-79	DIODE OH009	
H902	8-719-403-79	DIODE OH009	
H903	8-719-403-79	DIODE OH009	
		< IC >	
IC902	8-752-017-40	IC CX20174	
		< RESISTOR >	
R907	1-216-242-00	METAL GLAZE 68K 5%	1/8W
R908	1-216-246-00	METAL GLAZE 100K 5%	1/8W
R909	1-216-246-00	METAL GLAZE 100K 5%	1/8W

Ref.No.	Part No.	Description	Remark
R910	1-216-238-00	METAL GLAZE 47K 5%	1/8W
R911	1-216-182-00	METAL GLAZE 220 5%	1/8W
R912	1-216-182-00	METAL GLAZE 220 5%	1/8W
R913	1-216-150-00	METAL GLAZE 10 5%	1/8W
R914	1-216-150-00	METAL GLAZE 10 5%	1/8W
R915	1-216-150-00	METAL GLAZE 10 5%	1/8W
*****		*****	
*	1-632-746-11	COMPARATOR BOARD *****	
		< CAPACITOR >	
C951	1-136-157-00	FILM 0.022uF	5% 50V
C952	1-124-282-00	ELECT (N.P.) 22uF	20% 25V
C953	1-124-478-11	ELECT 100uF	20% 25V
C954	1-124-477-11	ELECT 47uF	20% 25V
C955	1-162-203-31	CERAMIC 15PF	5% 50V
C956	1-162-203-31	CERAMIC 15PF	5% 50V
C957	1-136-159-00	FILM 0.033uF	5% 50V
		< CONNECTOR >	
* CN951	1-564-718-11	PIN, CONNECTOR (SMALL TYPE) 2P	
* CN952	1-564-518-11	PLUG, CONNECTOR 3P	
		< IC >	
IC951	8-759-945-58	IC RC4558P	
IC952	8-759-201-58	IC TC9142P	
		< RESISTOR >	
R951	1-249-413-11	CARBON 470 5%	1/4W
R952	1-249-413-11	CARBON 470 5%	1/4W
R953	1-247-881-00	CARBON 120K 5%	1/4W
R954	1-247-881-00	CARBON 120K 5%	1/4W
R955	1-249-429-11	CARBON 10K 5%	1/4W
R956	1-249-417-11	CARBON 1K 5%	1/4W
R957	1-249-417-11	CARBON 1K 5%	1/4W
R958	1-247-891-00	CARBON 330K 5%	1/4W
R959	1-247-901-11	CARBON 820K 5%	1/4W
R960	1-249-441-11	CARBON 100K 5%	1/4W

COMPARATOR

COUNTER

HP AMP

MD

Ref.No.	Part No.	Description	Remark
		< VIBRATOR >	
X951	1-577-615-11	VIBRATOR, CRYSTAL (4.934MHz)	

*	1-637-516-11	COUNTER BOARD	

		< CAPACITOR >	
C881	1-124-234-00	ELECT 22uF	20% 16V
C882	1-126-096-11	ELECT 10uF	20% 35V
C883	1-164-159-11	CERAMIC 0.1uF	50V
		< DIODE >	
D881	8-719-304-32	LED SEL4214S	
D882	8-719-312-65	LED SEL4814A-CD	
D883	8-719-304-37	LED SEL4414E-C	
		< FLUORESCENT INDICATOR >	
FLT881	1-519-630-11	INDICATOR TUBE, FLUORESCENT	
		< IC >	
IC881	8-759-322-98	IC HD404240A31S	
IC882	8-741-100-48	IC SBX1610-59	
		< RESISTOR >	
R881	1-247-903-00	CARBON 1M 5%	1/4W
R882	1-249-433-11	CARBON 22K 5%	1/4W
R883	1-249-425-11	CARBON 4.7K 5%	1/4W
R884	1-249-425-11	CARBON 4.7K 5%	1/4W
R885	1-249-422-11	CARBON 2.7K 5%	1/4W
R886	1-249-424-11	CARBON 3.9K 5%	1/4W
R887	1-249-422-11	CARBON 2.7K 5%	1/4W
R888	1-249-424-11	CARBON 3.9K 5%	1/4W
R889	1-249-428-11	CARBON 8.2K 5%	1/4W
R890	1-249-434-11	CARBON 27K 5%	1/4W
R891	1-249-422-11	CARBON 2.7K 5%	1/4W
R892	1-249-424-11	CARBON 3.9K 5%	1/4W
R893	1-249-428-11	CARBON 8.2K 5%	1/4W
R894	1-249-434-11	CARBON 27K 5%	1/4W
		< SWITCH >	
S881	1-554-303-21	SWITCH, TACTILE (RESET)	
S882	1-554-303-21	SWITCH, TACTILE (MEMORY)	
S883	1-554-303-21	SWITCH, TACTILE (DISPLAY MODE)	
S884	1-554-303-21	SWITCH, TACTILE (OPEN/CLOSE)	
S885	1-554-303-21	SWITCH, TACTILE (■)	
S886	1-554-303-21	SWITCH, TACTILE (◀)	
S887	1-554-303-21	SWITCH, TACTILE (▶)	

Ref.No.	Part No.	Description	Remark
S888	1-554-303-21	SWITCH, TACTILE (REC)	
S889	1-554-303-21	SWITCH, TACTILE (▶)	
S890	1-554-303-21	SWITCH, TACTILE (PAUSE)	
S891	1-554-303-21	SWITCH, TACTILE (AMS ◀)	
S892	1-554-303-21	SWITCH, TACTILE (AMS ▶)	
S893	1-554-303-21	SWITCH, TACTILE (REC MUTE)	
		< VIBRATOR >	
X881	1-577-358-21	VIBRATOR, CERAMIC (4MHz)	

*	1-637-521-11	H. P. AMP BOARD	

		< CAPACITOR >	
C158	1-124-767-00	ELECT 2.2uF	20% 50V
C258	1-124-767-00	ELECT 2.2uF	20% 50V
C518	1-124-122-11	ELECT 100uF	20% 50V
C519	1-124-122-11	ELECT 100uF	20% 50V
		< IC >	
IC507	8-759-981-96	IC RC4560D	
		< JACK >	
J503	1-507-796-71	JACK (PHONES)	
		< RESISTOR >	
R181	1-247-725-11	CARBON 10K 5%	1/4W
R182	1-249-461-11	CARBON 18K 5%	1/4W
R183	1-249-603-11	CARBON 130K 5%	1/4W
R184	1-247-704-11	CARBON 220 5%	1/4W
R281	1-247-725-11	CARBON 10K 5%	1/4W
R282	1-249-461-11	CARBON 18K 5%	1/4W
R283	1-249-603-11	CARBON 130K 5%	1/4W
R284	1-247-704-11	CARBON 220 5%	1/4W
R581	1-247-700-11	CARBON 100 5%	1/4W
R582	1-247-700-11	CARBON 100 5%	1/4W

*	1-632-740-11	MD BOARD	

	3-356-631-01	HOLDER (SENSOR)	
		< CONNECTOR >	
CN1001	1-506-615-11	PIN, CONNECTOR 9P	
CN1002	1-564-501-11	PIN, CONNECTOR 8P	

MD**METER**

Ref.No.	Part No.	Description	Remark		
< IC >					
IC1001	8-749-920-97	IC PHOTO GP2S22B			
IC1002	8-749-920-97	IC PHOTO GP2S22B			
< RESISTOR >					
R1001	1-249-408-11	CARBON	180	5%	1/4W
R1002	1-249-408-11	CARBON	180	5%	1/4W
< SWITCH >					
S1001	1-466-238-11	ENCODER, ROTARY			
S1002	1-570-953-11	SWITCH, PUSH (1 KEY) (DOOR)			
S1003	1-571-958-11	SWITCH, PUSH (1 KEY) (CLOSE)			
S1004	1-572-126-11	SWITCH, PUSH (1 KEY) (OPEN)			
S1005	1-572-125-11	SWITCH, LEAF (FWD)			
S1006	1-572-202-11	SWITCH, LEAF (HALF)			
S1007	1-572-125-11	SWITCH, LEAF (METAL)			
S1008	1-572-125-11	SWITCH, LEAF (70u)			
< TERMINAL >					
* TB1001	1-694-018-11	TERMINAL (5P)			

* A-2006-652-A	METER BOARD, COMPLETE				

< CAPACITOR >					
C601	1-131-368-00	TANTALUM	3.3uF	10%	16V
C603	1-164-159-11	CERAMIC	0.1uF		50V
C604	1-164-159-11	CERAMIC	0.1uF		50V
C606	1-164-159-11	CERAMIC	0.1uF		50V
C607	1-164-159-11	CERAMIC	0.1uF		50V
< COMPOSITION CIRCUIT BLOCK >					
CP601	1-232-881-11	COMPOSITION CIRCUIT BLOCK			
CP602	1-236-985-11	COMPOSITION CIRCUIT BLOCK			
< DIODE >					
D601	8-719-987-63	DIODE 1N4148M			
D602	8-719-987-63	DIODE 1N4148M			
D603	8-719-987-63	DIODE 1N4148M			
D604	8-719-987-63	DIODE 1N4148M			
D605	8-719-987-63	DIODE 1N4148M			
D606	8-719-987-63	DIODE 1N4148M			
D607	8-719-987-63	DIODE 1N4148M			
D608	8-719-987-63	DIODE 1N4148M			
D609	8-719-987-63	DIODE 1N4148M			
D610	8-719-987-63	DIODE 1N4148M			
D611	8-719-987-63	DIODE 1N4148M			

Ref.No.	Part No.	Description	Remark
D612	8-719-987-63	DIODE 1N4148M	
D613	8-719-987-63	DIODE 1N4148M	
D614	8-719-987-63	DIODE 1N4148M	
D615	8-719-987-63	DIODE 1N4148M	
D616	8-719-987-63	DIODE 1N4148M	
D617	8-719-987-63	DIODE 1N4148M	
D618	8-719-987-63	DIODE 1N4148M	
D619	8-719-987-63	DIODE 1N4148M	
D620	8-719-987-63	DIODE 1N4148M	
< FLUORESCENT INDICATOR >			
FLT601	1-519-629-11	INDICATOR TUBE, FLUORESCENT	
< IC >			
IC601	8-759-635-68	IC M50940-313SP	
IC602	8-759-240-69	IC TC4069UBP	
< TRANSISTOR >			
Q601	8-729-900-61	TRANSISTOR DTA114ES	
Q602	8-729-900-61	TRANSISTOR DTA114ES	
Q603	8-729-900-65	TRANSISTOR DTA144ES	
Q604	8-729-900-65	TRANSISTOR DTA144ES	
Q605	8-729-900-65	TRANSISTOR DTA144ES	
Q606	8-729-900-65	TRANSISTOR DTA144ES	
Q607	8-729-900-65	TRANSISTOR DTA144ES	
Q608	8-729-900-65	TRANSISTOR DTA144ES	
Q609	8-729-900-89	TRANSISTOR DTC144ES	
Q610	8-729-900-65	TRANSISTOR DTA144ES	
Q611	8-729-900-65	TRANSISTOR DTA144ES	
< RESISTOR >			
R601	1-249-441-11	CARBON 100K 5%	1/4W
R602	1-249-441-11	CARBON 100K 5%	1/4W
R603	1-249-425-11	CARBON 4.7K 5%	1/4W
R604	1-247-903-00	CARBON 1M 5%	1/4W
R605	1-247-895-00	CARBON 470K 5%	1/4W
R606	1-249-433-11	CARBON 22K 5%	1/4W
R607	1-249-433-11	CARBON 22K 5%	1/4W
R608	1-249-437-11	CARBON 47K 5%	1/4W
R609	1-249-437-11	CARBON 47K 5%	1/4W
R610	1-249-437-11	CARBON 47K 5%	1/4W
R611	1-249-437-11	CARBON 47K 5%	1/4W
R612	1-249-437-11	CARBON 47K 5%	1/4W
R613	1-249-437-11	CARBON 47K 5%	1/4W
R614	1-249-421-11	CARBON 2.2K 5%	1/4W
R615	1-249-421-11	CARBON 2.2K 5%	1/4W
R616	1-249-429-11	CARBON 10K 5%	1/4W
R617	1-249-437-11	CARBON 47K 5%	1/4W

METER

MONITOR SW

PB

Ref.No.	Part No.	Description	Remark		
R618	1-247-842-11	CARBON	3K	5%	1/4W
R619	1-249-426-11	CARBON	5.6K	5%	1/4W
R620	1-249-437-11	CARBON	47K	5%	1/4W
< VARIABLE RESISTOR >					
RV601	1-241-335-11	RES, VAR , CARBON 5K (BIAS)			
< SWITCH >					
S601	1-572-339-11	SWITCH, PUSH (1 KEY) (HX PRO)			
S602	1-572-339-11	SWITCH, PUSH (1 KEY) (CALIBRATION)			
S603	1-554-833-11	SWITCH, PUSH (1 KEY) (INPUT)			
S604	1-572-588-11	SWITCH, ROTARY (DOLBY NR)			
< VIBRATOR >					
X601	1-577-358-21	VIBRATOR, CERAMIC (4MHz)			

*	1-637-523-11	MONITOR SW BOARD			

< SWITCH >					
S605	1-572-590-11	SWITCH, ROTARY (MONITOR)			

*	A-2006-641-A	PB BOARD, COMPLETE			

*	3-346-266-21	PLATE, GROUND			
< CAPACITOR >					
C101	1-136-252-00	FILM	0.0015uF	5%	100V
C102	1-107-169-00	MICA	100PF	5%	500V
C103	1-130-893-00	FILM	0.027uF	3%	100V
C104	1-124-130-00	ELECT	100uF	20%	63V
C105	1-124-929-11	ELECT	22uF	20%	100V
C106	1-124-929-11	ELECT	22uF	20%	100V
C107	1-136-169-00	FILM	0.22uF	5%	50V
C108	1-136-230-00	FILM	0.0022uF	5%	100V
C109	1-136-230-00	FILM	0.0022uF	5%	100V
C110	1-136-230-00	FILM	0.0022uF	5%	100V
C111	1-136-230-00	FILM	0.0022uF	5%	100V
C112	1-136-230-00	FILM	0.0022uF	5%	100V
C113	1-130-475-00	MYLAR	0.0022uF	5%	50V
C114	1-130-475-00	MYLAR	0.0022uF	5%	50V
C115	1-130-478-00	MYLAR	0.0039uF	5%	50V
C116	1-136-173-00	FILM	0.47uF	5%	50V
C117	1-136-167-00	FILM	0.15uF	5%	50V

Ref.No.	Part No.	Description	Remark		
C118	1-136-155-00	FILM	0.015uF	5%	50V
C119	1-123-380-00	ELECT	1uF	20%	50V
C120	1-136-169-00	FILM	0.22uF	5%	50V
C121	1-136-163-00	FILM	0.068uF	5%	50V
C122	1-136-162-00	FILM	0.056uF	5%	50V
C123	1-123-380-00	ELECT	1uF	20%	50V
C124	1-130-480-00	MYLAR	0.0056uF	5%	50V
C125	1-136-153-00	FILM	0.01uF	5%	50V
C126	1-124-929-11	ELECT	22uF	20%	100V
C127	1-124-929-11	ELECT	22uF	20%	100V
C175	1-123-369-00	ELECT	4.7uF	20%	63V
C176	1-123-369-00	ELECT	4.7uF	20%	63V
C201	1-136-252-00	FILM	0.0015uF	5%	100V
C202	1-107-169-00	MICA	100PF	5%	500V
C203	1-130-893-00	FILM	0.027uF	3%	100V
C204	1-124-130-00	ELECT	100uF	20%	63V
C205	1-124-929-11	ELECT	22uF	20%	100V
C206	1-124-929-11	ELECT	22uF	20%	100V
C207	1-136-169-00	FILM	0.22uF	5%	50V
C208	1-136-230-00	FILM	0.0022uF	5%	100V
C209	1-136-230-00	FILM	0.0022uF	5%	100V
C210	1-136-230-00	FILM	0.0022uF	5%	100V
C211	1-136-230-00	FILM	0.0022uF	5%	100V
C212	1-136-230-00	FILM	0.0022uF	5%	100V
C213	1-130-475-00	MYLAR	0.0022uF	5%	50V
C214	1-130-475-00	MYLAR	0.0022uF	5%	50V
C215	1-130-478-00	MYLAR	0.0039uF	5%	50V
C216	1-136-173-00	FILM	0.47uF	5%	50V
C217	1-136-167-00	FILM	0.15uF	5%	50V
C218	1-136-155-00	FILM	0.015uF	5%	50V
C219	1-123-380-00	ELECT	1uF	20%	50V
C220	1-136-169-00	FILM	0.22uF	5%	50V
C221	1-136-163-00	FILM	0.068uF	5%	50V
C222	1-136-162-00	FILM	0.056uF	5%	50V
C223	1-123-380-00	ELECT	1uF	20%	50V
C224	1-130-480-00	MYLAR	0.0056uF	5%	50V
C225	1-136-153-00	FILM	0.01uF	5%	50V
C226	1-124-929-11	ELECT	22uF	20%	100V
C227	1-124-929-11	ELECT	22uF	20%	100V
C275	1-123-369-00	ELECT	4.7uF	20%	63V
C276	1-123-369-00	ELECT	4.7uF	20%	63V
C501	1-124-927-11	ELECT	4.7uF	20%	100V
C502	1-136-165-00	FILM	0.1uF	5%	50V
C503	1-162-284-31	CERAMIC	150PF	10%	50V
C504	1-130-478-00	MYLAR	0.0039uF	5%	50V
C505	1-124-902-00	ELECT	0.47uF	20%	50V
C506	1-124-927-11	ELECT	4.7uF	20%	100V
C507	1-124-922-11	ELECT	1000uF	20%	63V
C508	1-107-159-00	MICA	33PF	5%	500V

PB

Ref.No.	Part No.	Description	Remark
C509	1-126-066-11	ELECT 470uF	20% 63V
C510	1-124-122-11	ELECT 100uF	20% 50V
C511	1-124-922-11	ELECT 1000uF	20% 63V
C512	1-107-159-00	MICA 33PF	5% 500V
C513	1-126-066-11	ELECT 470uF	20% 63V

C514	1-124-122-11	ELECT	100uF	20%	50V
------	--------------	-------	-------	-----	-----

< CONNECTOR >

CNE501	1-564-507-11	PLUG, CONNECTOR 4P
* CNN501	1-560-062-00	PIN, CONNECTOR 4P
* CNN502	1-560-062-00	PIN, CONNECTOR 4P
* CNN503	1-560-062-00	PIN, CONNECTOR 4P
* CNN504	1-560-065-00	PIN, CONNECTOR 8P

CNS501	1-564-104-00	PIN, CONNECTOR 3P
CNS502	1-564-104-00	PIN, CONNECTOR 3P

< DIODE >

D501	8-719-987-63	DIODE 1N4148M
D502	8-719-987-63	DIODE 1N4148M
D503	8-719-114-29	DIODE RD5.1JS-B1
D509	8-719-910-65	DIODE HZ6B2L
D510	8-719-910-65	DIODE HZ6B2L
D519	8-719-987-63	DIODE 1N4148M
D520	8-719-987-63	DIODE 1N4148M
D521	8-719-987-63	DIODE 1N4148M

< IC >

IC101	8-759-900-72	IC NE5532P
IC102	8-759-900-72	IC NE5532P
IC201	8-759-900-72	IC NE5532P
IC202	8-759-900-72	IC NE5532P
IC501	8-759-900-72	IC NE5532P

IC502	8-752-018-80	IC CX20188
IC503	8-759-945-58	IC RC4558P

< TRANSISTOR >

Q101	8-729-217-03	TRANSISTOR 2SK170
Q102	8-729-217-03	TRANSISTOR 2SK170
Q103	8-729-375-61	TRANSISTOR 2SD756
Q104	8-729-201-56	TRANSISTOR 2SK246-GR2
Q105	8-729-194-57	TRANSISTOR 2SC945-P
Q106	8-729-141-30	TRANSISTOR 2SC3623A-LK
Q201	8-729-217-03	TRANSISTOR 2SK170
Q202	8-729-217-03	TRANSISTOR 2SK170
Q203	8-729-375-61	TRANSISTOR 2SD756
Q204	8-729-201-56	TRANSISTOR 2SK246-GR2
Q205	8-729-194-57	TRANSISTOR 2SC945-P
Q206	8-729-141-30	TRANSISTOR 2SC3623A-LK

Ref.No.	Part No.	Description	Remark
Q501	8-729-900-61	TRANSISTOR DTA114ES	
Q502	8-729-900-89	TRANSISTOR DTC144ES	
Q503	8-729-900-74	TRANSISTOR DTC143TS	
Q504	8-729-620-05	TRANSISTOR 2SC2603-EF	
Q505	8-729-900-74	TRANSISTOR DTC143TS	

Q506	8-729-900-89	TRANSISTOR DTC144ES
Q507	8-729-119-76	TRANSISTOR 2SA1175-HFE
Q508	8-729-900-89	TRANSISTOR DTC144ES
Q509	8-729-107-53	TRANSISTOR 2SC2275A
Q510	8-729-375-61	TRANSISTOR 2SD756

Q511	8-729-375-61	TRANSISTOR 2SD756
Q512	8-729-201-56	TRANSISTOR 2SK246-GR2
Q513	8-729-141-10	TRANSISTOR 2SA985A
Q514	8-729-364-62	TRANSISTOR 2SB646C
Q515	8-729-364-62	TRANSISTOR 2SB646C

Q516	8-729-201-56	TRANSISTOR 2SK246-GR2
Q537	8-729-364-62	TRANSISTOR 2SB646C
Q538	8-729-375-61	TRANSISTOR 2SD756

< RESISTOR >

R101	1-249-844-11	CARBON 56K 5% 1/2W
R102	1-247-128-00	CARBON 750 5% 1/4W
R103	1-247-128-00	CARBON 750 5% 1/4W
R104	1-249-504-11	CARBON 10 5% 1/4W
R105	1-247-708-11	CARBON 470 5% 1/4W

R106	1-249-518-11	CARBON 39 5% 1/4W
R107	1-247-721-11	CARBON 4.7K 5% 1/4W
R108	1-247-704-11	CARBON 220 5% 1/4W
R109	1-249-723-11	CARBON 120K 5% 1/2W
R110	1-247-255-00	CARBON 4.3K 5% 1/2W

R111	1-249-462-11	CARBON 22K 5% 1/4W
R112	1-247-740-11	CARBON 120 5% 1/2W
R113	1-249-658-11	CARBON 240 5% 1/2W
R114	1-214-851-00	METAL 300 1% 1/2W
R115	1-247-764-11	CARBON 10K 5% 1/2W

R116	1-249-429-11	CARBON 10K 5% 1/4W
R117	1-247-720-11	CARBON 3.9K 5% 1/4W
R118	1-247-718-11	CARBON 2.7K 5% 1/4W
R119	1-247-718-11	CARBON 2.7K 5% 1/4W
R120	1-247-721-11	CARBON 4.7K 5% 1/4W

R121	1-247-146-00	CARBON 4.3K 5% 1/4W
R122	1-247-718-11	CARBON 2.7K 5% 1/4W
R123	1-247-718-11	CARBON 2.7K 5% 1/4W
R124	1-247-719-11	CARBON 3.3K 5% 1/4W
R125	1-249-926-11	CARBON 1.3K 5% 1/4W

R126	1-247-891-00	CARBON 330K 5% 1/4W
R127	1-247-749-11	CARBON 560 5% 1/2W
R128	1-247-764-11	CARBON 10K 5% 1/2W
R129	1-247-142-00	CARBON 3K 5% 1/4W

PB

PIN JACK

Ref.No.	Part No.	Description	Remark		
R130	1-249-565-11	CARBON	3.6K	5%	1/4W
R131	1-247-710-11	CARBON	560	5%	1/4W
R132	1-246-545-00	CARBON	1M	5%	1/4W
R133	1-249-462-11	CARBON	22K	5%	1/4W
R134	1-247-152-00	CARBON	7.5K	5%	1/4W
R135	1-247-711-11	CARBON	680	5%	1/4W
R136	1-247-154-00	CARBON	9.1K	5%	1/4W
R137	1-249-465-11	CARBON	47K	5%	1/4W
R196	1-215-472-00	METAL	130K	1%	1/6W
R201	1-249-844-11	CARBON	56K	5%	1/2W
R202	1-247-128-00	CARBON	750	5%	1/4W
R203	1-247-128-00	CARBON	750	5%	1/4W
R204	1-249-504-11	CARBON	10	5%	1/4W
R205	1-247-708-11	CARBON	470	5%	1/4W
R206	1-249-518-11	CARBON	39	5%	1/4W
R207	1-247-721-11	CARBON	4.7K	5%	1/4W
R208	1-247-704-11	CARBON	220	5%	1/4W
R209	1-249-723-11	CARBON	120K	5%	1/2W
R210	1-247-255-00	CARBON	4.3K	5%	1/2W
R211	1-249-462-11	CARBON	22K	5%	1/4W
R212	1-247-740-11	CARBON	120	5%	1/2W
R213	1-249-658-11	CARBON	240	5%	1/2W
R214	1-214-851-00	METAL	300	1%	1/2W
R215	1-247-764-11	CARBON	10K	5%	1/2W
R216	1-249-429-11	CARBON	10K	5%	1/4W
R217	1-247-720-11	CARBON	3.9K	5%	1/4W
R218	1-247-718-11	CARBON	2.7K	5%	1/4W
R219	1-247-718-11	CARBON	2.7K	5%	1/4W
R220	1-247-721-11	CARBON	4.7K	5%	1/4W
R221	1-247-146-00	CARBON	4.3K	5%	1/4W
R222	1-247-718-11	CARBON	2.7K	5%	1/4W
R223	1-247-718-11	CARBON	2.7K	5%	1/4W
R224	1-247-719-11	CARBON	3.3K	5%	1/4W
R225	1-249-926-11	CARBON	1.3K	5%	1/4W
R226	1-247-891-00	CARBON	330K	5%	1/4W
R227	1-247-749-11	CARBON	560	5%	1/2W
R228	1-247-764-11	CARBON	10K	5%	1/2W
R229	1-247-142-00	CARBON	3K	5%	1/4W
R230	1-249-565-11	CARBON	3.6K	5%	1/4W
R231	1-247-710-11	CARBON	560	5%	1/4W
R232	1-246-545-00	CARBON	1.0M	5%	1/4W
R233	1-249-462-11	CARBON	22K	5%	1/4W
R234	1-247-152-00	CARBON	7.5K	5%	1/4W
R235	1-247-711-11	CARBON	680	5%	1/4W
R236	1-247-154-00	CARBON	9.1K	5%	1/4W
R237	1-249-465-11	CARBON	47K	5%	1/4W
R501	1-249-434-11	CARBON	27K	5%	1/4W
R502	1-249-429-11	CARBON	10K	5%	1/4W
R503	1-249-425-11	CARBON	4.7K	5%	1/4W

Ref.No.	Part No.	Description	Remark		
R504	1-249-433-11	CARBON	22K	5%	1/4W
R506	1-249-429-11	CARBON	10K	5%	1/4W
R507	1-249-417-11	CARBON	1K	5%	1/4W
R508	1-249-435-11	CARBON	33K	5%	1/4W
R509	1-249-429-11	CARBON	10K	5%	1/4W
R510	1-249-425-11	CARBON	4.7K	5%	1/4W
R511	1-249-417-11	CARBON	1K	5%	1/4W
R512	1-249-434-11	CARBON	27K	5%	1/4W
R513	1-249-429-11	CARBON	10K	5%	1/4W
R514	1-249-441-11	CARBON	100K	5%	1/4W
R515	1-249-417-11	CARBON	1K	5%	1/4W
R516	1-249-433-11	CARBON	22K	5%	1/4W
R517	1-249-431-11	CARBON	15K	5%	1/4W
R521	1-247-749-11	CARBON	560	5%	1/2W
R522	1-249-673-11	CARBON	1K	5%	1/2W
R523	1-247-719-11	CARBON	3.3K	5%	1/4W
R524	1-249-547-11	CARBON	620	5%	1/4W
R525	1-249-466-11	CARBON	56K	5%	1/4W
R526	1-249-673-11	CARBON	1K	5%	1/2W
R527	1-247-749-11	CARBON	560	5%	1/2W
R528	1-247-719-11	CARBON	3.3K	5%	1/4W
R529	1-249-547-11	CARBON	620	5%	1/4W
R530	1-249-466-11	CARBON	56K	5%	1/4W
R570	1-249-433-11	CARBON	22K	5%	1/4W
R571	1-249-429-11	CARBON	10K	5%	1/4W
R574	1-249-429-11	CARBON	10K	5%	1/4W
R577	1-247-714-11	CARBON	1.2K	5%	1/4W
R578	1-247-704-11	CARBON	220	5%	1/4W
R579	1-247-714-11	CARBON	1.2K	5%	1/4W
R580	1-247-704-11	CARBON	220	5%	1/4W
R518	1-249-429-11	CARBON	10K	5%	1/4W
R519	1-249-433-11	CARBON	22K	5%	1/4W

< VARIABLE RESISTOR >

RV101 1-224-550-21 RES, ADJ, METAL GLAZE 220

RV201 1-224-550-21 RES, ADJ, METAL GLAZE 220

* 1-637-522-11 PIN JACK BOARD

< CONNECTOR >

* CNE502 1-564-511-11 PLUG, CONNECTOR 8P

* CNE503 1-564-509-11 PLUG, CONNECTOR 6P

* CNE504 1-564-507-11 PLUG, CONNECTOR 4P

* CNE505 1-564-506-11 PLUG, CONNECTOR 3P

< DIODE >

D524 8-719-987-63 DIODE 1N4148M

PIN JACK

REC

Ref.No.	Part No.	Description	Remark			
< JACK >						
* J501	1-569-186-11	JACK, PIN 4P (CD DIRECT IN/LINE IN)				
* J502	1-568-250-21	JACK, PIN 2P (LINE OUT)				
< RESISTOR >						
R190	1-247-749-11	CARBON	560	5%	1/2W	
R191	1-246-545-00	CARBON	1M	5%	1/4W	
R192	1-246-545-00	CARBON	1M	5%	1/4W	
R193	1-249-490-11	CARBON	27K	5%	1/2W	
R290	1-247-749-11	CARBON	560	5%	1/2W	
R291	1-246-545-00	CARBON	1.0M	5%	1/4W	
R292	1-246-545-00	CARBON	1.0M	5%	1/4W	
R293	1-249-490-11	CARBON	27K	5%	1/2W	
R323	1-259-436-11	CARBON	2.2K	5%	1/6W	
R423	1-259-436-11	CARBON	2.2K	5%	1/6W	
< RELAY >						
RY503	1-515-803-11	RELAY				

*	A-2006-640-A	REC BOARD, COMPLETE				

< CAPACITOR >						
C128	1-123-369-00	ELECT	4.7uF	20%	63V	
C129	1-123-369-00	ELECT	4.7uF	20%	63V	
C130	1-124-767-00	ELECT	2.2uF	20%	50V	
C131	1-107-159-00	MICA	33PF	5%	500V	
C132	1-107-159-00	MICA	33PF	5%	500V	
C133	1-130-475-00	MYLAR	0.0022uF	5%	50V	
C134	1-130-475-00	MYLAR	0.0022uF	5%	50V	
C135	1-130-478-00	MYLAR	0.0039uF	5%	50V	
C136	1-136-173-00	FILM	0.47uF	5%	50V	
C137	1-136-167-00	FILM	0.15uF	5%	50V	
C138	1-136-155-00	FILM	0.015uF	5%	50V	
C139	1-123-380-00	ELECT	1uF	20%	50V	
C140	1-136-169-00	FILM	0.22uF	5%	50V	
C141	1-136-163-00	FILM	0.068uF	5%	50V	
C142	1-136-162-00	FILM	0.056uF	5%	50V	
C143	1-123-380-00	ELECT	1uF	20%	50V	
C144	1-130-480-00	MYLAR	0.0056uF	5%	50V	
C145	1-136-153-00	FILM	0.01uF	5%	50V	
C146	1-124-929-11	ELECT	22uF	20%	100V	
C147	1-124-929-11	ELECT	22uF	20%	100V	
C150	1-136-252-00	FILM	0.0015uF	5%	100V	
C151	1-124-915-11	ELECT	10uF	20%	63V	
C152	1-136-163-00	FILM	0.068uF	5%	50V	
C153	1-130-485-00	MYLAR	0.015uF	5%	50V	
C154	1-136-160-00	FILM	0.039uF	5%	50V	

Ref.No.	Part No.	Description	Remark			
C155	1-130-485-00	MYLAR	0.015uF	5%	50V	
C156	1-136-160-00	FILM	0.039uF	5%	50V	
C157	1-130-486-00	MYLAR	0.018uF	10%	50V	
C159	1-124-929-11	ELECT	22uF	20%	100V	
C160	1-136-252-00	FILM	0.0015uF	5%	100V	
C161	1-107-157-00	MICA	27PF	5%	500V	
C162	1-107-159-00	MICA	33PF	5%	500V	
C163	1-107-169-00	MICA	100PF	5%	500V	
C164	1-109-627-00	MICA	150PF	2%	500V	
C165	1-109-621-00	MICA	220PF	1%	500V	
C166	1-136-153-00	FILM	0.01uF	5%	50V	
C167	1-136-163-00	FILM	0.068uF	5%	50V	
C168	1-136-157-00	FILM	0.022uF	5%	50V	
C170	1-124-925-11	ELECT	2.2uF	20%	100V	
C171	1-123-382-00	ELECT	3.3uF	20%	100V	
C173	1-124-925-11	ELECT	2.2uF	20%	100V	
C174	1-136-165-00	FILM	0.1uF	5%	50V	
C228	1-123-369-00	ELECT	4.7uF	20%	63V	
C229	1-123-369-00	ELECT	4.7uF	20%	63V	
C230	1-124-767-00	ELECT	2.2uF	20%	50V	
C231	1-107-159-00	MICA	33PF	5%	500V	
C232	1-107-159-00	MICA	33PF	5%	500V	
C233	1-130-475-00	MYLAR	0.0022uF	5%	50V	
C234	1-130-475-00	MYLAR	0.0022uF	5%	50V	
C235	1-130-478-00	MYLAR	0.0039uF	5%	50V	
C236	1-136-173-00	FILM	0.47uF	5%	50V	
C237	1-136-167-00	FILM	0.15uF	5%	50V	
C238	1-136-155-00	FILM	0.015uF	5%	50V	
C239	1-123-380-00	ELECT	1uF	20%	50V	
C240	1-136-169-00	FILM	0.22uF	5%	50V	
C241	1-136-163-00	FILM	0.068uF	5%	50V	
C242	1-136-162-00	FILM	0.056uF	5%	50V	
C243	1-123-380-00	ELECT	1uF	20%	50V	
C244	1-130-480-00	MYLAR	0.0056uF	5%	50V	
C245	1-136-153-00	FILM	0.01uF	5%	50V	
C246	1-124-929-11	ELECT	22uF	20%	100V	
C247	1-124-929-11	ELECT	22uF	20%	100V	
C250	1-136-252-00	FILM	0.0015uF	5%	100V	
C251	1-124-915-11	ELECT	10uF	20%	63V	
C252	1-136-163-00	FILM	0.068uF	5%	50V	
C253	1-130-485-00	MYLAR	0.015uF	5%	50V	
C254	1-136-160-00	FILM	0.039uF	5%	50V	
C255	1-130-485-00	MYLAR	0.015uF	5%	50V	
C256	1-136-160-00	FILM	0.039uF	5%	50V	
C257	1-130-486-00	MYLAR	0.018uF	10%	50V	
C259	1-124-929-11	ELECT	22uF	20%	100V	
C260	1-136-252-00	FILM	0.0015uF	5%	100V	
C261	1-107-157-00	MICA	27PF	5%	500V	
C262	1-107-159-00	MICA	33PF	5%	500V	

REC

Ref.No.	Part No.	Description	Remark		Ref.No.	Part No.	Description	Remark
C263	1-107-169-00	MICA	100PF	5%	500V		< CONPOSITION CIRCUIT BLOCK >	
C264	1-109-627-00	MICA	150PF	2%	500V			
C265	1-109-621-00	MICA	220PF	1%	500V	CP501	1-466-252-11	OSCILLATION UNIT, BIAS
C266	1-136-153-00	FILM	0.01uF	5%	50V			
C267	1-136-163-00	FILM	0.068uF	5%	50V		< DIODE >	
C268	1-136-157-00	FILM	0.022uF	5%	50V	D101	8-719-000-60	DIODE UZL-6M2
C270	1-124-925-11	ELECT	2.2uF	20%	100V	D102	8-719-987-63	DIODE 1N4148M
C271	1-123-382-00	ELECT	3.3uF	20%	100V	D103	8-719-987-63	DIODE 1N4148M
C272	1-161-375-00	CERAMIC	0.0022uF	20%	50V	D201	8-719-000-60	DIODE UZL-6M2
C273	1-124-925-11	ELECT	2.2uF	20%	100V	D202	8-719-987-63	DIODE 1N4148M
C515	1-124-907-11	ELECT	10uF	20%	50V	D203	8-719-987-63	DIODE 1N4148M
C516	1-123-369-00	ELECT	4.7uF	20%	63V	D511	8-719-114-29	DIODE RD5.1JS-B1
C517	1-123-369-00	ELECT	4.7uF	20%	63V	D512	8-719-987-63	DIODE 1N4148M
C520	1-123-369-00	ELECT	4.7uF	20%	63V	D514	8-719-987-63	DIODE 1N4148M
C521	1-124-477-11	ELECT	47uF	20%	25V	D515	8-719-987-63	DIODE 1N4148M
C522	1-123-369-00	ELECT	4.7uF	20%	63V	D516	8-719-114-29	DIODE RD5.1JS-B1
C523	1-124-477-11	ELECT	47uF	20%	25V	D517	8-719-987-63	DIODE 1N4148M
C524	1-124-903-11	ELECT	1uF	20%	50V	D522	8-719-987-63	DIODE 1N4148M
C525	1-124-907-11	ELECT	10uF	20%	50V	D523	8-719-933-41	DIODE HZS6C3L
C528	1-107-026-00	MICA	5.1PF		500V	D525	8-719-987-63	DIODE 1N4148M
C529	1-124-477-11	ELECT	47uF	20%	25V	D526	8-719-987-63	DIODE 1N4148M
C530	1-124-925-11	ELECT	2.2uF	20%	100V	D527	8-719-114-29	DIODE RD5.1JS-B1
C531	1-124-915-11	ELECT	10uF	20%	63V		< IC >	
C532	1-124-477-11	ELECT	47uF	20%	25V	IC504	8-759-602-83	IC M5238P
C533	1-124-915-11	ELECT	10uF	20%	63V	IC505	8-752-018-80	IC CX20188
C534	1-124-477-11	ELECT	47uF	20%	25V	IC506	8-759-900-72	IC NE5532P
C535	1-124-477-11	ELECT	47uF	20%	25V	IC508	8-759-106-56	IC uPC1297CA
C536	1-124-477-11	ELECT	47uF	20%	25V	IC509	8-759-604-86	IC M5F7807
C537	1-130-474-00	MYLAR	0.0018uF	5%	50V	IC510	8-759-604-90	IC M5F7907
C538	1-130-474-00	MYLAR	0.0018uF	5%	50V	IC511	8-759-240-50	IC TC4050BP
C539	1-136-157-00	FILM	0.022uF	5%	50V	IC512	8-759-602-83	IC M5238P
C540	1-136-157-00	FILM	0.022uF	5%	50V	IC513	8-759-945-58	IC RC4558P
C541	1-124-907-11	ELECT	10uF	20%	50V	IC514	8-759-634-51	IC M5218AP
C542	1-126-233-11	ELECT	22uF	20%	50V	IC515	8-759-945-58	IC RC4558P
C543	1-162-217-31	CERAMIC	56PF	5%	50V	IC518	8-759-982-26	IC RC78L12A
C544	1-162-217-31	CERAMIC	56PF	5%	50V	IC519	8-759-982-48	IC NJM79L12A
C545	1-124-477-11	ELECT	47uF	20%	25V		< COIL >	
C546	1-164-159-11	CERAMIC	0.1uF		50V	L101	1-408-920-00	INDUCTOR 4.7mH
< CONNECTOR >					L102	1-408-918-11	INDUCTOR 3.3mH	
* CND501	1-564-340-00	PIN, CONNECTOR 6P			L103	1-408-916-11	INDUCTOR 2.2mH	
* CND502	1-564-341-11	PIN, CONNECTOR 7P			L104	1-408-925-11	INDUCTOR 12mH	
CNE101	1-564-507-11	PLUG, CONNECTOR 4P			L105	1-408-916-11	INDUCTOR 2.2mH	
* CNE201	1-564-507-11	PLUG, CONNECTOR 4P			L201	1-408-920-00	INDUCTOR 4.7mH	
* CNN505	1-560-062-00	PIN, CONNECTOR 4P			L202	1-408-918-11	INDUCTOR 3.3mH	
* CNN506	1-560-061-00	PIN, CONNECTOR 3P			L203	1-408-916-11	INDUCTOR 2.2mH	
					L204	1-408-925-11	INDUCTOR 12mH	
					L205	1-408-916-11	INDUCTOR 2.2mH	

REC

Ref.No.	Part No.	Description	Remark	Ref.No.	Part No.	Description	Remark
L501	1-410-525-11	INDUCTOR	220uH	Q539	8-729-900-36	TRANSISTOR	DTC124ES
L502	1-410-525-11	INDUCTOR	220uH	Q540	8-729-620-05	TRANSISTOR	2SC2603-EF
L503	1-410-525-11	INDUCTOR	220uH				
		< FILTER >				< RESISTOR >	
LPF101	1-236-087-11	FILTER, LOW PASS		R138	1-249-469-11	CARBON	100K 5% 1/4W
LPF201	1-236-087-11	FILTER, LOW PASS		R139	1-247-723-11	CARBON	6.8K 5% 1/4W
		< PILOT LAMP >		R140	1-247-720-11	CARBON	3.9K 5% 1/4W
PL501	1-518-471-31	LAMP, PILOT		R141	1-247-719-11	CARBON	3.3K 5% 1/4W
PL502	1-518-471-31	LAMP, PILOT		R142	1-247-152-00	CARBON	7.5K 5% 1/4W
		< TRANSISTOR >		R143	1-249-469-11	CARBON	100K 5% 1/4W
Q107	8-729-142-25	TRANSISTOR	2SD1020-HFE	R144	1-249-799-11	CARBON	750 5% 1/2W
Q108	8-729-141-30	TRANSISTOR	2SC3623A-LK	R145	1-247-764-11	CARBON	10K 5% 1/2W
Q109	8-729-141-30	TRANSISTOR	2SC3623A-LK	R146	1-247-142-00	CARBON	3K 5% 1/4W
Q110	8-729-141-30	TRANSISTOR	2SC3623A-LK	R147	1-249-565-11	CARBON	3.6K 5% 1/4W
Q111	8-729-141-30	TRANSISTOR	2SC3623A-LK				
Q112	8-729-900-80	TRANSISTOR	DTC114ES	R148	1-247-710-11	CARBON	560 5% 1/4W
Q113	8-729-900-80	TRANSISTOR	DTC114ES	R149	1-246-545-00	CARBON	1M 5% 1/4W
Q114	8-729-900-80	TRANSISTOR	DTC114ES	R150	1-249-462-11	CARBON	22K 5% 1/4W
Q116	8-729-141-30	TRANSISTOR	2SC3623A-LK	R151	1-247-152-00	CARBON	7.5K 5% 1/4W
Q117	8-729-141-30	TRANSISTOR	2SC3623A-LK	R152	1-247-711-11	CARBON	680 5% 1/4W
Q118	8-729-141-30	TRANSISTOR	2SC3623A-LK				
Q207	8-729-142-25	TRANSISTOR	2SD1020-HFE	R153	1-247-154-00	CARBON	9.1K 5% 1/4W
Q208	8-729-141-30	TRANSISTOR	2SC3623A-LK	R154	1-249-465-11	CARBON	47K 5% 1/4W
Q209	8-729-141-30	TRANSISTOR	2SC3623A-LK	R161	1-247-719-11	CARBON	3.3K 5% 1/4W
Q210	8-729-141-30	TRANSISTOR	2SC3623A-LK	R162	1-247-723-11	CARBON	6.8K 5% 1/4W
Q211	8-729-141-30	TRANSISTOR	2SC3623A-LK	R163	1-249-590-11	CARBON	39K 5% 1/4W
Q212	8-729-900-80	TRANSISTOR	DTC114ES	R164	1-249-425-11	CARBON	4.7K 5% 1/4W
Q213	8-729-900-80	TRANSISTOR	DTC114ES	R165	1-249-429-11	CARBON	10K 5% 1/4W
Q214	8-729-900-80	TRANSISTOR	DTC114ES	R166	1-249-465-11	CARBON	47K 5% 1/4W
Q216	8-729-141-30	TRANSISTOR	2SC3623A-LK	R167	1-247-716-11	CARBON	1.8K 5% 1/4W
Q217	8-729-141-30	TRANSISTOR	2SC3623A-LK	R168	1-249-598-11	CARBON	82K 5% 1/4W
Q218	8-729-141-30	TRANSISTOR	2SC3623A-LK				
Q517	8-729-900-61	TRANSISTOR	DTA114ES	R169	1-259-467-11	CARBON	43K 5% 1/4W
Q518	8-729-281-53	TRANSISTOR	2SC1815-GR	R170	1-247-702-11	CARBON	150 5% 1/4W
Q519	8-729-119-76	TRANSISTOR	2SA1175-HFE	R171	1-247-154-00	CARBON	9.1K 5% 1/4W
Q520	8-729-900-36	TRANSISTOR	DTC124ES	R172	1-249-429-11	CARBON	10K 5% 1/4W
Q522	8-729-141-30	TRANSISTOR	2SC3623A-LK	R173	1-247-701-11	CARBON	120 5% 1/4W
Q523	8-729-141-30	TRANSISTOR	2SC3623A-LK				
Q524	8-729-141-30	TRANSISTOR	2SC3623A-LK	R174	1-247-142-00	CARBON	3K 5% 1/4W
Q529	8-729-141-30	TRANSISTOR	2SC3623A-LK	R175	1-247-721-11	CARBON	4.7K 5% 1/4W
Q530	8-729-141-30	TRANSISTOR	2SC3623A-LK	R176	1-249-429-11	CARBON	10K 5% 1/4W
Q533	8-729-900-36	TRANSISTOR	DTC124ES	R177	1-247-700-11	CARBON	100 5% 1/4W
Q534	8-729-900-74	TRANSISTOR	DTC143TS	R178	1-247-719-11	CARBON	3.3K 5% 1/4W
Q535	8-729-900-36	TRANSISTOR	DTC124ES				
Q536	8-729-900-36	TRANSISTOR	DTC124ES	R179	1-247-719-11	CARBON	3.3K 5% 1/4W
				R180	1-249-429-11	CARBON	10K 5% 1/4W
				R185	1-247-718-11	CARBON	2.7K 5% 1/4W
				R186	1-247-883-00	CARBON	150K 5% 1/4W
				R187	1-247-714-11	CARBON	1.2K 5% 1/4W
				R188	1-247-714-11	CARBON	1.2K 5% 1/4W
				R189	1-249-425-11	CARBON	4.7K 5% 1/4W
				R194	1-247-883-00	CARBON	150K 5% 1/4W
				R195	1-249-417-11	CARBON	1K 5% 1/4W
				R197	1-249-408-11	CARBON	180 5% 1/4W

REC

Ref.No.	Part No.	Description	Remark			Ref.No.	Part No.	Description	Remark		
R198	1-249-414-11	CARBON	560	5%	1/4W	R299	1-249-417-11	CARBON	1K	5%	1/4W
R199	1-249-417-11	CARBON	1K	5%	1/4W	R301	1-249-428-11	CARBON	8.2K	5%	1/4W
R238	1-249-469-11	CARBON	100K	5%	1/4W	R302	1-249-417-11	CARBON	1K	5%	1/4W
R239	1-247-723-11	CARBON	6.8K	5%	1/4W	R303	1-247-725-11	CARBON	10K	5%	1/4W
R240	1-247-720-11	CARBON	3.9K	5%	1/4W	R304	1-249-429-11	CARBON	10K	5%	1/4W
R241	1-247-719-11	CARBON	3.3K	5%	1/4W	R305	1-249-429-11	CARBON	10K	5%	1/4W
R242	1-247-152-00	CARBON	7.5K	5%	1/4W	R306	1-249-415-11	CARBON	680	5%	1/4W
R243	1-249-469-11	CARBON	100K	5%	1/4W	R307	1-249-437-11	CARBON	47K	5%	1/4W
R244	1-249-799-11	CARBON	750	5%	1/2W	R308	1-215-465-00	METAL	68K	1%	1/6W
R245	1-247-764-11	CARBON	10K	5%	1/2W	R309	1-215-474-00	METAL	160K	1%	1/6W
R246	1-247-142-00	CARBON	3K	5%	1/4W	R310	1-215-448-00	METAL	13K	1%	1/6W
R247	1-249-565-11	CARBON	3.6K	5%	1/4W	R311	1-249-408-11	CARBON	180	5%	1/4W
R248	1-247-710-11	CARBON	560	5%	1/4W	R312	1-247-883-00	CARBON	150K	5%	1/4W
R249	1-246-545-00	CARBON	1.0M	5%	1/4W	R314	1-249-423-11	CARBON	3.3K	5%	1/4W
R250	1-249-462-11	CARBON	22K	5%	1/4W	R316	1-249-425-11	CARBON	4.7K	5%	1/4W
R251	1-247-152-00	CARBON	7.5K	5%	1/4W	R317	1-249-429-11	CARBON	10K	5%	1/4W
R252	1-247-711-11	CARBON	680	5%	1/4W	R318	1-249-616-11	CARBON	470K	5%	1/4W
R253	1-247-154-00	CARBON	9.1K	5%	1/4W	△ R319	1-212-857-00	FUSIBLE	10	5%	1/4W F
R254	1-249-465-11	CARBON	47K	5%	1/4W	R320	1-249-465-11	CARBON	47K	5%	1/4W
R261	1-247-719-11	CARBON	3.3K	5%	1/4W	R401	1-249-428-11	CARBON	8.2K	5%	1/4W
R262	1-247-723-11	CARBON	6.8K	5%	1/4W	R402	1-249-417-11	CARBON	1K	5%	1/4W
R263	1-249-590-11	CARBON	39K	5%	1/4W	R403	1-247-725-11	CARBON	10K	5%	1/4W
R264	1-249-425-11	CARBON	4.7K	5%	1/4W	R404	1-249-429-11	CARBON	10K	5%	1/4W
R265	1-249-429-11	CARBON	10K	5%	1/4W	R405	1-249-429-11	CARBON	10K	5%	1/4W
R266	1-249-465-11	CARBON	47K	5%	1/4W	R406	1-249-415-11	CARBON	680	5%	1/4W
R267	1-247-716-11	CARBON	1.8K	5%	1/4W	R407	1-249-437-11	CARBON	47K	5%	1/4W
R268	1-249-598-11	CARBON	82K	5%	1/4W	R408	1-215-465-00	METAL	68K	1%	1/6W
R269	1-259-467-11	CARBON	43K	5%	1/4W	R409	1-215-474-00	METAL	160K	1%	1/6W
R270	1-247-702-11	CARBON	150	5%	1/4W	R410	1-215-448-00	METAL	13K	1%	1/6W
R271	1-247-154-00	CARBON	9.1K	5%	1/4W	R411	1-249-408-11	CARBON	180	5%	1/4W
R272	1-249-429-11	CARBON	10K	5%	1/4W	R412	1-247-883-00	CARBON	150K	5%	1/4W
R273	1-247-701-11	CARBON	120	5%	1/4W	R414	1-249-423-11	CARBON	3.3K	5%	1/4W
R274	1-247-142-00	CARBON	3K	5%	1/4W	R416	1-249-425-11	CARBON	4.7K	5%	1/4W
R275	1-247-721-11	CARBON	4.7K	5%	1/4W	R417	1-249-429-11	CARBON	10K	5%	1/4W
R276	1-249-429-11	CARBON	10K	5%	1/4W	R418	1-249-616-11	CARBON	470K	5%	1/4W
R277	1-247-700-11	CARBON	100	5%	1/4W	△ R419	1-212-857-00	FUSIBLE	10	5%	1/4W F
R278	1-247-719-11	CARBON	3.3K	5%	1/4W	R420	1-249-465-11	CARBON	47K	5%	1/4W
R279	1-247-719-11	CARBON	3.3K	5%	1/4W	R531	1-249-438-11	CARBON	56K	5%	1/4W
R280	1-249-429-11	CARBON	10K	5%	1/4W	R532	1-249-433-11	CARBON	22K	5%	1/4W
R285	1-247-718-11	CARBON	2.7K	5%	1/4W	R533	1-249-421-11	CARBON	2.2K	5%	1/4W
R286	1-247-883-00	CARBON	150K	5%	1/4W	R537	1-249-417-11	CARBON	1K	5%	1/4W
R287	1-247-714-11	CARBON	1.2K	5%	1/4W	R538	1-249-425-11	CARBON	4.7K	5%	1/4W
R288	1-247-714-11	CARBON	1.2K	5%	1/4W	R539	1-249-437-11	CARBON	47K	5%	1/4W
R289	1-249-425-11	CARBON	4.7K	5%	1/4W	R540	1-249-433-11	CARBON	22K	5%	1/4W
R294	1-247-883-00	CARBON	150K	5%	1/4W	R542	1-249-429-11	CARBON	10K	5%	1/4W
R295	1-249-417-11	CARBON	1K	5%	1/4W	R543	1-249-424-11	CARBON	3.9K	5%	1/4W
R296	1-215-472-00	METAL	130K	1%	1/6W	R544	1-249-418-11	CARBON	1.2K	5%	1/4W
R297	1-249-408-11	CARBON	180	5%	1/4W	R545	1-249-428-11	CARBON	8.2K	5%	1/4W
R298	1-249-414-11	CARBON	560	5%	1/4W	R546	1-249-429-11	CARBON	10K	5%	1/4W

Note : The components identified by mark △ or dotted line with mark △ are critical for safety.
Replace only with part number specified.

REC

REC EQ SW

Ref.No.	Part No.	Description	Remark		
R547	1-249-405-11	CARBON	100	5%	1/4W
R548	1-249-405-11	CARBON	100	5%	1/4W
R549	1-249-405-11	CARBON	100	5%	1/4W
R550	1-249-405-11	CARBON	100	5%	1/4W
R551	1-249-405-11	CARBON	100	5%	1/4W
R552	1-249-405-11	CARBON	100	5%	1/4W
R553	1-249-429-11	CARBON	10K	5%	1/4W
R554	1-249-429-11	CARBON	10K	5%	1/4W
R556	1-249-428-11	CARBON	8.2K	5%	1/4W
R557	1-247-856-00	CARBON	11K	5%	1/4W
R558	1-249-397-11	CARBON	22	5%	1/4W
R559	1-249-407-11	CARBON	150	5%	1/4W
R560	1-247-856-00	CARBON	11K	5%	1/4W
R561	1-249-428-11	CARBON	8.2K	5%	1/4W
R562	1-249-432-11	CARBON	18K	5%	1/4W
R563	1-249-397-11	CARBON	22	5%	1/4W
R564	1-249-407-11	CARBON	150	5%	1/4W
R565	1-249-432-11	CARBON	18K	5%	1/4W
R566	1-247-887-00	CARBON	220K	5%	1/4W
R567	1-247-887-00	CARBON	220K	5%	1/4W
R568	1-249-407-11	CARBON	150	5%	1/4W
R569	1-249-422-11	CARBON	2.7K	5%	1/4W
R572	1-249-429-11	CARBON	10K	5%	1/4W
R573	1-249-439-11	CARBON	68K	5%	1/4W
R575	1-249-429-11	CARBON	10K	5%	1/4W
R576	1-249-429-11	CARBON	10K	5%	1/4W
R583	1-249-417-11	CARBON	1K	5%	1/4W
R584	1-249-437-11	CARBON	47K	5%	1/4W
R587	1-249-437-11	CARBON	47K	5%	1/4W
< VARIABLE RESISTOR >					
RV102	1-224-251-XX	RES, ADJ, METAL GLAZE	4.7K		
RV103	1-238-011-11	RES, ADJ, CARBON	470		
RV104	1-238-597-11	RES, ADJ, CARBON	1K		
RV105	1-238-600-11	RES, ADJ, CARBON	10K		
RV106	1-238-600-11	RES, ADJ, CARBON	10K		
RV107	1-238-600-11	RES, ADJ, CARBON	10K		
RV108	1-238-601-11	RES, ADJ, CARBON	22K		
RV202	1-224-251-XX	RES, ADJ, METAL GLAZE	4.7K		
RV203	1-238-011-11	RES, ADJ, CARBON	470		
RV204	1-238-597-11	RES, ADJ, CARBON	1K		
RV205	1-238-600-11	RES, ADJ, CARBON	10K		
RV206	1-238-600-11	RES, ADJ, CARBON	10K		
RV207	1-238-600-11	RES, ADJ, CARBON	10K		
RV208	1-238-601-11	RES, ADJ, CARBON	22K		
RV503	1-241-231-11	RES, ADJ, CARBON	100		
RV504	1-241-231-11	RES, ADJ, CARBON	100		

Ref.No.	Part No.	Description	Remark		
< RELAY >					
RY502	1-515-803-11	RELAY			
RY503	1-515-614-11	RELAY			
< TRANSFORMER >					
T101	1-433-361-11	TRANSFORMER, BIAS OSCILLATION			
T201	1-433-361-11	TRANSFORMER, BIAS OSCILLATION			
< THERMISTOR >					
TH501	1-202-855-00	THERMISTOR, POSITIVE			
< TEST PIN >					
* TP1	1-535-115-00	TERMINAL			

*	1-637-520-11	REC EQ SW BOARD			

< CAPACITOR >					
C148	1-106-347-00	MYLAR	1500PF	5%	200V
C149	1-106-343-00	MYLAR	1000PF	5%	200V
C248	1-106-347-00	MYLAR	1500PF	5%	200V
C249	1-106-343-00	MYLAR	1000PF	5%	200V
< RESISTOR >					
R155	1-247-721-11	CARBON	4.7K	5%	1/4W
R156	1-247-152-00	CARBON	8.2K	5%	1/4W
R157	1-247-725-11	CARBON	10K	5%	1/4W
R158	1-247-721-11	CARBON	4.7K	5%	1/4W
R159	1-259-500-11	CARBON	1M	5%	1/6W
R160	1-249-462-11	CARBON	22K	5%	1/4W
R255	1-247-721-11	CARBON	4.7K	5%	1/4W
R256	1-247-152-00	CARBON	8.2K	5%	1/4W
R257	1-247-725-11	CARBON	10K	5%	1/4W
R258	1-247-721-11	CARBON	4.7K	5%	1/4W
R259	1-259-500-11	CARBON	1M	5%	1/6W
R260	1-249-462-11	CARBON	22K	5%	1/4W
R322	1-259-500-11	CARBON	1M	5%	1/6W
R422	1-259-500-11	CARBON	1M	5%	1/6W
< VARIABLE RESISTOR >					
RV502	1-238-840-11	RES, VAR, CARBON 5K/5K (REC LEVEL)			
< SWITCH >					
S501	1-572-589-11	SWITCH, ROTARY (REC EQ CAL)			

REC VOL

RECT

REEL MOTOR

SYSCON

Ref.No.	Part No.	Description	Remark
*	1-637-519-11	REC VOL BOARD *****	
		< RESISTOR >	
R321	1-249-824-11	CARBON 8.2K 5% 1/2W	
R421	1-249-824-11	CARBON 8.2K 5% 1/2W	
		< VARIABLE RESISTOR >	
RV501	1-241-336-11	RES, VAR, CARBON 20K/20K (REC LEVEL)	

*	1-637-512-11	RECT. BOARD *****	
		< CAPACITOR >	
C702	1-136-165-00	FILM 0.1uF 5% 50V	
C703	1-136-177-00	FILM 1uF 5% 50V	
C704	1-126-982-11	ELECT 5600uF 20% 35V	
C705	1-126-982-11	ELECT 5600uF 20% 35V	
C706	1-124-636-00	ELECT 3300uF 20% 25V	
C707	1-124-120-11	ELECT 220uF 20% 25V	
C708	1-124-479-11	ELECT 330uF 20% 25V	
C709	1-124-911-11	ELECT 220uF 20% 50V	
C710	1-124-767-00	ELECT 2.2uF 20% 50V	
C711	1-162-294-31	CERAMIC 0.001uF 10% 50V	
C712	1-162-294-31	CERAMIC 0.001uF 10% 50V	
		< CONNECTOR >	
* CN703	1-564-104-00	PIN, CONNECTOR (B3P-VH) 3P	
* CN704	1-564-506-11	PLUG, CONNECTOR 3P	
* CN705	1-564-506-11	PLUG, CONNECTOR 3P	
		< DIODE >	
D701	8-719-230-02	DIODE 30DF2	
D702	8-719-230-02	DIODE 30DF2	
D703	8-719-230-02	DIODE 30DF2	
D704	8-719-230-02	DIODE 30DF2	
D705	8-719-200-77	DIODE 10E2N	
D706	8-719-200-77	DIODE 10E2N	
D707	8-719-200-77	DIODE 10E2N	
D708	8-719-200-77	DIODE 10E2N	
D709	8-719-200-77	DIODE 10E2N	
D710	8-719-200-77	DIODE 10E2N	
D711	8-719-987-63	DIODE 1N4148M	
D712	8-719-987-63	DIODE 1N4148M	
		< IC LINK >	
△ PS701	1-532-685-00	LINK, IC	

Ref.No.	Part No.	Description	Remark
△ PS702	1-532-685-00	LINK, IC	
		< TRANSISTOR >	
Q701	8-729-620-05	TRANSISTOR 2SC2603-EF	
		< RESISTOR >	
R701	1-212-861-11	FUSIBLE 15 5% 1/4W F	
R702	1-249-436-11	CARBON 39K 5% 1/4W	
R703	1-249-439-11	CARBON 68K 5% 1/4W	

*	1-632-741-11	REEL MOTOR BOARD *****	
		< CAPACITOR >	
C1051	1-124-907-11	ELECT 10uF 20% 50V	
C1052	1-124-907-11	ELECT 10uF 20% 50V	
C1053	1-164-159-11	CERAMIC 0.1uF 50V	
		< CONNECTOR >	
* CN1051	1-564-499-11	PIN, CONNECTOR 6P	
* CN1052	1-564-718-11	PIN, CONNECTOR (SMALL TYPE) 2P	
* CN1053	1-564-718-11	PIN, CONNECTOR (SMALL TYPE) 2P	
		< RESISTOR >	
R1051	1-249-412-11	CARBON 390 5% 1/4W	

*	A-2006-650-A	SYSCON BOARD, COMPLETE *****	
		< CAPACITOR >	
C751	1-124-636-00	ELECT 3300uF 20% 25V	
C752	1-124-907-11	ELECT 10uF 20% 50V	
C753	1-124-122-11	ELECT 100uF 20% 50V	
C754	1-124-927-11	ELECT 4.7uF 20% 100V	
C755	1-126-101-11	ELECT 100uF 20% 16V	
C756	1-124-898-11	ELECT 4700uF 20% 16V	
C757	1-124-907-11	ELECT 10uF 20% 50V	
C758	1-162-211-31	CERAMIC 33PF 5% 50V	
C759	1-124-472-11	ELECT 470uF 20% 10V	
C760	1-124-903-11	ELECT 1uF 20% 50V	
C761	1-124-471-00	ELECT 1000uF 20% 6.3V	
C762	1-124-903-11	ELECT 1uF 20% 50V	
C763	1-124-903-11	ELECT 1uF 20% 50V	
C764	1-124-443-00	ELECT 100uF 20% 10V	
C765	1-124-907-11	ELECT 10uF 20% 50V	
C766	1-124-122-11	ELECT 100uF 20% 50V	
C767	1-124-443-00	ELECT 100uF 20% 10V	

Note : The components identified by mark △ or dotted line with mark △ are critical for safety.
Replace only with part number specified.

SYSCON

Ref.No.	Part No.	Description	Remark	Ref.No.	Part No.	Description	Remark
C801	1-164-159-11	CERAMIC	0.1uF 50V	Q804	8-729-620-05	TRANSISTOR	2SC2603-EF
C802	1-164-159-11	CERAMIC	0.1uF 50V	Q805	8-729-900-61	TRANSISTOR	DTA114ES
C803	1-124-477-11	ELECT	47uF 20% 25V	Q806	8-729-900-61	TRANSISTOR	DTA114ES
C804	1-124-907-11	ELECT	10uF 20% 50V	Q807	8-729-900-61	TRANSISTOR	DTA114ES
C805	1-124-443-00	ELECT	100uF 20% 10V	Q808	8-729-900-61	TRANSISTOR	DTA114ES
C806	1-162-294-31	CERAMIC	0.001uF 10% 50V	Q809	8-729-900-65	TRANSISTOR	DTA144ES
C807	1-162-294-31	CERAMIC	0.001uF 10% 50V	Q810	8-729-900-65	TRANSISTOR	DTA144ES
< CONNECTOR >				Q811	8-729-900-65	TRANSISTOR	DTA144ES
* CN751	1-564-511-11	PLUG, CONNECTOR 8P		Q812	8-729-900-65	TRANSISTOR	DTA144ES
* CN801	1-564-336-00	PIN, CONNECTOR 2P		Q813	8-729-900-65	TRANSISTOR	DTA144ES
* CN802	1-564-341-11	PIN, CONNECTOR 7P		Q814	8-729-900-65	TRANSISTOR	DTA144ES
* CN803	1-506-503-71	PIN, CONNECTOR 9P		Q815	8-729-900-61	TRANSISTOR	DTA114ES
* CN804	1-506-503-11	PIN, CONNECTOR 9P		Q816	8-729-900-61	TRANSISTOR	DTA114ES
* CN805	1-564-339-00	PIN, CONNECTOR 5P		< RESISTOR >			
* CN806	1-564-666-11	PIN, CONNECTOR 10P		R751	1-249-421-11	CARBON	2.2K 5% 1/4W
* CN807	1-564-342-61	PIN, CONNECTOR 8P		R752	1-249-425-11	CARBON	4.7K 5% 1/4W
* CN809	1-506-503-11	PIN, CONNECTOR 9P		R753	1-249-437-11	CARBON	47K 5% 1/4W
< DIODE >				R754	1-249-437-11	CARBON	47K 5% 1/4W
D751	8-719-200-77	DIODE	10E2N	R755	1-249-421-11	CARBON	2.2K 5% 1/4W
D752	8-719-910-25	DIODE	HZ12B2L	R756	1-249-425-11	CARBON	4.7K 5% 1/4W
D753	8-719-933-39	DIODE	HZS6C1L	R757	1-249-437-11	CARBON	47K 5% 1/4W
D754	8-719-933-41	DIODE	HZS6C3L	R758	1-249-422-11	CARBON	2.7K 5% 1/4W
D755	8-719-933-39	DIODE	HZS6C1L	R759	1-249-427-11	CARBON	6.8K 5% 1/4W
D756	8-719-002-33	DIODE	UZL-24L	R760	1-249-425-11	CARBON	4.7K 5% 1/4W
D757	8-719-200-77	DIODE	10E2N	R761	1-249-437-11	CARBON	47K 5% 1/4W
D758	8-719-933-39	DIODE	HZS6C1L	R762	1-249-421-11	CARBON	2.2K 5% 1/4W
D801	8-719-987-63	DIODE	1N4148M	R763	1-249-441-11	CARBON	100K 5% 1/4W
D802	8-719-987-63	DIODE	1N4148M	R764	1-249-425-11	CARBON	4.7K 5% 1/4W
< IC >				R765	1-249-437-11	CARBON	47K 5% 1/4W
IC801	8-759-635-69	IC	M50964-226SP	R766	1-249-437-11	CARBON	47K 5% 1/4W
IC802	8-759-973-95	IC	BA6219B	R767	1-249-429-11	CARBON	10K 5% 1/4W
IC803	8-759-822-09	IC	LB1641	R768	1-249-437-11	CARBON	47K 5% 1/4W
< TRANSISTOR >				R769	1-249-437-11	CARBON	47K 5% 1/4W
Q751	8-729-141-83	TRANSISTOR	2SB1094-LK	R770	1-249-433-11	CARBON	22K 5% 1/4W
Q752	8-729-141-83	TRANSISTOR	2SB1094-LK	R771	1-249-395-11	CARBON	15 5% 1/4W
Q753	8-729-209-15	TRANSISTOR	2SD2012	R772	1-249-395-11	CARBON	15 5% 1/4W
Q754	8-729-119-76	TRANSISTOR	2SA1175-HFE	⚠ R773	1-219-136-11	FUSIBLE	0.22 10% 1/4W
Q755	8-729-140-04	TRANSISTOR	2SB1116A-L	⚠ R774	1-219-136-11	FUSIBLE	0.22 10% 1/4W
Q756	8-729-620-05	TRANSISTOR	2SC2603-EF	⚠ R775	1-219-136-11	FUSIBLE	0.22 10% 1/4W
Q757	8-729-620-05	TRANSISTOR	2SC2603-EF	R776	1-249-413-11	CARBON	470 5% 1/4W
Q758	8-729-620-05	TRANSISTOR	2SC2603-EF	⚠ R801	1-249-482-11	CARBON	4.7 5% 1/2W F
Q759	8-729-620-05	TRANSISTOR	2SC2603-EF	R802	1-249-425-11	CARBON	4.7K 5% 1/4W
Q801	8-729-119-76	TRANSISTOR	2SA1175-HFE	R803	1-249-425-11	CARBON	4.7K 5% 1/4W
Q802	8-729-119-76	TRANSISTOR	2SA1175-HFE	R804	1-249-426-11	CARBON	5.6K 5% 1/4W
Q803	8-729-620-05	TRANSISTOR	2SC2603-EF	R805	1-247-856-00	CARBON	11K 5% 1/4W
				R806	1-249-425-11	CARBON	4.7K 5% 1/4W
				⚠ R807	1-249-482-11	CARBON	4.7 5% 1/2W F
				R808	1-249-425-11	CARBON	4.7K 5% 1/4W

Note : The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety.
Replace only with part number specified.

SYSCON**TIMER SW****VS**

Ref.No.	Part No.	Description	Remark	Ref.No.	Part No.	Description	Remark
R809	1-249-425-11	CARBON	4.7K 5% 1/4W	R858	1-249-405-11	CARBON	100 5% 1/4W
R810	1-249-426-11	CARBON	5.6K 5% 1/4W	R859	1-249-405-11	CARBON	100 5% 1/4W
R811	1-249-429-11	CARBON	10K 5% 1/4W	R860	1-249-405-11	CARBON	100 5% 1/4W
R812	1-249-425-11	CARBON	4.7K 5% 1/4W	R861	1-249-429-11	CARBON	10K 5% 1/4W
R813	1-249-429-11	CARBON	10K 5% 1/4W	R862	1-249-429-11	CARBON	10K 5% 1/4W
R814	1-249-429-11	CARBON	10K 5% 1/4W	R863	1-249-441-11	CARBON	100K 5% 1/4W
R815	1-249-429-11	CARBON	10K 5% 1/4W	R864	1-249-441-11	CARBON	100K 5% 1/4W
R816	1-249-429-11	CARBON	10K 5% 1/4W	R865	1-249-441-11	CARBON	100K 5% 1/4W
R817	1-249-429-11	CARBON	10K 5% 1/4W	R866	1-249-441-11	CARBON	100K 5% 1/4W
R818	1-249-429-11	CARBON	10K 5% 1/4W	R867	1-249-441-11	CARBON	100K 5% 1/4W
R819	1-249-429-11	CARBON	10K 5% 1/4W	R868	1-249-441-11	CARBON	100K 5% 1/4W
R820	1-249-429-11	CARBON	10K 5% 1/4W	< VARIABLE RESISTOR >			
R821	1-249-429-11	CARBON	10K 5% 1/4W	RV801	1-238-598-11	RES, ADJ, CARBON 2.2K	
R822	1-249-429-11	CARBON	10K 5% 1/4W	< TEST PIN >			
R823	1-249-429-11	CARBON	10K 5% 1/4W	* TP801	1-564-337-00	PIN, CONNECTOR 3P (TEST POINT)	
R824	1-249-405-11	CARBON	100 5% 1/4W	< VIBRATOR >			
R825	1-249-405-11	CARBON	100 5% 1/4W	X801	1-577-358-21	VIBRATOR, CERAMIC (4MHz)	
R826	1-249-405-11	CARBON	100 5% 1/4W	*****			
R827	1-249-405-11	CARBON	100 5% 1/4W	* 1-637-518-11	TIMER SW BOARD		
R828	1-249-405-11	CARBON	100 5% 1/4W	*****			
R829	1-249-405-11	CARBON	100 5% 1/4W	< RESISTOR >			
R830	1-249-405-11	CARBON	100 5% 1/4W	R895	1-249-424-11	CARBON 3.9K 5% 1/4W	
R831	1-249-405-11	CARBON	100 5% 1/4W	< SWITCH >			
R832	1-249-405-11	CARBON	100 5% 1/4W	S894	1-570-903-11	SWITCH, SLIDE (TIMER)	
R833	1-249-405-11	CARBON	100 5% 1/4W	*****			
R834	1-249-405-11	CARBON	100 5% 1/4W	* 1-637-513-11	VS. BOARD (K333ESA)		
R835	1-249-425-11	CARBON	4.7K 5% 1/4W	*****			
R836	1-249-417-11	CARBON	1K 5% 1/4W	< CONNECTOR >			
R837	1-249-435-11	CARBON	33K 5% 1/4W	* CN707	1-580-618-11	PIN, CONNECTOR 5P (K333ESA)	
R838	1-249-435-11	CARBON	33K 5% 1/4W	< SWITCH >			
R839	1-247-903-00	CARBON	1M 5% 1/4W	△ S702	1-572-009-11	SELECTOR, VOLTAGE (VOLTAGE SELECTOR)	
R840	1-249-429-11	CARBON	10K 5% 1/4W	(K333ESA)			
R841	1-249-405-11	CARBON	100 5% 1/4W	*****			
R842	1-249-405-11	CARBON	100 5% 1/4W	MISCELLANEOUS			
R843	1-249-405-11	CARBON	100 5% 1/4W	*****			
R844	1-249-405-11	CARBON	100 5% 1/4W	* 104	1-533-213-31	HOLDER, FUSE	
R845	1-249-429-11	CARBON	10K 5% 1/4W	△ 112	1-559-297-31	CORD, POWER (K333ESA)	
R846	1-249-429-11	CARBON	10K 5% 1/4W	△ 112	1-574-383-11	CORD, POWER (K990ES)	
R847	1-249-427-11	CARBON	6.8K 5% 1/4W				
R848	1-249-429-11	CARBON	10K 5% 1/4W				
R849	1-249-429-11	CARBON	10K 5% 1/4W				
R850	1-249-429-11	CARBON	10K 5% 1/4W				
R851	1-249-429-11	CARBON	10K 5% 1/4W				
R852	1-249-413-11	CARBON	470 5% 1/4W				
R853	1-249-412-11	CARBON	390 5% 1/4W				
R854	1-249-410-11	CARBON	270 5% 1/4W				
R855	1-249-436-11	CARBON	39K 5% 1/4W				
R856	1-249-436-11	CARBON	39K 5% 1/4W				
R857	1-249-405-11	CARBON	100 5% 1/4W				

Note : The components identified by mark △ or dotted line with mark △ are critical for safety.
Replace only with part number specified.

Ref.No.	Part No.	Description	Remark
△ 119	1-569-007-11	ADAPTER, CONVERSION 2P (K333ESA)	
* 196	1-608-268-00	PC BOARD, ERASE HEAD	
257	1-632-779-11	PC BOARD, FG	
△ F701	1-532-286-00	FUSE, TIME-LAG (2.5A)	
△ F702	1-532-286-00	FUSE, TIME-LAG (2.5A)	
HE501	1-543-836-11	HEAD, MAGNETIC (ERASE)	
HRP501	1-543-684-21	HEAD, MAGNETIC (REC/PB)	
△ T701	1-450-451-11	TRANSFORMER, POWER (K990ES)	
△ T701	1-450-453-11	TRANSFORMER, POWER (K333ESA)	
M1001	X-3356-638-1	MOTOR (REEL R) ASSY	
M1002	X-3356-604-1	MOTOR (ASSIST) ASSY	

ACCESSORIES & PACKING MATERIALS

	1-465-314-11	REMOTE COMMANDER (RM-J701) (K333ESA)
	1-558-271-11	CORD, CONNECTION
	1-558-271-11	CORD, CONNECTION
	2-181-754-01	COVER, BATTERY (RM-J701) (K333ESA)
*	3-350-465-01	CUSHION
*	3-376-444-01	INDIVIDUAL CARTON (K990ES)
*	3-376-445-01	INDIVIDUAL CARTON (K333ESA)
	3-754-180-11	MANUAL, INSTRUCTION (K333ESA/K990ES:AEP) (ENGLISH, FRENCH, SPANISH, PORTUGUESE)
	3-754-180-41	MANUAL, INSTRUCTION (K990ES) (GERMAN, DUTCH, SWEDISH, ITALIAN)
	3-793-481-13	INSTRUCTION
	4-847-802-00	SCREW

HARDWARE LIST

#1	7-682-547-04	SCREW +BVTT 3X6 (S)
#2	7-682-562-09	SCREW +BVTT 4X10 (S)
#3	7-682-548-04	SCREW, TIGHT, S
#4	7-685-870-01	SCREW +BVTT 3X5 (S) ¹
#5	7-682-547-09	SCREW +BV 3X6, S TIGHT
#6	7-685-645-79	SCREW +BVTP 3X6 TYPE2 SLIT
#7	7-682-549-04	SCREW +BVTT 3X10 (S)
#8	7-682-147-15	SCREW, TR
#9	7-685-647-79	SCREW +BVTP 3X10 TYPE2 N-S
#10	7-682-560-04	SCREW +BVTT 4X6 (S)

Ref.No.	Part No.	Description	Remark
#11	7-621-772-10	SCREW +B 2X4	
#12	7-621-772-70	SCREW +B 2X14	
#13	7-621-775-10	SCREW +B 2.6X4	
#14	7-622-205-05	NUT M2 TYPE2	
#15	7-628-253-00	SCREW +PS 2X4	
#16	7-628-254-10	SCREW +PS 2.6X6	
#17	7-671-154-01	STENLESS BALL	
#18	7-682-648-09	SCREW +PS 3X8	
#19	7-685-133-19	SCREW +BTP 2.6X6 TYPE2 N-S	
#20	7-621-255-20	SCREW +BVTT 2X4 (S)	
#21	7-621-255-35	SCREW +BVTT 2X5 (S)	
#22	7-685-646-79	SCREW +BVTP 3X8 TYPE2 IT-3	

Note : The components identified by mark △ or dotted line with mark △ are critical for safety.
Replace only with part number specified.