



SERVICE MANUAL






UA-140/160R

STEREO AMPLIFIER

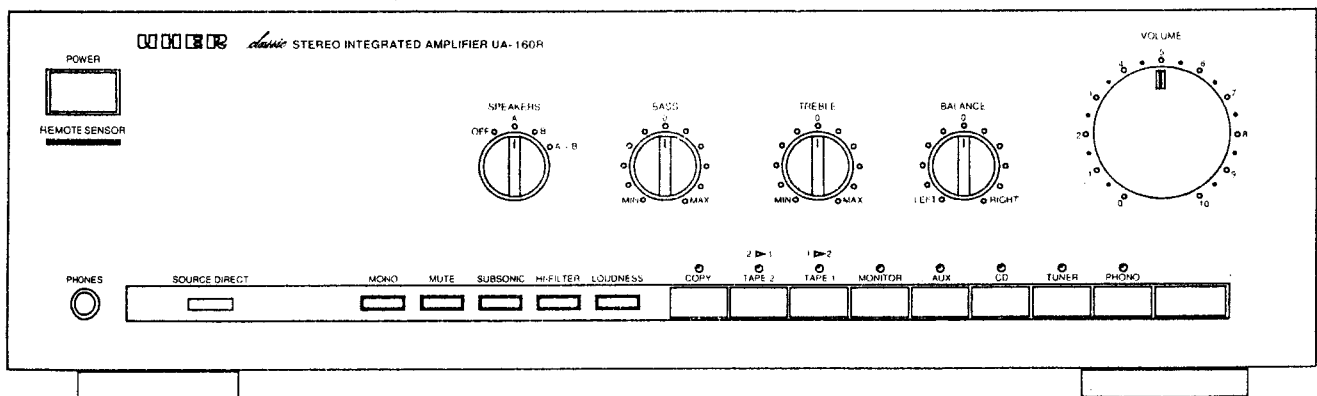


BLOCK DIAGRAM (FOR UA-160R)

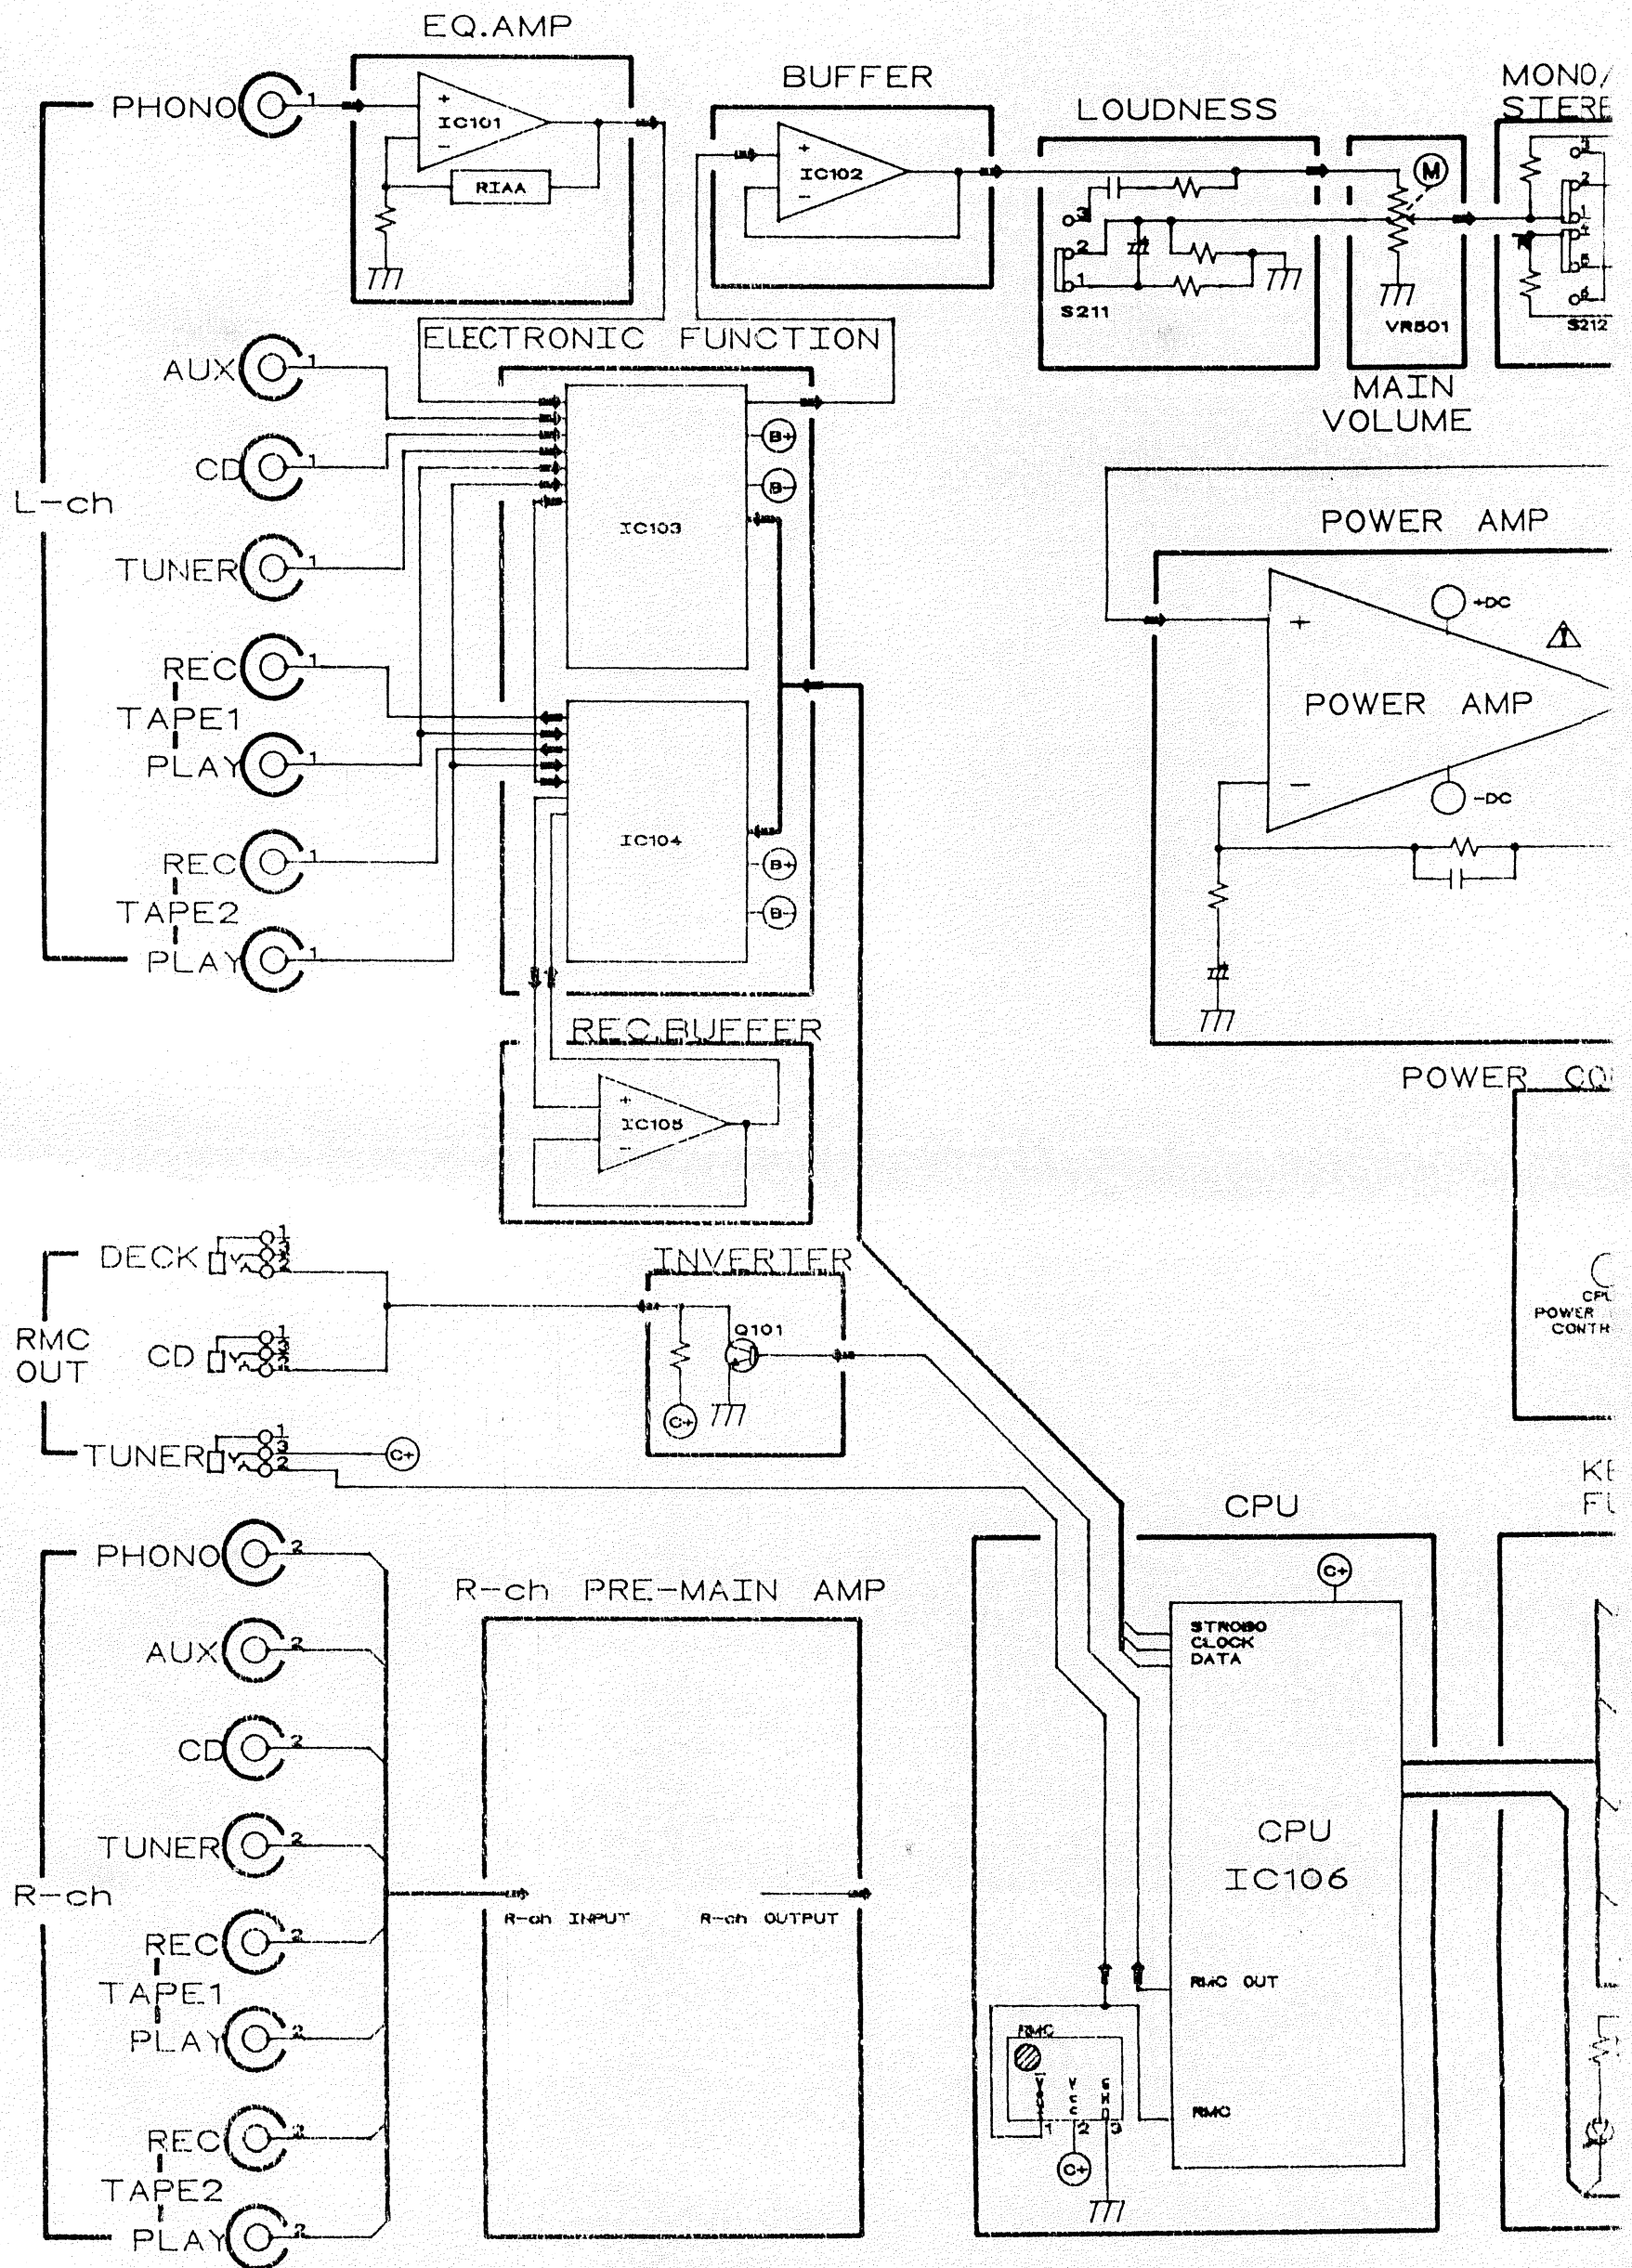

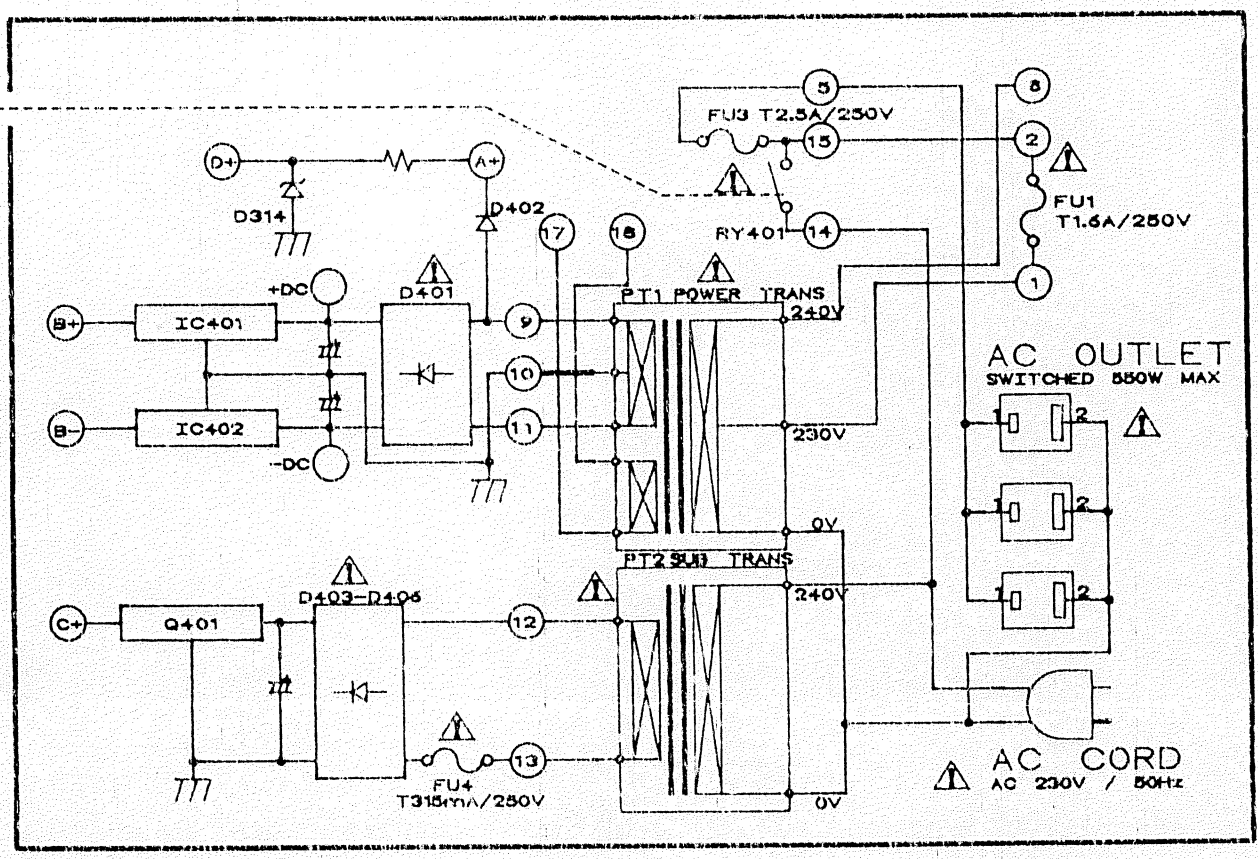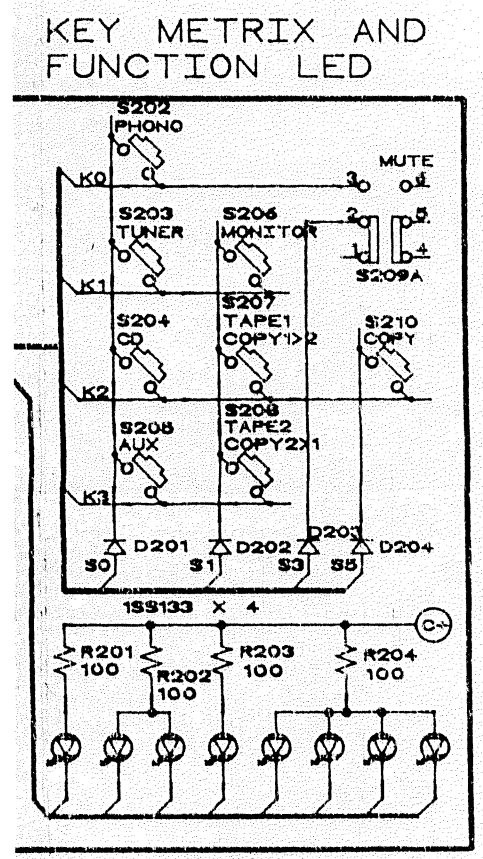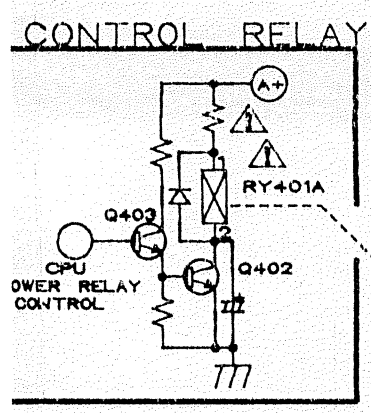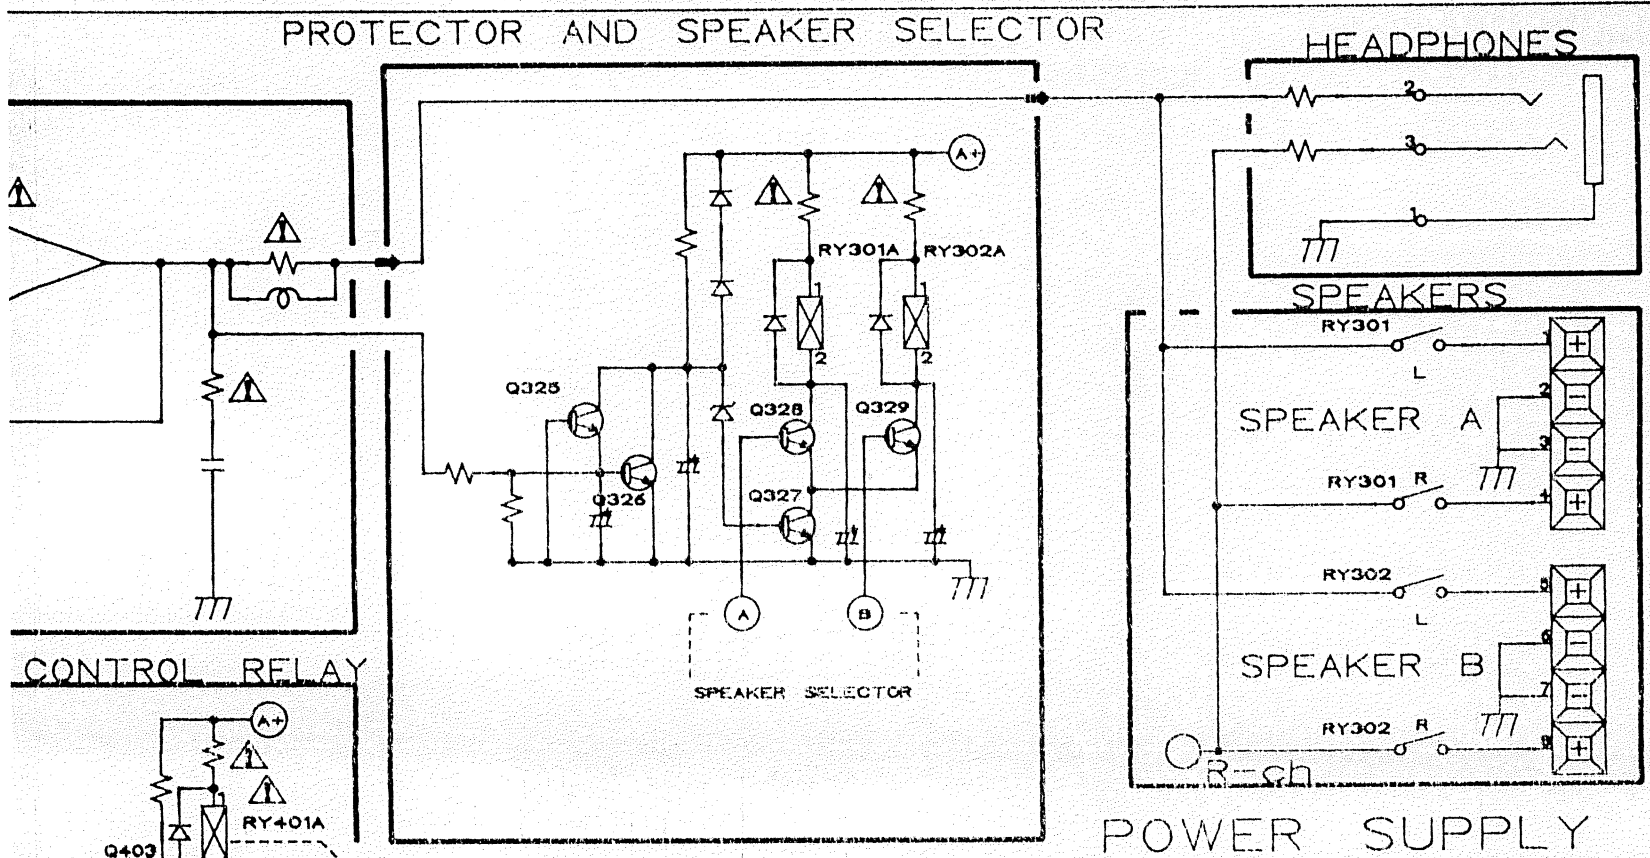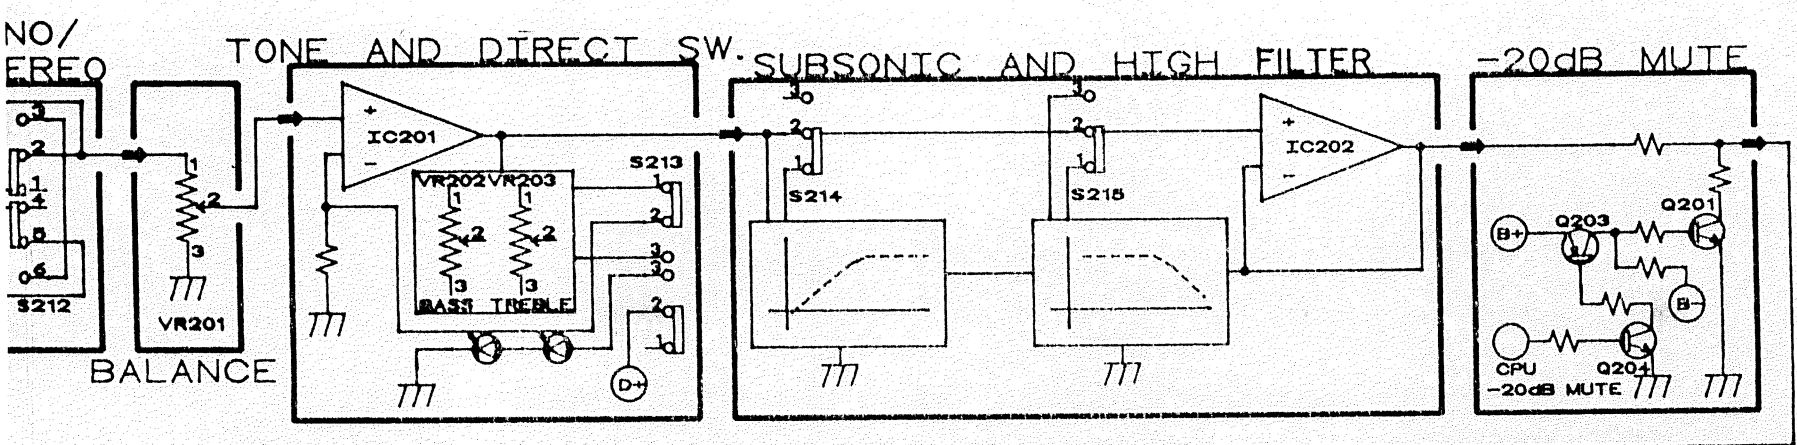

SCHEMATIC DIAGRAM (FOR UA-160R)

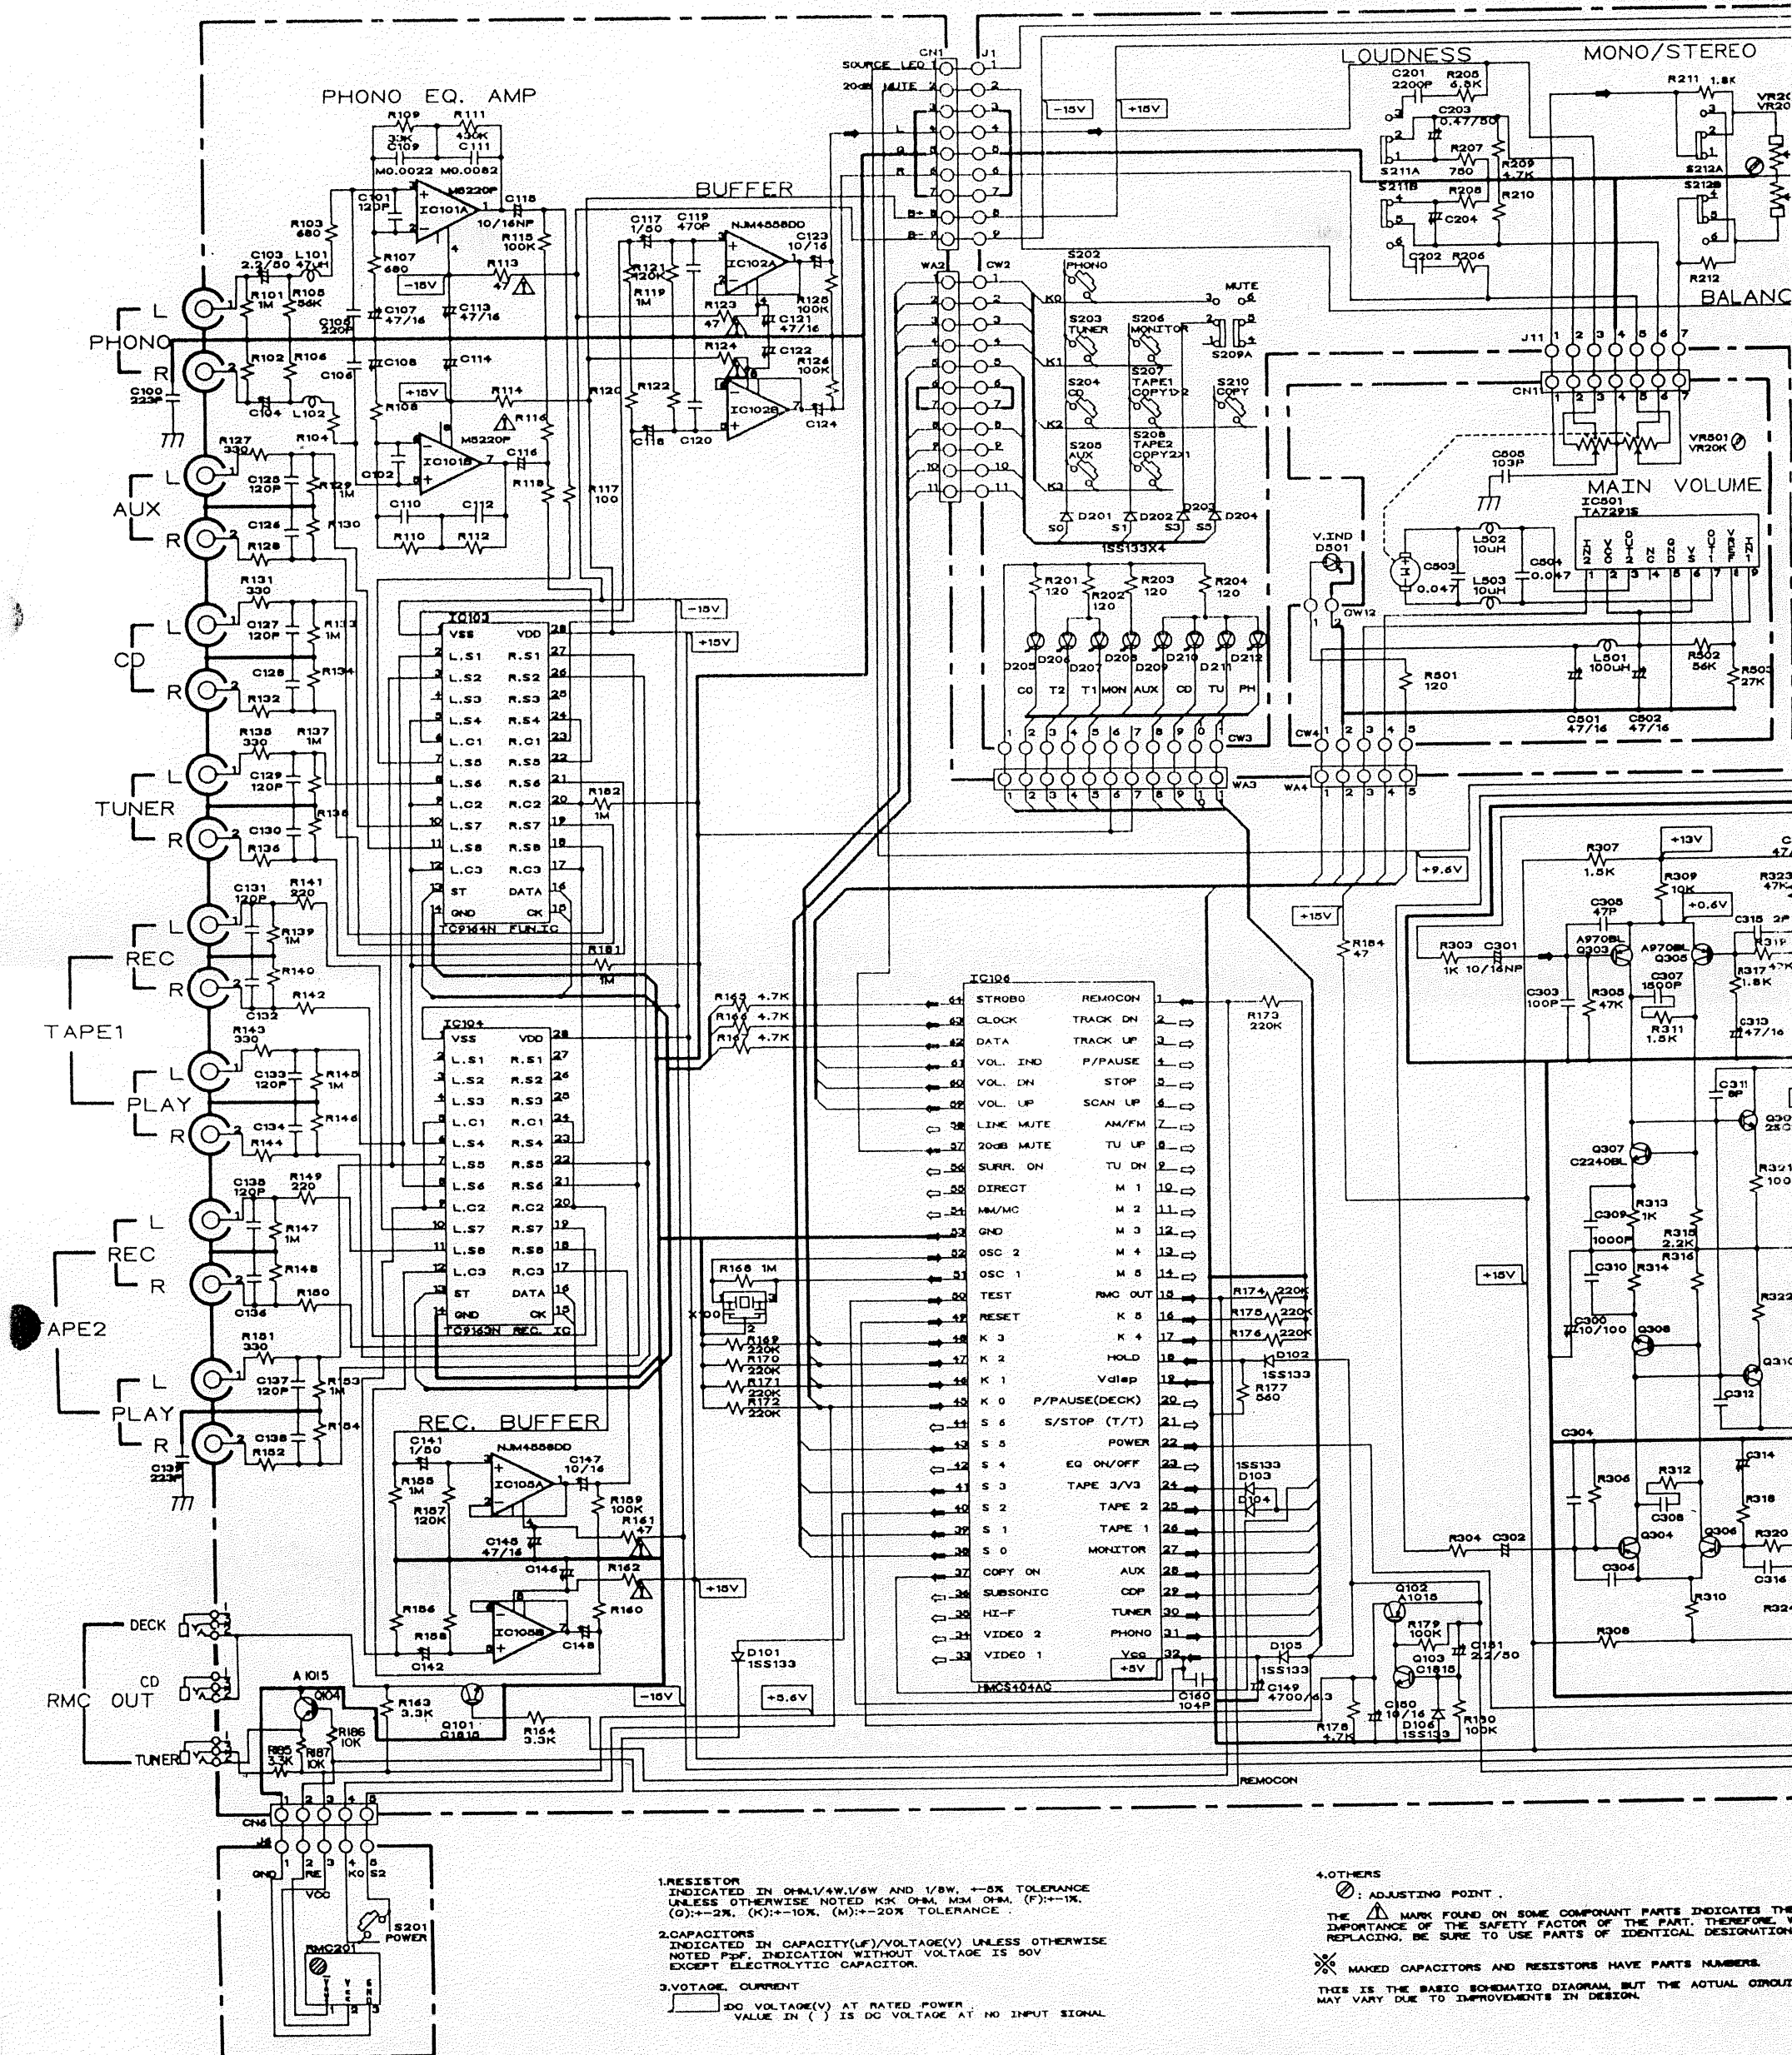

AF ASS'Y

TR ASS'Y

ASS'Y

MAIN VOLUME ASS'Y
(FOR UA-140)

MOTOR VOLUME ASS'Y
(FOR UA-160R)

WIRING DIAGRAM

