


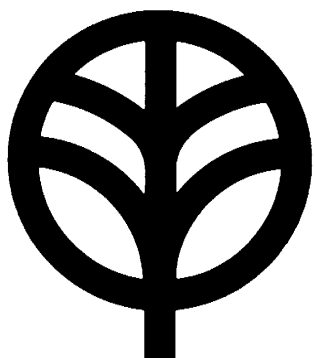

KENWOOD®
HI/FI STEREO COMPONENTS

SERVICE MANUAL

KR-720 (KR-720L) (KR-725)

An item of adjustment is written in three languages — English, French and German.

Un article sur réglages est écrit en trois langues, Anglais, Français et Allemand.

Ein Artikel der Abgleich wird auf drei Sprachen, Englische, Französisch und Deutsch geschrieben.



**HIGH SPEED DC/ZERO SWITCHING
STEREO RECEIVER**

CONTENTS

EXTERNAL VIEW (KR-720) 3

EXTERNAL VIEW (KR-720L) 4

INTERNAL VIEW (KR-720L) 5

DIAL CORD STRINGING 5

EXPLODED VIEW 6

BLOCK DIAGRAM 7

LEVEL DIAGRAM 7

ADJUSTMENT/REGLAGES/ABGLEICH 8

PC BOARD 16

SCHEMATIC DIAGRAM (KR-720) 17

SPECIFICATIONS (KR-720) 17

SCHEMATIC DIAGRAM (KR-720L) 18

SPECIFICATIONS (KR-720L) 18



PARTS LIST 19

Note:

Component and circuitry are subject to modification to insure best operation under differing local conditions. This manual is based on the U.S. (K) standard and provides information on regional circuit modification through use of alternate schematic diagrams, and information on regional component variations through use of parts list.


	Region	Code
KR-720	U.S.A.	K
	Canada	P
	PX	U
	Australia	X
	Europe and Scandinavia	E
	England	T
	Other Areas	M
	Audio Club	H
KR-720L	PX (of Europe)	UE
	Europe and Scandinavia	E
	England	T
KR-725	U.S.A.	K

EXTERNAL VIEW (KR-720)

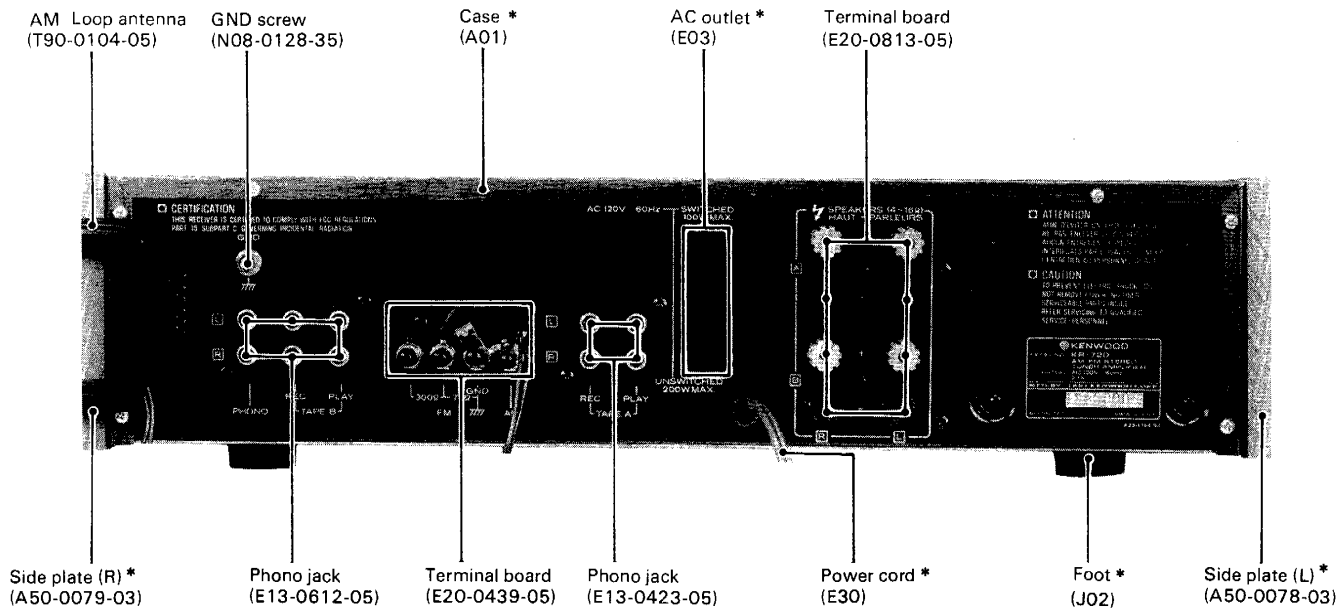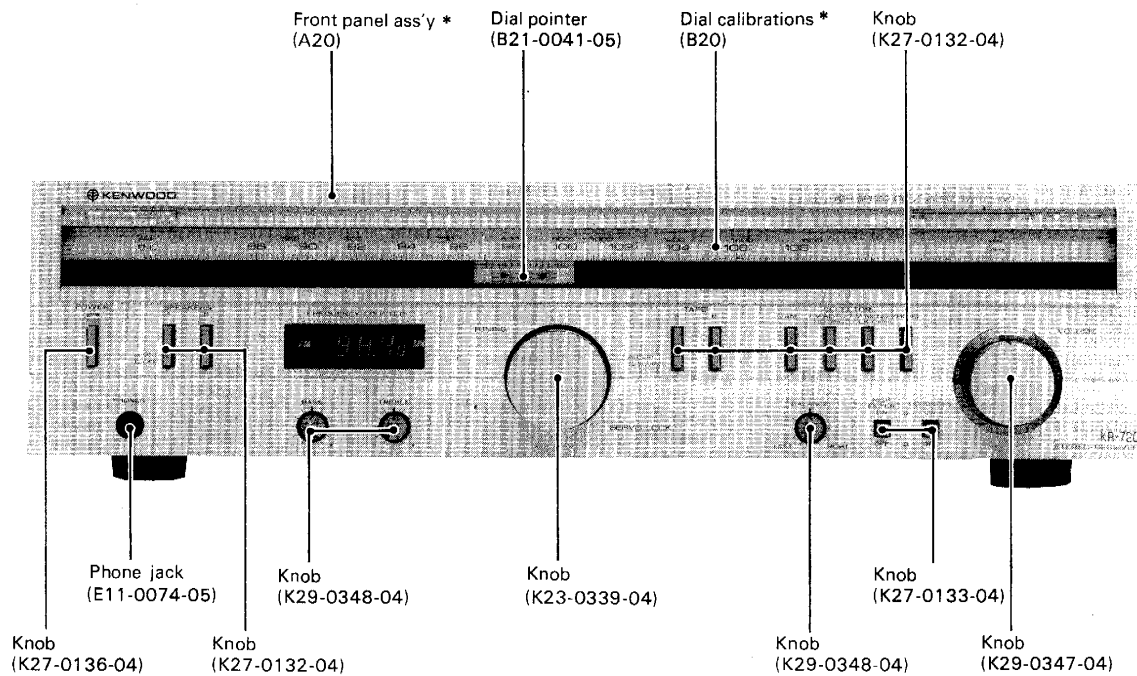


* Refer to Parts List.

EXTERNAL VIEW (KR-720L)

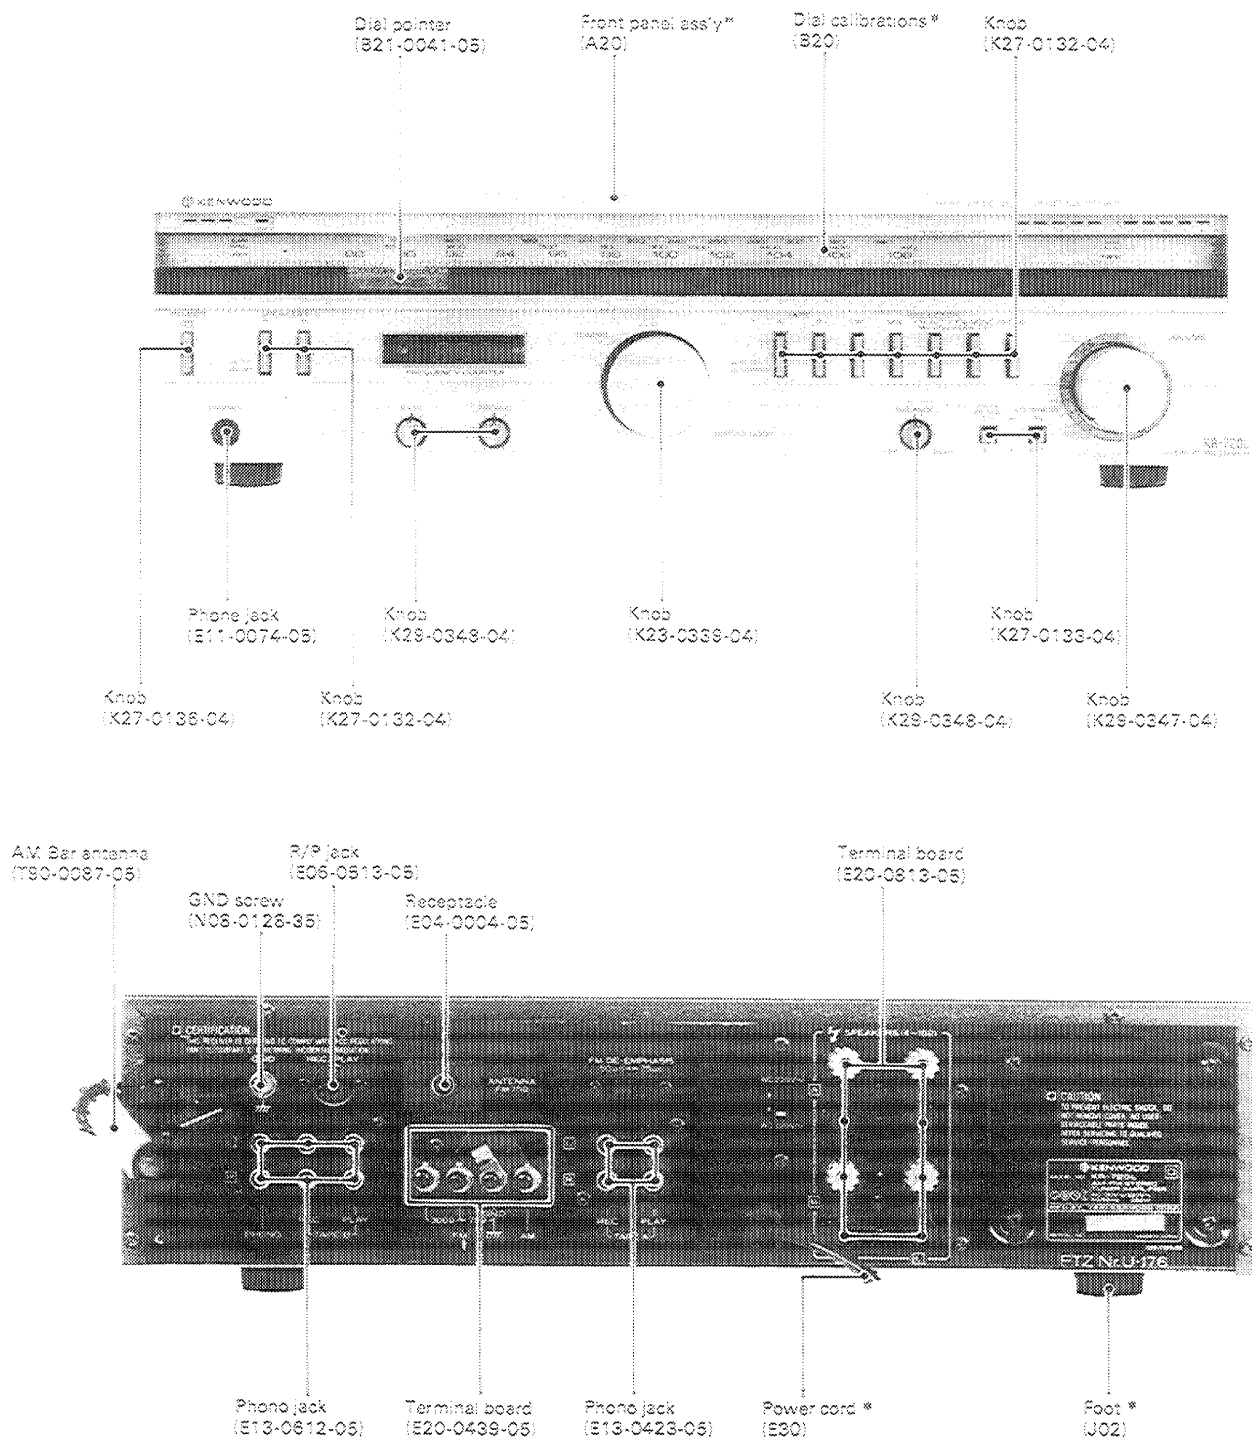


INTERNAL VIEW (KR-720L)/DIAL CORD STRINGING

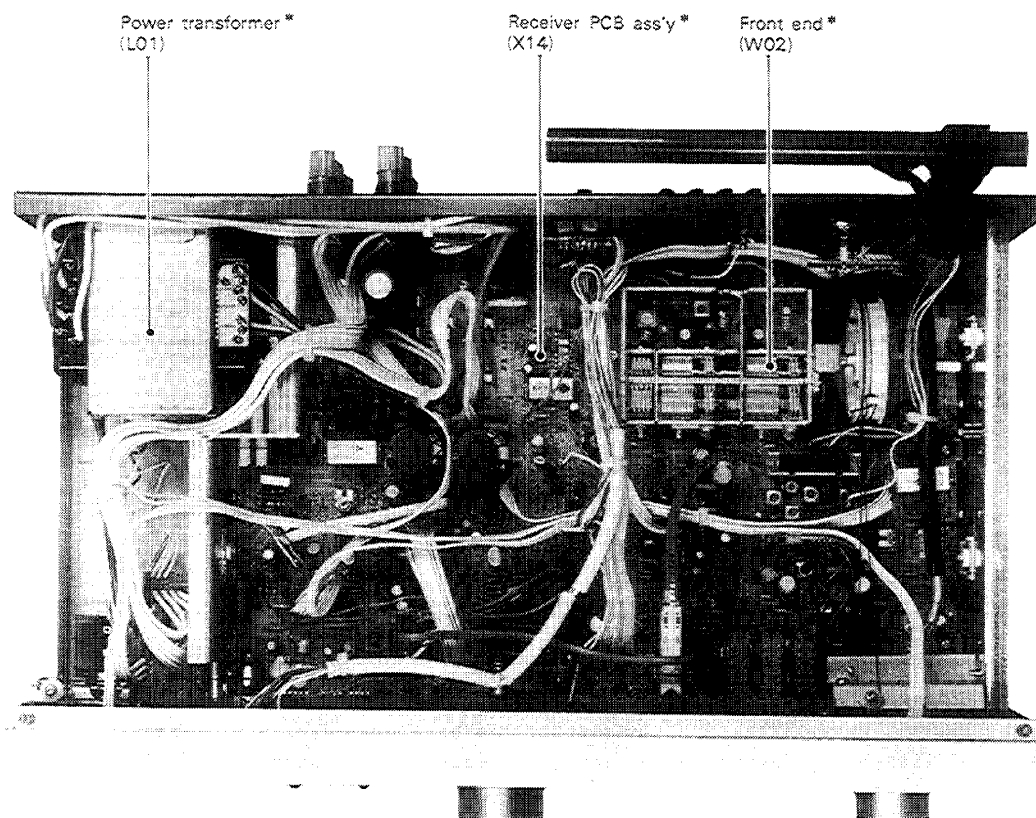


* Refer to Parts List

DIAL CORD STRINGING

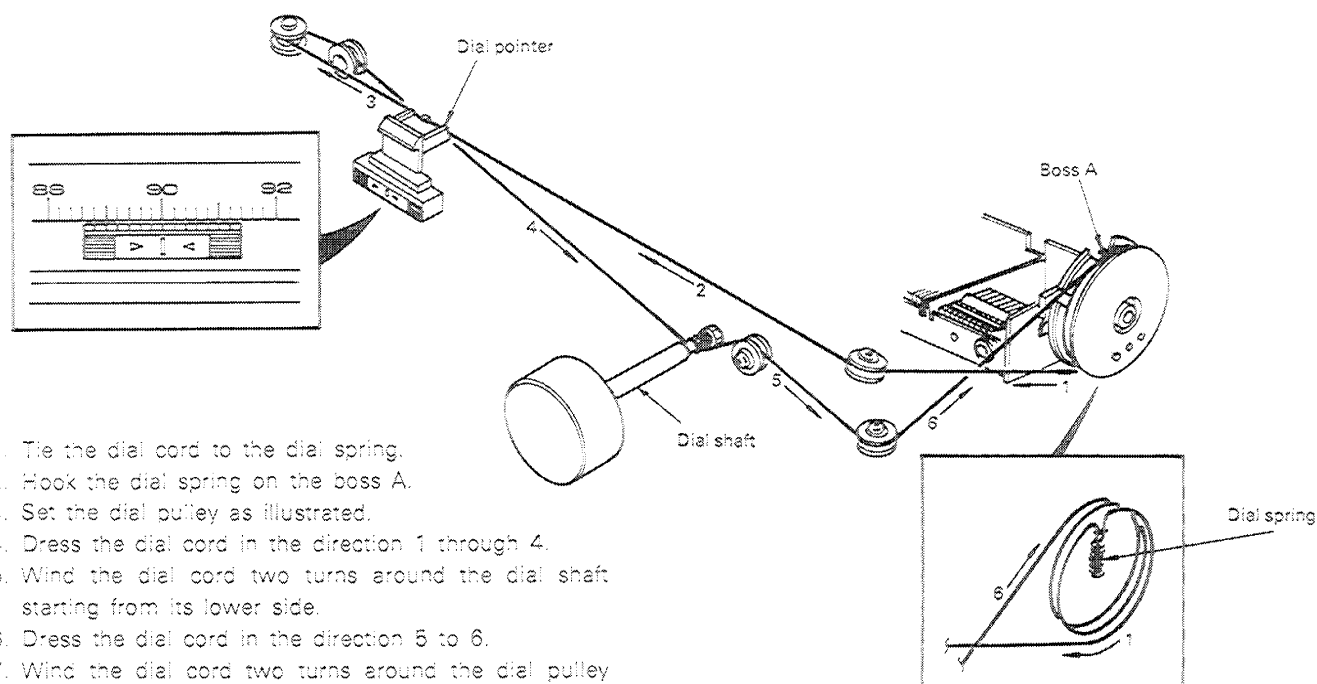


1. Tie the dial cord to the dial spring.
2. Hook the dial spring on the boss A.
3. Set the dial pulley as illustrated.
4. Dress the dial cord in the direction 1 through 4.
5. Wind the dial cord two turns around the dial shaft starting from its lower side.
6. Dress the dial cord in the direction 5 to 6.
7. Wind the dial cord two turns around the dial pulley starting from its upper side.
8. Tie the end of the dial cord to the dial spring.
9. Remove the dial spring from the boss A.
10. Receive a 90 MHz signal, and then mount the dial pointer at the 90 MHz position of the dial calibrations.

EXPLODED VIEW

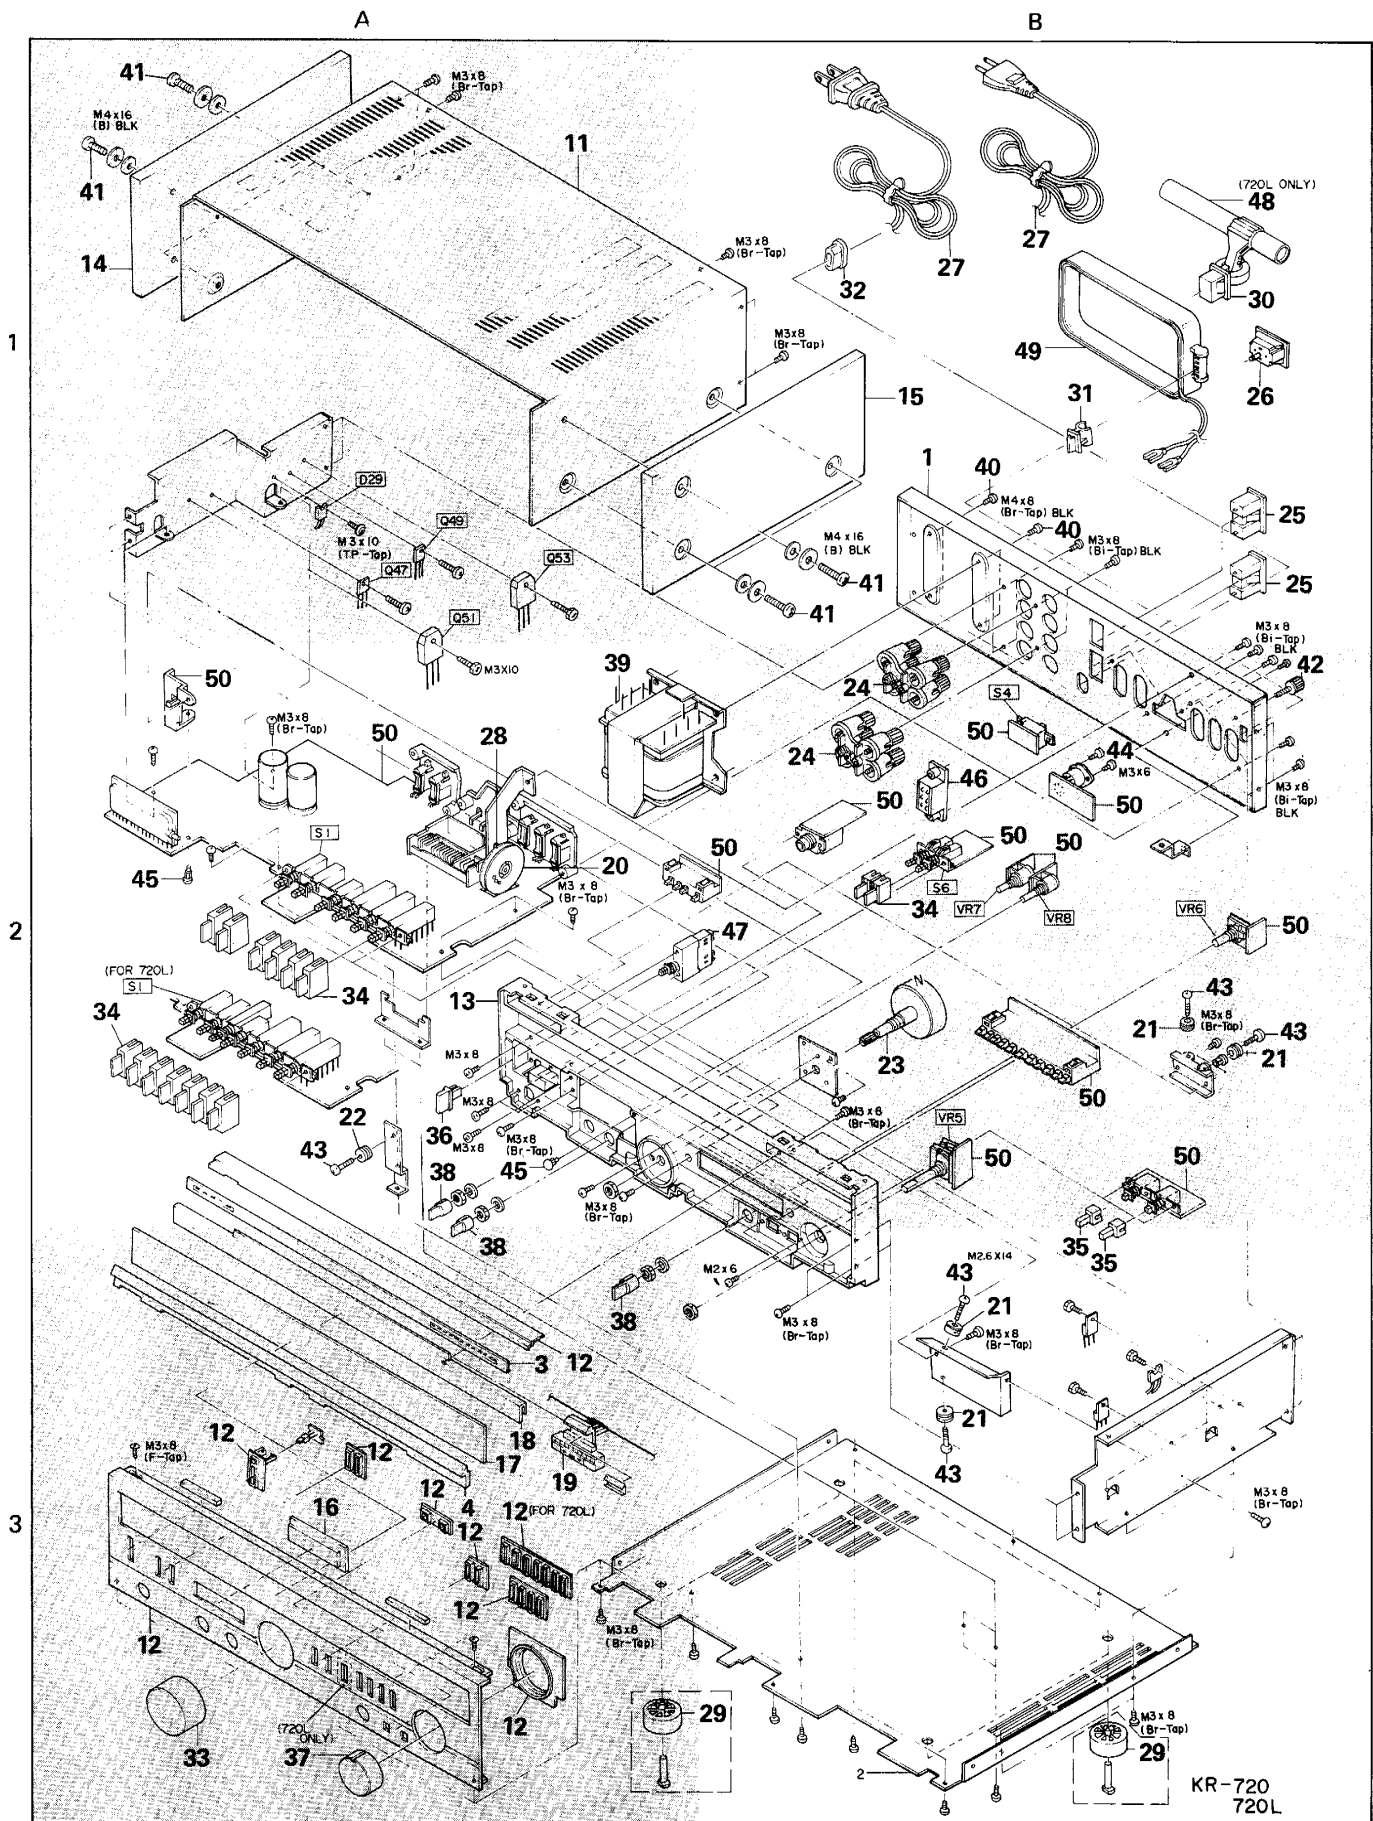


BLOCK DIAGRAM/LEVEL DIAGRAM

BLOCK DIAGRAM

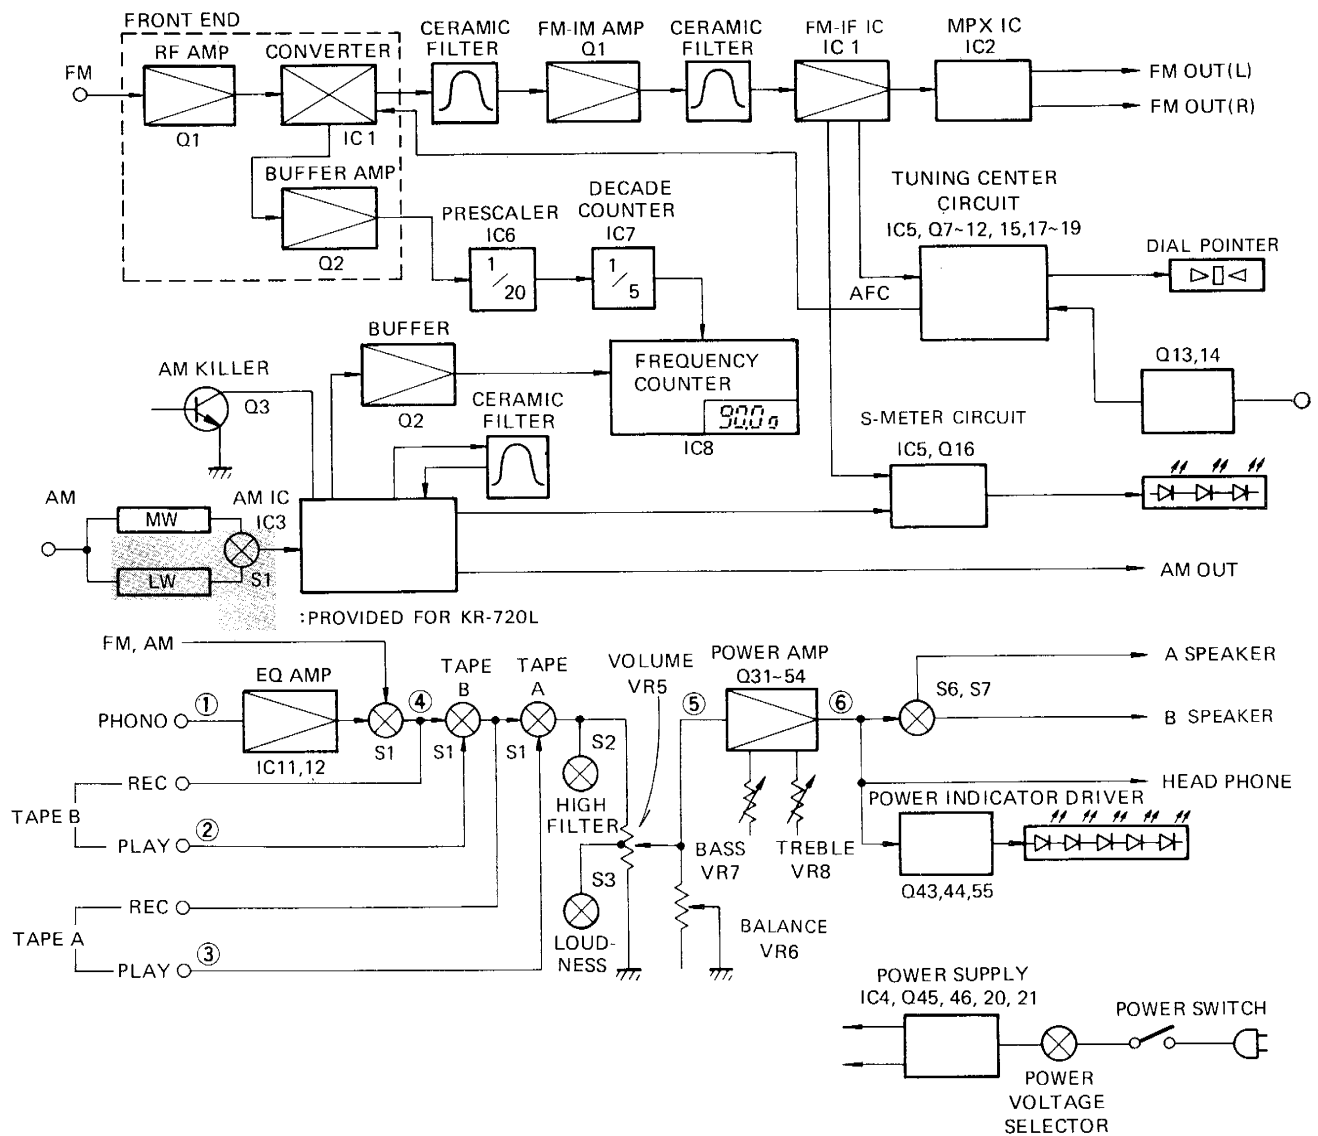

LEVEL DIAGRAM

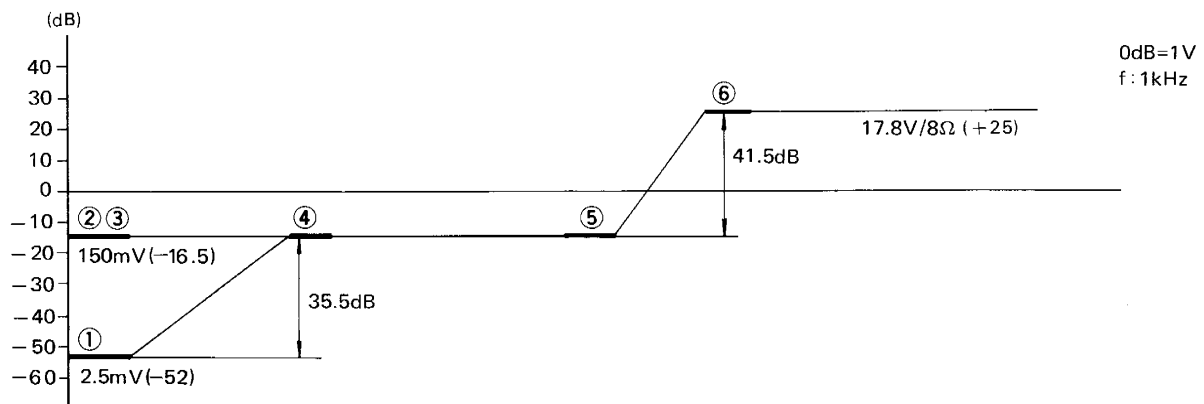

ADJUSTMENT (AMP)/REGLAGES (AMPLI)/ABGLEICH (VERSTÄRKER)

OFFSET


1. Set the SPEAKERS switch to A and the VOLUME to 0.
2. Connect a DC voltmeter to the SPEAKERS A terminals.
3. Adjust VR9 (VR10) for a 0V reading of the DC voltmeter.

DECALAGE (OFFSET)

1. Régler SPEAKERS interrupteur au A et VOLUME au 0.
2. Brancher le voltmètre de C.C. aux bornes de sortie (SPEAKERS A) + et -.
3. Régler VR9 (VR10) de façon à ce que le voltmètre de C.C. indique 0V.

VERSCHIEBUNG

1. Den Schalter SPEAKERS auf A und den VOLUME auf 0 einstellen.
2. Einen Gleichspannungsmesser an die Klemmen SPEAKERS A anschließen.
3. Den VR9 (VR10) so regulieren, daß die Gleichspannungsmesser-Ablesung 0V ist.

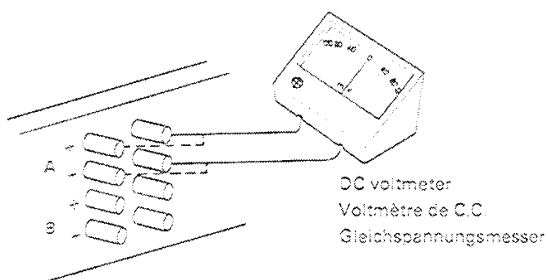

IDLE CURRENT



1. Set the VOLUME to 0.
2. Connect the DC voltmeter between the terminals of R263 (R264).
3. Adjust VR11 (VR12) for a 35.2 mV reading of the DC voltmeter.

COURANT DE POLARISATION

1. Régler VOLUME au 0.
2. Brancher le voltmètre de C.C. sur aux bornes de R263 (R264).
3. Régler VR11 (VR12) de façon à ce que le voltmètre de C.C. indique 35.2 mV.

LEERLAUFSTROM

1. Den VOLUME auf 0 einstellen.
2. Den Gleichspannungsmesser zwischen den Klemmen von R263 (R264).
3. Den VR11 (VR12) so regulieren, daß die Gleichspannungsmesser-Ablesung 35.2 mV ist.

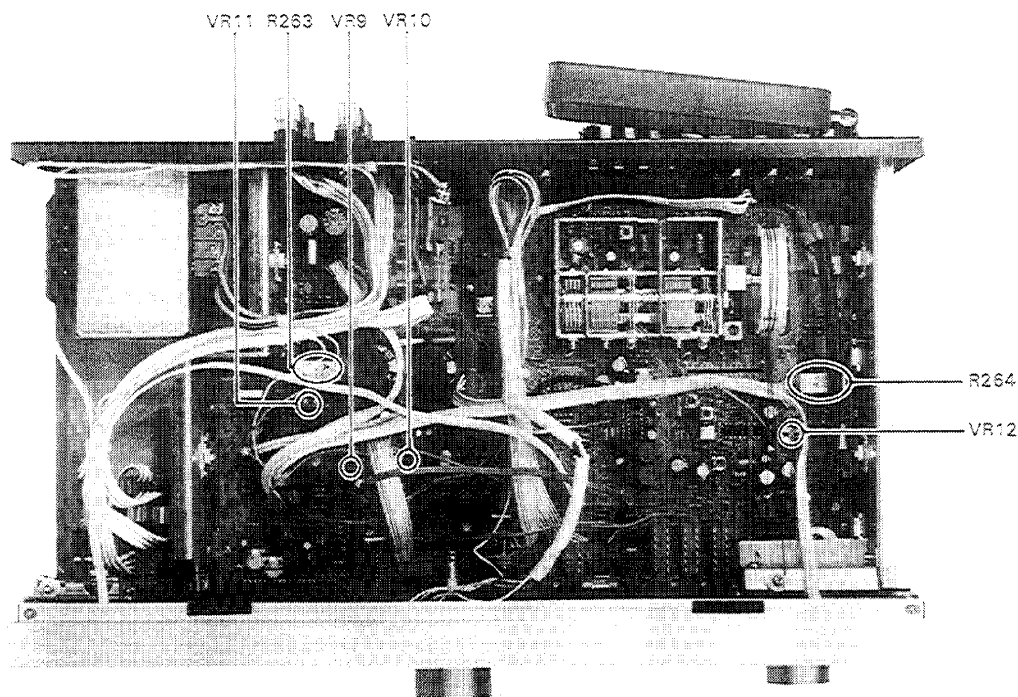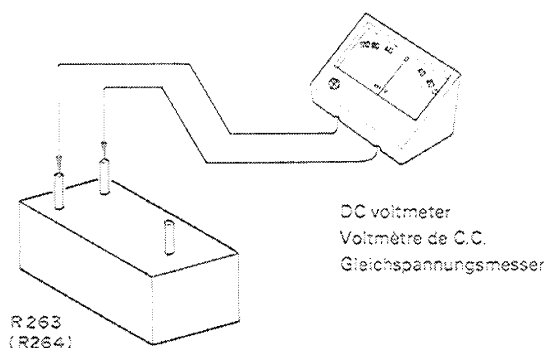

ADJUSTMENT (TUNER)

NO.	ALIGNMENT	TEST EQUIPMENTS		RECEIVER SETTING	OUTPUT INDICATOR	ADJUSTMENT POINTS	REMARKS
		CONNECTION	SETTING				
FM							
1	DISCRIMINATOR (1)	Ⓐ	95 MHz 1 kHz, ±75 kHz Dev	FM-MONO 95 MHz	Ⓑ	—	* 1
2	DISCRIMINATOR (2)	ditto	95 MHz 1 kHz, ±75 kHz Dev 60 dB (ANT input)	ditto	* 2 R12	L1	0V
3	DISCRIMINATOR (3)	ditto	ditto	ditto	Ⓑ	L2	Minimum distortion
4	VCO	ditto	95 MHz 0 Dev 60 dB (ANT input)	FM-AUTO/MUTE 95 MHz	Frequency counter to the junction of R29 and VR2 via an AC voltmeter *3	VR2	76 kHz ±200 Hz
5	IFT	Ⓒ	95 MHz 1 kHz, ±68.25 kHz Dev SELECTOR: L or R PILOT: ON 60 dB (ANT input)	ditto	Ⓑ	T1 (Front end)	Minimum distortion
6	SEPARATION	ditto	ditto	ditto	ditto	VR1	* 4
AM (KR-720)							
①	IFT	Ⓓ	1 000 kHz 400 Hz, 30% Mod	AM 1 000 kHz	Ⓑ	L9	Maximum deflection
②	TRACKING (1)	ditto	600 kHz 400 Hz, 30% Mod	AM 600 kHz	ditto	L6, 7	ditto
③	TRACKING (2)	ditto	1 400 kHz 400 Hz, 30% Mod	AM 1 400 kHz	ditto	TC AM1,2 (Front end)	ditto
AM (KR-720L)							
①	IFT	Ⓓ	1 000 kHz 400 Hz, 30% Mod	MW 1 000 kHz	Ⓑ	L9	Maximum deflection
②	MW TRACKING (1)	ditto	600 kHz 400 Hz, 30% Mod	MW 600 kHz	ditto	Bar antenna (A) L7	ditto
③	MW TRACKING (2)	ditto	1 400 kHz 400 Hz, 30% Mod	MW 1 400 kHz	ditto	TC AM1, 2 (Front end)	ditto
④	LW TRACKING (1)	ditto	160 kHz 400 Hz, 30% Mod	LW 160 kHz	ditto	Bar antenna (B) L8	ditto
⑤	LW TRACKING (2)	ditto	340 kHz 400 Hz, 30% Mod	LW 340 kHz	ditto	TC1, 2	ditto
FREQUENCY COUNTER * 5							
I	FM	Ⓐ	89.10 MHz 0 Dev 20 dB (ANT input)	FM-MONO 89.1 MHz	Fluorescent indicator	VR3	89.1 MHz
II	AM	Ⓓ	1440.0 kHz 400 Hz, 30% Mod 30 dB (ANT input)	MW 1440 kHz	ditto	VR2	1440 kHz

* 1 ~ 5 : See page 12.

REGLAGES (TUNER)

N°.	ALIGNEMENT	APPAREILLAGE		REGLAGE DU AMPLI-TUNER	INDICATEUR DE SORTIE	POINTS DE REGLAGES	REMARQUES
		RACCORD-MENT	REGLAGE				
SECTION MF							
1	DISCRIMI-NATEUR (1)	Ⓐ	95 MHz 1 kHz, ± 75 kHz Dév	FM-MONO 95 MHz	Ⓑ	—	* 1
2	DISCRIMI-NATEUR (2)	idem	95 MHz 1 kHz, ± 75 kHz Dév 60 dB (Entrée ANT)	idem	* 2 R12	L1	0V
3	DISCRIMI-NATEUR (3)	idem	idem	idem	B	L2	Distorsion minimale
4	OSCILLA-TEUR 76 kHz	idem	95 MHz 0 Dév 60 dB (Entrée ANT)	FM-AUTO/MUTE 95 MHz	Relier un fréquencesmètre au plot R29 et VR2 par un voltmètre C.A. *3	VR2	76 kHz ±200 Hz
5	TFI	Ⓒ	95 MHz 1 kHz, ±68,25 kHz Dév SELECTION: L ou R Signal pilote (±6,75 kHz Dév) 60 dB (Entrée ANT)	idem	Ⓑ	T1 (Partie frontale)	Distorsion minimale
6	SEPARA-TION	idem	idem	idem	idem	VR1	* 4
SECTION MA (KR-720)							
①	TFI	Ⓓ	1 000 kHz 400 Hz, 30% Mod)	AM 1 000 kHz	Ⓑ	L9	Déviations maximale
②	ALIGNEMENT	idem	600 kHz 400 Hz, 30% Mod	AM 600 kHz	idem	L6, 7	idem
③	ALIGNEMENT	idem	1 400 kHz 400 Hz, 30% Mod	AM 1 400 kHz	idem	TC AM1, 2	idem
SECTION MA (KR-720L)							
①	TFI	Ⓓ	1 000 kHz 400 Hz, 30% Mod	MW 1 000 kHz	Ⓑ	L9	Déviations maximale
②	MW-ALIGNEMENT	idem	600 kHz 400 Hz, 30% Mod	MW 600 kHz	idem	Antenne MA (A), L7	idem
③	MW-ALIGNEMENT	idem	1 400 kHz 400 Hz, 30% Mod	MW 1 400 kHz	idem	TC AM1, 2 (Partie frontale)	idem
④	LW-ALIGNEMENT	idem	160 kHz 400 Hz, 30% Mod	LW 160 kHz	idem	Antenne MA (B), L8	idem
⑤	LW-ALIGNEMENT	idem	340 kHz 400 Hz, 30% Mod	LW 340 kHz	idem	TC1, 2	idem
FREQUENCESMETRE *5							
I	MF	Ⓐ	89.10 MHz 0 Dév 20 dB (Entrée ANT)	FM-MONO 89.1 MHz	Indicateur à fréquence	VR3	89.1 MHz
II	MA	Ⓓ	1440.0 kHz 400 Hz, 30% Mod 30 dB (Entrée ANT)	MW 1440 kHz	idem	VR4	1440 kHz

*1 ~ 5 : Voir la page 12.

ABGLEICH (EMPFÄNGER)


NR.	ABGLEICH	PRÜFEINRICHTUNG		STEUR- GERÄT EINSTEL- LUNG	AUSGANGS- ANZEIGE	EINSTELL- PUNKT	BEMER- KUNGEN
		ANSCHLÜSSE	EINSTELLUNG				
UKW-EMPFANGSABTEILUNG							
1	DISCRIMI- NATOR (1)	Ⓐ	95 MHz 1 kHz, ± 75 kHz Hub	FM-MONO 95 MHz	Ⓑ	—	* 1
2	DISKRIMI- NATOR (2)	dito	95 MHz 1 kHz, ± 75 kHz Hub 60 dB (Eingangs- signalpegel)	dito	* 2 R12	L1	0V
3	DISKRIMI- NATOR (3)	dito	dito	dito	Ⓑ	L2	Minimaler Klirrfaktor
4	SPANNUNGS- GEREGELTER OSZILLATOR	dito	95 MHz 0 Hub 60 dB (Eingangs- signalpegel)	FM- AUTO/MUTE 95 MHz	Frequenzzähler zum Kreuzungs- punkt von R29 und VR2 über einen Wechselspann- ungsmesser *3	VR2	76 kHz ± 100
5	ZF-T	Ⓒ	95 MHz 1 kHz, ± 68,25 kHz Hub Wähler: L oder R Pilotton: (± 6.75 kHz Hub) 60 dB (Eingangs- signalpegel)	dito	Ⓑ	T1 (Frontende)	Minimaler Klirrfaktor
6	STEREO KANAL TRENNUNG	dito	dito	dito	dito	VR1	* 4
MW-EMPFANGS ABTEILUNG (KR-720)							
①	ZF-T	Ⓓ	1 000 kHz 400 Hz, 30% Mod	AM 1 000 kHz	Ⓑ	L9	Marimaler Ausschlag
②	EMPFANGS- BEREICH (1)	dito	600 kHz 400 Hz, 30% Mod	AM 600 kHz	dito	L6, 7	dito
③	EMPFANGS- BEREICH (2)	dito	1 400 kHz 400 Hz, 30% Mod	AM 1 400 kHz	dito	TC AM1, 2	dito
MW UND LW - EMPFANGSABTEILUNG (KR-720L)							
①	ZF-T	Ⓓ	1 000 kHz 400 Hz, 30% Mod	MW 1 000 kHz	Ⓑ	L9	Maximaler Ausschlog
②	MW- EMPFANGS- BEREICH (1)	dito	600 kHz 400 Hz, 30% Mod	MW 600 kHz	dito	Ferritantenna (A) L7	dito
③	MW- EMPFANGS- BEREICH (2)	dito	1 400 kHz 400 Hz, 30% Mod	MW 1 400 kHz	dito	TC AM1, 2 (Frontende)	dito
④	LW- EMPFANGS- BEREICH (1)	dito	160 kHz 400 Hz, 30% Mod	LW 160 kHz	dito	Ferritantenna (B) L8	dito
⑤	LW- EMPFANGS- BEREICH (2)	dito	340 kHz 400 Hz, 30% Mod	LW 340 kHz	dito	TC1, 2	dito
FREQUENZZÄHLER * 5							
I	UKW	Ⓐ	89.10 MHz 0 Hub 20 dB (Eingangs- signalpegel)	FM-MONO 89.1 MHz	Frequenz- indikator	VR3	89.1 MHz
II	MW	Ⓓ	1440 kHz 400 Hz, 30% Mod 30 dB (Eingangs- signalpegel)	MW (AM) 1440.0 kHz	dito	VR4	1440 kHz

*1~5 : Sehen den page 12.

ADJUSTMENT (TUNER)/REGLAGES (TUNER)/ABGLEICH (EMPFÄNGER)


* 1

Adjust the tuning knob so that the same amount of noise is observed at the top and bottom of the output waveform with a weak signal.

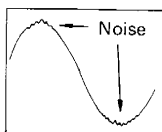


* 2

Connect the DC voltmeter across R12.

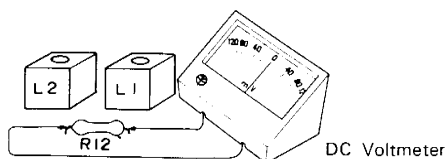

* 3

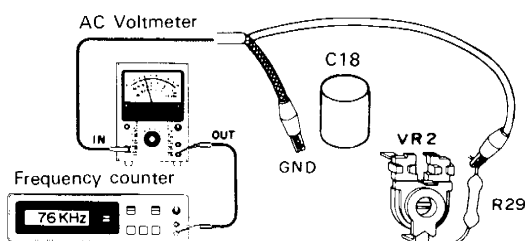

* 4 Minimum output

A compromise adjustment may be required if left-to-right and right-to-left separations are unequal.

* 5

Fine adjustment is achieved as follows.

Apply +4.5V to the 12 pin of IC8. If the indicated frequency is incorrect, a digit of the indicator flickers (Refer to the figure).

89.10

1440

Flickers in FM mode.

Flickers in AM mode.

Adjust VR3 (FM) or VR4 (AM) so that the indicator stops flickering and shows the correct frequency.


* 6 FM fronted

The FM front end section is completely adjusted in the factory and further adjustment is not necessary. When the FM front end section cannot be repaired by replacing semiconductors, replace the FM front end PCB ass'y and do the following.

- (1) Set FM-SG to 90 MHz, 1 kHz Mod, ± 75 kHz Dev, 60 dB and connect it to the antenna terminal of the receiver.
- (2) Receive the FM-SG signal.
- (3) Fix the dial pointer at 90 MHz.


* 1

Ajuster le bouton d'accord de façon que la même quantité du bruit puisse être observé au sommet et en bas de la forme d'onde de sortie sous des conditions d'alimentation de signal faible.

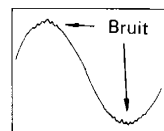


* 2

Relier un voltmètre de C.C. sur R12.

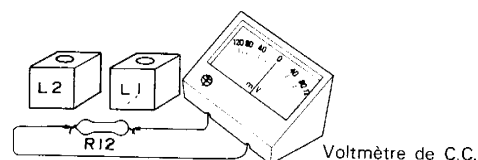

* 3

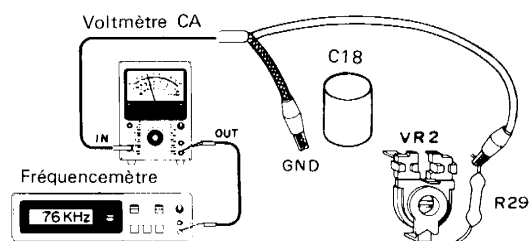

* 4 Sortie minimale

Si la sortie la droite de diaphonie et la gauche ne sont pas même régler le potentiomètre ajustable pour que la tension de sortie est même.

* 5

Le réglage précis peut être effectué comme suit. Appliquer +4,5V à la fiche 12 de IC8. Si la fréquence indiquée n'est pas exacte, un chiffre de l'affichage papillote (Voir l'illustration).

89.10

1440

Papillotements
en mode MF.

Papillotements
en mode MA.

Régler VR3 (MF) ou VR4 (MA) pour éliminer les papillotements et jusqu'à ce que la fréquence exacte soit affichée.

* 6


Si la partie frontale FM ne peut pas être réparée en remplaçant les semi-conducteurs PCB de la partie frontale et effectuer les opérations suivantes:

- (1) Régler FM-SG à 90 MHz, 1 kHz Mod, ± 75 kHz, 60 dB et le connecter à la borne d'antenne du récepteur.
- (2) Recevoir le signal FM-SG.
- (3) Fixer l'aiguille du cadran à 90 MHz.

ADJUSTMENT (TUNER)/REGLAGES (TUNER)/ABGLEICH (EMPFÄNGER)


* 1

Den Abstimmknopf so einstellen, daß an der oberen und unteren Grenze der Ausgangswellenform bei schwachem Signal dasselbe Geräusch auftritt.

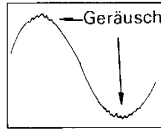


* 2

Einen Gleichspannungsmesser über R12 anschließen.

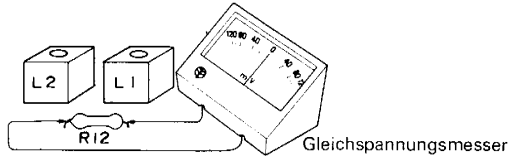

* 3

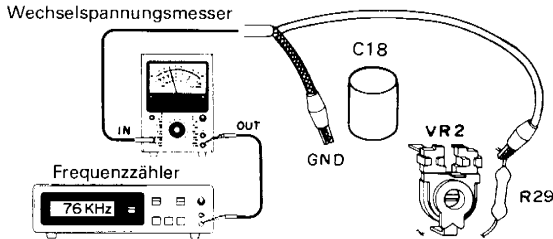

* 4 Minimaler Ausschlag

Wenn dem Übersprechanteil des linken Kanals in den rechten Kanal und dem Übersprechanteil des rechten Kanals in den linken Kanal ungleich sind, eine kompromißabgleichung wird gefordert.

* 5

Die genaue Einstellung wie folgt Vornehmen. +4,5V an Buchse 12 Vou IC8 anlegen. Falls die ausgegebene Frequenz nicht richtig ist, flickert eine Zahl der Darstellung (siehe Abbildung).

89.10

Flickern bei
UKW-Empfang.

1440

Flickern bei
MW-Empfang.

VR3 (UKW) oder VR4 (MW) so einstellen, daß das Flickern aufhört und bis die richtige Frequenz dargestellt ist.

* 6 UKW-Frontende

Das UKW-Frontende wird bereits im Werk vollständig eingestellt. Weitere Einstellung ist daher nicht nötig.

Wenn das UKW-Frontende durch Auswechseln der Halbleiter nicht repariert werden kann, ist die Leiterplatte des Frontendes auszuwechseln und folgende Einstellung vorzunehmen:

- (1) Den UKW-Signalgenerator auf 90 MHz, 1 kHz Modulation ± 75 kHz Hub, und 60 dB einstellen und mit der Antennenklemme des Steuergeräts verbinden.
- (2) Den Steuergeräts so einstellen, daß das Meßsendersignal empfangen wird, während der Skalenzeiger auf 90 MHz zeigt.

TEST INSTRUMENT


Oscilloscope
AM signal generator
FM signal generator
Audio generator
AC voltmeter
FM multiplex generator
Frequency counter
DC voltmeter
Distortion meter
Dummy antenna

APPAREILLAGE

Oscilloscope
Générateur MA
Générateur MF
Générateur audio fréquences
Volltmètre CA
Générateur multiplex stéréo
Fréquence-mètre
Voltmètre CC
Distorsiomètre
Antenna fictive


PRÜFINSTRUMENTE

Oszilloskop
MW-Signalgenerator
UKW-Signalgenerator
NF-Signalgenerator
Wechselspannungsmesser
UKW-Multiplexgenerator
Frequenzzähler
Gleichspannungsmesser
Klirrfaktormesser
Antennennachbildung

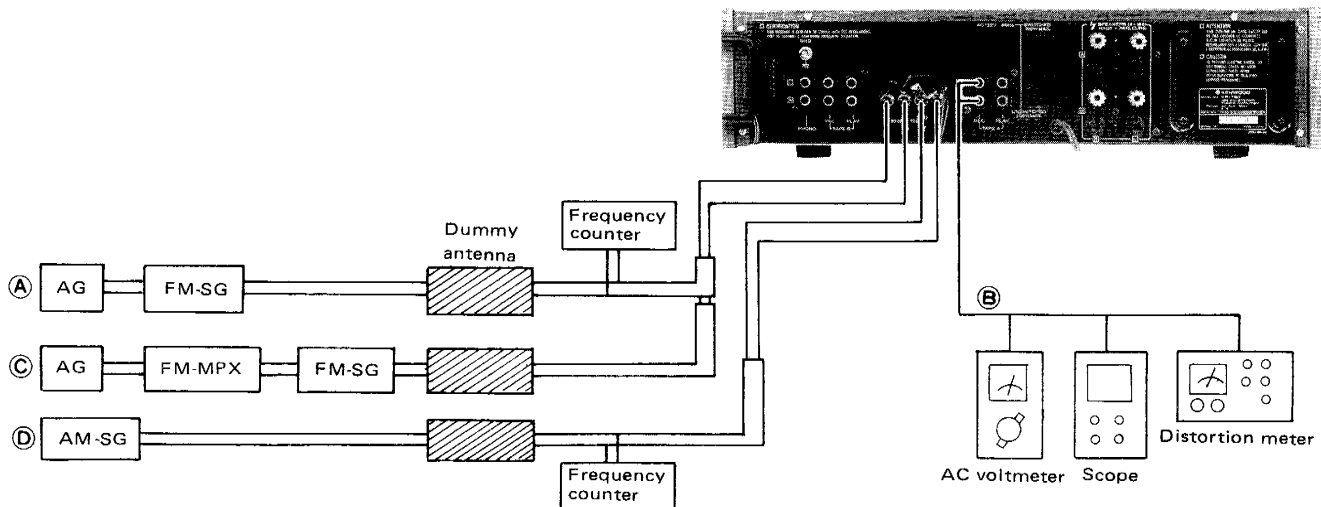


ADJUSTMENT (TUNER)/REGLAGES (TUNER)/ABGLEICH (EMPFÄNGER)

KR-720

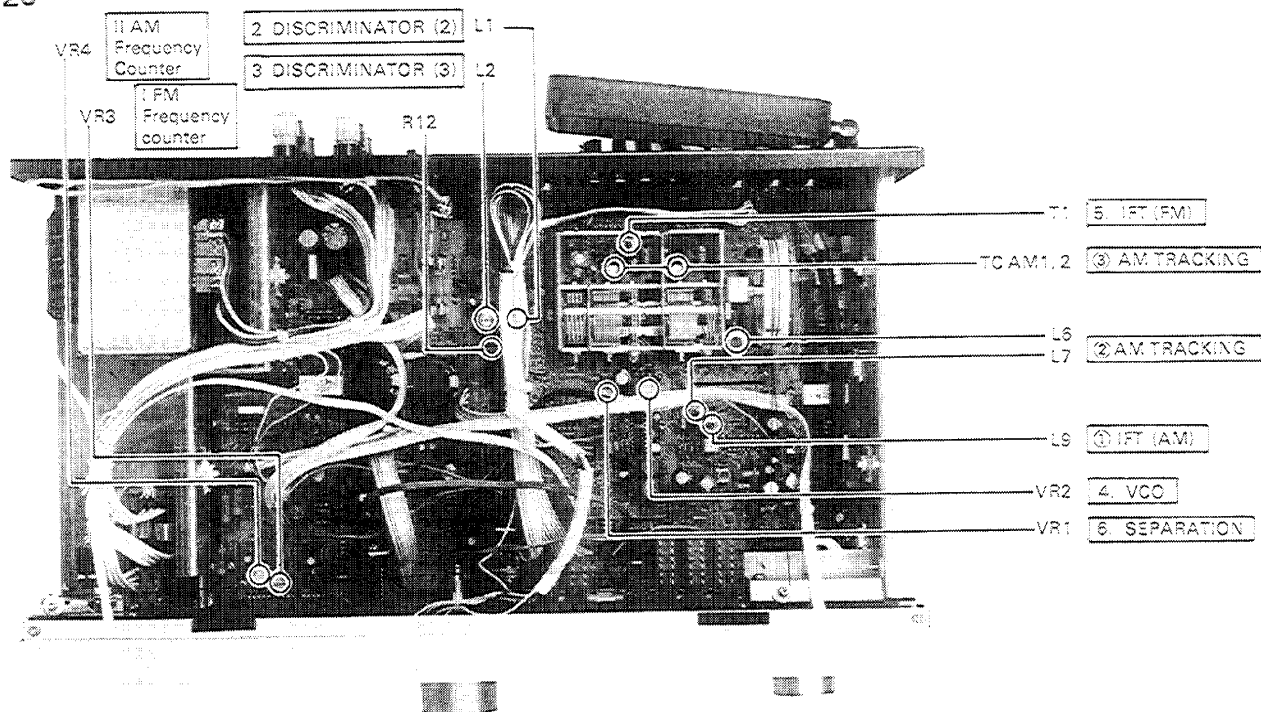


KR-720L

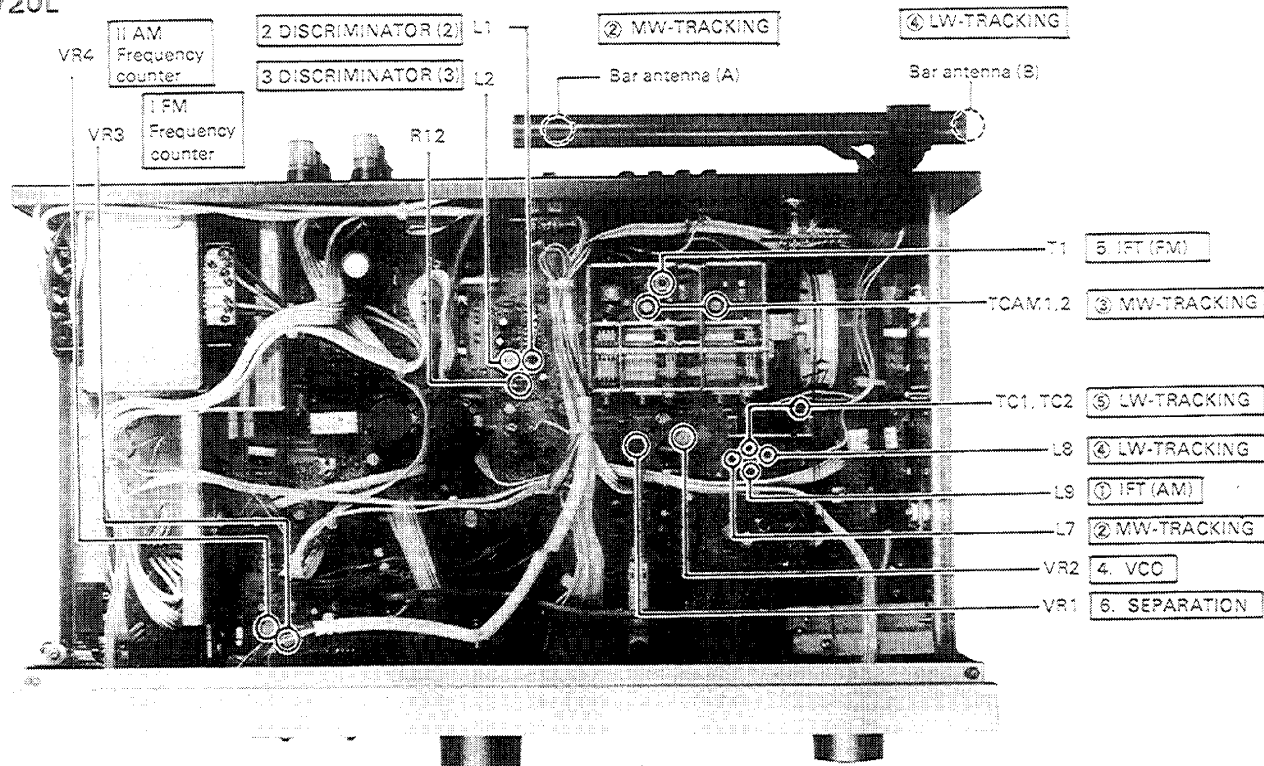

PC BOARD



RECEIVER (X14-115) Component side view

Modifications for KR-720L

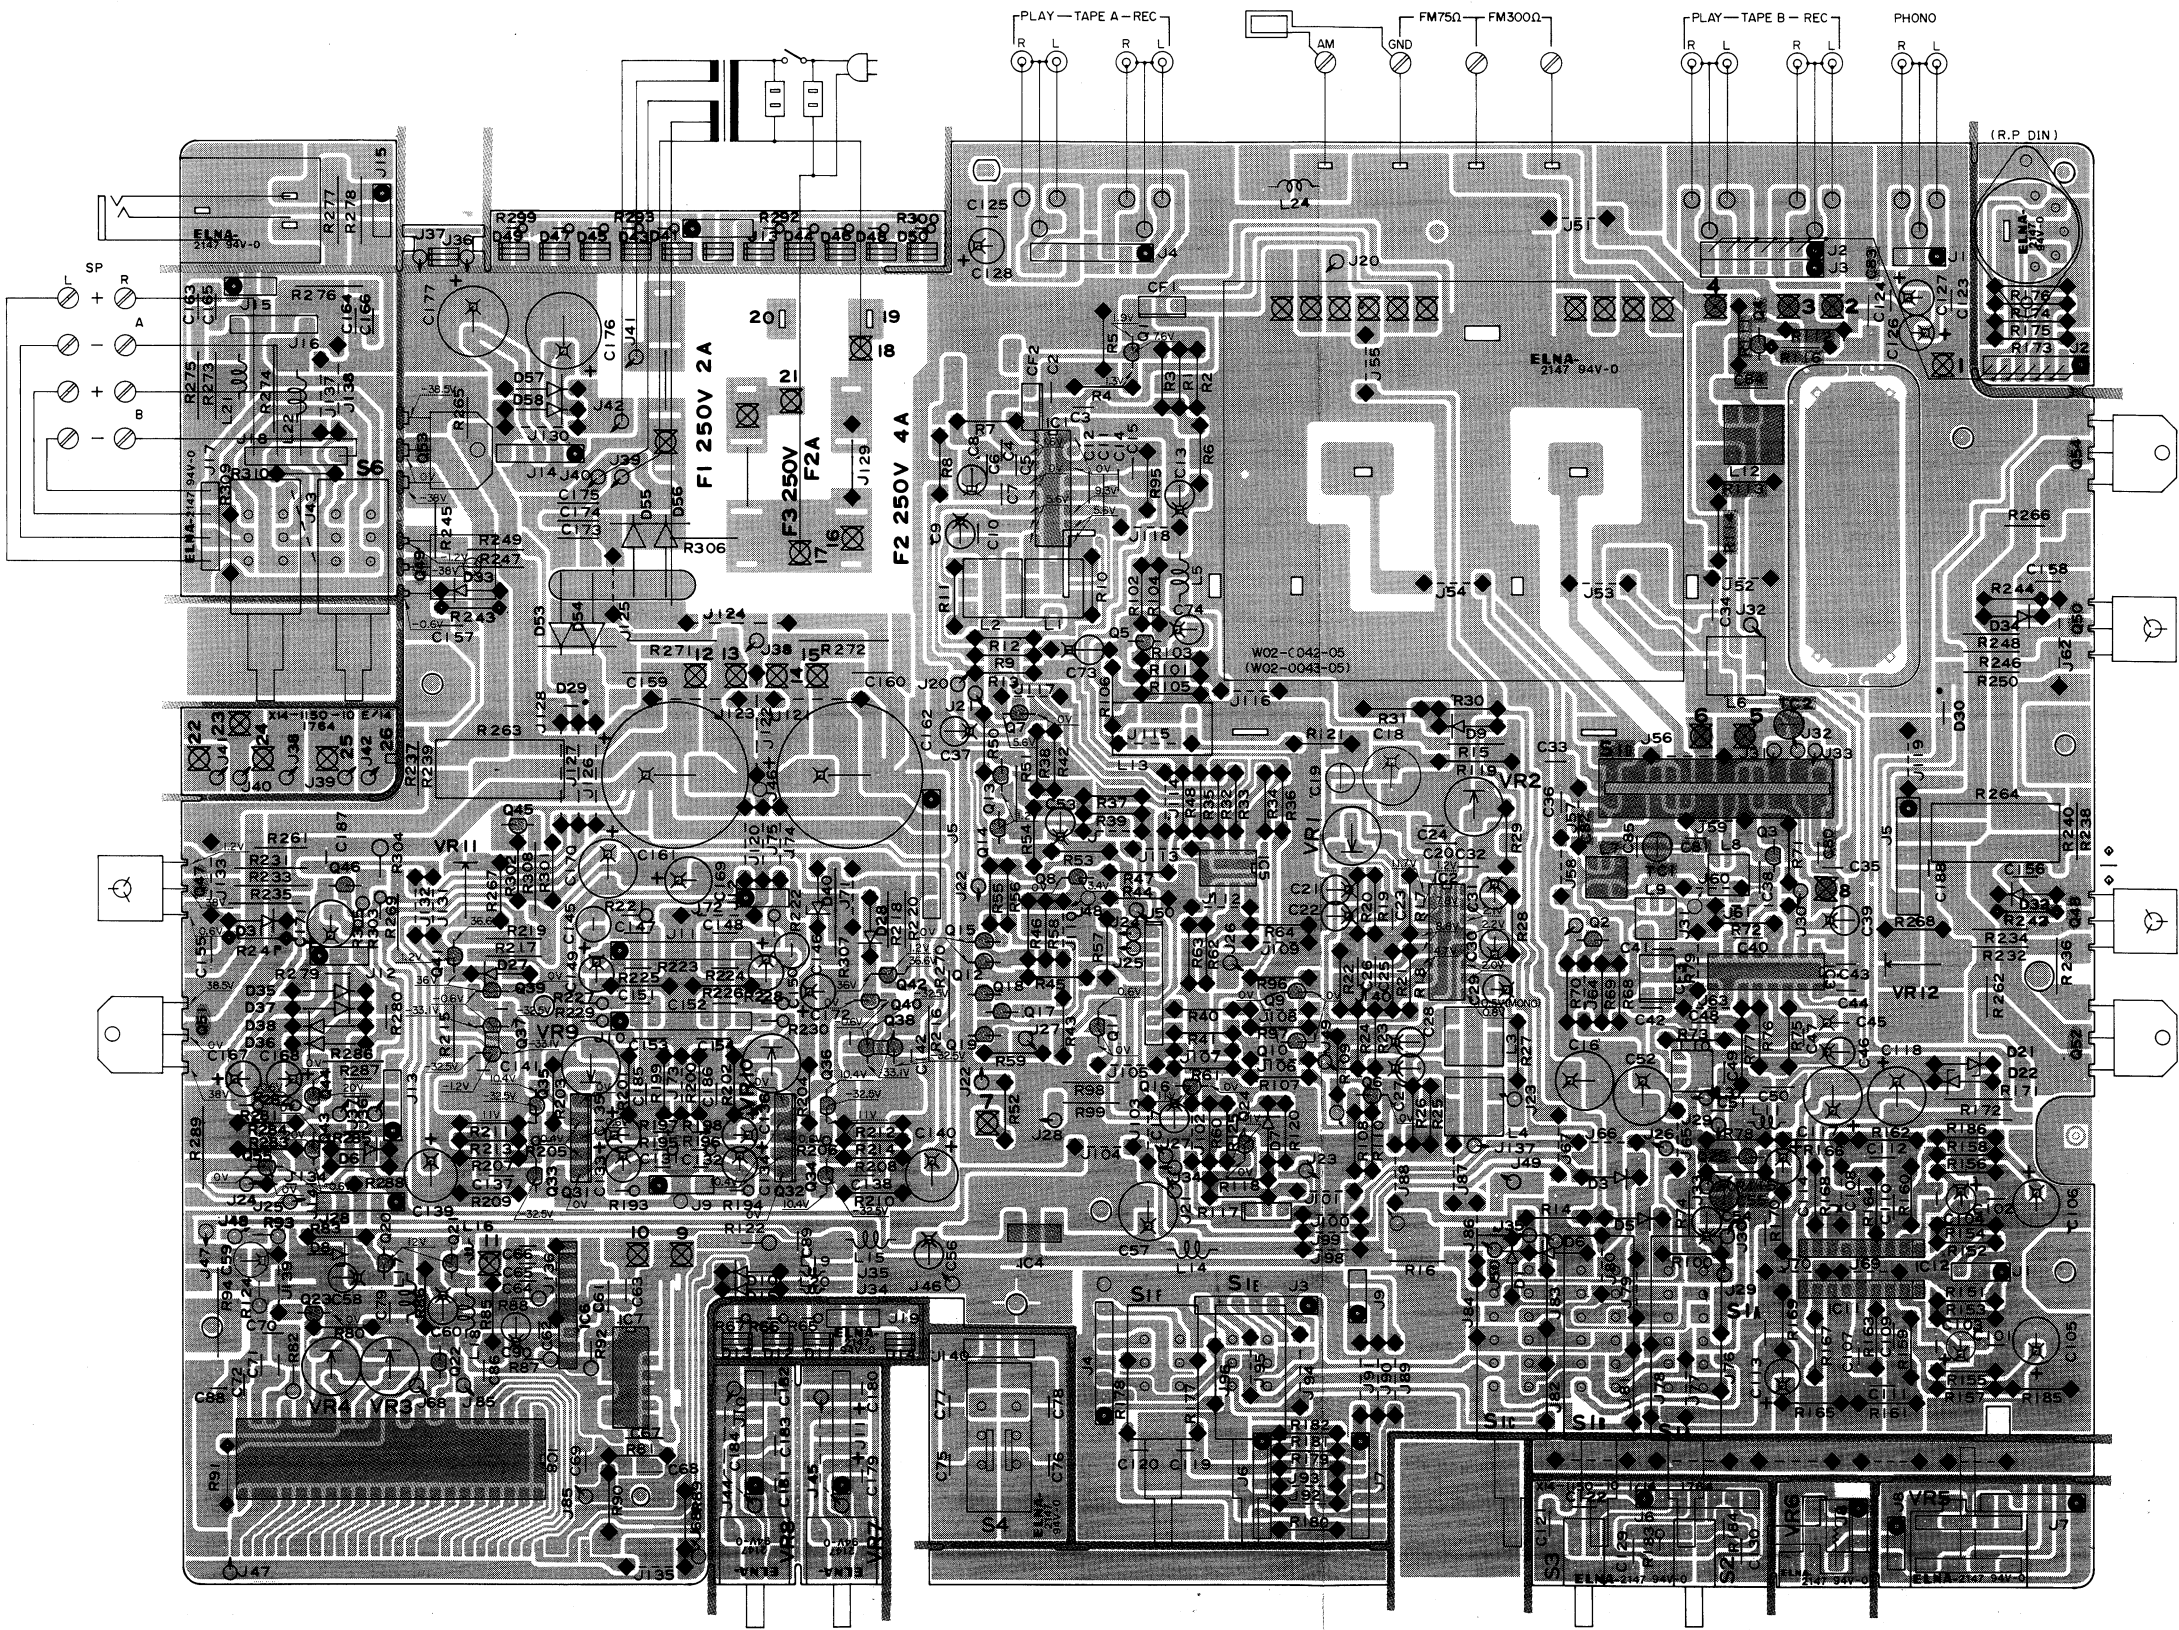


*Refer to the schematic diagram for the values of resistors and capacitors.

IC1	HA1137W
IC3	HA1197
IC2	HA1196
IC4	μPC78M12H
IC5	AN6552
IC6	AN6821
IC7	SN74LS90N
IC8	LC7258
IC9	TA7322P
Q1	2SC1923
Q2,3,5,6,8,9,11,12,	
14~22,45,46	2SC945
Q10,13,33~36	2SA733
Q4,7	2SK163
Q31,32	2SA979
Q37,38	2SC1845 (1) (E,F)
Q39,40,43,44	2SC1845 (F)
Q41,42	2SA992 (F,E)
Q47,48	2SC2590 (Q,R)
Q49,50	2SA1110
Q51,52	2SA1102 (O,Y)
Q53,54	2SC2577 (O,Y)

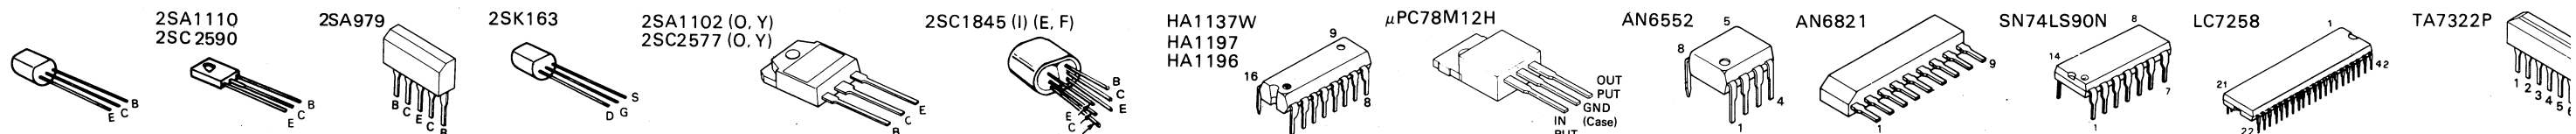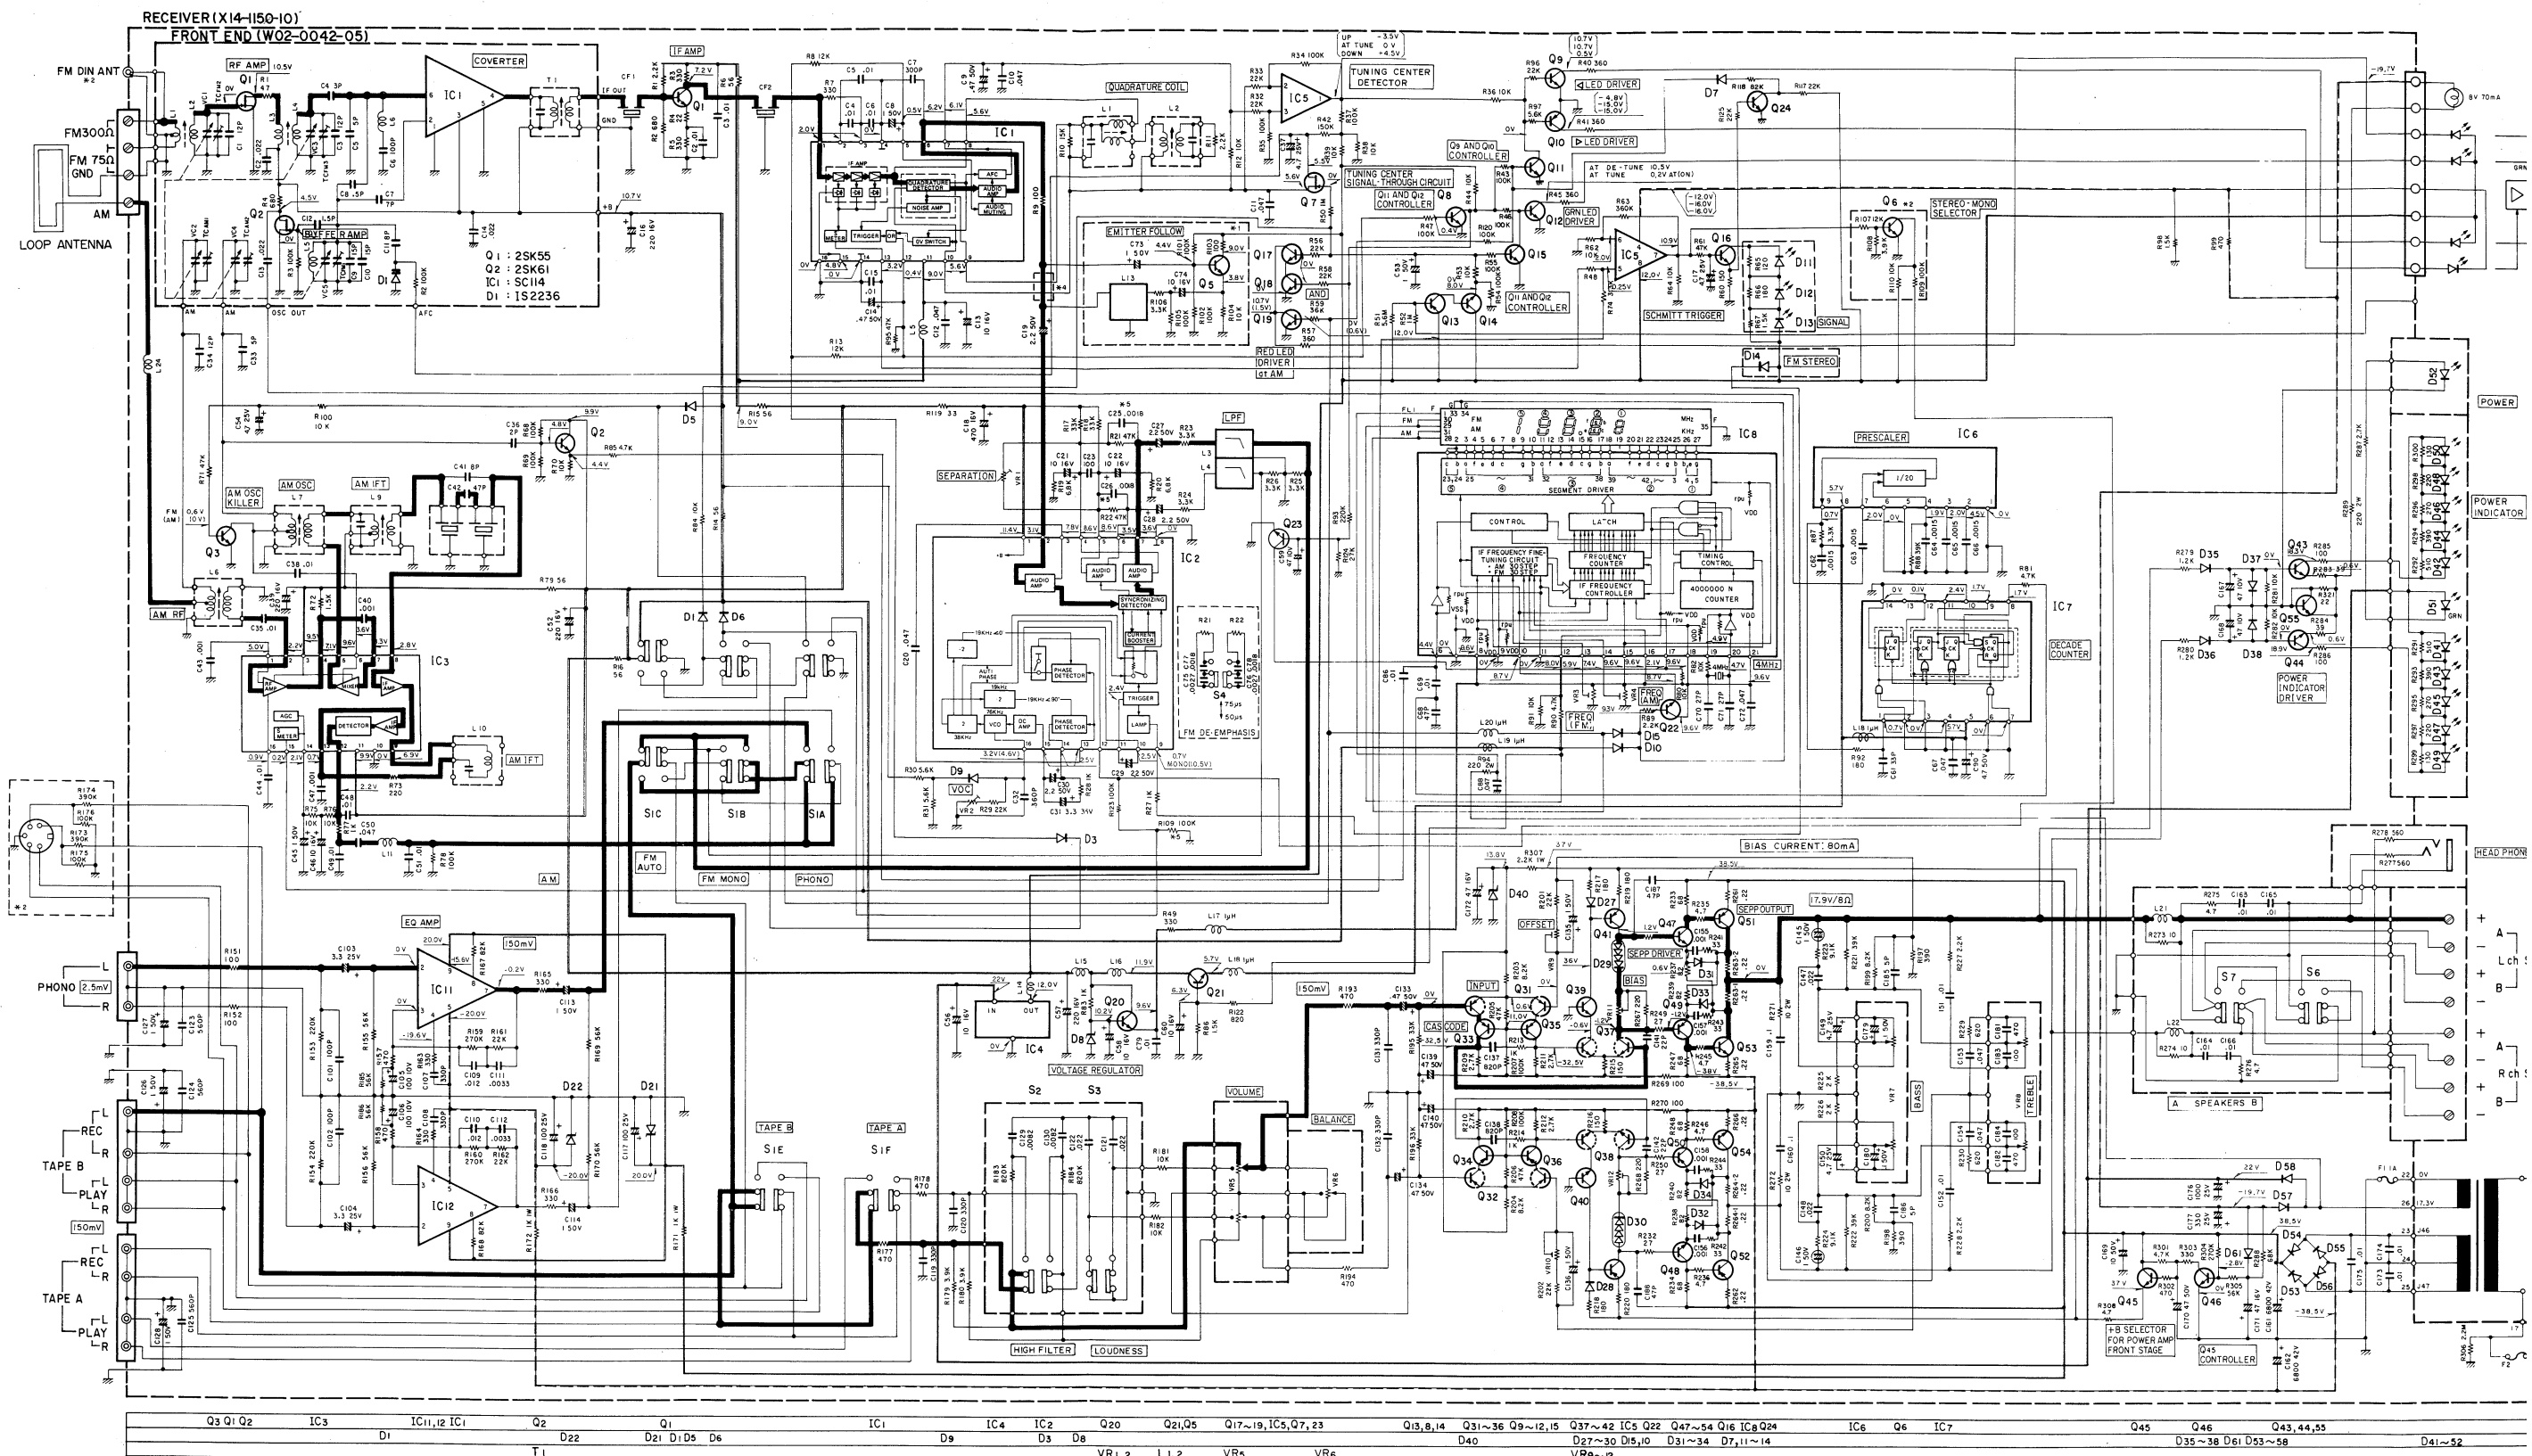

HIGH SPEED DC/ZERO SWITCHING STEREO RECEIVER

KR-720

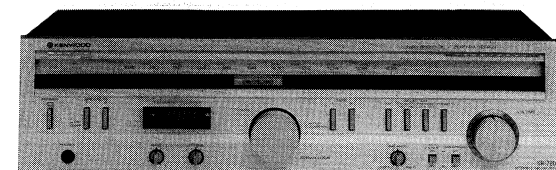

SPECIFICATIONS

AUDIO SECTION

Power Output
40 watts* per channel, minimum RMS both channels driven, at 8 ohms from 20 Hz to 20,000 Hz with no more than 0.03% total harmonic distortion.

Total Harmonic Distortion (20 Hz to 20 kHz from TAPE)

rated power into 8 ohms 0.03%
 1 W power into 8 ohms 0.01%
 Intermodulation Distortion (60 Hz: 7 kHz = 4:1 SMPTE)
 rated power into 8 ohms 0.025%
 1 W power into 8 ohms 0.01%

Transient Response

Rise Time 1.5 μ s
 Slew Rate ± 50 V/ μ s
 Damping Factor 50 at 1 kHz, 8 ohms

Input Sensitivity/Impedance

PHONO 2.5 mV/50 kohms
 TAPE 150 mV/50 kohms

Signal-to-Noise Ratio (A weighted)

PHONO 80 dB for 2.5 mV input
 86 dB for 5.0 mV input
 TAPE 105 dB for 150 mV input

Maximum Phono Input Level

at 1,000 Hz 200 mV (RMS), THD 0.03%

Frequency Response

PHONO RIAA Standard Curve 30 Hz to 15 kHz ± 0.4 dB
 TAPE 5 Hz to 250 kHz ± 3 dB

Tone Control

Bass ± 8 dB at 100 Hz
 Treble ± 8 dB at 10 kHz
 Loudness Control (VOL. -30dB) ± 10 dB at 100 Hz
 High Filter 5 kHz, 6 dB/oct

Output Level/Impedance

TAPE REC Out (Pin) 150 mV/300 ohms

FM TUNER SECTION

Usable Sensitivity 10.8 dBf (1.9 μ V)

50 dB Quieting Sensitivity

Mono 17.2 dBf (4.0 μ V)
 Stereo 37.2 dBf (40 μ V)

Signal-to-Noise Ratio at 65 dBf

Mono 76 dB
 Stereo 71 dB

Total Harmonic Distortion

Mono 0.1%
 Stereo 0.15%

Frequency Response

Capture Ratio 30 Hz to 15 kHz, ± 1 dB, -1.5 dB
 Image Rejection Ratio 48 dB
 Spurious Response Ratio 70 dB
 IF Response Ratio 90 dB
 Alternate Channel Selectivity 52 dB at 400 kHz
 AM Suppression Ratio 50 dB
 Stereo Separation Ratio 45 dB at 1,000 Hz
 Subcarrier Product Ratio 35 dB at 50 Hz to 10 kHz
 Antenna Impedance 300 ohms balanced & 75 ohms unbalanced
 FM Frequency Range 88 MHz to 108 MHz

AM TUNER SECTION

Usable Sensitivity 15 μ V

Signal-to-Noise Ratio 50 dB

Image Rejection 40 dB

Selectivity 45 dB

GENERAL

Power Consumption 2.5 A (UL and CSA)
 190 W (8 ohms at rated power)
 25 W (No Signal)
 Switched 1, Unswitched 1

AC Outlet

Dimensions USA and Canada 458 mm (18-1/32")
 Other Countries 440 mm (17-5/16")

W: 123 mm (4-27/32")
 H: 123 mm (4-27/32")

D: 298 mm (11-23/32")
 298 mm (11-23/32")

Weight

(Net) 8 kg (17.1 lb)
 7.7 kg (16.9 lb)


(Gross) 9 kg (19.8 lb)
 8.7 kg (19.1 lb)

*Measured pursuant to Federal Trade Commission's Trade Regulation rule on Power Output Claims for Amplifier in U.S.A.

Kenwood follows a policy of continuous advancements in development. For this reason specifications may be changed without notice.

Kenwood strebt ständige Verbesserungen in der Entwicklung an. Daher bleiben Änderungen der technischen Daten jederzeit vorbehalten.

Kenwood poursuit une politique de progrès constants en ce qui concerne le développement. Pour cette raison, les spécifications sont sujettes à modifications sans préavis.

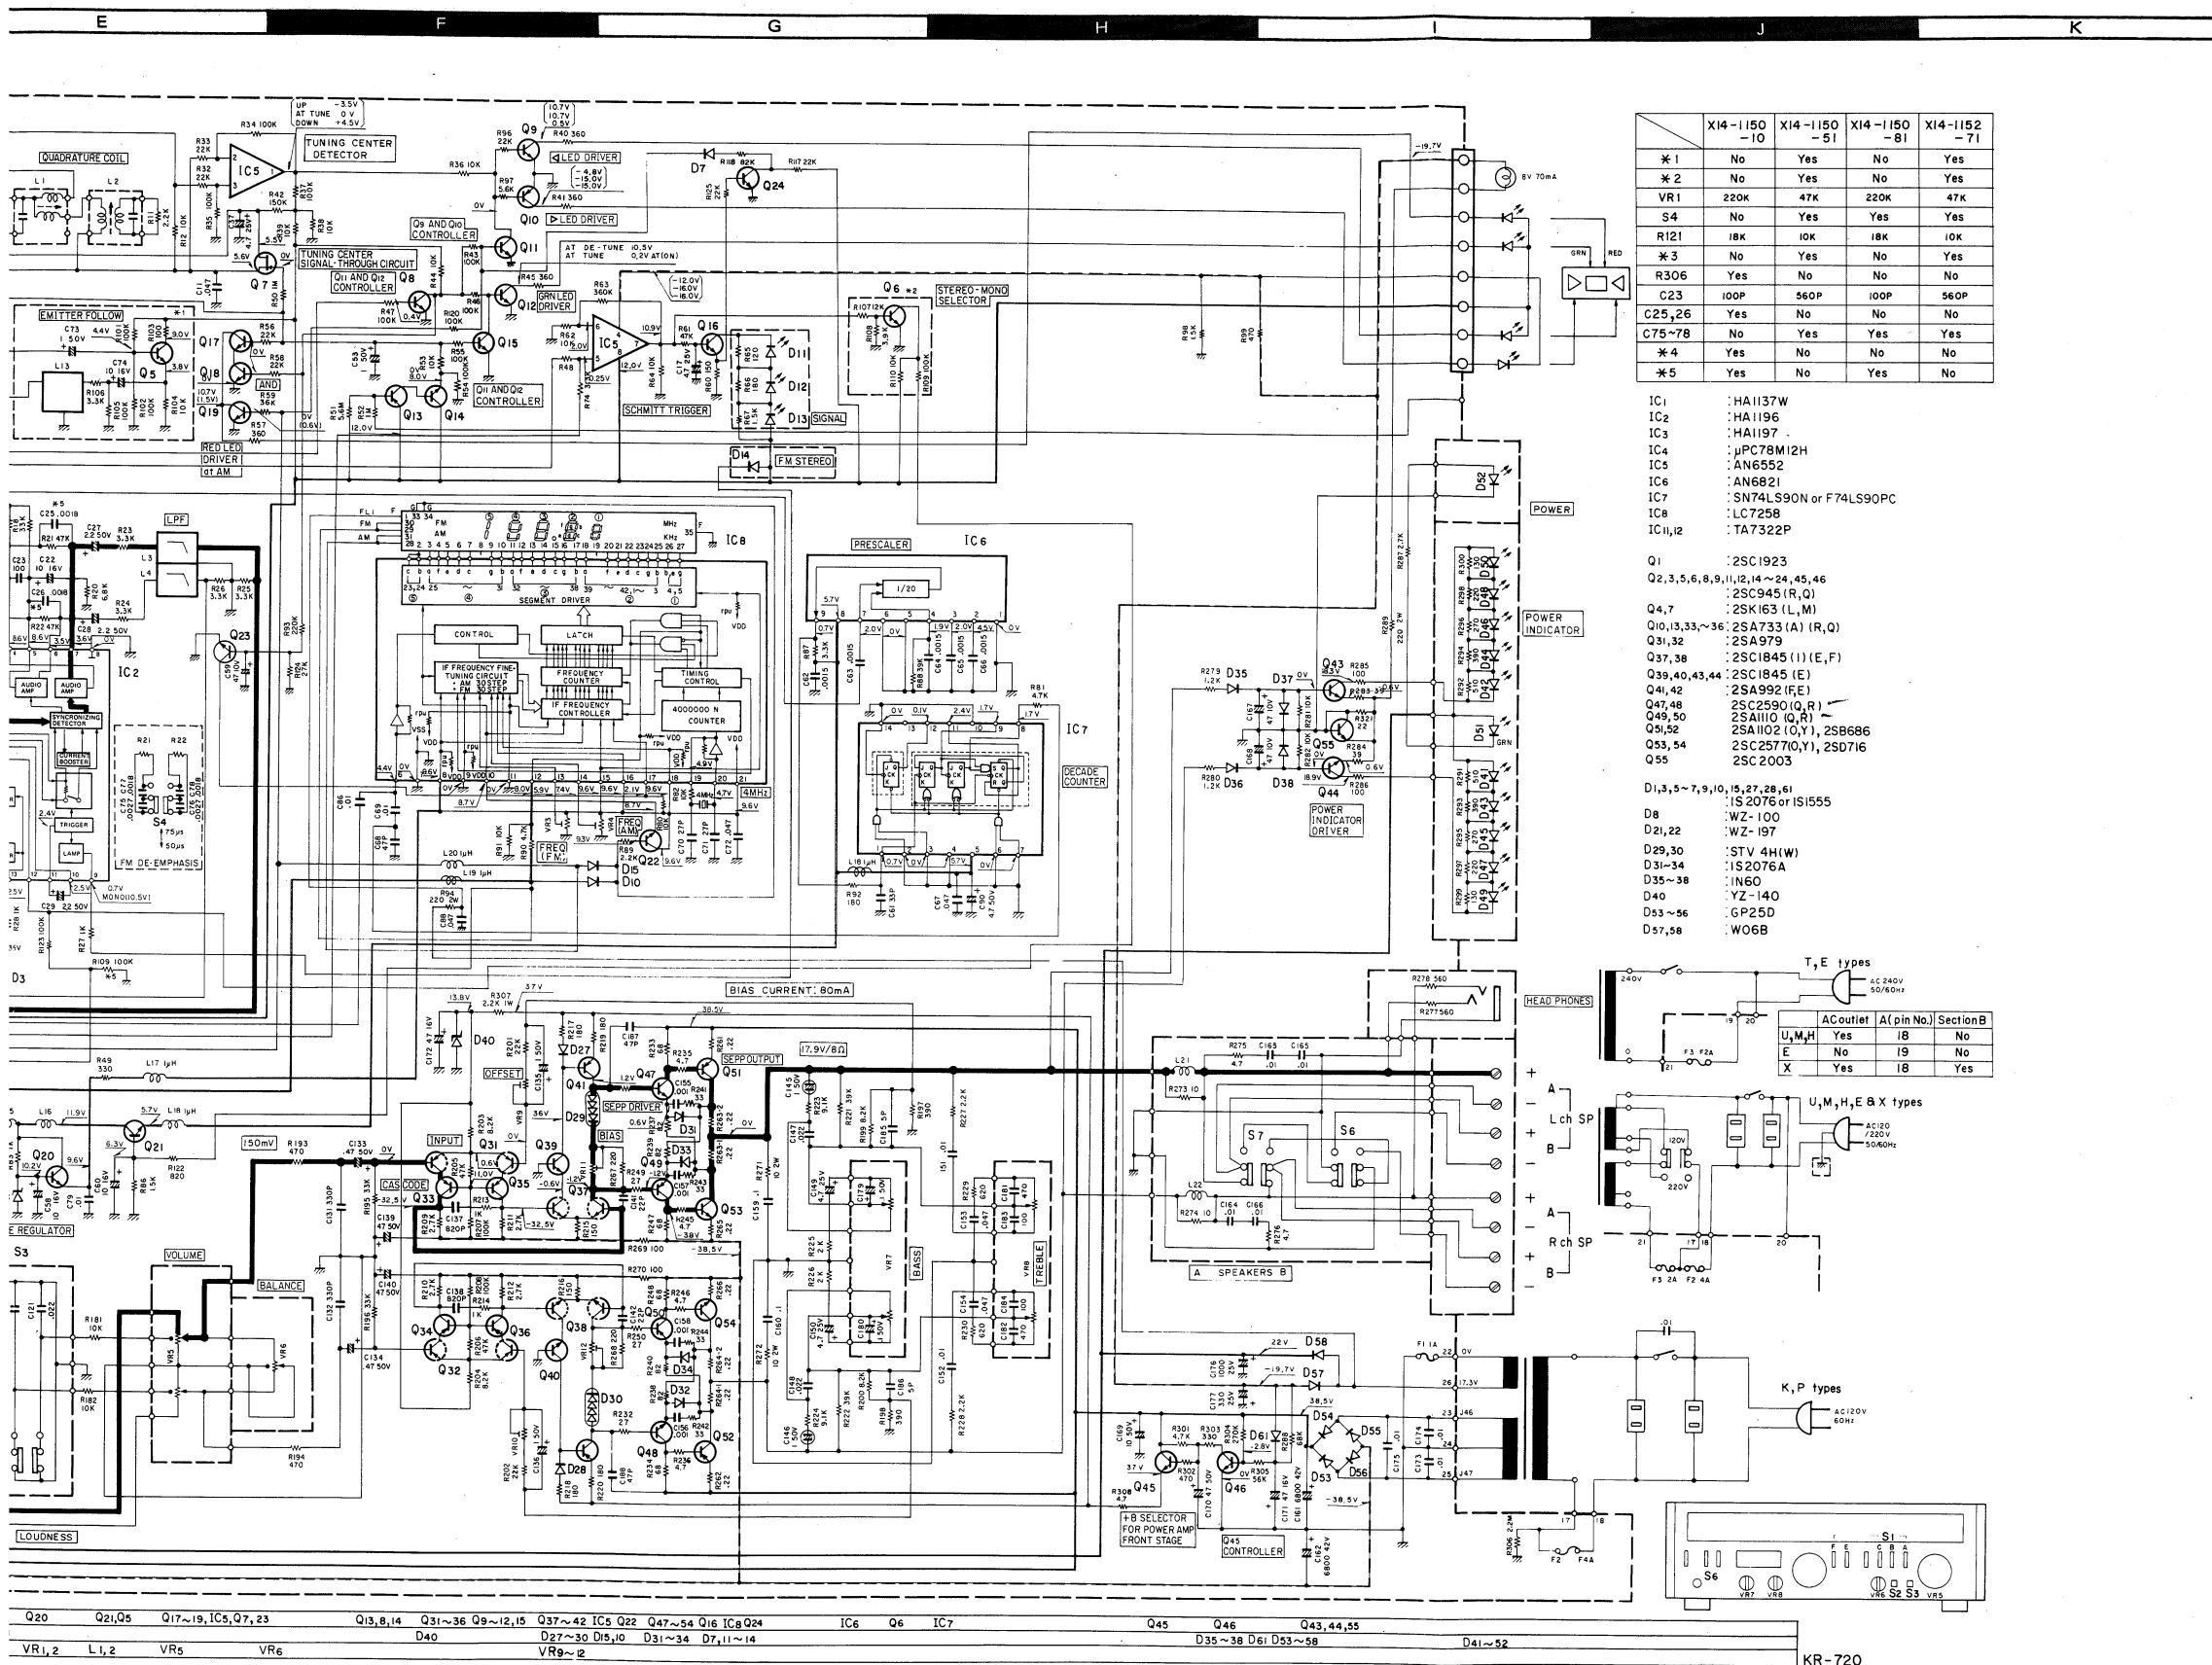

HA1137W
 HA1197
 HA1196

μ PC78M12H

AN6552


AN6821

SN74LS90N

LC7258

TA7322P

DC voltages are measured by a VOM of 20 k Ω /V input impedance.

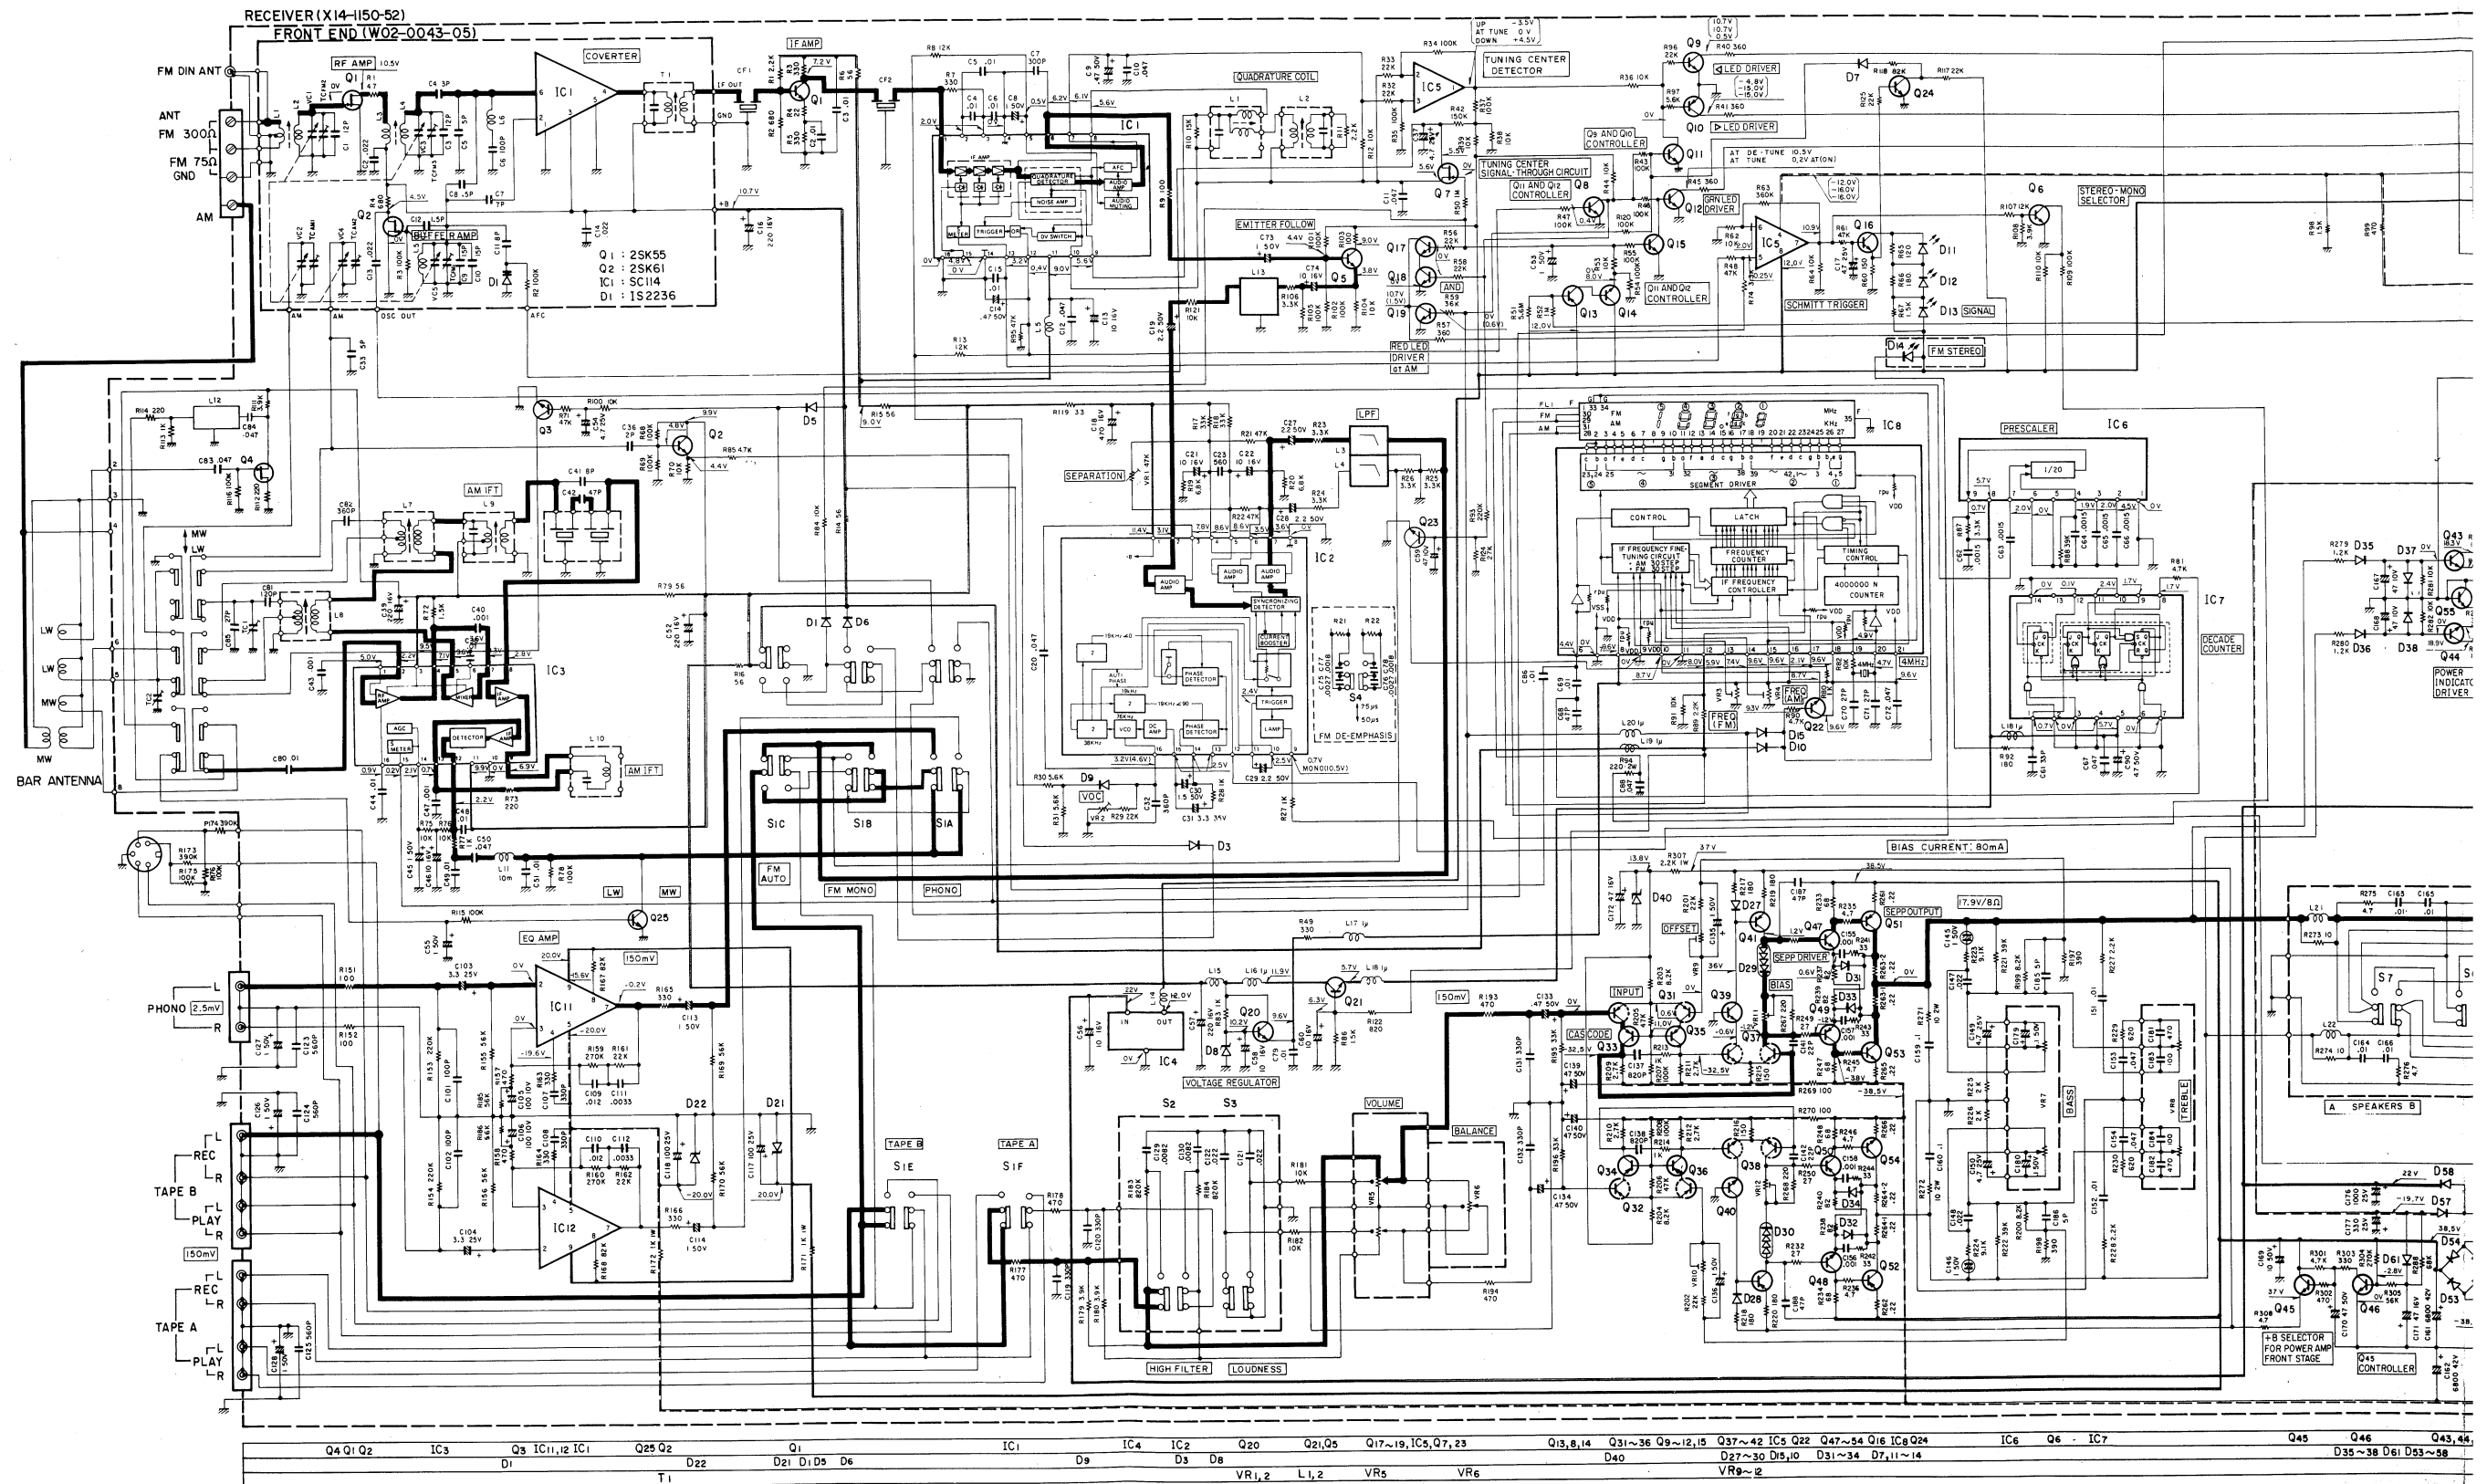

2SA733
2SA992 (F.E)
2SC945
2SC1845 (F)
2SC1923

2SA1110
2SC2590

2SA979

2SK163

2SA1102 (O. Y)
2SC2577 (O. Y)

2SC1845 (I) (E. F)

HA1137W
HA1197
HA1196

μPC78M12H

AN6552


AN6821

SN74LS90N

LC7258

HIGH SPEED DC/ZERO SWITCHING STEREO RECEIVER

KR-720L

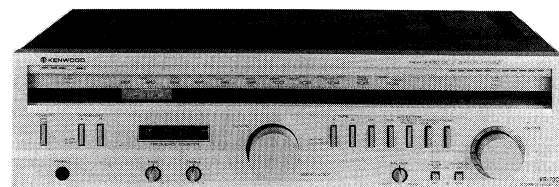

SPECIFICATIONS

AUDIO SECTION

Rated Power Output
8 ohms at 20 Hz to 20 kHz
no more than 0.03% THD (FTC) 40 W + 40 W
4 ohms at 63 Hz to 12.5 kHz
no more than 0.7% THD (IEC) 45 W + 45 W
Total Harmonic Distortion
Rated Power Output into 8 ohms 0.03%
Intermodulation Distortion 0.025%
Frequency Response 5 Hz - 250 kHz
+0 dB, -3 dB

S/N Weighted: Rated Output Power (IEC A)

() = Unweighted at 50 mW (DIN)
Phono MM 80 dB (55 dB)
Tuner, Tape 105 dB (55 dB)
Damping Factor at 8 ohms 1 kHz 50
Transient Response
Rise Time 1.5 μ s
Slew Rate ± 50 V/ μ s
Input Sensitivity/Impedance
Phono 2.5 mV/50 kohms
Tuner, Tape 150 mV/50 kohms
Tone Control
Bass: 100 Hz ± 8 dB
Treble: 10 kHz ± 8 dB
Loudness Control (-30 dB) 100 Hz, +10 dB
High Filter 5 kHz, 6 dB/oct.

FM TUNER SECTION

Sensitivity at 75 ohms
Mono: S/N 26 dB, 40 kHz Dev. 1 μ V
Stereo: S/N 46 dB, 46 kHz Dev. 30 μ V
50 dB Quieting Sensitivity Mono (IHF) 4 μ V
Limiting Level
-3 dB Point, 40 kHz Dev. 0.8 μ V
Frequency Response 30 Hz - 15 kHz
+1 dB, -1.5 dB

Total Harmonic Distortion

Mono: 1 kHz, 40 kHz Dev. 0.12%
Stereo: 1 kHz, 46 kHz Dev. 0.2%
S/N Weighted (IEC A)
Mono: 40 kHz Dev., 1 mV Input 72 dB
Stereo: 46 kHz Dev., 1 mV Input 68 dB

S/N Ratio (IHF)

Mono: 75 kHz Dev., 1 mV Input 76 dB
Stereo: 75 kHz Dev., 1 mV Input 71 dB
FM Stereo Separation: 1 mV Input (DIN)

250 Hz 34 dB
1 kHz 36 dB
6.3 kHz 26 dB
12.5 kHz 22 dB
Image Rejection Ratio
Selectivity
300 kHz, 20 dB Input 60 dB
IF Rejection Ratio 90 dB
AM Suppression Ratio 50 dB
Spurious Response Ratio 70 dB
Capture Ratio 1.0 dB
Pilot Tone 19 kHz 47 dB

MW TUNER SECTION

Sensitivity S/N 20 dB 20 μ V
S/N Ratio: 1 mV Input 50 dB
Image Rejection Ratio 40 dB

LW TUNER SECTION

Sensitivity S/N 20 dB 20 μ V
S/N Ratio: 1 mV Input 50 dB
Image Rejection Ratio 40 dB


GENERAL

Power Consumption
Rated Power at 8 ohms 190 W
No signal 25 W
Dimensions W: 440 mm
H: 123 mm
D: 298 mm
Weight (Net) 7.7 kg

Kenwood follows a policy of continuous advancements in development. For this reason specifications may be changed without notice.

Kenwood strebt ständige Verbesserungen in der Entwicklung an. Daher bleiben Änderungen der technischen Daten jederzeit vorbehalten.

Kenwood poursuit une politique de progrès constants en ce qui concerne le développement. Pour cette raison, les spécifications sont sujettes à modifications sans préavis.

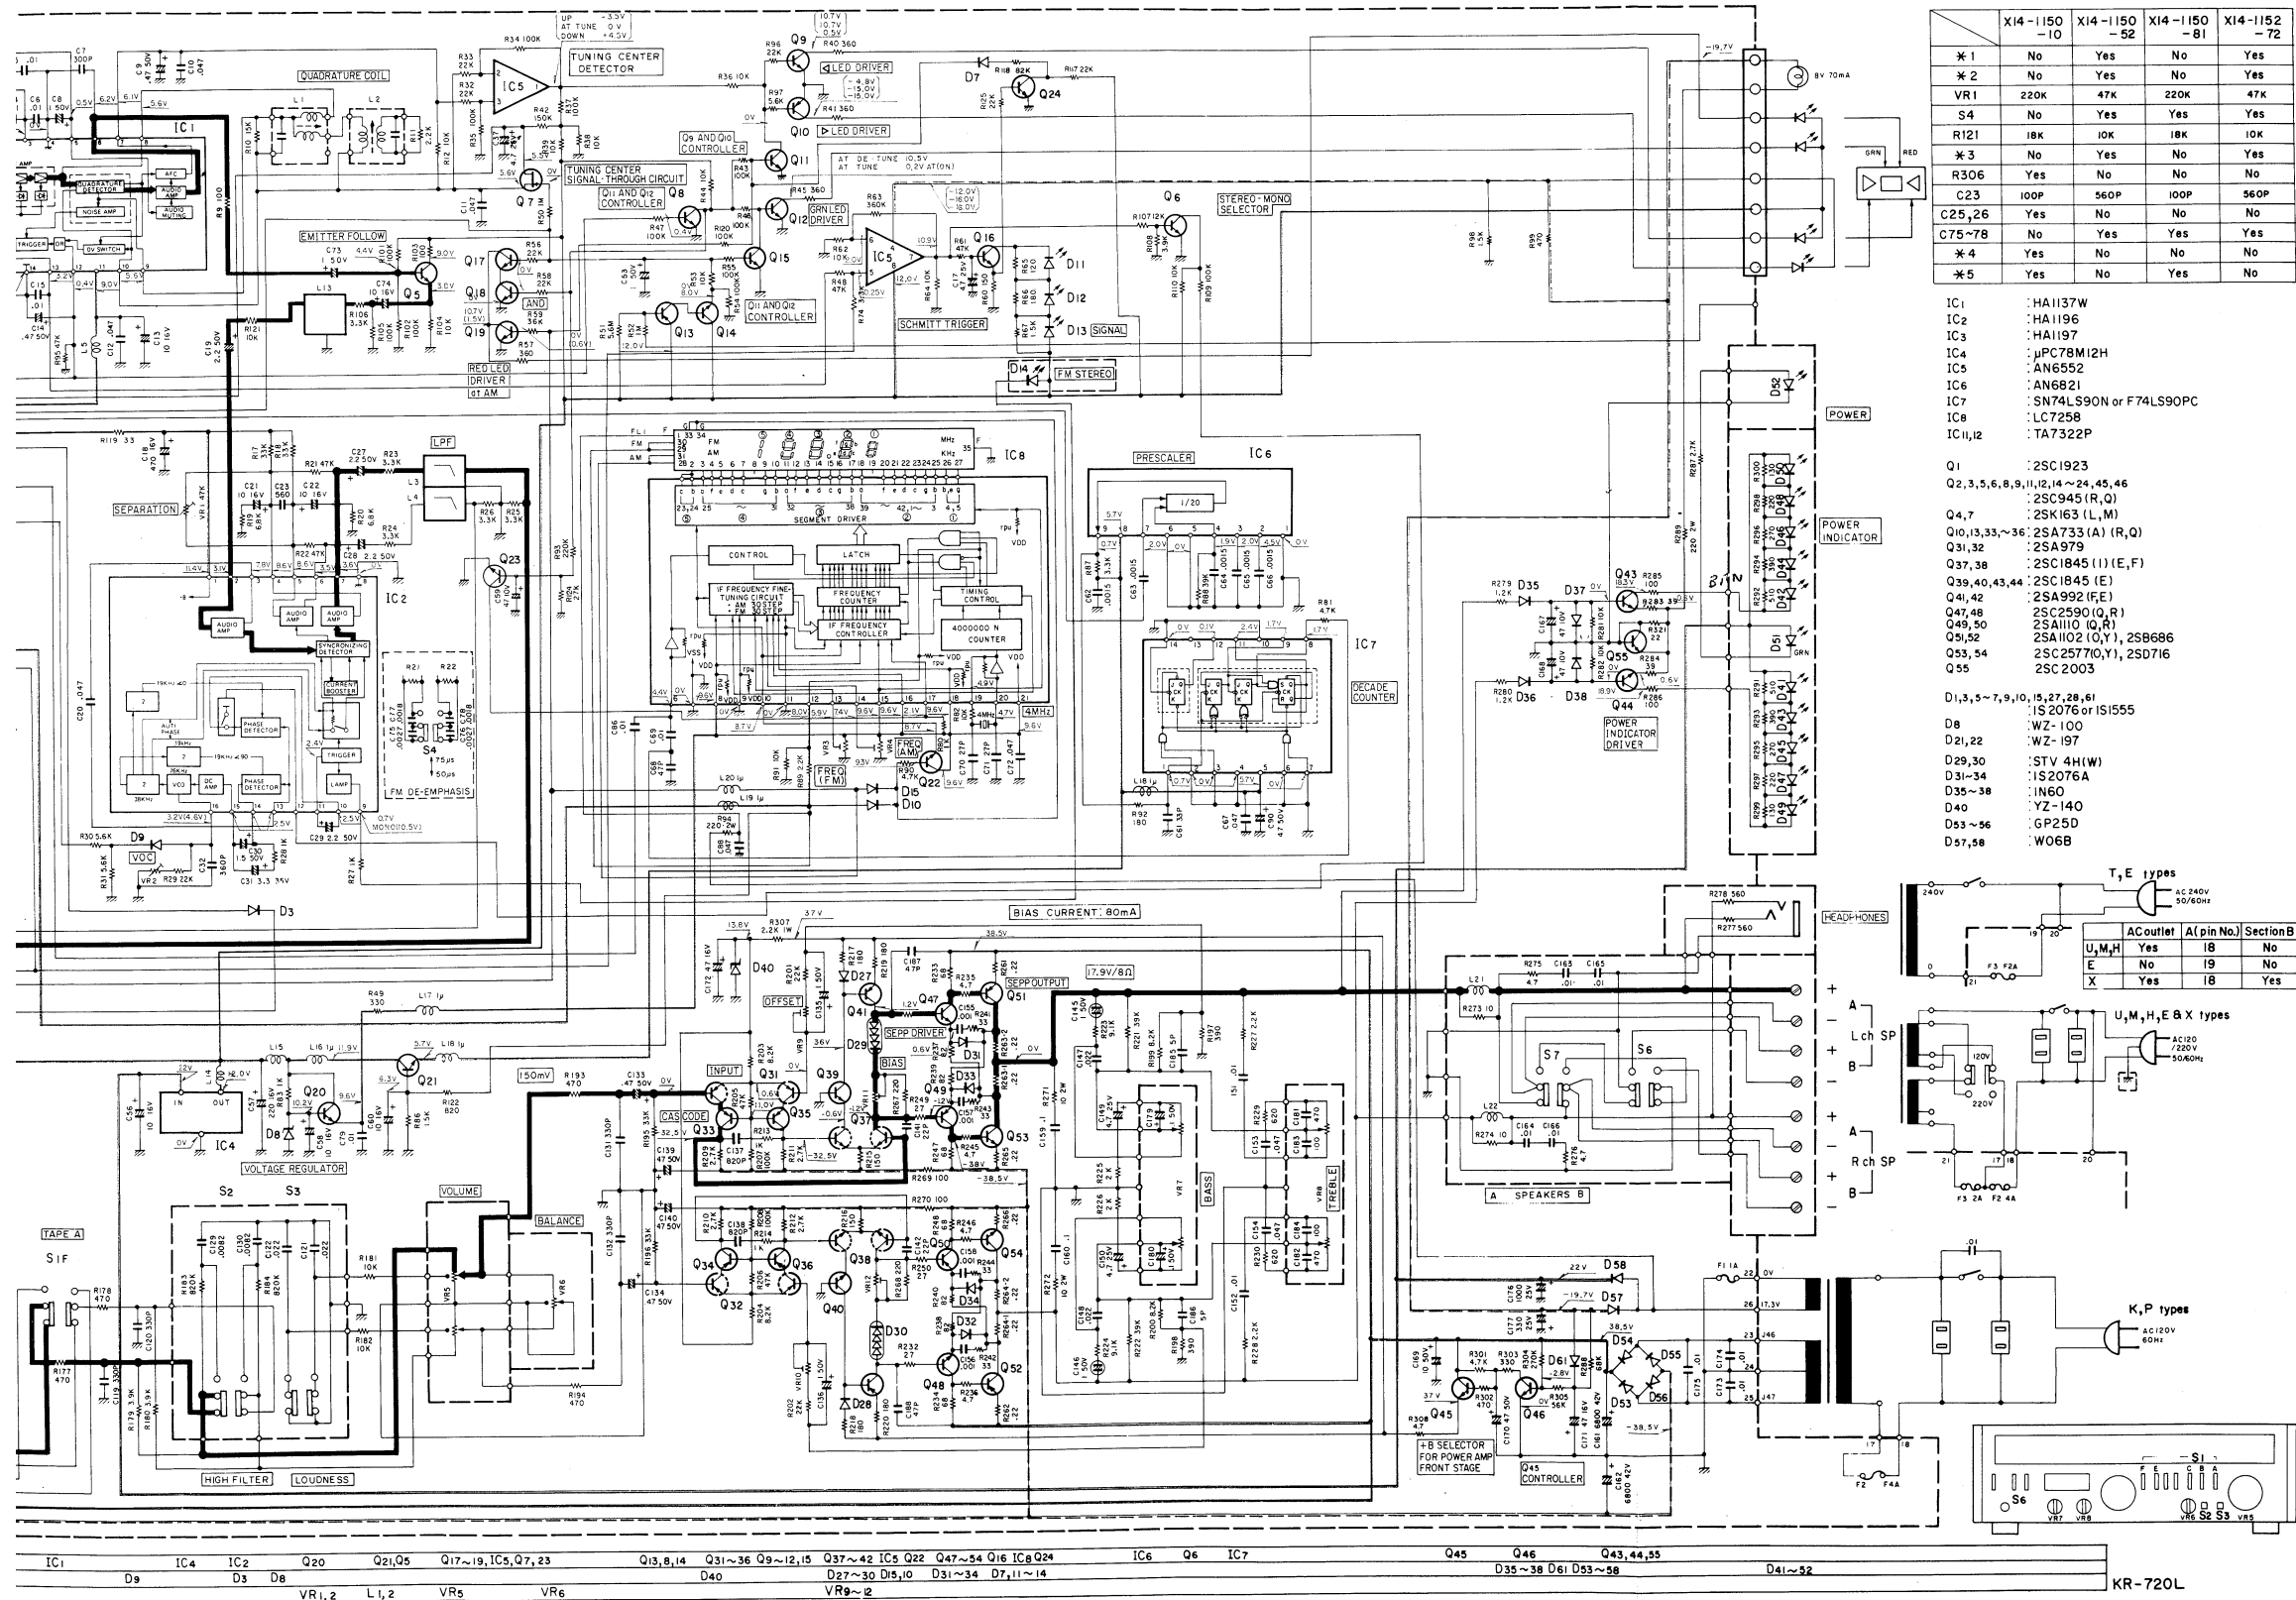

2SC1845 (I) (E, F)

HA1137W
HA1197
HA1196

μ PC78M12H

AN6552

AN6821

SN74LS90N

LC7258

TA7322P

PARTS LIST

INSTRUCTION FOR PARTS LIST

Ref. No. 参照番号	Parts No. 部品番号	Description 部品名 / 規格	Re- marks 備考
②	18 1A	A01-0608-12 METALLIC CABINET	③
①	19 2A	A20-1979-11 FRONT PANEL ASSY	④
	19 2A	A20-1979-11 FRONT PANEL ASSY	④
	19 2A	A20-1979-11 FRONT PANEL ASSY	④
	19 2A	A20-1979-11 FRONT PANEL ASSY	④
⑤	R221	R43-1333-15 FL-PROOF RD330 J 2W	⑥
	R222	R43-1368-15 FL-PROOF RD680 J 2W	
	VR1 ,2	R12-3301-05 TRIMMING POT. 20K(B)	
	VR3 ,4	R19-4305-05 POTENTIOMETER (OUTPUT)	
	VR5 ,6	R12-2302-05 TRIMMING POT. 5K(B)	

① Exploded view drawing No.

② Position in exploded view.

③ Symbol of new parts.

④ Area to which parts are shipped. Example: A20-1390-13 is the part No. of FRONT PANEL ASSY for the "K" type products (for U.S.A.). When this column is blank, it means that the same type of parts (same parts No.) are used for the products shipped to all areas.

⑤ Reference No. in schematic diagram.

⑥ Abbreviation of "ceramic capacitor".

All capacitors and resistors are listed using abbreviations. Abbreviations.

* Abbreviations of capacitors (Parts No. with initial letter "C").

ELECTRO	Electrolytic capacitor
LL-ELEC	Low leak electrolytic capacitor
NP-ELEC	Non-pole electrolytic capacitor
MICA	Mica capacitor
POLYSTY	Polystyrene capacitor
MYLAR	Mylar capacitor
CERAMIC	Ceramic capacitor
TANTAL	Tantalum capacitor
MF	Metallized film capacitor
MP	Metallized paper capacitor
OIL	Oil capacitor

The unit "UF" is used in lieu of "μF".

* Abbreviations of resistors (Parts No. with initial letters "R").

RC	Carbon composition resistor
RD	Carbon film resistor
FL-PROOF RD	Flame-proof carbon film resistor
RW	Wire wound power resistor
FL-PROOF RS	Flame-proof metal oxide film resistor
RN	Metal film resistor
FUSE-RESIST	Resistor with fuse function
2B	Rated wattage 1/8W
2E	Rated wattage 1/4W
2H	Rated wattage 1/2W
3A	Rated wattage 1W
3D	Rated wattage 2W
3F	Rated wattage 3W
3G	Rated wattage 4W
3H	Rated wattage 5W

All resistor values are indicated with the unit (Ω) omitted.

* Abbreviations common to capacitors and resistors.

C	±0.25pF (Used for capacitors only)
D	±0.5pF (Used for capacitors only)
F	±1%
G	±2%
J	±5%
K	±10%
M	±20%
Z	+80%, -20%(Used for capacitors only)
P	+100%, -0%(Used for capacitors only)

Resistors RD (carbon composition resistors) are not listed in the parts list. For values, refer to the schematic diagram.

* CODEs in X14-115

K: X14-1150-10	E: X14-1152-71
U: X14-1150-81	T: X14-1150-52
T: X14-1150-51	E: X14-1152-72

Ref. No. 参照番号	Parts No. 部品番号	Description 部品名 / 規格	Re- marks 備考
KR-720 (L) UNIT			
1 1B	-	REAR PANEL	
2 3B	-	BOTTOM PLATE	
3 3A	-	DRESSING PLATE	
4 3A	-	DRESSING PLATE	
-	351-0009-04	FIBER STICK AND STRING	
11 1A	A01-0373-03	METALLIC CABINET	*K
11 1A	A01-0373-03	METALLIC CABINET	P
11 1A	A01-0374-03	METALLIC CABINET	*U
11 1A	A01-0374-03	METALLIC CABINET	MH
11 1A	A01-0374-03	METALLIC CABINET	XT
11 1A	A01-0374-03	METALLIC CABINET	E
11 1A	A01-0374-03	METALLIC CABINET	T
11 1A	A01-0374-03	METALLIC CABINET	U
12 3A	A20-1605-03	FRONT PANEL ASSY	*K
12 3A	A20-1605-03	FRONT PANEL ASSY	PU
12 3A	A20-1605-03	FRONT PANEL ASSY	MH
12 3A	A20-1605-03	FRONT PANEL ASSY	XE
12 3A	A20-1605-03	FRONT PANEL ASSY	U
12 3A	A20-1606-03	FRONT PANEL ASSY	*T
12 3A	A20-1647-03	FRONT PANEL ASSY	*E
12 3A	A20-1648-03	FRONT PANEL ASSY	*T
12 3A	A20-1703-03	FRONT PANEL ASSY	*K
13 2A	A22-0271-03	SUB PANEL	*
14 1A	A50-0078-03	SIDE PLATE (L)	*K
14 1A	A50-0078-03	SIDE PLATE (L)	PK
15 1B	A50-0079-03	SIDE PLATE (R)	*K
15 1B	A50-0079-03	SIDE PLATE (R)	PK
-	B46-0055-20	WARRANTY CARD	P
-	B46-0060-00	WARRANTY CARD	T
-	B46-0061-20	WARRANTY CARD	K
-	B46-0062-20	WARRANTY CARD	UH
-	B46-0062-20	WARRANTY CARD	U
-	B46-0063-13	WARRANTY CARD	UH
-	B46-0063-13	WARRANTY CARD	U
-	B46-0064-10	WARRANTY CARD	X
-	B50-3117-00	INSTRUCTION MANUAL	*K
-	B50-3117-00	INSTRUCTION MANUAL	PU
-	B50-3117-00	INSTRUCTION MANUAL	MH
-	B50-3117-00	INSTRUCTION MANUAL	X
-	B50-3117-00	INSTRUCTION MANUAL	U
-	B50-3118-00	INSTRUCTION MANUAL	*P
-	B50-3118-00	INSTRUCTION MANUAL	MX
-	B50-3119-00	INSTRUCTION MANUAL	*T
-	B50-3147-00	INSTRUCTION MANUAL	*E
-	B50-3148-00	INSTRUCTION MANUAL	*E
-	B50-3149-00	INSTRUCTION MANUAL	*T
-	B50-3189-00	INSTRUCTION MANUAL	*E
-	B50-3213-00	INSTRUCTION MANUAL	*K
-	B59-0018-00	INSTRUCTION PRINT	UH
-	B59-0018-00	INSTRUCTION PRINT	U
16 3A	B10-0264-04	FRONT GLASS	
17 3A	B10-0267-04	FRONT GLASS	
18 3A	B20-0463-04	DIAL CALIBRATIONS	*K
18 3A	B20-0463-04	DIAL CALIBRATIONS	PU
18 3A	B20-0463-04	DIAL CALIBRATIONS	MH
18 3A	B20-0463-04	DIAL CALIBRATIONS	XT
18 3A	B20-0463-04	DIAL CALIBRATIONS	E
18 3A	B20-0463-04	DIAL CALIBRATIONS	U
18 3A	B20-0473-04	DIAL CALIBRATIONS	*E

PARTS LIST

Ref. No. 参照番号	Parts No. 部品番号	Description 部品名 / 規格	Re- marks 備考	Ref. No. 参照番号	Parts No. 部品番号	Description 部品名 / 規格	Re- marks 備考
18 3A	B20-0473-04	DIAL CALIBRATIONS	T	29 3A,3B	J02-0089-05	FOOT X4	UE
18 3A	B20-0478-04	DIAL CALIBRATIONS	K	30 1B	J19-0507-05	HOLDER	ET
19 3A	B21-0041-05	DIAL POINTER	*	31 1B	J19-0564-05	HOLDER	KP
-	C91-0023-05	CERAMIC 0.01UF P	UM	31 1B	J19-0564-05	HOLDER	UM
-	C91-0023-05	CERAMIC 0.01UF P	HX	31 1B	J19-0564-05	HOLDER	HX
-	C91-0023-05	CERAMIC 0.01UF P	UE	31 1B	J19-0564-05	HOLDER	TE
-	C91-0079-05	CERAMIC 0.01UF Z	KP	31 1B	J19-0564-05	HOLDER	UE
-	C91-0079-05	CERAMIC 0.01UF Z	TE	31 1B	J19-0564-05	HOLDER	K
-	C91-0079-05	CERAMIC 0.01UF Z	ET	32 1B	J41-0034-05	BUSHING	KP
-	C91-0079-05	CERAMIC 0.01UF Z	K	32 1B	J41-0034-05	BUSHING	K
20 2A	D15-0164-04	PULLEY		32 1B	J42-0084-05	BUSHING	UM
21 2B,3B	D15-0172-04	PULLEY X4		32 1B	J42-0084-05	BUSHING	HT
22 2A	D15-0175-05	PULLEY		32 1B	J42-0084-05	BUSHING	EE
23 2B	D20-0154-03	DIAL SHAFT	*	32 1B	J42-0084-05	BUSHING	T
-	E23-0015-04	TERMINAL		32 1B	J42-0084-05	BUSHING	UE
25 1B	E03-0017-05	AC OUTLET X2	K	32 1B	J42-0085-05	BUSHING	X
25 1B	E03-0017-05	AC OUTLET X2	KP	33 3A	K23-0339-04	KNOB	*
25 1B	E03-0031-05	AC OUTLET X2	UM	34 2A,2B	K27-0132-04	KNOB X8	*K
25 1B	E03-0031-05	AC OUTLET X2	HX	34 2A,2B	K27-0132-04	KNOB X8	PU
25 1B	E03-0031-05	AC OUTLET X2	UE	34 2A,2B	K27-0132-04	KNOB X8	MH
25 1B	E03-0031-05	AC OUTLET X2	TE	34 2A,2B	K27-0132-04	KNOB X8	XT
26 1B	E04-0004-05	RECEPTACLE	ET	34 2A,2B	K27-0132-04	KNOB X8	EK
26 1B	E04-0004-05	RECEPTACLE	KP	34 2A,2B	K27-0132-04	KNOB X8	UE
27 1B	E30-0181-05	POWER CORD	K	34 2A,2B	K27-0132-04	KNOB X9	ET
27 1B	E30-0181-05	POWER CORD		35 2B	K27-0133-04	KNOB X2	*
27 1B	E30-0459-05	POWER CORD	EE	36 2A	K27-0136-04	KNOB	*
27 1B	E30-0545-05	POWER CORD	UM	37 3A	K29-0347-04	KNOB	*
27 1B	E30-0545-05	POWER CORD	H	38 2A,3A	K29-0348-04	KNOB X3	*
27 1B	E30-0545-05	POWER CORD	UE	39 2A	L01-2021-05	POWER TRANSFORMER	*K
27 1B	E30-0587-05	POWER CORD	TT	39 2A	L01-2021-05	POWER TRANSFORMER	K
27 1B	E30-0649-05	POWER CORD	X	39 2A	L01-2022-05	POWER TRANSFORMER	*T
28 2A	G01-0045-24	COIL SPRING		39 2A	L01-2022-05	POWER TRANSFORMER	T
-	H01-3159-04	CARTON BOX	*K	39 2A	L01-2026-05	POWER TRANSFORMER	*E
-	H01-3159-04	CARTON BOX	P	39 2A	L01-2026-05	POWER TRANSFORMER	E
-	H01-3161-04	CARTON BOX	*U	39 2A	L01-2027-05	POWER TRANSFORMER	*P
-	H01-3161-04	CARTON BOX	MH	39 2A	L01-2028-05	POWER TRANSFORMER	*U
-	H01-3161-04	CARTON BOX	X	39 2A	L01-2028-05	POWER TRANSFORMER	MH
-	H01-3161-04	CARTON BOX	UE	39 2A	L01-2028-05	POWER TRANSFORMER	X
-	H01-3162-04	CARTON BOX	*T	39 2A	L01-2028-05	POWER TRANSFORMER	UE
-	H01-3163-04	CARTON BOX	*E	40 1B	N08-0125-05	M4X8(BI-TAP)	UM
-	H01-3164-04	CARTON BOX	*E	40 1B	N08-0125-05	M4X8(BI-TAP)	HX
-	H01-3165-04	CARTON BOX	*T	40 1B	N08-0125-05	M4X8(BI-TAP)	TE
-	H01-3195-04	CARTON BOX	*K	40 1B	N08-0125-05	M4X8(BI-TAP)	ET
-	H10-1551-02	POLYSTYRENE FIXTURE	*	40 1B	N08-0125-05	M4X8(BI-TAP)	UE
-	H10-1552-02	POLYSTYRENE FIXTURE	*	40 1B	N08-0125-05	M4X8(BI-TAP)	K
-	H20-0417-04	COVER	M	41 1A,1B	N09-0306-05	M4X16(BI-TAP)	KP
-	H20-0452-04	COVER	KP	41 1A,1B	N09-0306-05	M4X16(BI-TAP)	K
-	H20-0452-04	COVER	UH	42 2B	N08-0128-05	GND SCREW	
-	H20-0452-04	COVER	XT	43 2B,3B	N09-0293-05	M2.6X14	
-	H20-0452-04	COVER	EE	44 2B	N09-0303-05	M3X6	TE
-	H20-0452-04	COVER	TK	44 2B	N09-0303-05	M3X6	ET
-	H20-0452-04	COVER	UE	45 2A	N29-0033-05	PUSH RIVET	
-	H25-0078-04	BAG		46 2B	S31-2050-05	SLIDE SWITCH	UM
-	J61-0045-05	WIRE BAND		46 2B	S31-2050-05	SLIDE SWITCH	HX
29 3A,3B	J02-0088-05	FOOT X4	KK	46 2B	S31-2050-05	SLIDE SWITCH	EE
29 3A,3B	J02-0089-05	FOOT X4	PU	46 2B	S31-2050-05	SLIDE SWITCH	UE
29 3A,3B	J02-0089-05	FOOT X4	MH	47 2B	S40-1010-05	PUSH SWITCH	UM
29 3A,3B	J02-0089-05	FOOT X4	XT	47 2B	S40-1010-05	PUSH SWITCH	HX
29 3A,3B	J02-0089-05	FOOT X4	EE	47 2B	S40-1010-05	PUSH SWITCH	UE
29 3A,3B	J02-0089-05	FOOT X4	T	47 2B	S40-1011-05	PUSH SWITCH	KP

PARTS LIST

Ref. No. 参照番号	Parts No. 部品番号	Description 部品名 / 規格	Re- marks 備考
47 2B	S40-1011-05	PUSH SWITCH	[K]
47 2B	S40-2099-05	PUSH SWITCH	TE
47 2B	S40-2099-05	PUSH SWITCH	[E]
48 1B	T90-0202-05	ANTENNA FM	ET
49 1B	T90-0087-05	ANTENNA AM BAR	KP
49 1B	T90-0104-05	ANTENNA AM LOOP	UM
49 1B	T90-0104-05	ANTENNA AM LOOP	HX
49 1B	T90-0104-05	ANTENNA AM LOOP	TE
49 1B	T90-0104-05	ANTENNA AM LOOP	[E]
49 1B	T90-0104-05	ANTENNA AM LOOP	[K]
50 2A	X14-1150-10	RECEIVER PCB ASSY	*K
50 2A	X14-1150-10	RECEIVER PCB ASSY	[K]
50 2A	X14-1150-51	RECEIVER PCB ASSY	*T
50 2A	X14-1150-52	RECEIVER PCB ASSY	*T
50 2A	X14-1150-81	RECEIVER PCB ASSY	*U
50 2A	X14-1150-81	RECEIVER PCB ASSY	MH
50 2A	X14-1150-81	RECEIVER PCB ASSY	X
50 2A	X14-1150-81	RECEIVER PCB ASSY	[E]
50 2A	X14-1152-71	RECEIVER PCB ASSY	*E
50 2A	X14-1152-72	RECEIVER PCB ASSY	*E
RECEIVER (X14-115)			
D11 -13	B30-0231-05	LED	
D14	B30-0230-05	LED	
D41 -50	B30-0230-05	LED	
D51	B30-0231-05	LED	
D52	B30-0230-05	LED	
C2 -6	C55-1710-38	CERAMIC 0.01UF Z	
C7	C71-1722-15	CERAMIC 220PF J	
C8	C24-1701-01	ELECTRO 1UF 50wv	
C9	C24-1747-41	ELECTRO 0.47UF 50wv	
C10 -12	C55-1747-38	CERAMIC 0.047UF Z	
C13	C24-1210-61	ELECTRO 10UF 16wv	
C14	C24-1747-48	ELECTRO 0.47UF 50wv	
C15	C55-1710-38	CERAMIC 0.01UF Z	
C16	C24-1222-71	ELECTRO 220UF 16wv	
C17	C24-1447-51	ELECTRO 4.7UF 25wv	
C18	C24-1247-71	ELECTRO 470UF 16wv	
C19	C24-1722-51	ELECTRO 2.2UF 50wv	
C20	C46-1747-35	MYLAR 0.047UF J	
C21 ,22	C24-1210-61	ELECTRO 10UF 16wv	
C23	C71-1710-16	CERAMIC 100PF J	KU
C23	C71-1756-16	CERAMIC 560PF J	TE
C23	C71-1756-16	CERAMIC 560PF J	[E]
C25 ,26	C46-1718-25	MYLAR 0.0018UF J	K
C27 -30	C24-1722-51	ELECTRO 2.2UF 50wv	
C31	C24-1733-51	ELECTRO 3.3UF 50wv	
C32	C48-1736-15	POLYSTY 360PF J	
C33	C70-1705-02	CERAMIC 5PF C	
C34	C70-1712-05	CERAMIC 12PF J	
C35	C55-1710-38	CERAMIC 0.01UF Z	KT
C35	C55-1710-38	CERAMIC 0.01UF Z	UE
C36	C71-1702-01	CERAMIC 2PF C	
C37	C24-1447-51	ELECTRO 4.7UF 25wv	
C38	C55-1710-38	CERAMIC 0.01UF Z	
C39	C24-1222-71	ELECTRO 220UF 16wv	KU
C40	C52-1710-26	CERAMIC 0.001UF K	
C41	C71-1708-02	CERAMIC 8PF D	KT
C41	C71-1708-02	CERAMIC 8PF D	[E]
C42	C71-1747-05	CERAMIC 47PF J	
C43	C52-1710-26	CERAMIC 0.001UF K	
C44	C55-1710-38	CERAMIC 0.01UF Z	

Ref. No. 参照番号	Parts No. 部品番号	Description 部品名 / 規格	Re- marks 備考
C45	C24-1710-51	ELECTRO 1UF 50wv	
C46	C24-1210-61	ELECTRO 10UF 16wv	
C47	C52-1710-26	CERAMIC 0.001UF K	
C48 ,49	C55-1710-38	CERAMIC 0.01UF Z	
C50	C46-1747-35	MYLAR 0.047UF J	
C51	C55-1710-38	CERAMIC 0.01UF Z	
C52	C24-1222-71	ELECTRO 220UF 16wv	
C53	C24-1710-51	ELECTRO 1UF 50wv	
C54	C24-1447-51	ELECTRO 4.7UF 25wv	TE
C55	C24-1710-51	ELECTRO 1UF 50wv	[E]
C55	C24-1710-51	ELECTRO 1UF 50wv	TE
C56	C24-1410-61	ELECTRO 10UF 25wv	
C57	C24-1222-71	ELECTRO 220UF 16wv	
C58	C24-1210-61	ELECTRO 10UF 16wv	
C59	C24-1047-61	ELECTRO 47UF 10wv	
C60	C24-1210-61	ELECTRO 10UF 16wv	
C61	C71-1733-06	CERAMIC 33PF 50wv	
C62 -66	C52-1715-26	CERAMIC 0.0015UF K	
C67	C55-1747-38	CERAMIC 0.047UF Z	
C68	C71-1747-05	CERAMIC 47PF J	
C69	C55-1710-38	CERAMIC 0.01UF Z	
C70 ,71	C63-1727-05	CERAMIC 27PF J	
C72	C55-1747-38	CERAMIC 0.047UF Z	
C73	C24-1710-51	ELECTRO 1UF 50wv	TE
C73	C24-1710-51	ELECTRO 1UF 50wv	[E]
C74	C24-1210-61	ELECTRO 10UF 16wv	TE
C74	C24-1210-61	ELECTRO 10UF 16wv	[E]
C75,76	C46-1727-25	MYLAR 0.0027UF J	TE
C75,76	C46-1727-25	MYLAR 0.0027UF J	[E]
C77 ,78	C46-1718-25	MYLAR 0.0018UF J	TU
C77 ,78	C46-1718-25	MYLAR 0.0018UF J	[E]
C80	C55-1710-38	CERAMIC 0.01UF Z	TE
C81	C47-1712-15	POLYSTY 120PF J	[E]
C82	C48-1736-15	POLYSTY 360PF J	TE
C83 ,84	C46-1747-35	MYLAR 0.047UF J	[E]
C85	C71-1727-06	CERAMIC 27PF J	TE
C86	C55-1710-36	CERAMIC 0.01UF Z	
C88	C55-1747-38	CERAMIC 0.047UF Z	
C90	C24-1747-41	ELECTRO 0.47UF 50wv	
C101,102	C71-1710-15	CERAMIC 100PF J	
C103,104	C25-1433-57	LL-ELEC 3.3UF 25wv	
C105,106	C24-1010-71	ELECTRO 100UF 10wv	
C107,108	C52-1733-16	CERAMIC 330PF K	
C109,110	C46-1712-35	MYLAR 0.012UF J	
C111,112	C46-1733-25	MYLAR 0.0033UF J	
C113,114	C24-1710-51	ELECTRO 1UF 50wv	
C117,118	C24-1410-71	ELECTRO 100UF 25wv	
C119,120	C52-1733-16	CERAMIC 330PF K	
C121,122	C46-1722-35	MYLAR 0.022UF K	
C123-125	C52-1756-16	CERAMIC 560PF K	
C126-128	C24-1710-51	ELECTRO 1UF 50wv	
C129,130	C46-1782-25	MYLAR 0.0082UF K	
C131,132	C52-1733-16	CERAMIC 330PF K	
C133,134	C25-1747-47	LL-ELEC 0.47UF 50wv	
C135,136	C25-1710-57	LL-ELEC 1UF 50wv	
C137,138	C52-1782-16	CERAMIC 820PF K	
C139,140	C24-1747-61	ELECTRO 47UF 50wv	
C141,142	C71-1722-06	CERAMIC 22PF J	
C145,146	C26-1710-57	NP-ELEC 1UF 50wv	
C147,148	C46-1722-35	MYLAR 0.022UF K	
C149,150	C24-1447-51	ELECTRO 4.7UF 25wv	

PARTS LIST

Ref. No. 参照番号	Parts No. 部品番号	Description 部品名 / 規格	Re- marks 備考
C151,152 C153,154 C155-158 C159,160 C161,162	C46-1710-35 C46-1747-35 C46-1710-26 C46-1710-45 C90-0468-05	MYLAR 0.01UF K MYLAR 0.047UF K MYLAR 0.001UF K MYLAR 0.1UF M ELECTRO 6800UF 42WF	
C163-166 C167,168 C169 C170 C171,172	C46-1710-35 C24-1047-61 C24-1710-61 C24-1747-61 C24-1247-61	MYLAR 0.01UF K ELECTRO 47UF 10WV ELECTRO 10UF 50WV ELECTRO 47UF 50WV ELECTRO 47UF 16WV	
C173,174 C175 C176 C177 C179,180	C54-2710-39 C54-2710-39 C24-1410-81 C24-1433-71 C25-1710-47	CERAMIC 0.01UF P CERAMIC 0.01UF P ELECTRO 1000UF 25WV ELECTRO 330UF 25WV LL-ELEC 0.1UF 50WV	TE
C181,182 C183,184 C185,186 TC1,2	C52-1747-16 C71-1710-15 C71-1705-01 C05-0303-05	CERAMIC 470PF K CERAMIC 100PF J CERAMIC 5PF C TRIMMER CAPACITOR	TE
- - - - -	E06-0513-05 E06-0513-05 E11-0074-05 E13-0423-05 E13-0612-05	R/P JACK R/P JACK PHONE JACK 3P PHONE JACK 4P PHONE JACK 6P	TE TE
- 24 2B - - -	E20-0439-05 E20-0813-05 E23-0047-04 E23-0104-05 E40-0873-05	TERMINAL BOARD 4P AMT TERMINAL BOARD 8P SP TERMINAL TERMINAL PIN CONNECTOR 8P	
F1 F1 F1 F1 F2	F05-2021-05 F05-2023-05 F05-2029-05 F05-2029-05 F05-4021-05	FUSE 250V 2A FUSE 250V 2A FUSE 250V F2A FUSE 250V F2A FUSE 250V 4A	K U TE TE K
F2 F2 F3 F3 F3	F05-4022-05 F05-4024-05 F05-2023-05 F05-2029-05 F05-2029-05	FUSE 250V 4A FUSE 250V F4A FUSE 250V 2A FUSE 250V F2A FUSE 250V F2A	U EE U TE TE
- - - - -	J13-0055-05 J13-0055-05 J13-0055-05 J13-0055-05 J19-0569-04	FUSE HOLDER X4 FUSE HOLDER X4 FUSE HOLDER X6 FUSE HOLDER X6 HOLDER	KU T EE U *
- -	J19-0570-03 J19-0571-04	HOLDER HOLDER	* *
CF1,2 CF1,2 CF1,2 CF3 L1	L72-0052-15 L79-0123-05 L79-0123-05 L72-0078-05 L30-0316-05	CERAMIC FILTER FILTER FILTER CERAMIC FILTER IFT FM	KU TE TE TE
L2 L3,4 L5 L6 L6	L30-0317-05 L79-0127-05 L40-2292-44 L31-0458-05 L31-0458-05	IFT FM FILTER L.P.F INDUCTOR 2.2UH,M RF COIL MW RF COIL MW	KT UE
L7 L7 L7 L7 L7	L32-0244-05 L32-0244-05 L32-0244-05 L32-0246-05 L32-0246-05	OSCILLATING COIL MW OSCILLATING COIL MW OSCILLATING COIL MW OSCILLATING COIL MW OSCILLATING COIL MW	*K TU E *T E

Ref. No. 参照番号	Parts No. 部品番号	Description 部品名 / 規格	Re- marks 備考
L8 L9 L10 L11 L11	L32-0242-05 L30-0329-05 L30-0284-05 L40-1021-11 L40-1021-11	OSCILLATING COIL L IFT AM IFT AM INDUCTOR 1.0MH,K INDUCTOR 1.0MH,K	TE KT UE
L11 L12 L13 L13 L14	L40-1035-05 L79-0119-05 L79-0109-05 L79-0109-05 L40-1092-11	INDUCTOR 1.0MH,J FILTER L.P.F FILTER L.P.F FILTER L.P.F INDUCTOR 1.0UH,M	TE TE TE TE
L15 L16 L17,18 L19,20 L21,22	L40-1021-11 L40-1092-12 L40-1092-11 L40-1092-12 L39-0085-05	INDUCTOR 1.0MH,M INDUCTOR 1.0UH,M INDUCTOR 1.0UH,M INDUCTOR 1.0UH,M COIL	
L23 L24 X1	L40-1092-12 L40-1092-11 L77-0574-05	INDUCTOR 1.0UH,M INDUCTOR 1.0UH,M CRYSTAL RESONATOR	
- -	N09-0321-05 N29-0033-05	SCREW PUSH RIVET	
R51 R94 R171,172 R261,262 R263,264	R40-8356-58 R47-1522-15 R47-1410-25 R92-0166-05 R90-0138-05	RC 5.6M M 2H RS 220 J 3D RS 1K J 3A METAL 0.22 J 3A RESISTOR 0.22 K 3F	*
R265,266 R271,272 R273,274 R275,276 R277,278	R92-0166-05 R47-1510-05 R40-8310-06 R47-1447-95 R47-1456-15	METAL 0.22 J 3A RS 10 J 3D RC 10 K 2H RS 4.7 J 3A RS 560 J 2H	TE
R285,286 R287 R289 R306 R307	R47-1410-15 R47-1427-25 R47-1522-15 R92-0173-05 R47-1422-25	RS 100 K 2H RS 2.7K K 2H RS 220 J 3D RC 2.2M M 2H RS 2.2K J 3A	K
VR1 VR1 VR1 VR2,4 VR5	R12-3046-05 R12-3046-05 R12-5031-05 R12-3045-05 R06-5055-05	TRIMMING POT,47K TRIMMING POT,47K TRIMMING POT,220K TRIMMING POT,10K POTENTIOMETER	TE TE KU *
VR6 VR7,8 VR9,10 VR11,12	R05-5004-05 R10-4005-05 R12-3051-05 R12-0078-05	POTENTIOMETER POTENTIOMETER TRIMMING POT,22K TRIMMING POT,500	* * *
- - S1 S1 S1	S90-0037-05 S90-0037-05 S42-6008-05 S42-6008-05 S42-6008-05	REMOTE WIRE REMOTE WIRE PUSH SWITCH 6 KEY PUSH SWITCH 6 KEY PUSH SWITCH 6 KEY	*T E *K TU E
S1 S1 S1 S2,3 S4	S42-7003-05 S42-7003-05 S90-0035-05 S40-2110-05 S31-2047-05	PUSH SWITCH 7 KEY PUSH SWITCH 7 KEY SLIDE SWITCH PUSH SWITCH SLIDE SWITCH	*T E TE * TU
S4 S4 S6	S31-2047-05 S31-2047-05 S42-2035-05	SLIDE SWITCH SLIDE SWITCH PUSH SWITCH 2 KEY	E TE *
- D1,3 D5,7 D8 D9,10	V40-4400-20 V11-0271-05 V11-0271-05 V11-0247-05 V11-0271-05	FIP788S FLUORESCENT 1S2076,1S1555 1S2076,1S1555 WZ-100 1S2076,1S1555	

PARTS LIST

Ref. No. 参照番号	Parts No. 部品番号	Description 部品名 / 規格	Re- marks 備考
015	V11-0271-05	1S2076, 1S1555	
021, 22	V11-4100-30	WZ-197	
027, 28	V11-0271-05	1S2076, 1S1555	
029, 30	V11-5100-10	STV-4H(W)	
031, 34	V11-0273-05	1S2076A	
035, 38	V11-0051-05	1N60	
040	V11-0254-05	YZ-140	
053, 56	V11-0465-05	GP250	
057, 58	V11-0295-05	W068	
061	V11-0271-05	1S2076, 1S1555	
IC1	V30-0192-05	HA1137, -05	
IC2	V30-0155-05	HA1196-01	
IC3	V30-0196-05	HA1197	
IC4	V30-0478-10	UPC78M12H	*
IC5	V30-0405-10	AN6552	
IC6	V30-0409-10	AN6821	
IC7	V30-1005-26	SN74LS90N, F74LS90PC	
IC8	V30-0474-10	LC7258	
IC11, 12	V30-0453-10	TA7322P	
Q1	V03-1923-00	2SC1923(R, O)	
Q2, 3	V03-0270-05	2SC945(R, Q)	
Q4	V09-0144-60	2SK163(L, M)	TE
Q5, 6	V03-0270-05	2SC945(R, Q)	
Q7	V09-0144-60	2SK163(L, M)	
Q8, 9	V03-0270-05	2SC945(R, Q), 2SC2320(E, F)	
Q10	V01-0733-30	2SA733(A) (R, Q), 2SA999(E, F)	
Q11, 12	V03-0270-05	2SC945(R, Q), 2SC2590(E, F)	
Q13	V01-0733-30	2SA733(A) (R, Q), 2SA999(E, F)	
Q14, 21	V03-0270-05	2SC945(R, Q), 2SA2320(E, F)	
Q25	V03-0270-05	2SC945(R, Q), 2SC2320(E, F)	TE
Q31, 32	V01-0979-30	2SA979(F, G, H)	
Q33, 36	V01-0733-30	2SA733(A) (R, Q), 2SA999(E, F)	
Q37, 38	V03-1845-60	2SC1845(1) (E, F)	*
Q39, 40	V03-1845-10	2SC1845(E, F)	
Q41, 42	V01-0992-10	2SA992(F, E)	
Q43, 44	V03-1845-10	2SC1845(E, F)	
Q45, 46	V03-0270-05	2SC945(R, Q), 2SC2320(E, F)	
Q47, 48	V03-2590-10	2SC2590(Q, R)	*
Q49, 50	V01-1110-10	2SA1110(Q, R)	*
Q51, 52	V01-1102-10	2SA1102(O, Y), 2SB686(R, O)	
Q53, 54	V03-2577-10	2SC2577(O, Y), 2SD716(R, O)	
Q55	V03-2003-00	2SC2003(M, L, K)	
-	W02-0042-05	FRONT END	*K
-	W02-0042-05	FRONT END	TU
-	W02-0042-05	FRONT END	E
-	W02-0043-05	FRONT END	*T
-	W02-0043-05	FRONT END	E
FM FRONT END (W02-004)			
D1	V11-3100-50	1S2236	
IC1	V30-0345-10	SC114	
Q1	V09-0121-10	2SK55	
Q2	V09-0124-20	2SK61	

Ref. No. 参照番号	Parts No. 部品番号	Description 部品名 / 規格	Re- marks 備考
	N30-2006-41	M2 x 6	
	N30-2006-46	M2 x 6	
	N30-3008-46	M3 x 8	
	N87-3008-46	M3 x 8 (Br-Tap)	
	N89-3008-45	M3 x 8 (Bi-Tap) BLK	
	N88-3008-46	M3 x 8 (F-Tap)	
	N91-3010-46	M3 x 10 (TD-Tap)	

KR-720(L)

A product of

TRIO-KENWOOD CORPORATION

6-17, 3-chome, Aobadai, Meguro-ku, Tokyo 153, Japan

KENWOOD ELECTRONICS, INC.

1315 E. Watsoncenter Rd, Carson, California 90745, U.S.A.

75 Seaview Drive, Secaucus, New Jersey 07094, U.S.A.

1098 North Tower Lane Bensenville, Illinois 60106, U.S.A.

TRIO-KENWOOD ELECTRONICS, N.V.

Leuvensesteenweg 504 B-1930 Zaventem, Belgium

TRIO-KENWOOD ELECTRONICS GmbH

Rudolf-Braas-Str. 20, 6056 Heusenstamm, West Germany

TRIO-KENWOOD FRANCE S.A.

5, Boulevard Ney, 75018 Paris, France

TRIO-KENWOOD SVENSKA AB

Kemistvagen 10A, S-183 21 Taby, Sweden

TRIO-KENWOOD (AUSTRALIA) PTY. LTD.

30 Whiting St., Artarmon, N.S.W. 2064, Australia

KENWOOD & LEE ELECTRONICS, LTD.

Room 501, Wang Kee Building, 5th Floor, 34-37, Connaught Road, Central, Hong Kong