



# Anthem AVM 70

AVM 70


Anthem

ALP2B003860071




Пт Июнь 21 2024

### Front Left

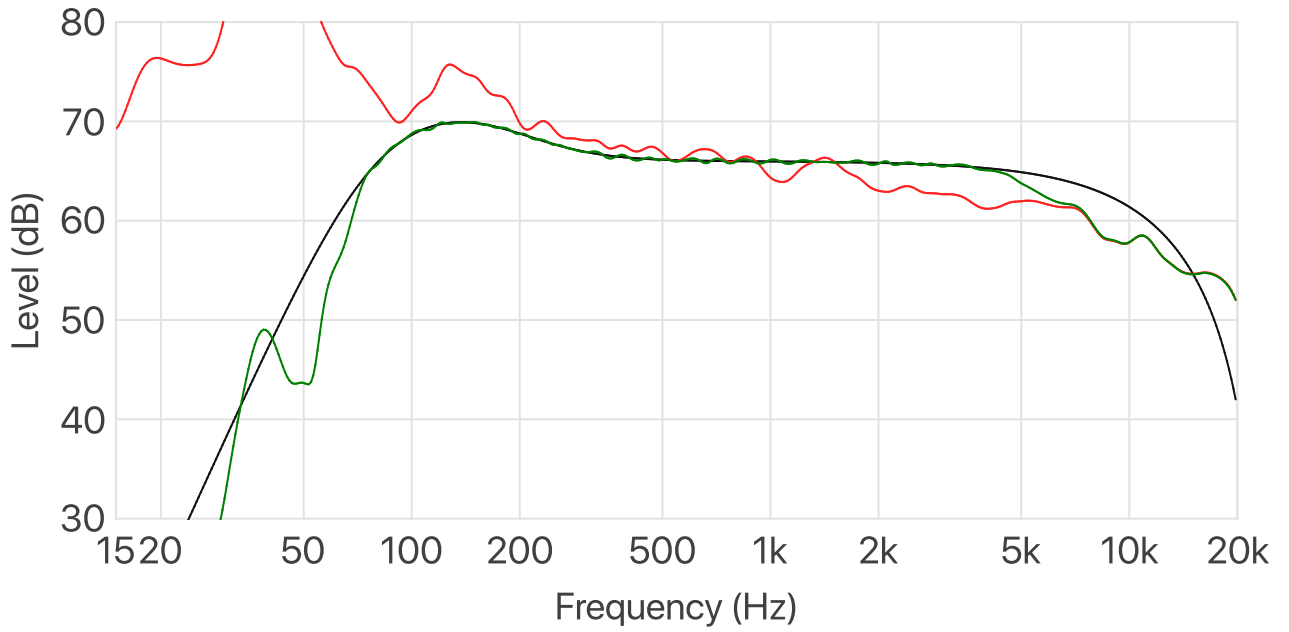


● Target Curve ● Measurement Curve ● Corrected Curve

### Center

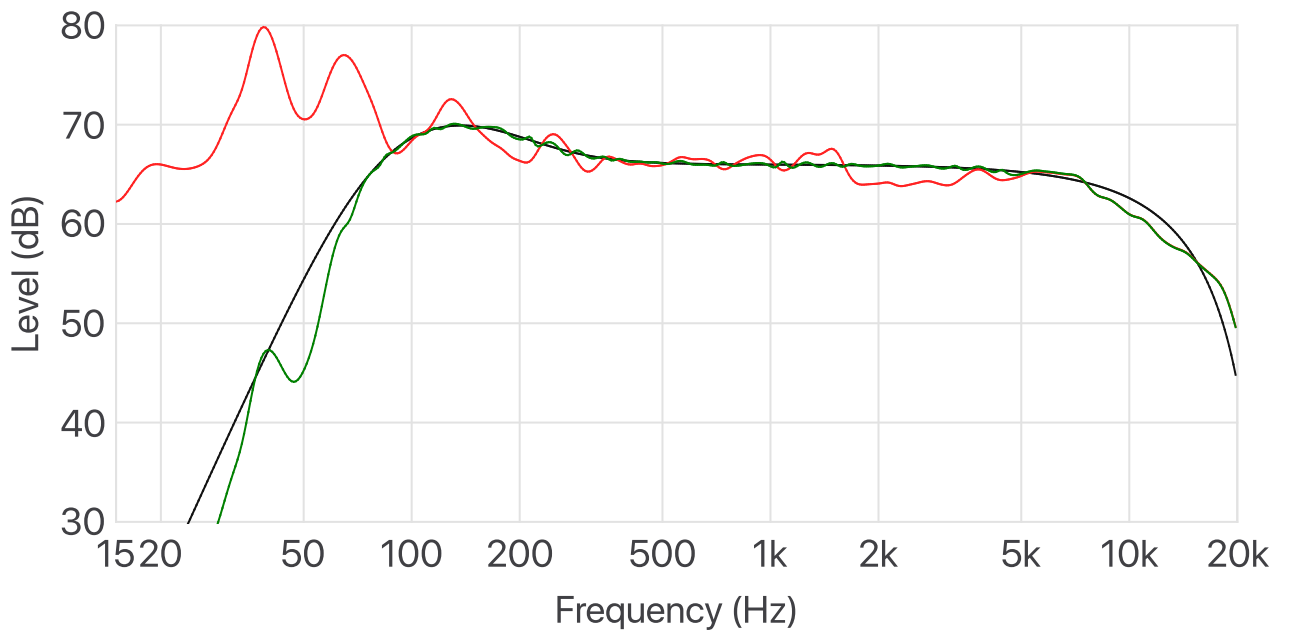


● Target Curve ● Measurement Curve ● Corrected Curve

### Front Right

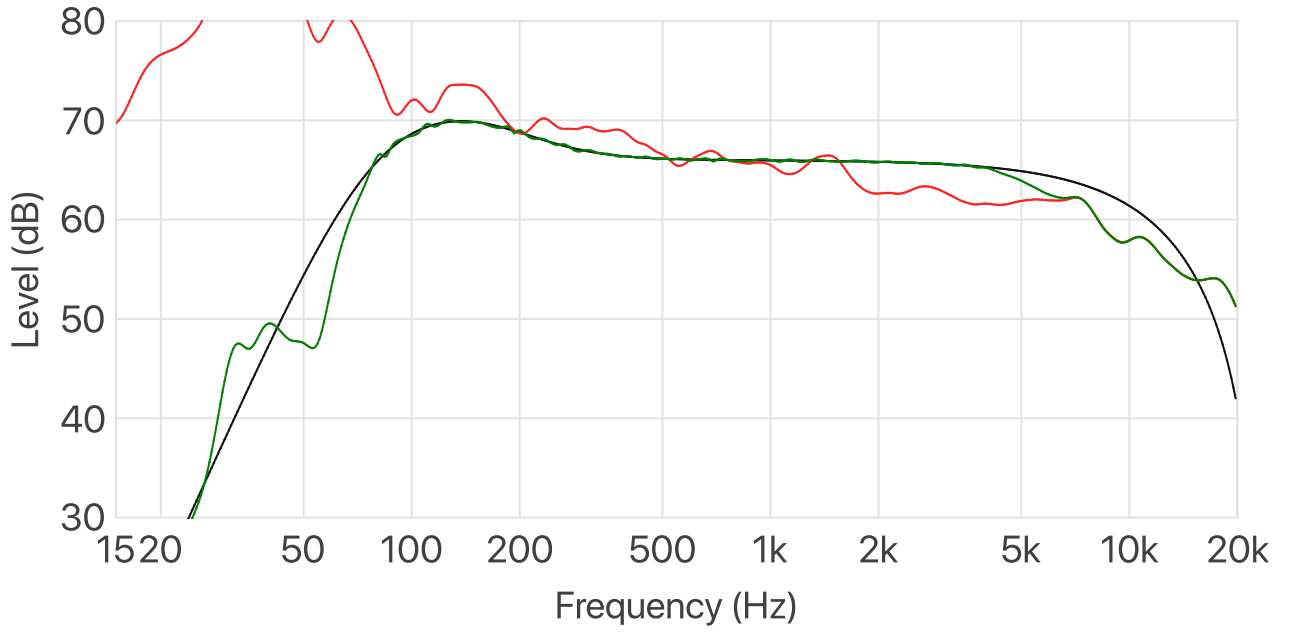


● Target Curve ● Measurement Curve ● Corrected Curve

### Surround Left

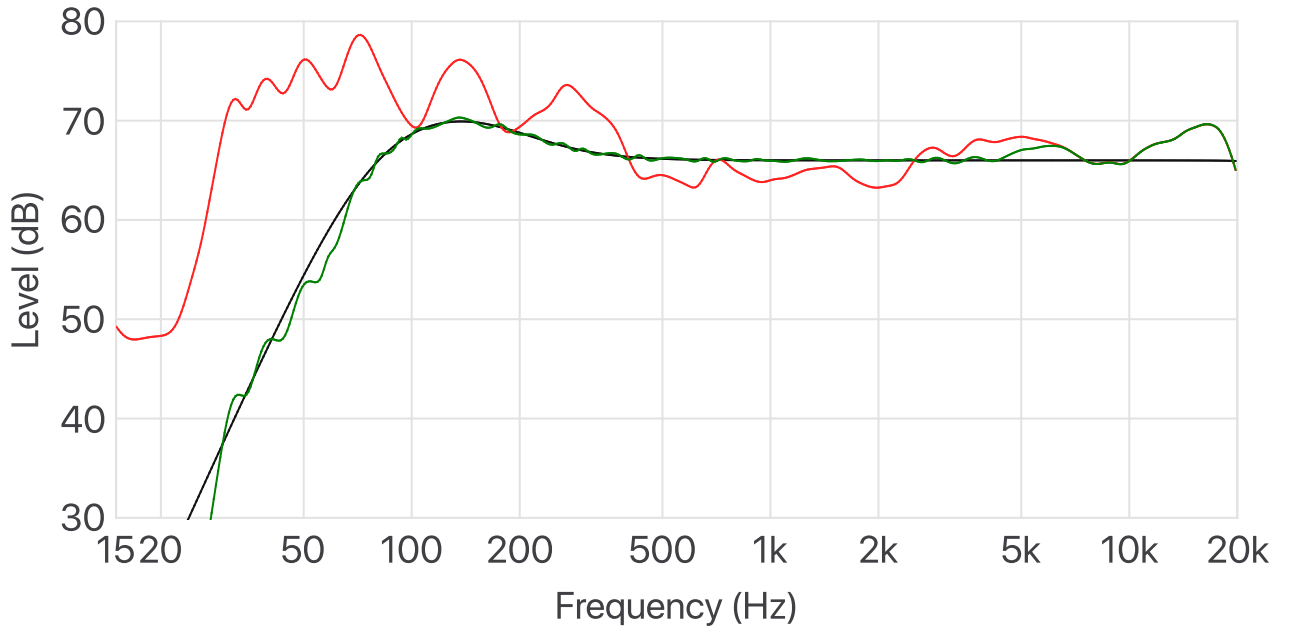


● Target Curve ● Measurement Curve ● Corrected Curve

### Surround Right

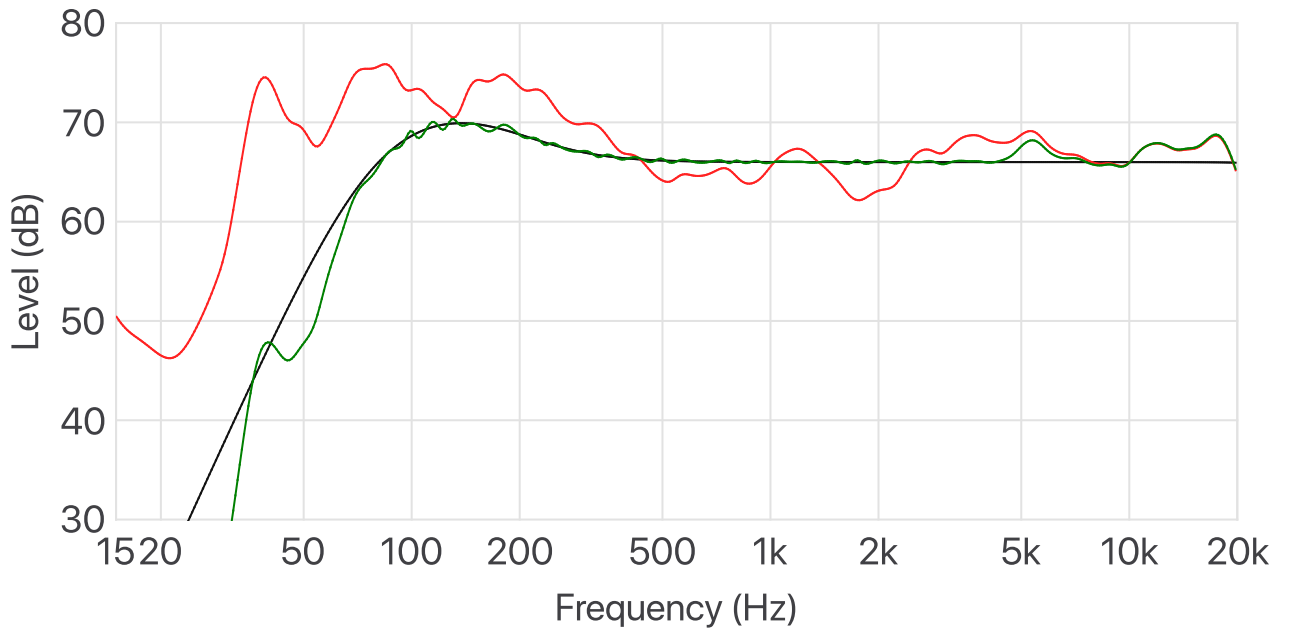


● Target Curve ● Measurement Curve ● Corrected Curve

### Back Left

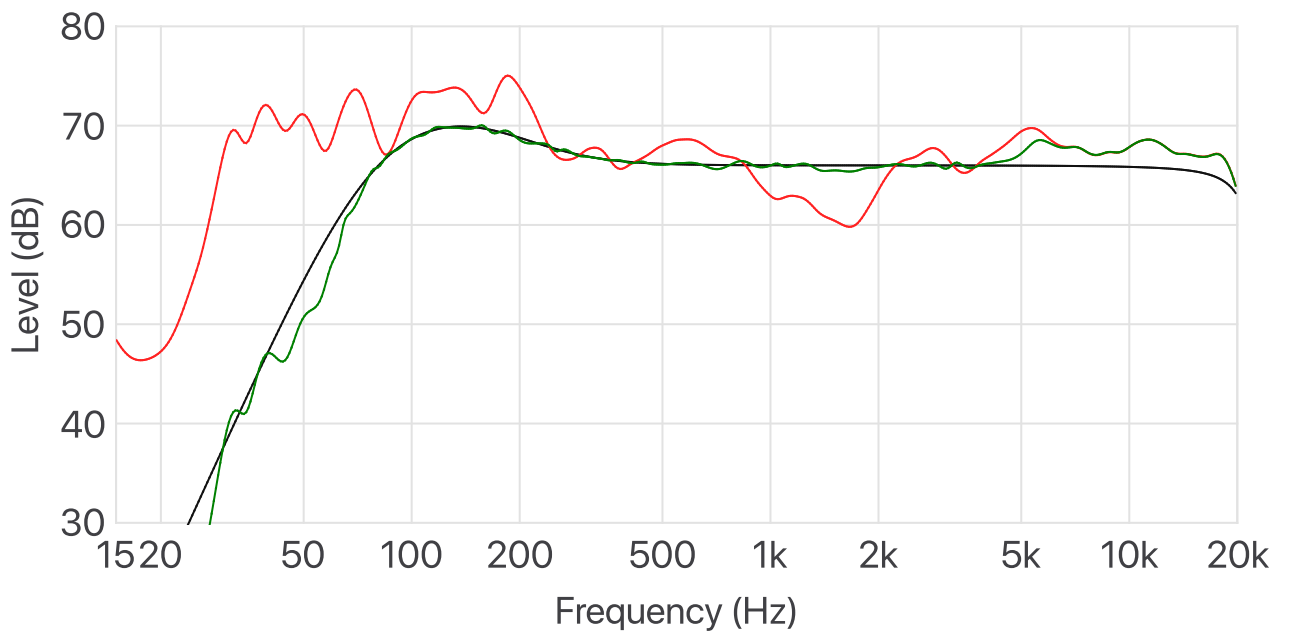


● Target Curve ● Measurement Curve ● Corrected Curve

### Back Right

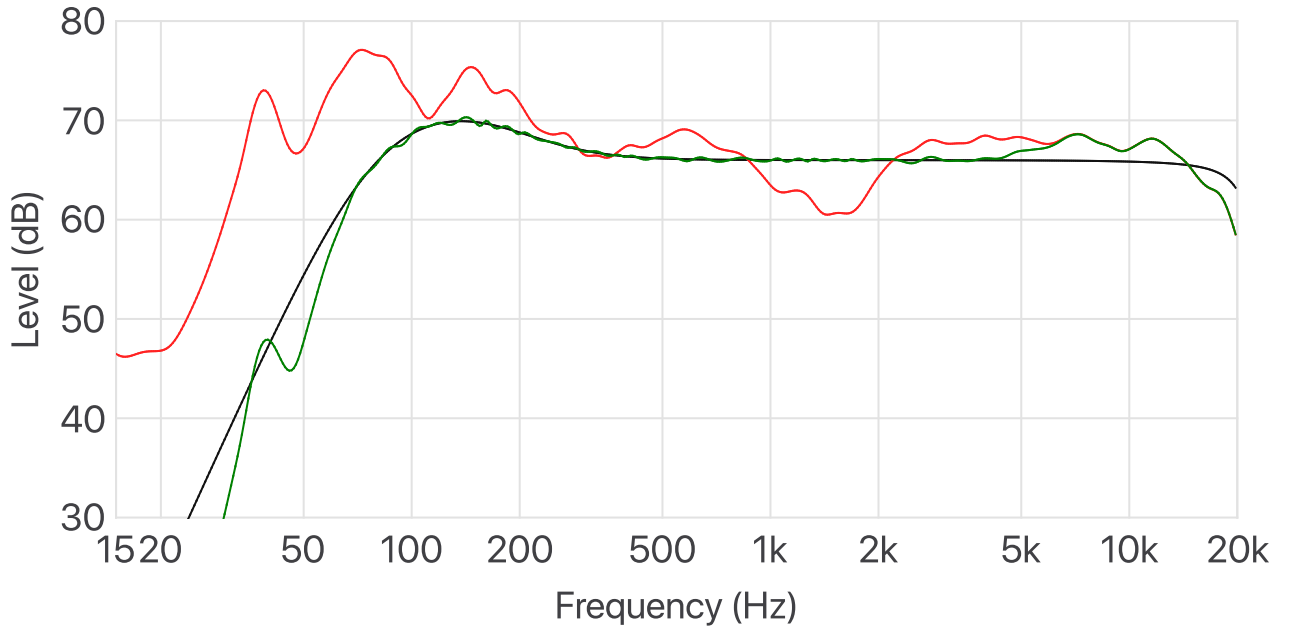

● Target Curve ● Measurement Curve ● Corrected Curve

### Subwoofer 1

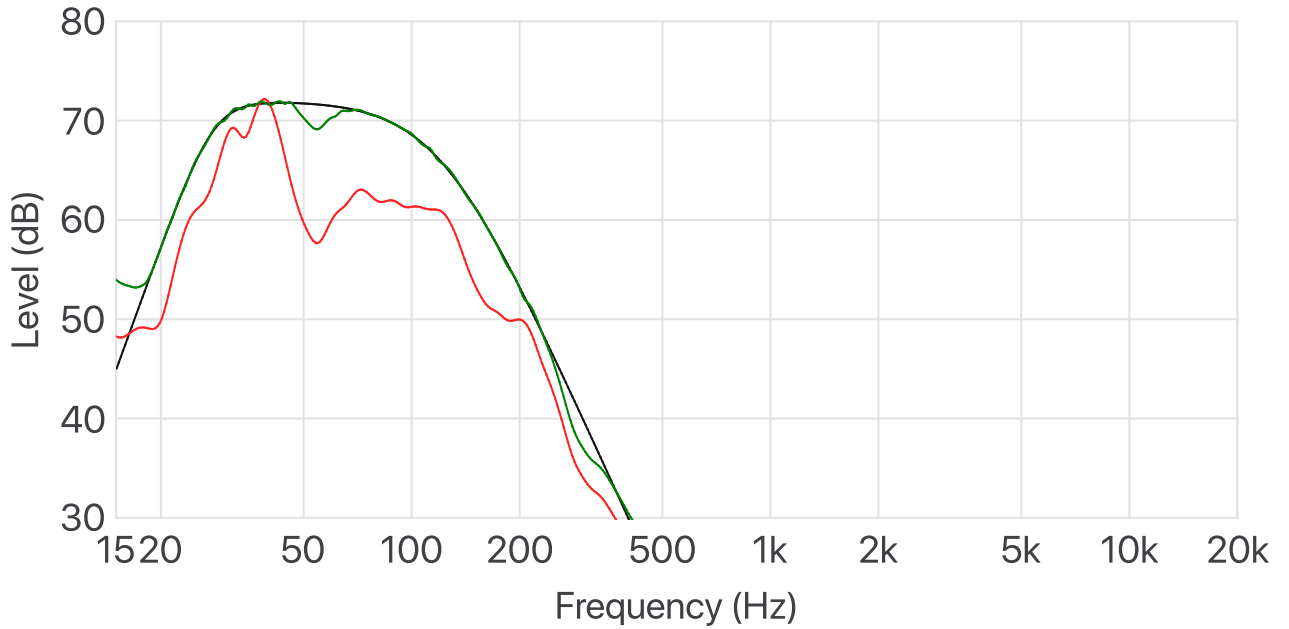

● Target Curve ● Measurement Curve ● Corrected Curve

## Speaker Profile Settings

Profile1 uses Measurement A

## List of Speakers Enabled

### Profile1:

- Fronts
- Center
- Surrounds
- Backs
- Subwoofer 1

## Level Settings

### Profile1:

System-Wide Level Target: 0 dB

Front Left: 9.5 dB, 11' 10"

Center: 7 dB, 12' 0"

Front Right: 10 dB, 12' 6"

Subwoofer 1: -1 dB, 8' 0"

Surround Left: -8 dB, 7' 2"

Surround Right: -8.5 dB, 6' 8"

Back Left: -10 dB, 5' 6"

Back Right: -10 dB, 5' 0"

## Target Settings

### Profile1:

Room Gain: 6 dB

Room Gain Center Frequency: 200 Hz

Deep Bass Boost: 0 dB

Deep Bass Boost Center Frequency: 50 Hz

Tilt Level: 0 dB

Tilt Start Frequency: 100 Hz

### FRONTS

Subwoofer Crossover Frequency (or Low-Frequency Extension): 80 Hz

Send Bass to Sub (or Low-Frequency Extension Slope): Send bass to the sub

High-Frequency Roll Off: 0.5

Maximum Correction Frequency: 5000 Hz

### CENTER

Subwoofer Crossover Frequency (or Low-Frequency Extension): 80 Hz

Send Bass to Sub (or Low-Frequency Extension Slope): Send bass to the sub  
High-Frequency Roll Off: 0.66  
Maximum Correction Frequency: 5000 Hz

#### SURROUNDS

Subwoofer Crossover Frequency (or Low-Frequency Extension): 80 Hz  
Send Bass to Sub (or Low-Frequency Extension Slope): Send bass to the sub  
High-Frequency Roll Off: 32.5  
Maximum Correction Frequency: 5000 Hz

#### BACKS

Subwoofer Crossover Frequency (or Low-Frequency Extension): 80 Hz  
Send Bass to Sub (or Low-Frequency Extension Slope): Send bass to the sub  
High-Frequency Roll Off: 4.46  
Maximum Correction Frequency: 5000 Hz

#### SUBWOOFER 1

Subwoofer Crossover Frequency (or Low-Frequency Extension): 120 Hz  
High-Pass Frequency: 28 Hz  
High-Pass Slope: 5th  
Minimum Correction Frequency: 24 Hz  
Phase Filter: 115 degrees @ 80 Hz