




3-2. SCHEMATIC DIAGRAM

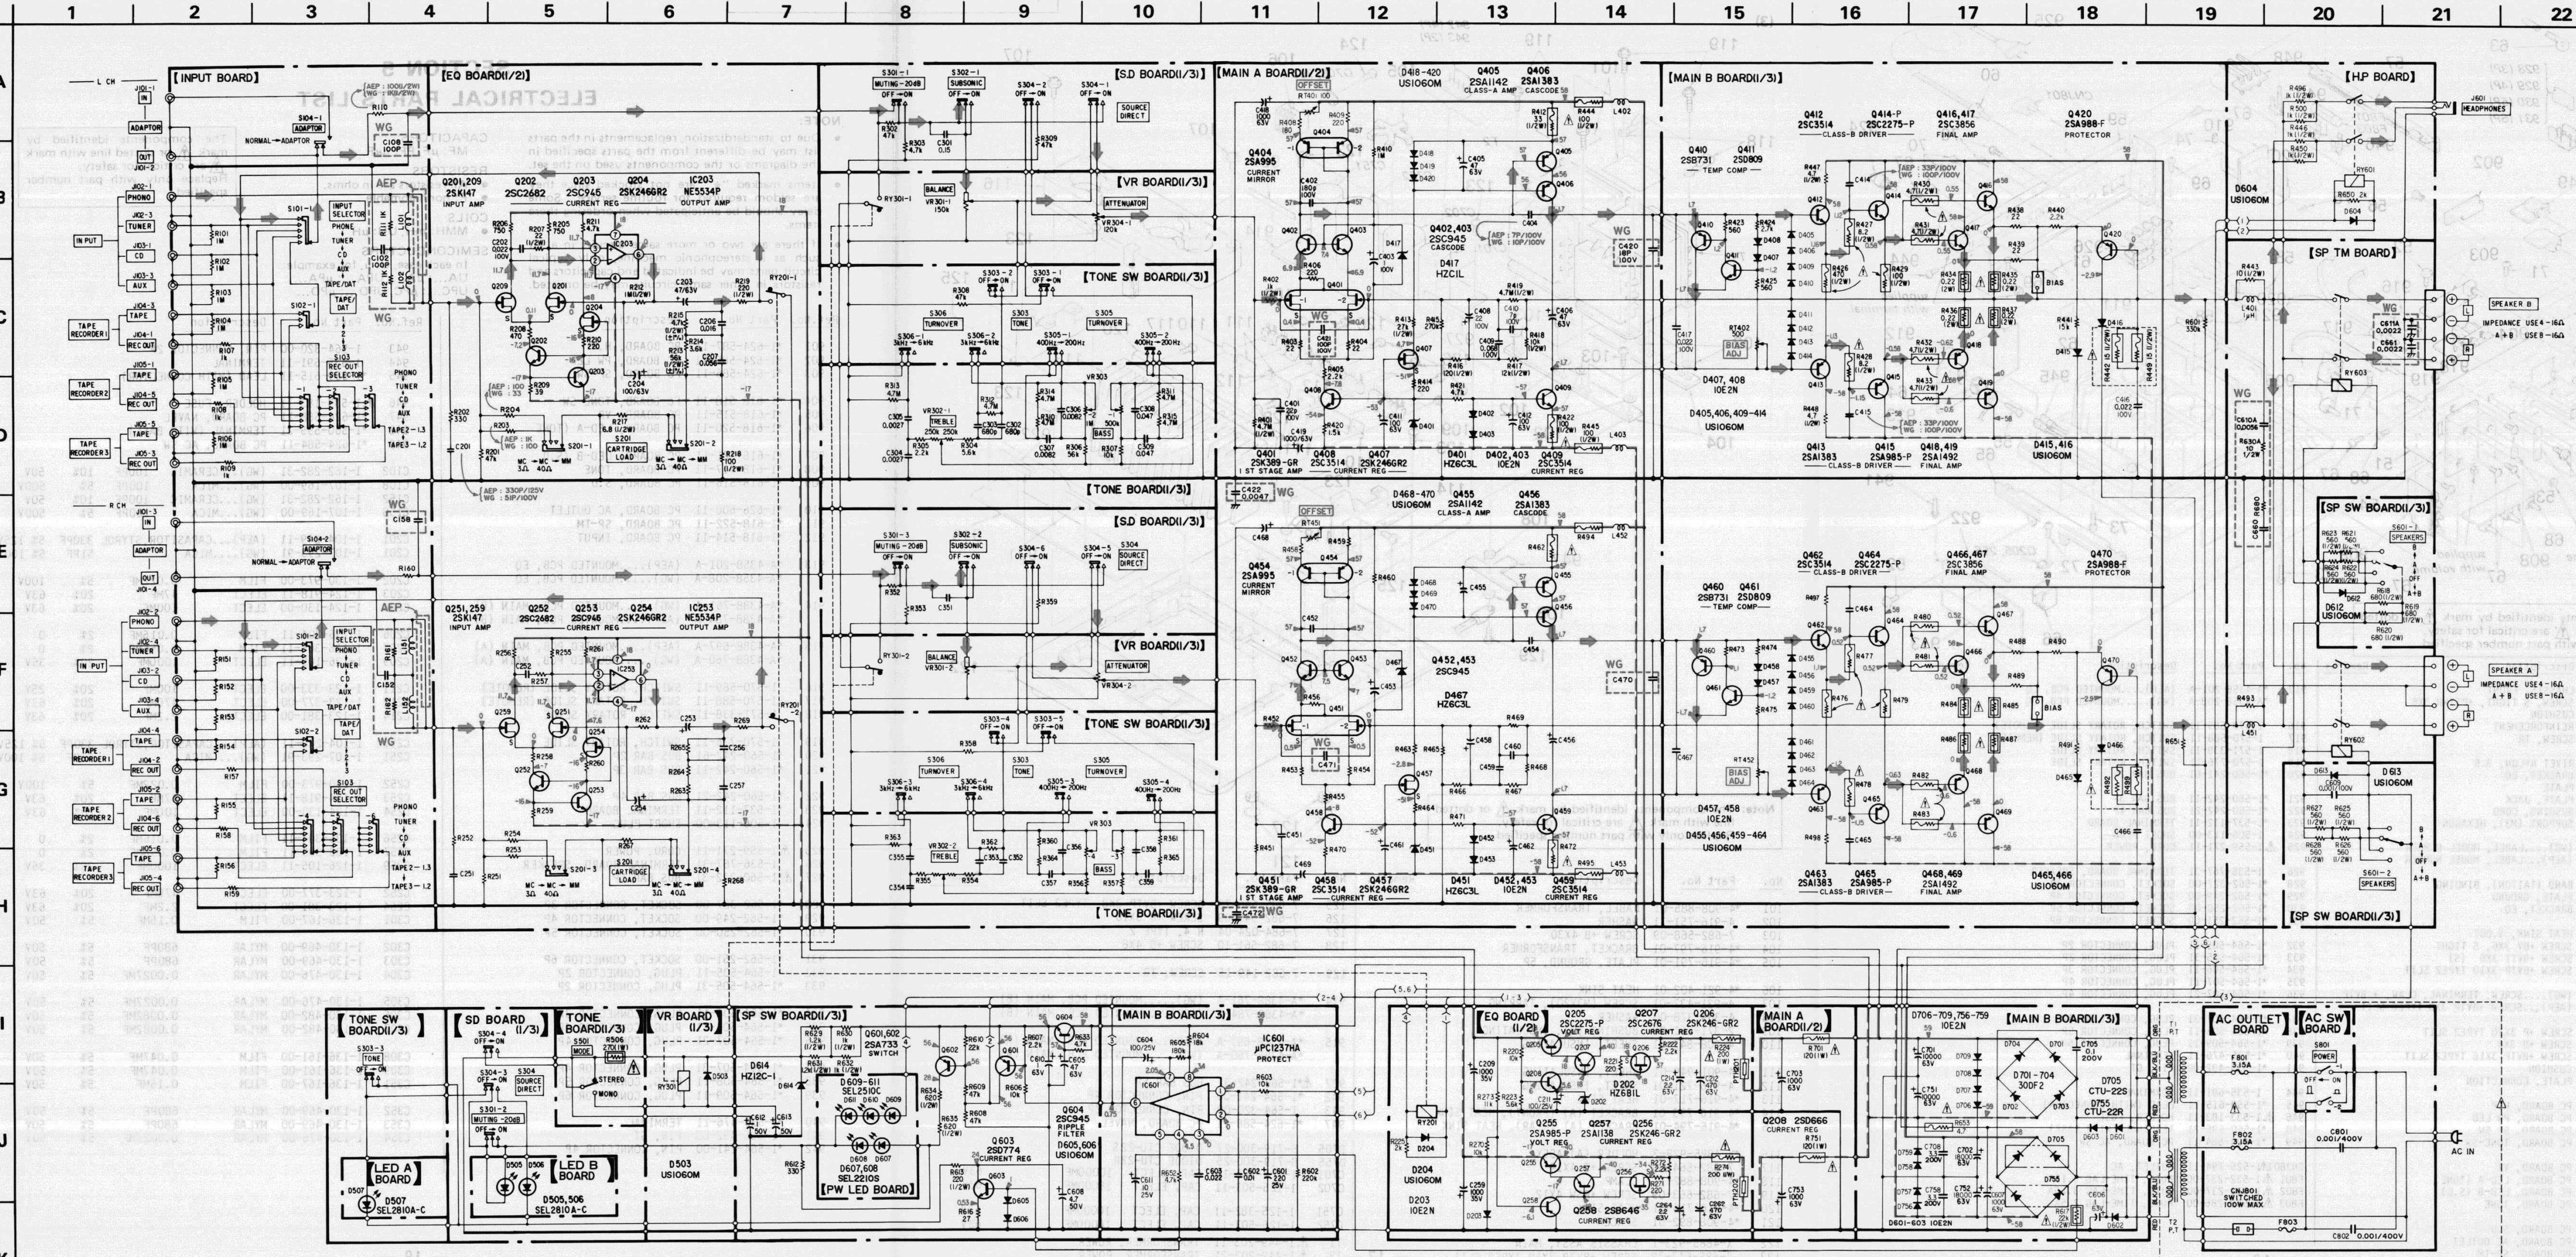

3-3. SEMICONDUCTORS LEAD LAYOUT

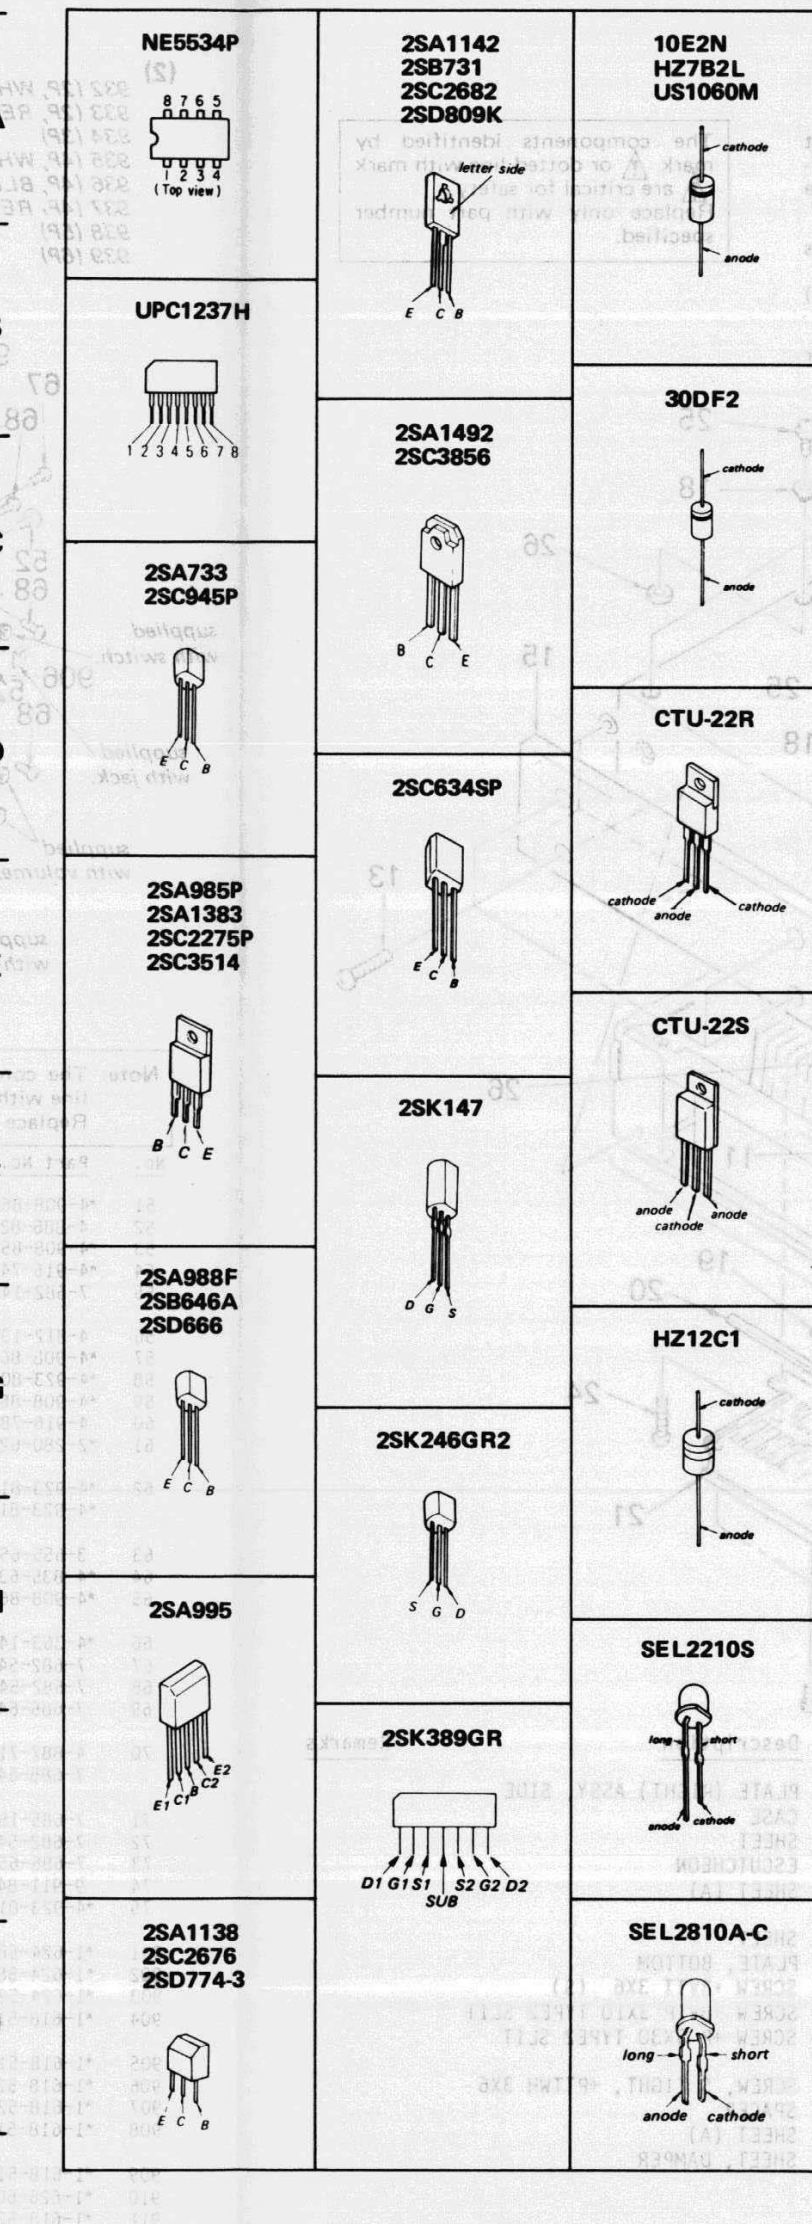

3-4. CIRCUIT BOARDS LOCATION

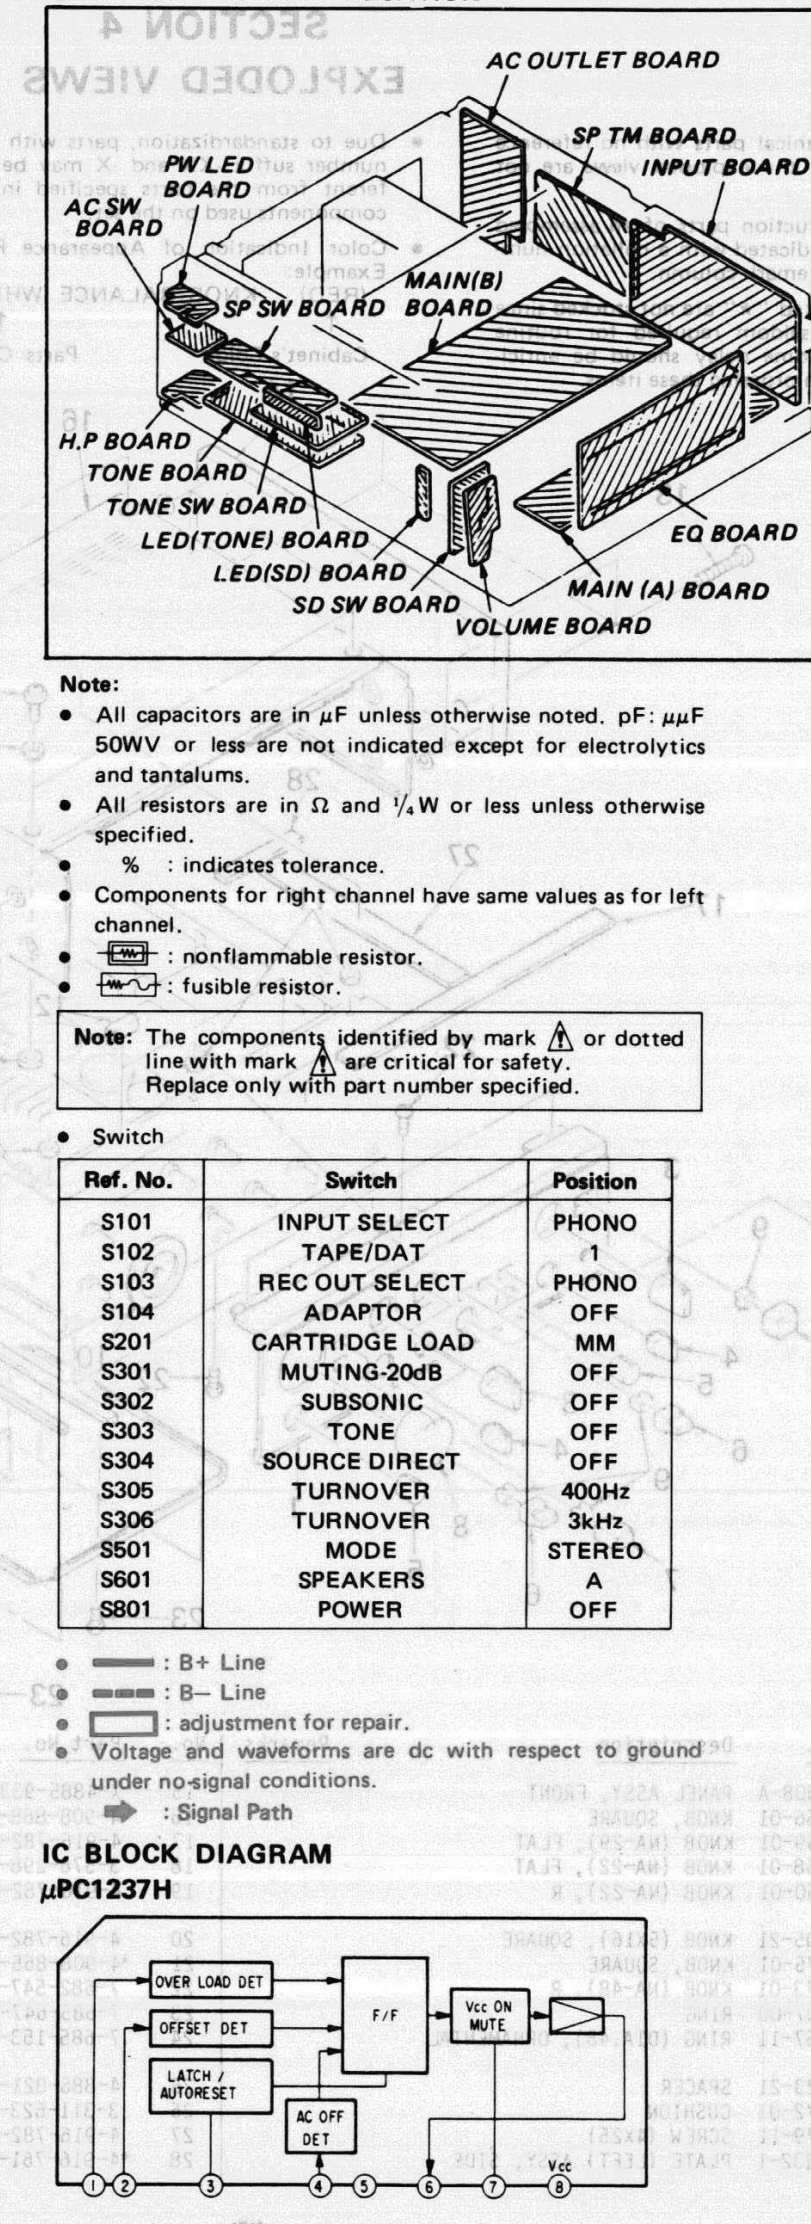

Note:

- All capacitors are in μF unless otherwise noted. $\text{pF} = \mu\text{F} \times 10^{-6}$.
- All resistors are in Ω and $\frac{1}{2}\text{W}$ or less unless otherwise specified.
- % : indicates tolerance.
- Components for right channel have same values as for left channel.
- $\square$: nonflammable resistor.
- $\square$: fusible resistor.

Note: The components identified by mark Δ or dotted line with mark Δ are critical for safety. Replace only with part number specified.

Switch

Ref. No.	Switch	Position
S101	INPUT SELECT	PHONO
S102	REC OUT SELECT	1
S103	ADAPTOR	OFF
S104	CARTRIDGE LOAD	MM
S301	MUTING-20dB	OFF
S302	SUBSONIC	OFF
S303	TOPE	OFF
S304	SOURCE DIRECT	OFF
S305	TURNOVER	400Hz
S306	TURNOVER	3kHz
S601	MODE	STEREO
S601	SPEAKERS	A
S801	POWER	OFF

Δ : B+ Line
 $\square$: B- Line
 $\square$: adjustment for repair.
 $\square$: Voltage and waveforms are dc with respect to ground under no-signal conditions.
 $\square$: Signal Path

