

HCD-HP7

SERVICE MANUAL

Ver. 1.4 2005. 10



*US Model
Canadian Model
AEP Model
UK Model
E Model
Australian Model*

HCD-HP7 is the Amplifier, CD player, Tape Deck and Tuner section in CMT-HP7.

CD Section	Model Name Using Similar Mechanism	NEW
	CD Mechanism Type	CDM69CH-K6BD71C
	Base Unit Name	BU-K6BD71C
	Optical Pick-up Name	KSM-213D
TAPE Section	Model Name Using Similar Mechanism	HCD-EP515
	Tape Transport Mechanism Type	CMAL1Z234A

SPECIFICATIONS

Main unit

AUDIO POWER SPECIFICATIONS

POWER OUTPUT AND TOTAL HARMONIC DISTORTION:

With 6 ohm loads, both channels driven, from 120 – 10,000 Hz: rated 60 watts per channel minimum RMS power, with no more than 10% total harmonic distortion from 250 milliwatts to rated output.

Amplifier section

North American model:

Continuous RMS power output (reference):
60 + 60 watts (6 ohms at 1 kHz, 10% THD)
Total harmonic distortion less than 0.7% (6 ohms at 1 kHz, 30 W)

European and Russian models:

DIN power output (rated): 60 + 60 watts (6 ohms at 1 kHz, DIN)
Continuous RMS power output (reference):
60 + 60 watts (6 ohms at 1 kHz, 10% THD)
Music power output (reference):
120 + 120 watts (6 ohms at 1 kHz, 10% THD)

Other models:

The following measured at AC 120, 127, 220, 240 V 50/60 Hz
DIN power output (rated): 60 + 60 watts (6 ohms at 1 kHz, DIN)
Continuous RMS power output (reference):
60 + 60 watts (6 ohms at 1 kHz, 10% THD)

Inputs

MD IN (phono jacks):
Sensitivity 250 mV,
impedance 47 kilohms

Outputs

PHONES (stereo minijack):
accepts headphones of 8 ohms or more

OPTICAL CD DIGITAL OUT (Supported sampling frequency: 44.1 kHz)

SPEAKER:
accepts impedance of 6 to 16 ohms.

CD player section

System

Compact disc and digital audio system
Semiconductor laser
($\lambda=780$ nm)
Emission duration: continuous
2 Hz – 20 kHz (± 0.5 dB)
780 – 790 nm
More than 90 dB
More than 90 dB

Laser

Frequency response
Wavelength
Signal-to-noise ratio
Dynamic range

Tape deck section

Recording system
Frequency response

4-track 2-channel, stereo
50 – 13,000 Hz (± 3 dB),
using Sony TYPE I cassettes

MICRO HI-FI COMPONENT SYSTEM

9-877-349-05

2005J16-1

© 2005.10

Sony Corporation

Personal Audio Group

Published by Sony Engineering Corporation

SONY®

HCD-HP7

Tuner section

FM stereo, FM/AM superheterodyne tuner

FM tuner section

Tuning range

Russian model: 65.0 – 74.0 MHz
(There is no stereo effect)
87.5 – 108.0 MHz

Other models: 87.5 – 108.0 MHz

Antenna FM lead antenna

Antenna terminals 75 ohms unbalanced

Intermediate frequency 10.7 MHz

AM tuner section

Tuning range

Pan-American model: 530 – 1,710 kHz
(with the tuning interval set at 10 kHz)
531 – 1,710 kHz
(with the tuning interval set at 9 kHz)

European, Russian, Middle Eastern models: 531 – 1,602 kHz
(with the tuning interval set at 9 kHz)

Other models: 530 – 1,710 kHz
(with the tuning interval set at 10 kHz)
531 – 1,602 kHz
(with the tuning interval set at 9 kHz)

Antenna AM loop antenna

Antenna terminals External antenna terminal

Intermediate frequency 450 kHz

General

Power requirements

North American model: 120 V AC, 60 Hz

European and Russian models: 230 V AC, 50/60 Hz

Australian model: 230 – 240 V AC, 50/60 Hz

Mexican model: 120 V AC, 60 Hz

Other models: 120 V, 220 V or 230 – 240 V AC, 50/60 Hz
Adjustable with voltage selector

Power consumption

European and Russian models: 100 watts
0.35 watts (at the Power Saving Mode)

Other models: 100 watts

Dimensions (w/h/d) Approx. 199 252 400 mm

Mass Approx. 7.0 kg

Supplied accessories: Remote Commander (1)
Batteries (2)
AM loop antenna (1)
FM lead antenna (1)
Speaker pads (8)

Design and specifications are subject to change without notice.

SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY MARK  OR DOTTED LINE WITH MARK  ON THE SCHEMATIC DIAGRAMS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

ATTENTION AU COMPOSANT AYANT RAPPORT À LA SÉCURITÉ!

LES COMPOSANTS IDENTIFIÉS PAR UNE MARQUE  SUR LES DIAGRAMMES SCHÉMATIQUES ET LA LISTE DES PIÈCES SONT CRITIQUES POUR LA SÉCURITÉ DE FONCTIONNEMENT. NE REMPLACER CES COMPOSANTS QUE PAR DES PIÈCES SONY DONT LES NUMÉROS SONT DONNÉS DANS CE MANUEL OU DANS LES SUPPLÉMENTS PUBLIÉS PAR SONY.

TABLE OF CONTENTS

1. SERVICING NOTES	4	6. MECHANICAL ADJUSTMENTS	23
2. GENERAL	6	7. ELECTRICAL ADJUSTMENTS	24
3. DISASSEMBLY		8. DIAGRAMS	26
3-1. Case (Side-L)(Side-R), Tape Mechanism Deck (CMAL1Z234A)	9	8-1. Block Diagram	28
3-2. Front Panel Section	9	8-2. Printed Wiring Boards — BD Board —	29
3-3. Panel Board	10	8-3. Schematic Diagram — BD Board —	30
3-4. Back Panel Section	10	8-4. Printed Wiring Boards — Changer Section —	31
3-5. MAIN Board	11	8-5. Schematic Diagram — Changer Section —	32
3-6. PWR AMP Board, Power Transformer	11	8-6. Printed Wiring Boards — Main Section —	33
3-7. CD Mechanism Deck (CDM69CH-K6BD71C)	12	8-7. Schematic Diagram — Main Section —	34
3-8. Base Unit Section	12	8-8. Printed Wiring Boards — Front Section —	35
3-9. Base Unit (BU-K6BD71C)	13	8-9. Schematic Diagram — Front Section —	36
3-10. BD Board	13	8-10. Printed Wiring Boards — PWR AMP/Power Section —	37
3-12. SW Board, Bracket (Top) Assy	14	8-11. Schematic Diagram — PWR AMP/Power Section —	38
3-13. CONNECTOR Board	15	8-12. IC Block Diagrams	39
3-14. Motor (Stocker) Assy (Stocker)(M761)	15	8-13. IC Pin Function Description	42
3-15. Motor (Roller) Assy (Roller)(M781)	16	9. EXPLODED VIEWS	
3-16. Motor (Mode) Assy (Mode)(M771)	16	9-1. Case, Top Panel Section	44
3-17. Rubber Roller (Slider) Assy	17	9-2. Front Panel Section	45
3-18. Timing Belt (Front/Rear)	17	9-3. Chassis Section-1	46
3-19. Cam (Gear)	18	9-4. Chassis Section-2	47
3-20. SENSOR Board	18	9-5. CD Mechanism Section-1 (CDM69CH-K6BD71C)	48
4. ASSEMBLY		9-6. CD Mechanism Section-2 (CDM69CH-K6BD71C)	49
4-1. How to Install the Cam (Eject Lock)	18	9-7. CD Mechanism Section-3 (CDM69CH-K6BD71C)	50
4-2. How to Install the Cam (GEAR)	18	9-8. CD Mechanism Section-4 (CDM69CH-K6BD71C)	51
4-3. How to Install the Gear (MODE C)	19	9-9. CD Mechanism Section-5 (CDM69CH-K6BD71C)	52
4-4. How to Install the Gear (MODE CAM)	19	9-10. CD Mechanism Section-6 (CDM69CH-K6BD71C)	53
4-5. How to Install the Rotary Encoder (S702), Gear (STOCKER COMMUNICATION)	20	9-11. Optical Pick-up Section (KSM-213D)	54
4-6. How to Install the Stocker Assy	20	10. ELECTRICAL PARTS LIST	55
5. TEST MODE	22		

SECTION 1 SERVICING NOTES

Notes on chip component replacement

- Never reuse a disconnected chip component.
- Notice that the minus side of a tantalum capacitor may be damaged by heat.

Flexible Circuit Board Repairing

- Keep the temperature of the soldering iron around 270 °C during repairing.
- Do not touch the soldering iron on the same conductor of the circuit board (within 3 times).
- Be careful not to apply force on the conductor when soldering or unsoldering.


SAFETY CHECK-OUT

After correcting the original service problem, perform the following safety check before releasing the set to the customer:
Check the antenna terminals, metal trim, “metallized” knobs, screws, and all other exposed metal parts for AC leakage.
Check leakage as described below.

LEAKAGE TEST

The AC leakage from any exposed metal part to earth ground and from all exposed metal parts to any exposed metal part having a return to chassis, must not exceed 0.5 mA (500 microamperes.). Leakage current can be measured by any one of three methods.


1. A commercial leakage tester, such as the Simpson 229 or RCA WT-540A. Follow the manufacturers’ instructions to use these instruments.
2. A battery-operated AC milliammeter. The Data Precision 245 digital multimeter is suitable for this job.
3. Measuring the voltage drop across a resistor by means of a VOM or battery-operated AC voltmeter. The “limit” indication is 0.75 V, so analog meters must have an accurate low-voltage scale. The Simpson 250 and Sanwa SH-63Trd are examples of a passive VOM that is suitable. Nearly all battery operated digital multimeters that have a 2 V AC range are suitable. (See Fig. A)

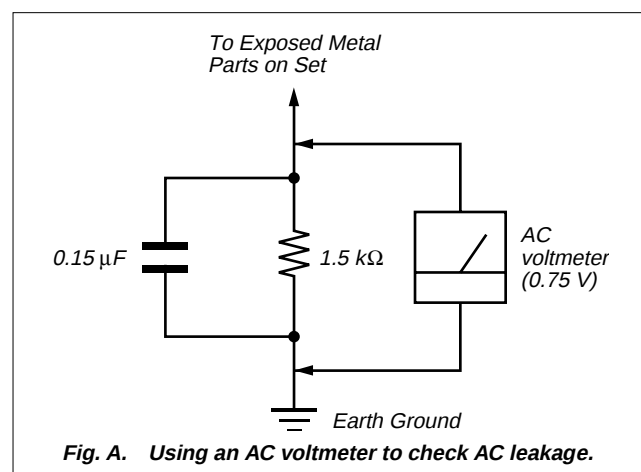

CAUTION

Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

This appliance is classified as a CLASS 1 LASER product. This label is located on the rear exterior.

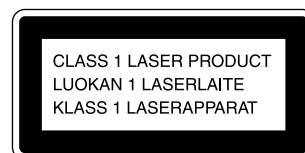

Laser component in this product is capable of emitting radiation exceeding the limit for Class 1.

NOTES ON HANDLING THE OPTICAL PICK-UP BLOCK OR BASE UNIT

The laser diode in the optical pick-up block may suffer electrostatic break-down because of the potential difference generated by the charged electrostatic load, etc. on clothing and the human body. During repair, pay attention to electrostatic break-down and also use the procedure in the printed matter which is included in the repair parts.
The flexible board is easily damaged and should be handled with care.

NOTES ON LASER DIODE EMISSION CHECK

The laser beam on this model is concentrated so as to be focused on the disc reflective surface by the objective lens in the optical pick-up block. Therefore, when checking the laser diode emission, observe from more than 30 cm away from the objective lens.

LASER DIODE AND FOCUS SEARCH OPERATION CHECK

Carry out the “S curve check” in “CD section adjustment” and check that the S curve waveforms is output three times.

UNLEADED SOLDER

Boards requiring use of unleaded solder are printed with the lead-free mark (LF) indicating the solder contains no lead.
(Caution: Some printed circuit boards may not come printed with the lead free mark due to their particular size)




LF : LEAD FREE MARK

Unleaded solder has the following characteristics.


- Unleaded solder melts at a temperature about 40 °C higher than ordinary solder.
Ordinary soldering irons can be used but the iron tip has to be applied to the solder joint for a slightly longer time.
Soldering irons using a temperature regulator should be set to about 350 °C .
Caution: The printed pattern (copper foil) may peel away if the heated tip is applied for too long, so be careful!
- Strong viscosity
Unleaded solder is more viscous (sticky, less prone to flow) than ordinary solder so use caution not to let solder bridges occur such as on IC pins, etc.
- Usable with ordinary solder
It is best to use only unleaded solder but unleaded solder may also be added to ordinary solder.

Service Position of the Tape Cassette Mechanism Deck

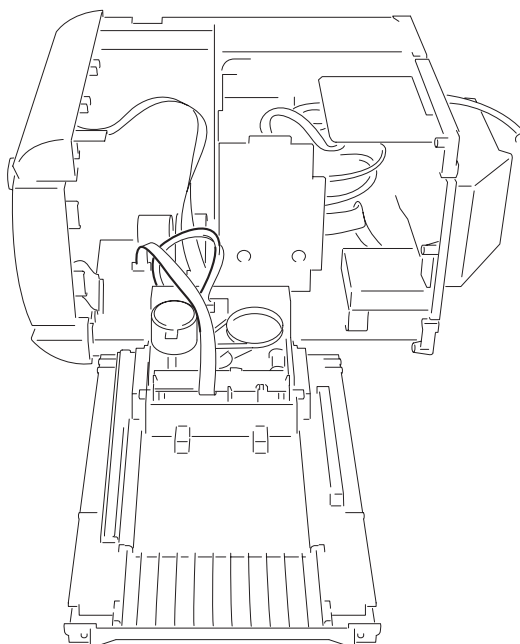

Service Position of the CD Mechanism Deck

*Connect jig (extension cable J-2501-248-A)
to the MAIN board (CN302) and CONNECTOR board (CN701).*

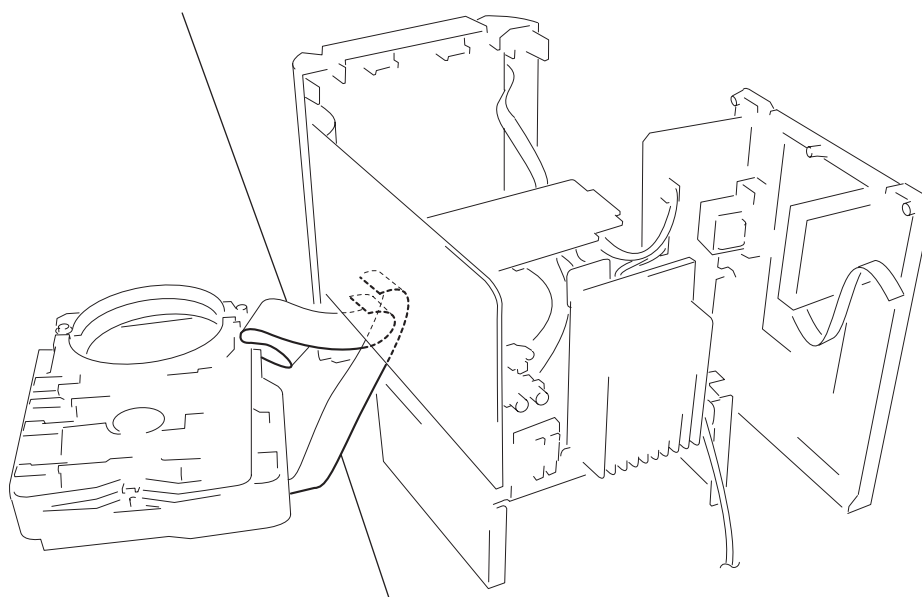

*Connect jig (extension cable J-2501-011-B)
to the MAIN board (CN301) and BD board (CN710).*

This section is extracted
from instruction manual.

List of button locations and reference pages

Main unit

ALPHABETICAL ORDER

A – G


- CD SYNC **9** (17)
- DIMMER **19** (23)
- DISC 1 – 5 **12** (9, 10, 11, 29)
- Disc slot **14**
- DISPLAY **6** (15, 22, 23, 29)
- Display window **3**
- FUNCTION **20** (9, 11, 16, 17, 25)
- GROOVE **17** (18)

P – Z

- PHONES jack **13**
- PLAY MODE **7** (9, 11, 16, 17, 21)
- PRESET EQ **18** (18)
- PRESET/ALBUM +/- **21** (10, 11, 13, 14)
- REC PAUSE/START **10** (17)
- Remote sensor **2**
- REPEAT **8** (11)
- Tape deck **4**
- TUNER/BAND **5** (13, 14, 17)
- TUNING +/- **11** (13, 14)
- VOLUME **16** (20)

BUTTON DESCRIPTIONS

- I/⏻ (power) **1** (7, 8, 14, 20, 21, 29)
- ⏮/⏭ (rewind/fast forward) **11** (10, 16)
- ⏮/⏭/⏭ (go back/go forward) **11** (8, 10, 11, 16, 20, 21)
- (stop) **5** (10, 16, 17, 21, 29)
- ⏸ (pause) **5** (10, 16)
- CD ▶ (play) **5** (10, 12)
- TAPE ◀▶ (play) **5** (16, 17, 21)
- DISC 1 ▲ – DISC 5 ▲ (eject) **15** (9, 10)

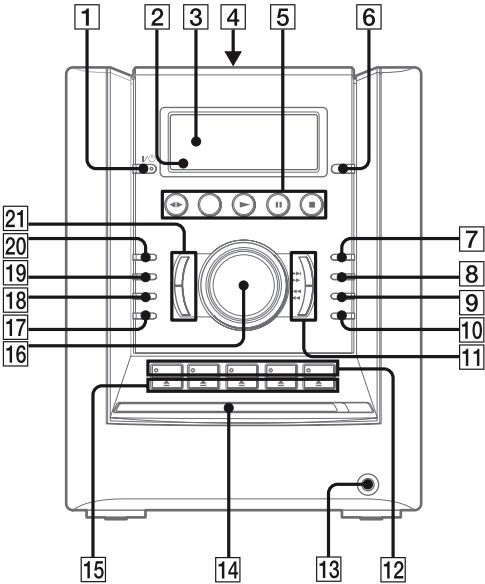

Remote control

ALPHABETICAL ORDER

A - G

ALBUM +/- [14] (10, 11)
 CD [19] (9, 11, 17)
 CLEAR [5] (12)
 CLOCK/TIMER SELECT [2] (21, 22)
 CLOCK/TIMER SET [3] (8, 20, 21)
 DISPLAY [6] (15, 22, 23, 29)
 D. SKIP [7] (10, 11)
 ENTER [16] (8, 11, 13, 20, 21)
 GAME (MD)*¹ [10] (17, 25)
 GROOVE [13] (18)

I - Z

ILLUMINATION*² [15]
 PLAY MODE [20] (9, 11, 16, 17, 21)
 PRESET EQ [17] (18)
 PRESET +/- [5] (13, 14)
 REPEAT/FM MODE [21] (11, 14)
 SLEEP [1] (20)
 SURROUND [11] (19)
 TAPE A/B*³ [9] (16, 17)
 TUNER BAND [18] (13, 14, 17)
 TUNER MEMORY [8] (13)
 TUNING +/- [5] (13, 14)
 VOL +/- [12] (20)


BUTTON DESCRIPTIONS

I/⏻ (power) [4] (7, 8, 20, 21, 29)
 ◀◀/▶▶ (rewind/fast forward) [5] (10, 16)
 ◀◀/▶▶ (go back/go forward) [5] (8, 10, 11, 16, 20, 21)
 ■ (stop) [5] (10, 16, 17, 21, 29)
 || (pause) [5] (10, 16)
 ▶ (play) [5] (10, 12, 16)

*¹ This button is used to switch to MD function.

*² This button cannot be used in this system.

*³ This button is used to switch to TAPE function.

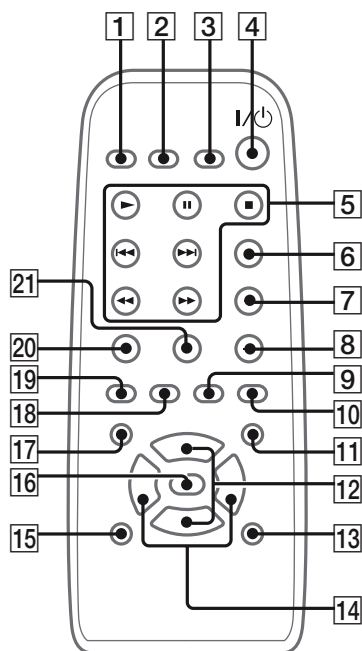

Setting the clock

Use buttons on the remote for the operation.

- 1** Press I/⏻ to turn on the system.
- 2** Press CLOCK/TIMER SET.
- 3** Press ◀◀/▶▶ repeatedly to set the hour.
- 4** Press ENTER.
- 5** Press ◀◀/▶▶ repeatedly to set the minute.
- 6** Press ENTER.
The clock starts working.

To adjust the clock


- 1** Press CLOCK/TIMER SET.
- 2** Press ◀◀/▶▶ to select "CLOCK SET", then press ENTER.
- 3** Do the same procedures as step 3 to 6 above.

Note

The clock settings are canceled when you disconnect the power cord or if a power failure occurs.


SECTION 3 DISASSEMBLY

- This set can be disassembled in the order shown below.

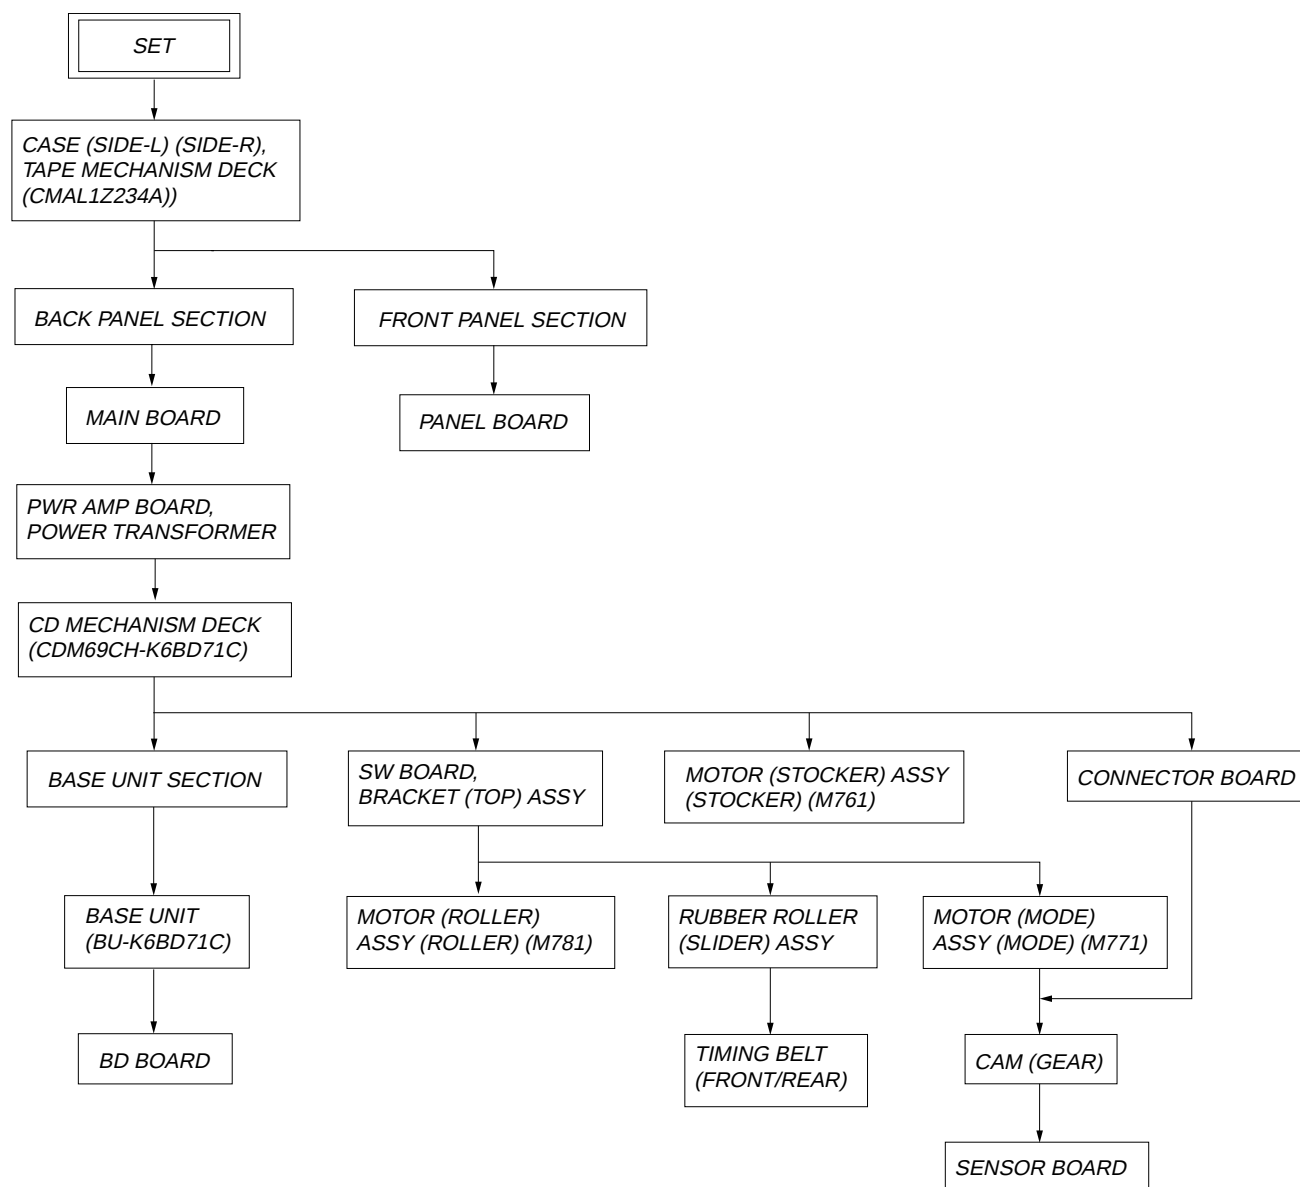


Note: Follow the disassembly procedure in the numerical order given.


3-1. Case (Side-L)(Side-R), Tape Mechanism Deck (CMAL1Z234A)

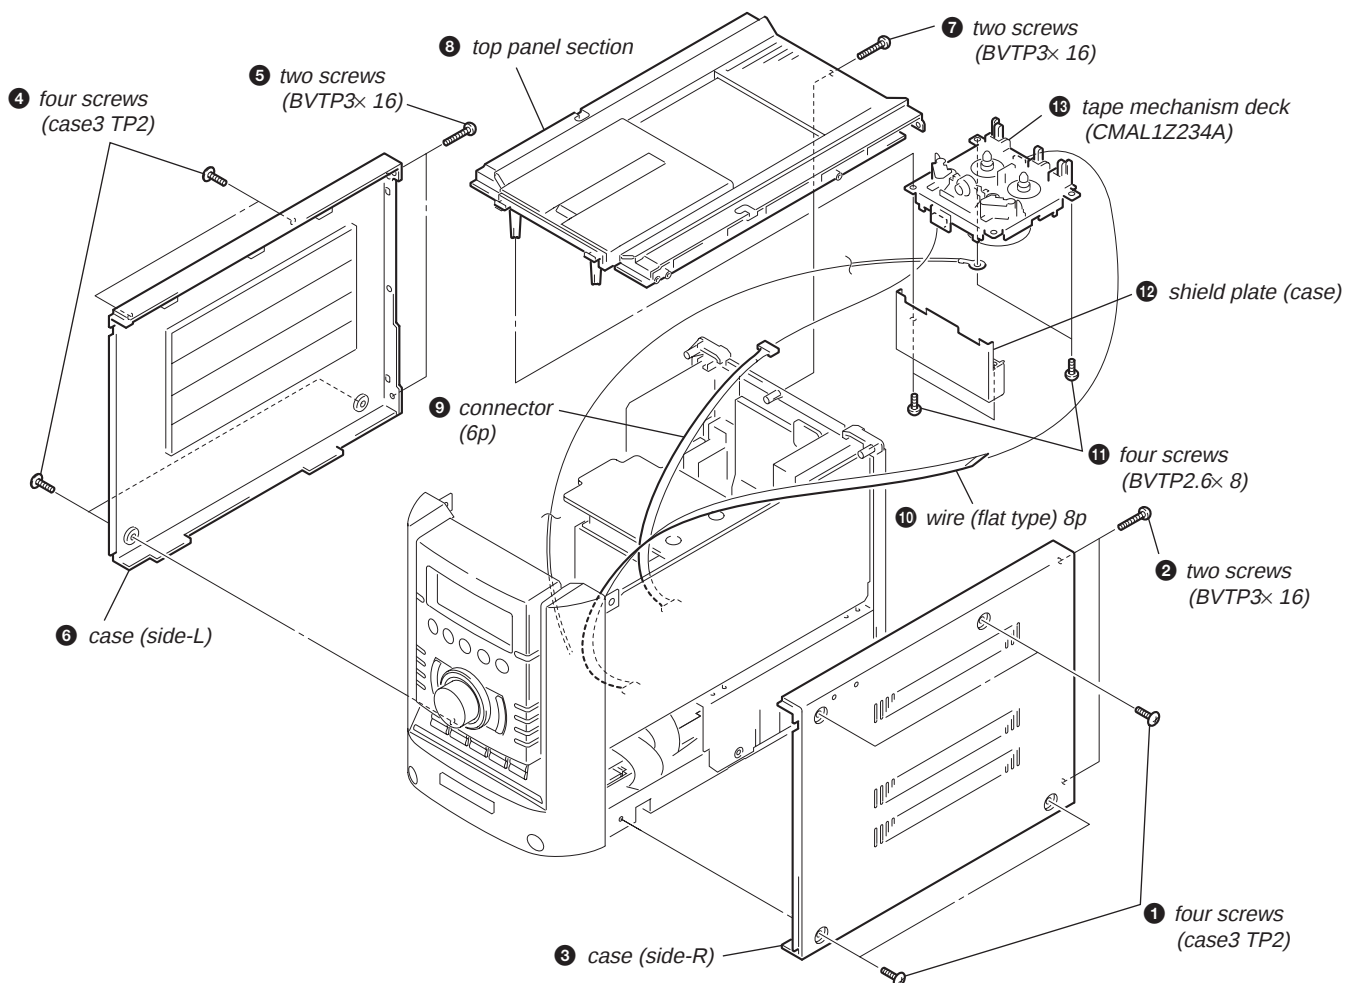


3-2. Front Panel Section

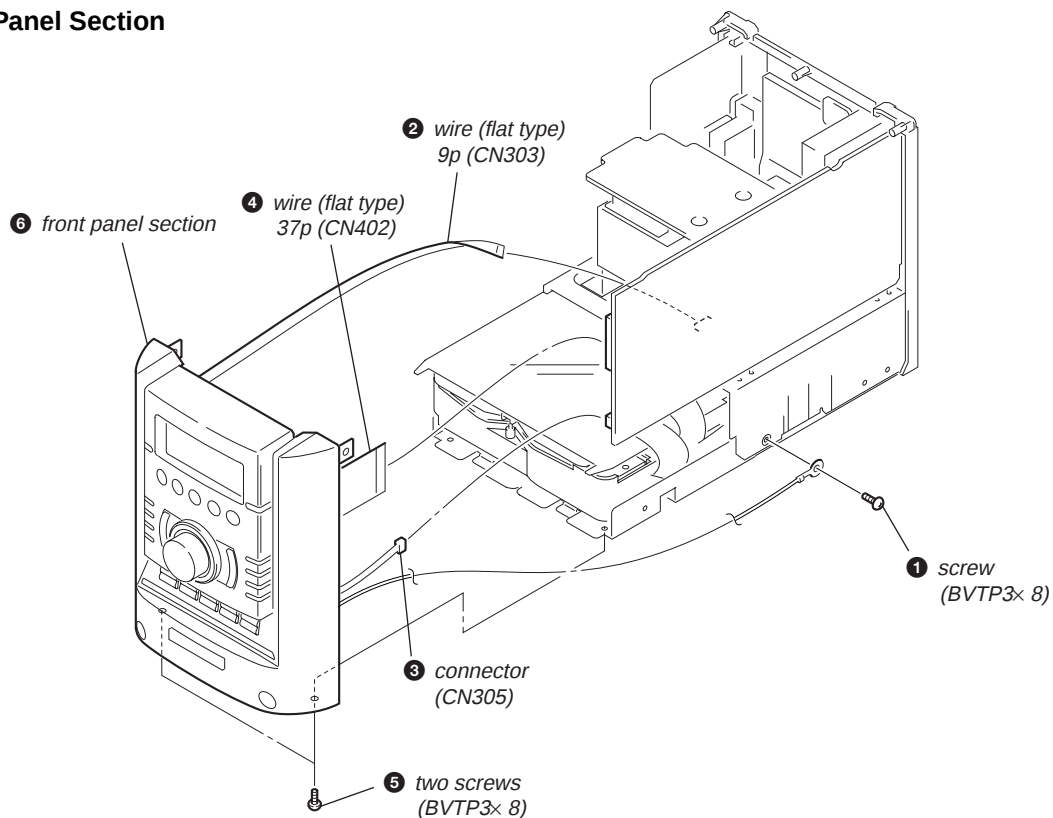


3-3. Panel Board

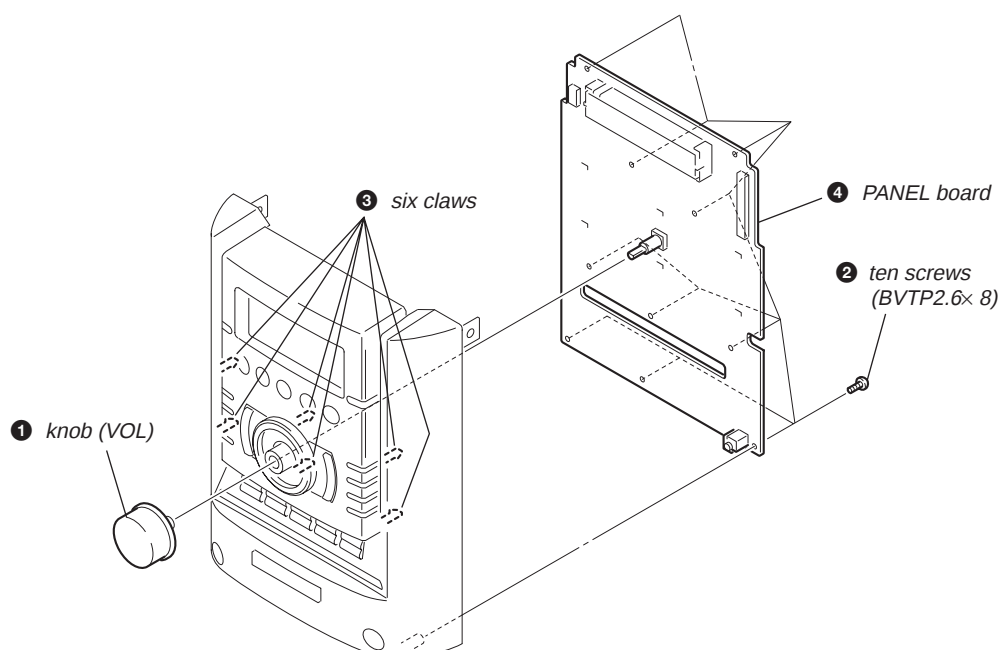


3-4. Back Panel Section

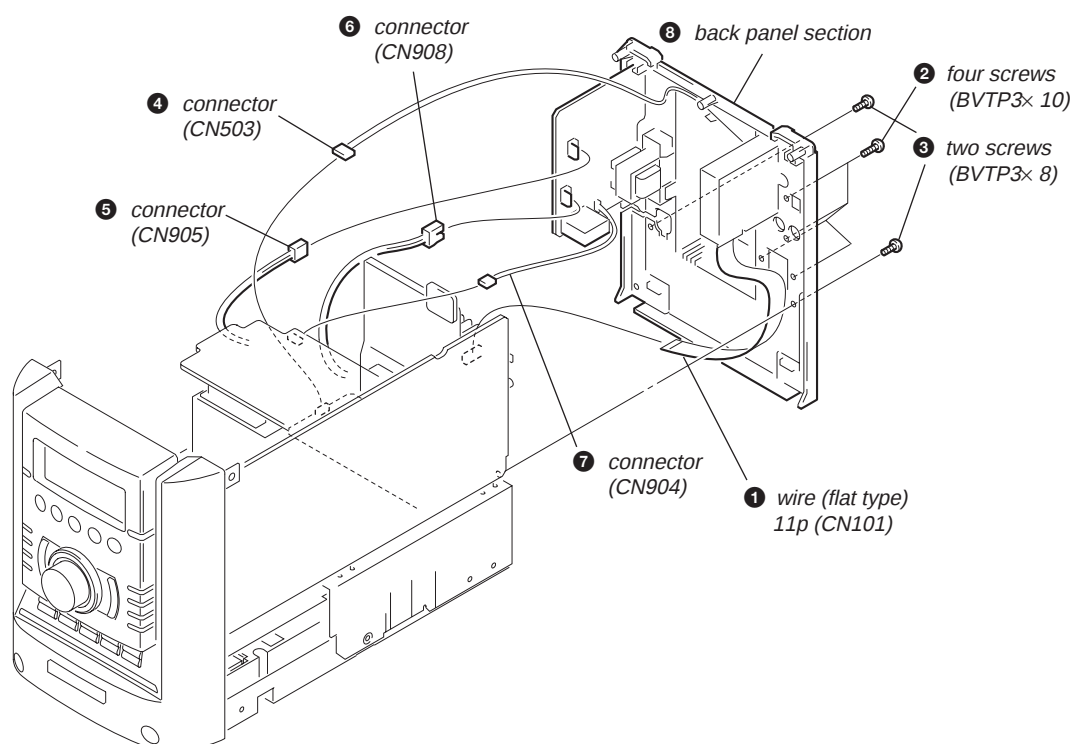


3-5. MAIN Board

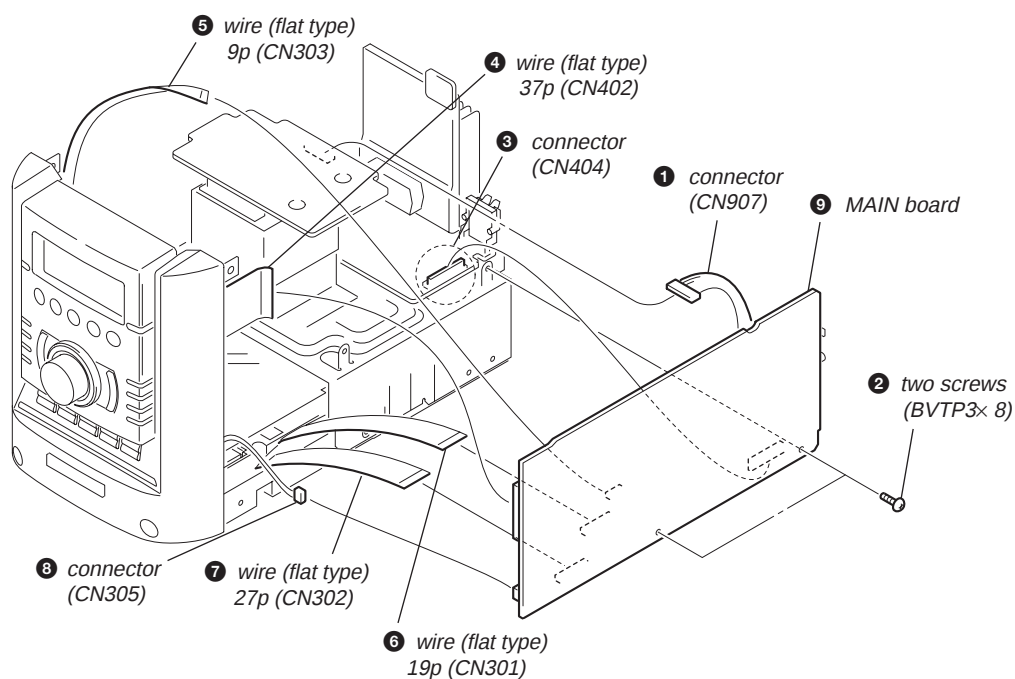


3-6. PWR AMP Board, Power Transformer

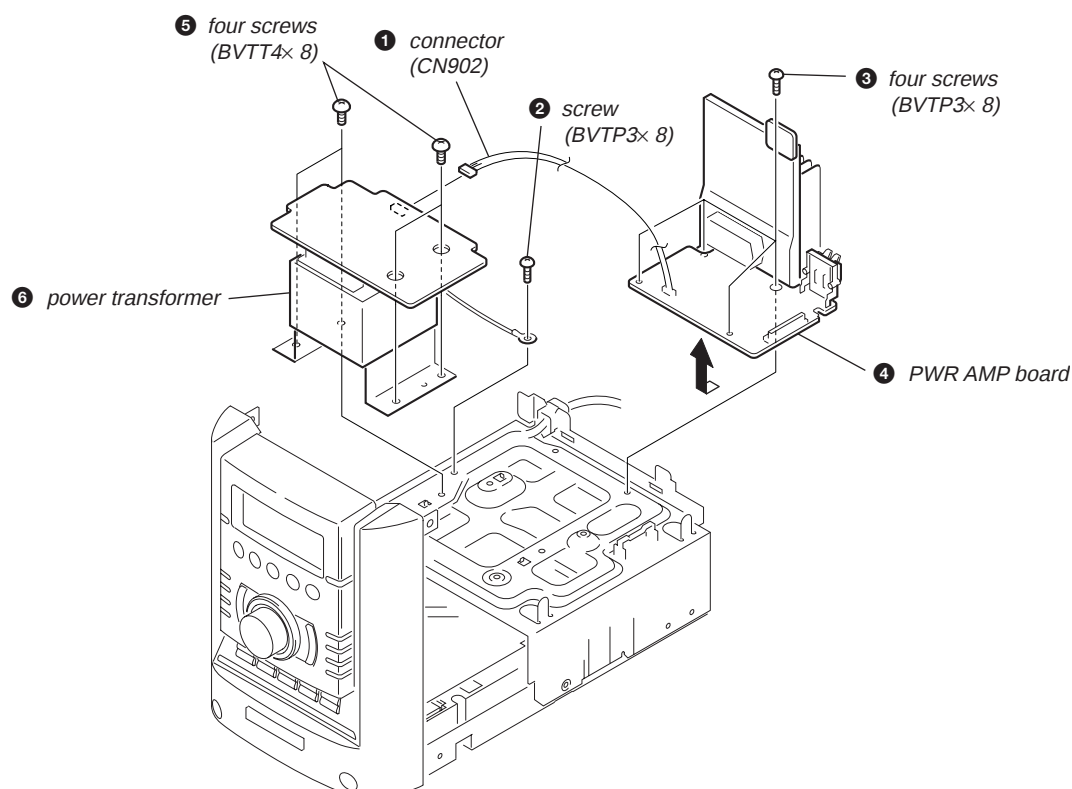


3-7. CD Mechanism Deck (CDM69CH-K6BD71C)

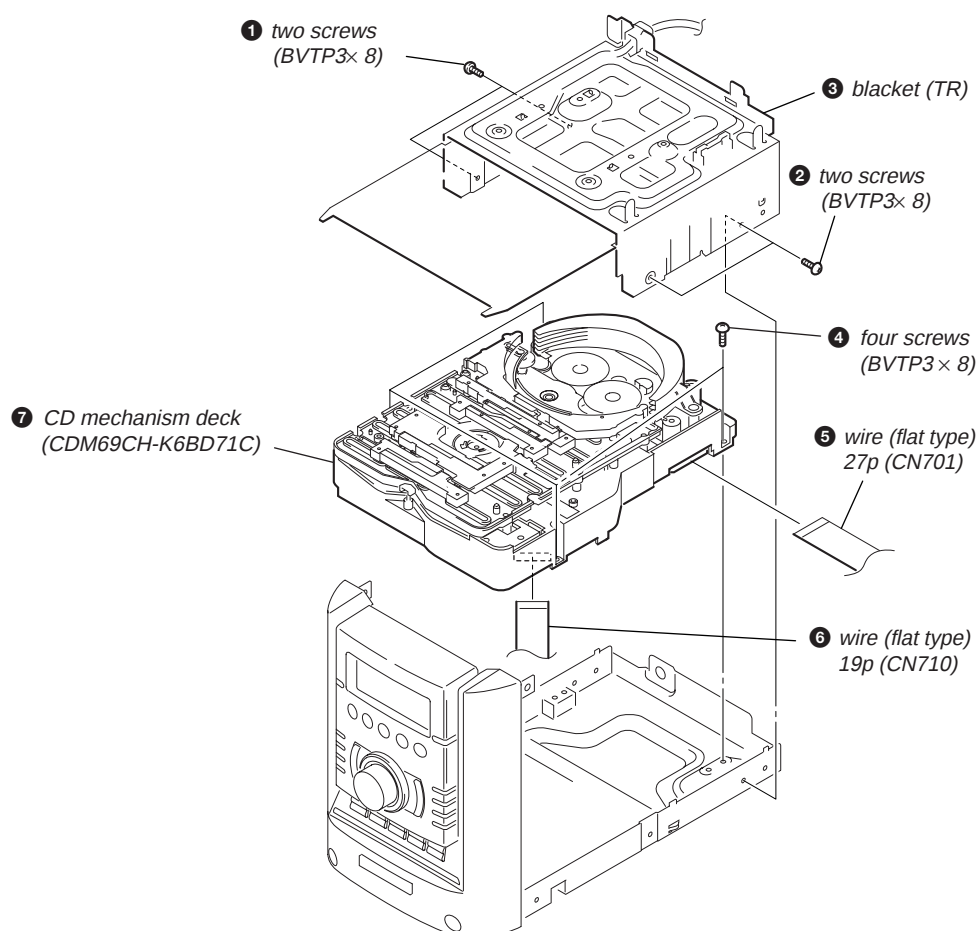


3-8. Base Unit Section

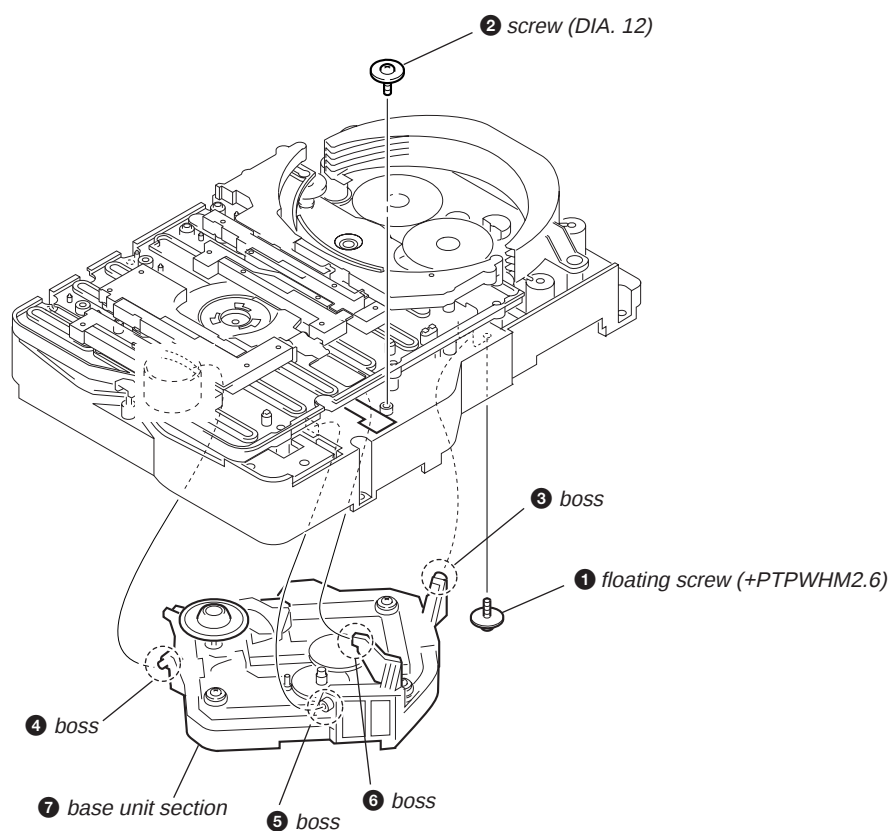


3-9. Base Unit (BU-K6BD71C)

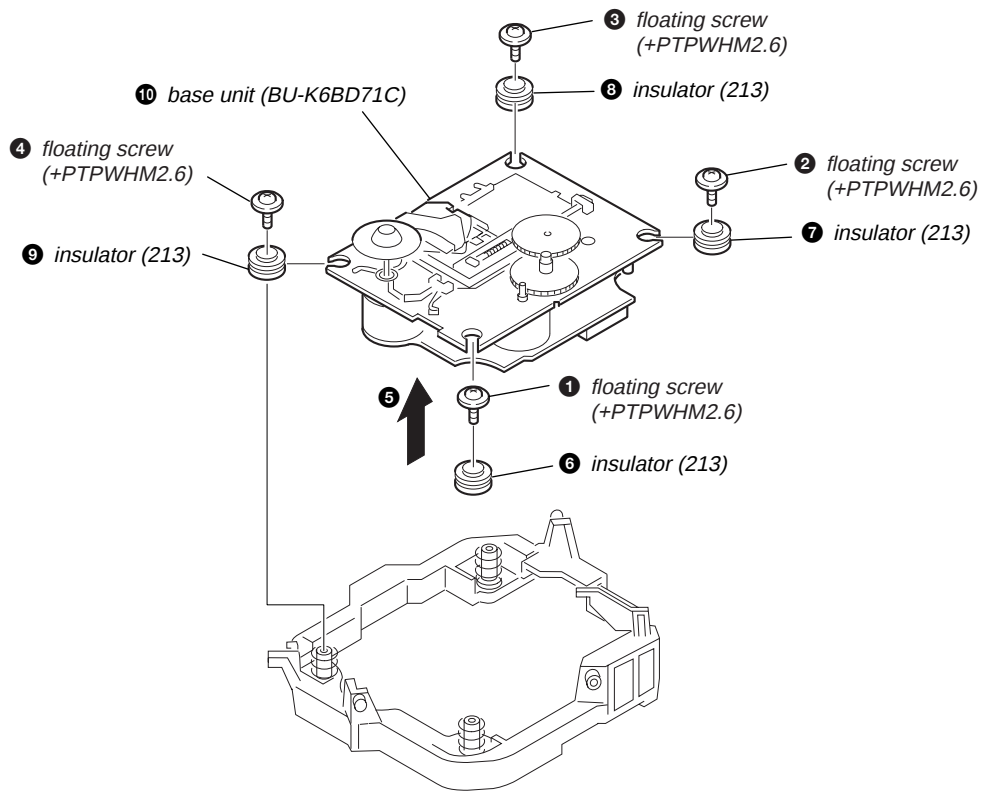


3-10. BD Board

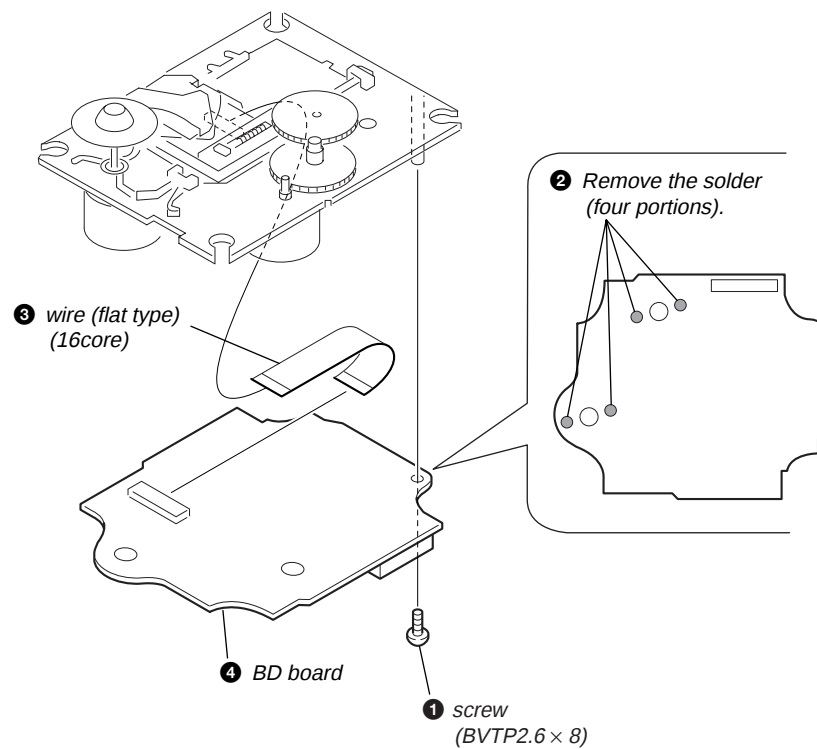


3-12. SW Board, Bracket (Top) Assy

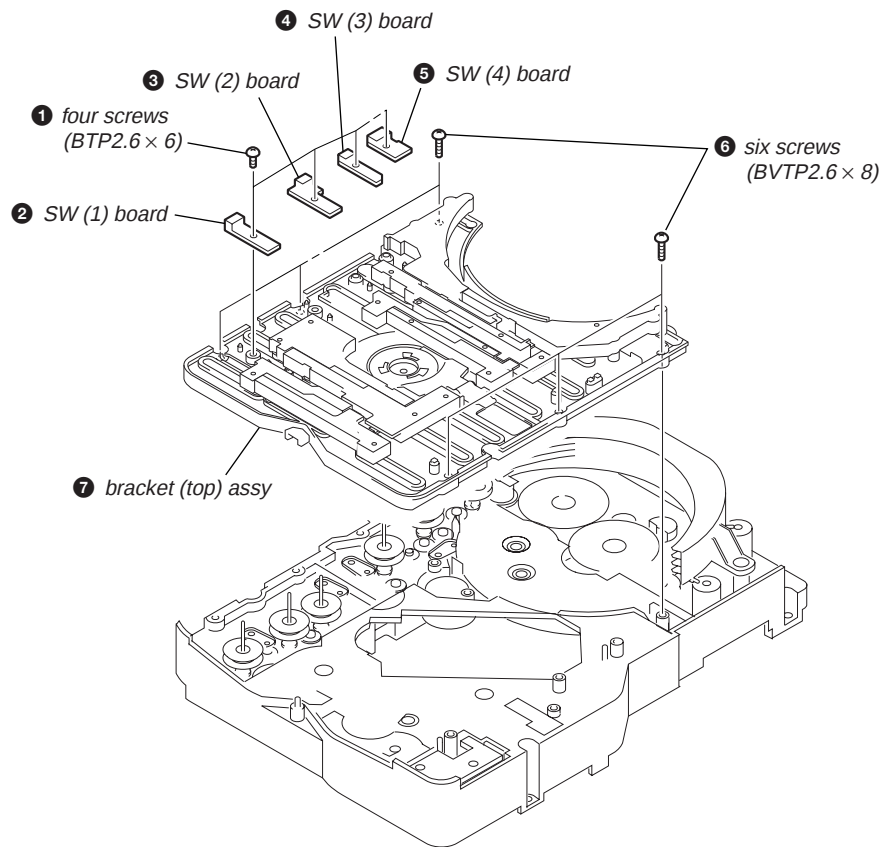


3-13. CONNECTOR Board

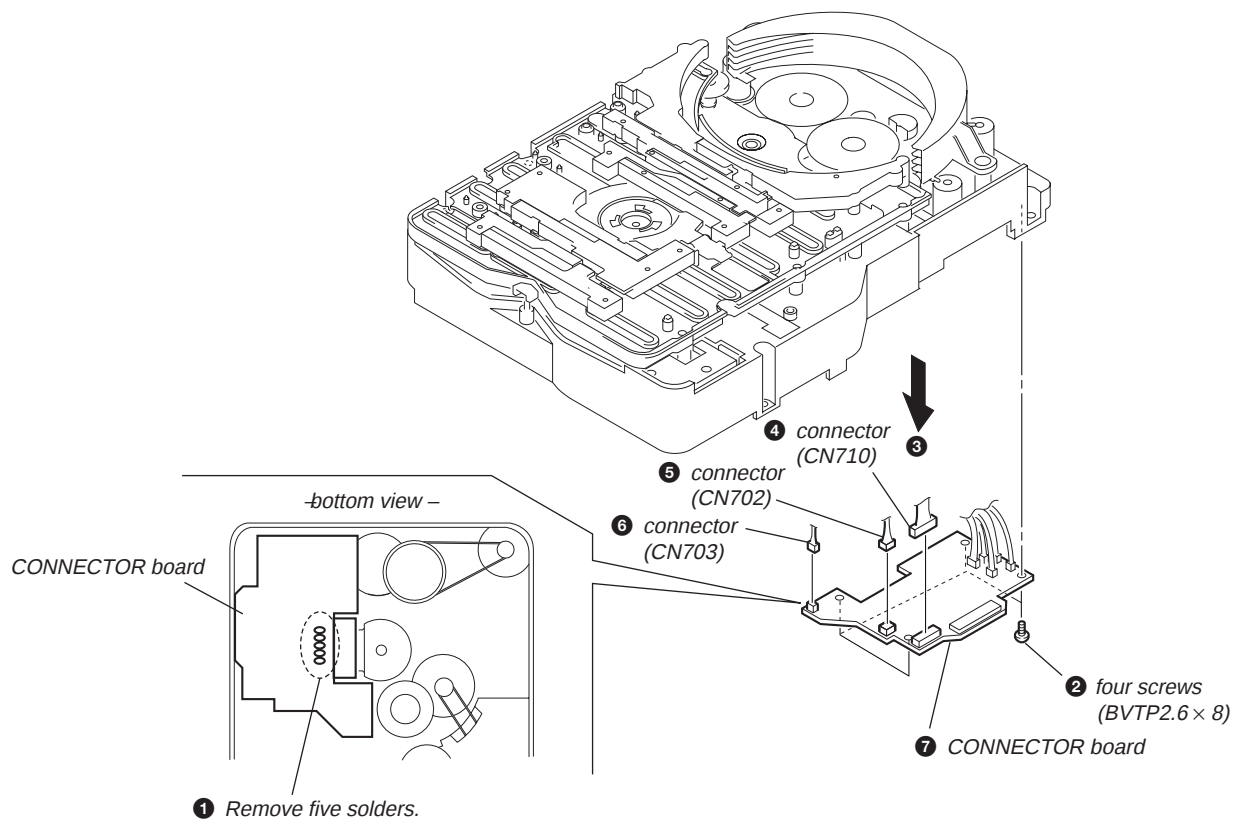


3-14. Motor (Stocker) Assy (Stocker)(M761)

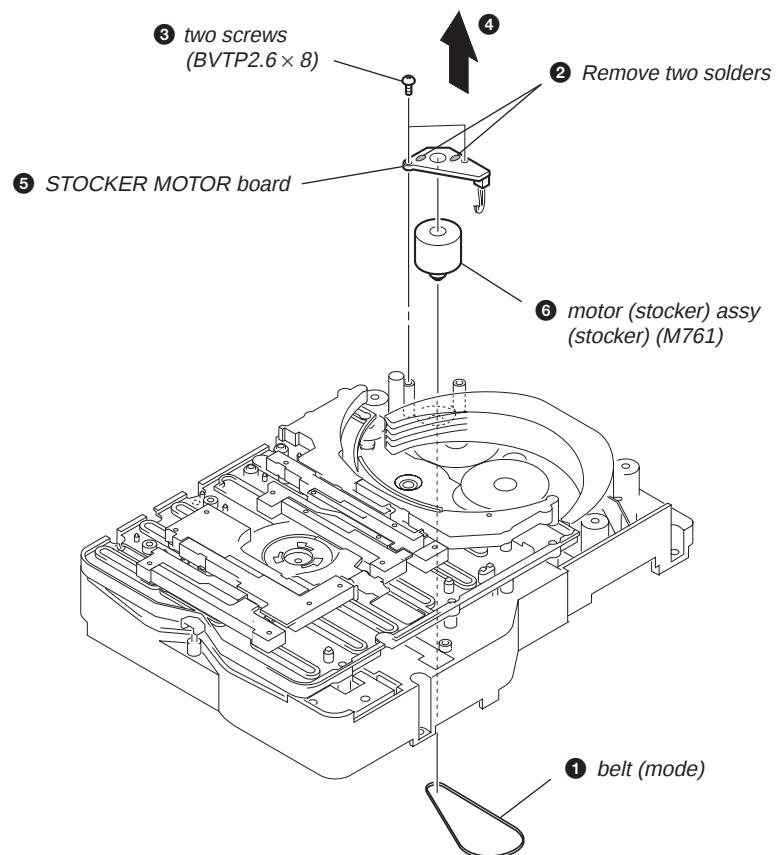


3-15. Motor (Roller) Assy (Roller)(M781)

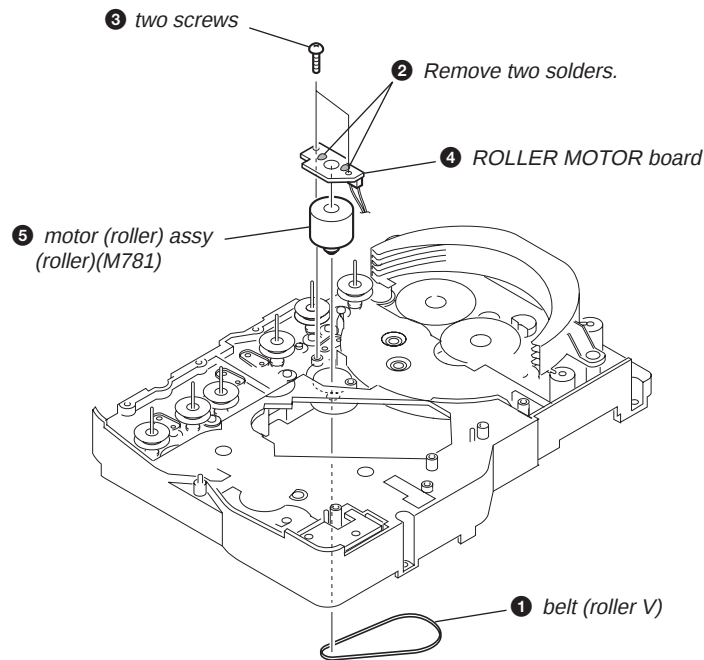


3-16. Motor (Mode) Assy (Mode)(M771)

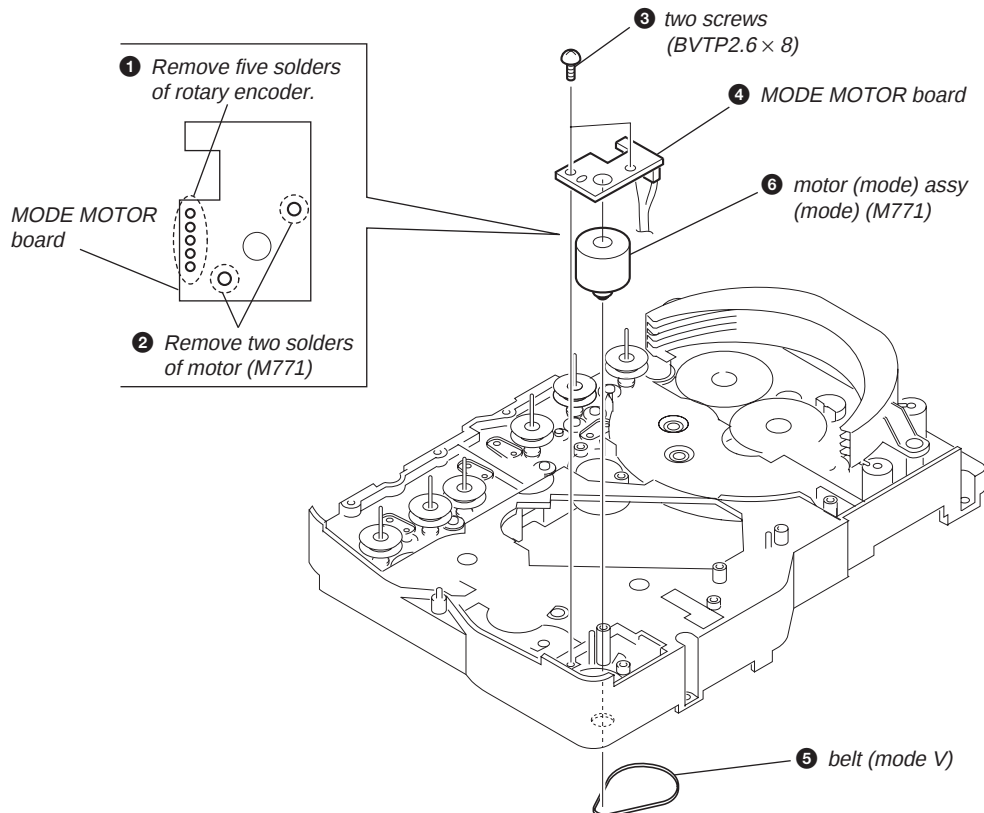


3-17. Rubber Roller (Slider) Assy

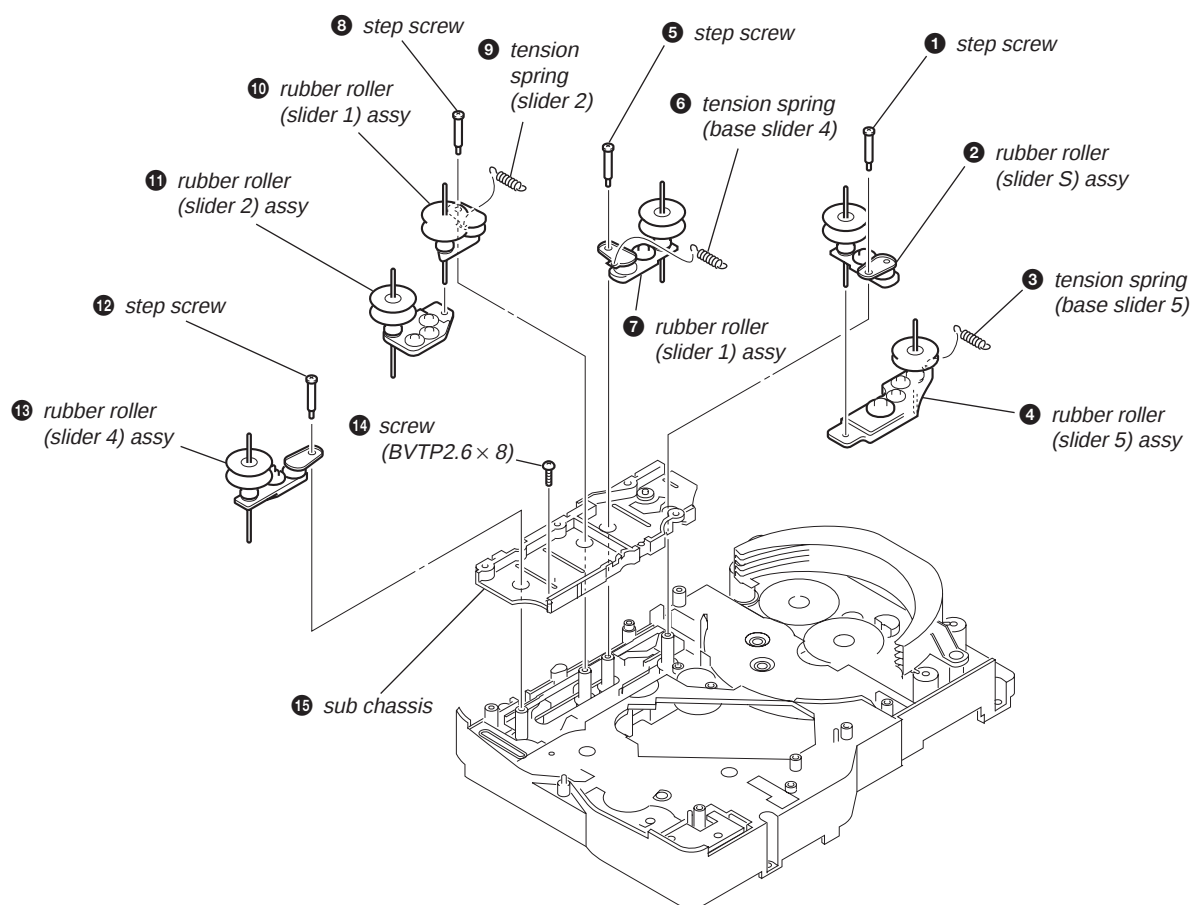

3-18. Timing Belt (Front/Rear)

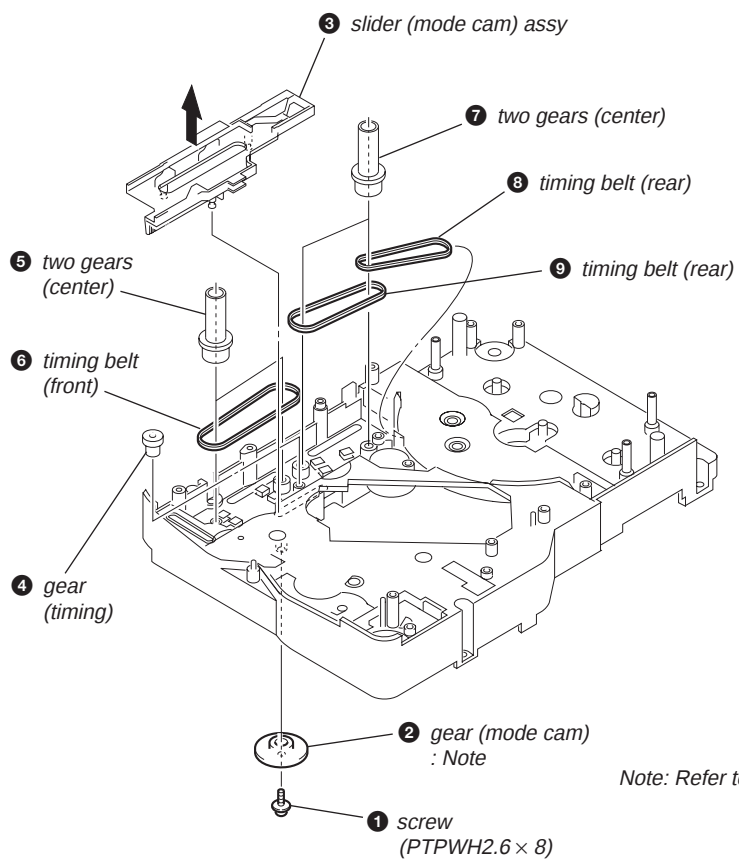


When install three timing belts, its pass under each claws.

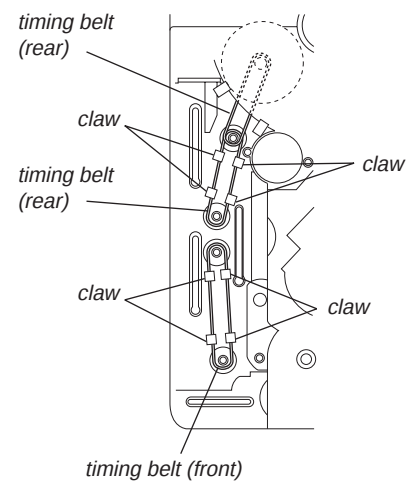


Note: Refer to assembly (Section 4)

3-19. Cam (Gear)

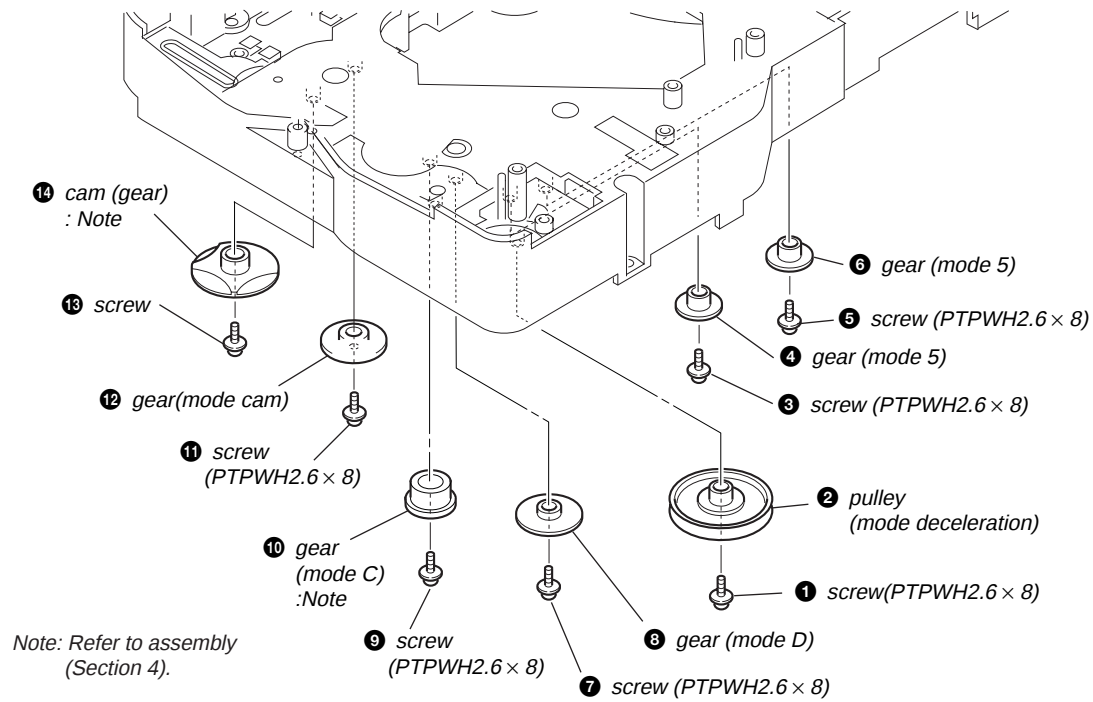

3-20. SENSOR Board

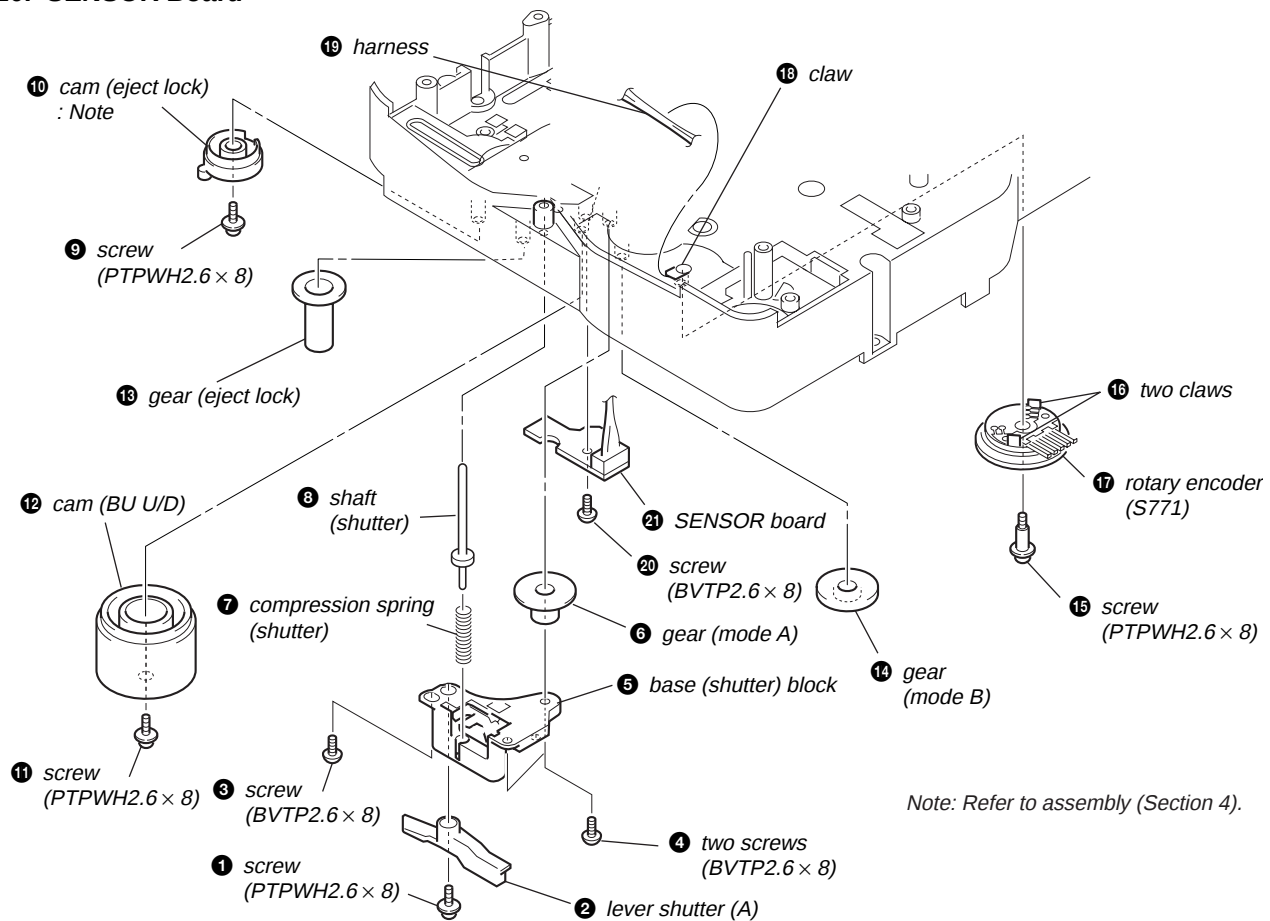


SECTION 4 ASSEMBLY

• This set can be assembled in the order shown below.

4-1. How to Install the Cam (Eject Lock)


- ❶ Rotate the cam (BU U/D) fully in the direction of arrow.
- ❷ Engage the gear (eject lock) and the gear of the cam (eject lock) aligning the mark with the center of the gear (eject lock).

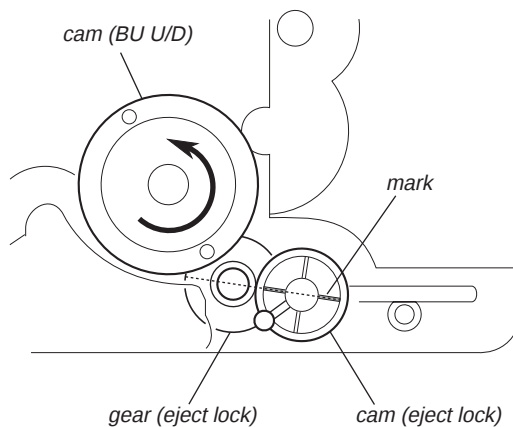

—bottom view •front—

4-2. How to Install the Cam (Gear)


- ❶ Check that the cam (BU U/D) can not be rotated in the direction of arrow.
- ❷ Align the mark on the cam (gear) with the boss as shown in the figure and install the cam (gear).

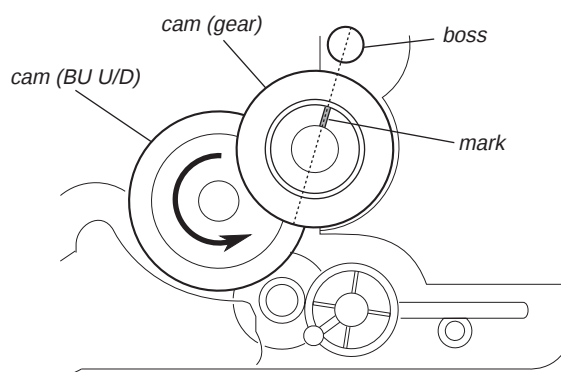

—bottom view •front—


4-3. How to Install the Gear (Mode C)

- ❶ Align the mark on the rotary encoder (S771) with the projection of the assy.
- ❷ Check that the cam (BU U/D) can not be rotated in the direction of arrow.
- ❸ Install the gear (mode C)

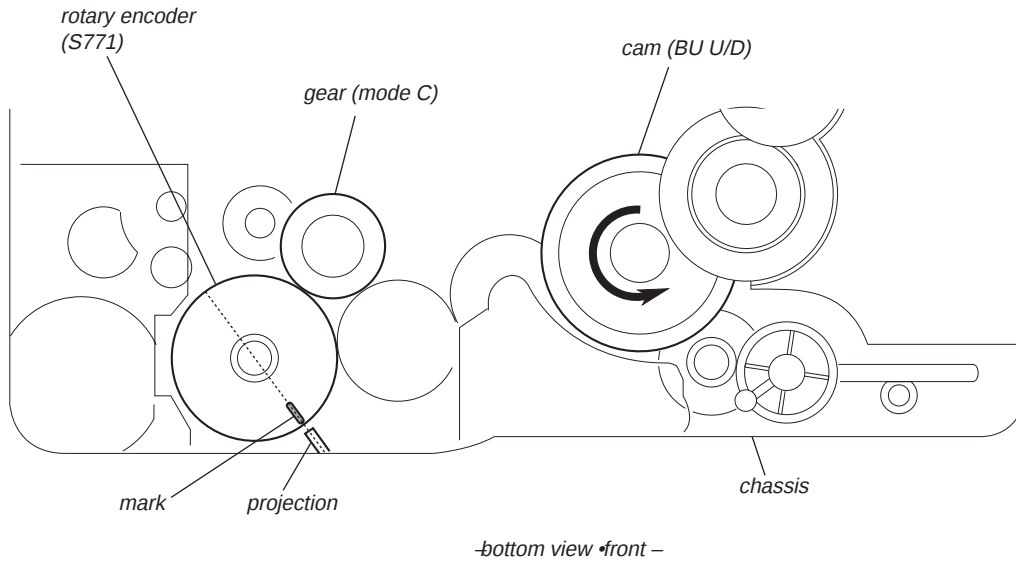


4-4. How to Install the Gear (Mode Cam)


- ❶ Slide the shaft in the direction of arrow.
- ❷ Align mark A on the gear (mode cam) with mark B on the slider (mode cam) assy, then install the gear (mode cam).
- ❸ Check that mark C on the gear (mode cam) is in alignment with mark D on the cam (gear).

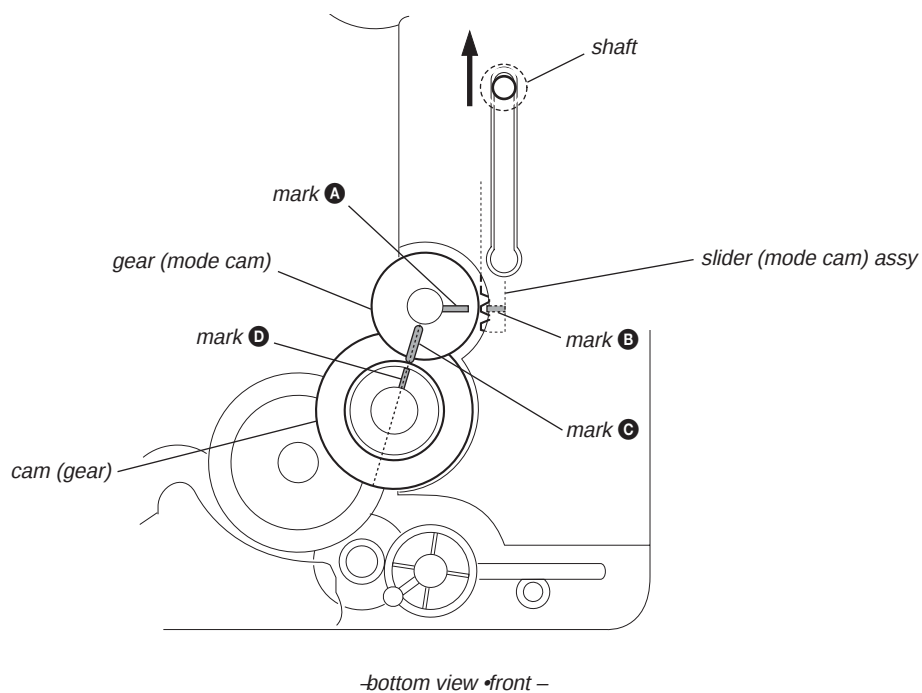

4-5. How to Install the Rotary Encoder (S702), Gear (Stocker Communication)

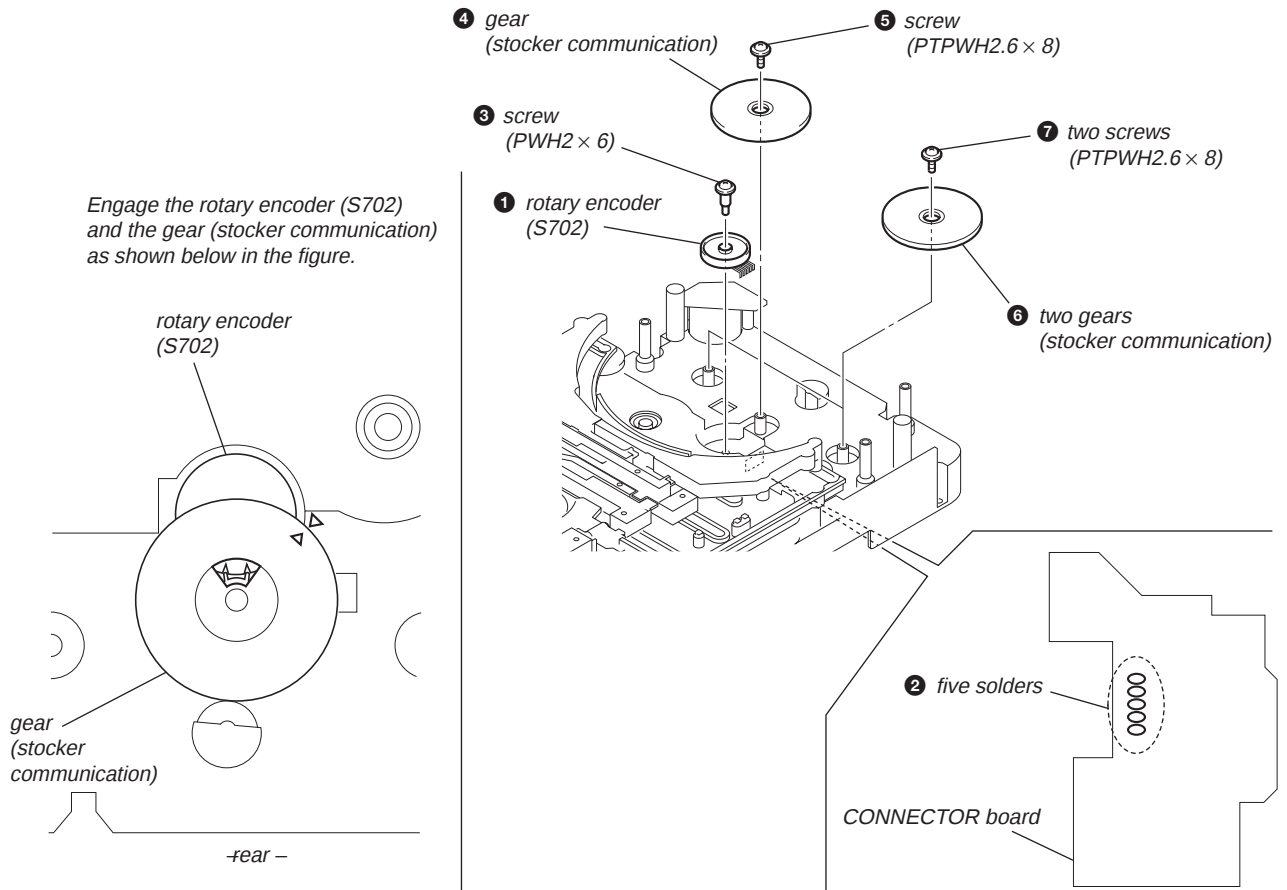

4-6. How to Install the Stocker Assy

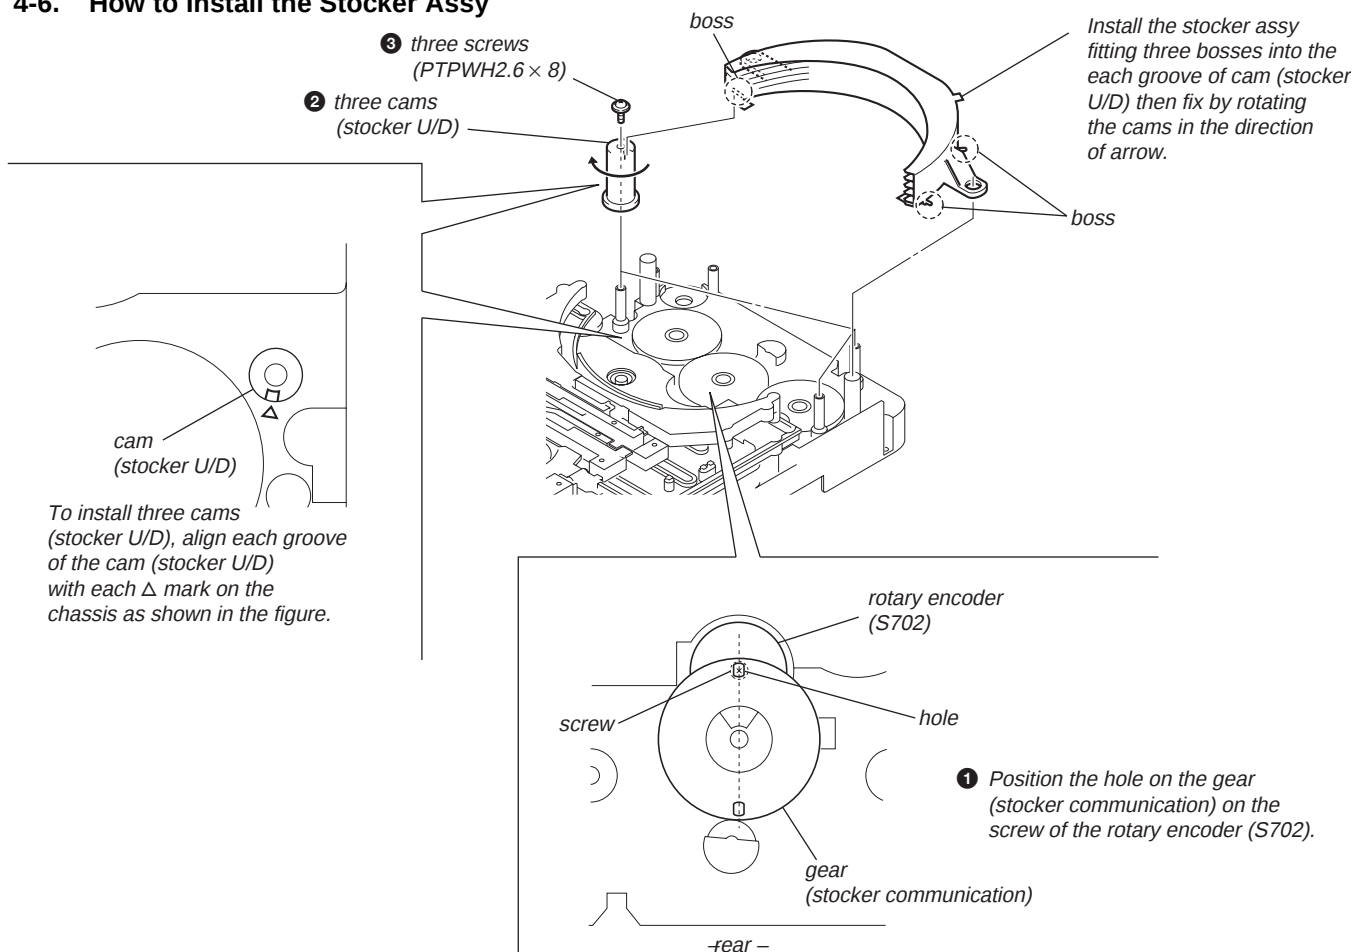

SECTION 5

TEST MODE

[AM Channel Step 9 kHz/10kHz Selection Mode]

* Either the 9 kHz step or 10 kHz step can be selected for the AM channel step.

Procedure:

1. Set the function to AM.
2. Press the  button to turn off the main power.
3. While depressing the  button, press the  button to turn on the main power.
4. Either the message “MW 9k STEP” or “MW10k STEP” appears, and thus the channel step is changed over.

[CD Ship Mode]

* This mode moves the optical pick-up to the position durable to vibration. Use this mode when returning the set to the customer after repair.

Procedure:

1. Press the  button to turn the set on.
2. Press the  (CD) button and the  button simultaneously.
3. After the message “STANDBY” blinks, “LOCK” is displayed on the fluorescent indicator tube, and the CD ship mode is set.

[Disc Tray Lock]

The disc tray lock function for the antitheft of an demonstration disc in the store is equipped.

Setting Procedure:

1. Press the  button to turn the set on.
2. Press two buttons of  and  (DISC 1) simultaneously for five seconds.
3. The message “LOCKED” is displayed and the tray is locked.

Releasing Procedure:

1. Press two buttons of  and  (DISC 1) simultaneously for five seconds again.
2. The message “UNLOCKED” is displayed and the tray is unlocked.

Note : When “LOCKED” is displayed, the tray lock is not released by turning power on/off with the  button.

[Cold Reset]

* The cold reset clears all data including preset data stored in the RAM to initial conditions. Execute this mode when returning the set to the customer.

Procedure:

1. Press three buttons  ,  and  simultaneously.
2. The fluorescent indicator tube displays the message “COLD RESET” and the set is reset.

[Version and Destination Display Mode]

* The version or destination is displayed.

Procedure:

1. Press the  button to turn the set on.
2. To enter the test mode, press the three buttons  ,  and  simultaneously.
3. The model and destination is displayed. Example : “HP717 U”
4. Press the  and  buttons simultaneously.
5. The version is displayed. Example : “V1.09:2003:02.04”
6. To exit from this mode, press the three buttons  ,  and  simultaneously, or press the  button to turn the set off.

[Panel Test Mode]

* All fluorescent segments, LEDs, keys, volume and headphone detection are tested.

Procedure:

1. Press the  button to turn the set on.
2. To enter the test mode, press three buttons  ,  and  simultaneously. All segments and LEDs are turned on.
3. Press the  and  buttons simultaneously. In this key code display mode, the fluorescent indicator displays “KEY 0 0 0”. Each time a button is pressed, the key code is displayed.
4. Press the  and  buttons simultaneously. In this key count mode, the fluorescent indicator displays “KEYCNT 0 1”. Each time a button is pressed, “KEYCNT 0 X” value increases. However, once a button is pressed, it is no longer taken into account.
5. Press the  and  buttons simultaneously. When a headphone jack is not inserted, “H_P RELEASE” is displayed. When a headphone jack is inserted, “H_P IN” is displayed.
6. When the  knob is not rotated, “VOLUME FLAT” is displayed. The message “VOLUME UP” is displayed, when the  knob is rotated clockwise. The message “VOLUME DOWN” is displayed, when the  knob is rotated counterclockwise.
7. To exit from this mode, press three buttons  ,  and  simultaneously.

[MC Test Mode]

* This mode is used to check the function of the amplifier.

Procedure:

1. Press the  button to turn the set on.
2. To enter the test mode, press the three buttons  ,  and  simultaneously.
3. The message “VOLUME MIN”, “VOLUME 16” or “VOLUME MAX” is displayed, when turning the  knob clockwise or counterclockwise.
4. Each time the  button is pressed, the message “GEQ MAX” or “GEQ MIN” is displayed. The function of the equalizer is set to maximum or minimum.
5. The message “GEQ FLAT” is displayed, when pressing the  button. The function of the equalizer is set to flat.
6. Each time the  button is pressed, the message “VACS OFF” or “VACS ON” is displayed.
7. Automatic recording/playback : Press the  button when a tape is inserted, recording is started and the input source function is selected to “MD” automatically.
8. When the  button is pressed, tape is rewound , stops at around the record-starting position and playback is started automatically.
9. To exit from this mode, press the  button to turn the set off.

SECTION 6

MECHANICAL ADJUSTMENTS

[AMP Test Mode]

Procedure:

1. Press the  button to turn the set on.
2. To enter the test mode, press the three buttons ,  and  simultaneously.
3. The message "AMP TEST IN" is displayed.
4. Press the  and  buttons simultaneously. The VACS status and IC parameters are displayed. Example : "D: S: +4. 0. +2"
5. DBFB ON/OFF Function : Press the  button, "DBFB ON" or "DBFB OFF" is displayed.
6. SURROUND ON/OFF Function : Press the  button, "SURROUND ON" or "SURROUND OFF" is displayed.
7. To exit from this mode, press three buttons ,  and  simultaneously.

Note: Perform the Cold Reset to initialize the equalizer parameters.

[CD Service Mode]

* This mode can run the CD sled motor freely. Use this mode, for instance, when cleaning the pickup.

Procedure:

1. Press  button to turn the set on.
2. Set the function to CD.
3. Press three buttons ,  and  simultaneously.
4. The CD service mode is selected.
5. Press  button to move the pickup to outside track, or press  button to inside track.
6. To exit from this mode, perform as follows:
 - 1) Move the pickup to the most inside track.
 - 2) Perform the Cold Reset.

Note: Do not run the sled motor excessively, otherwise the gear can be chipped.

• TAPE MECHANISM DECK SECTION

Precaution

1. Clean the following parts with a denatured alcohol-moistened swab:

record/playback heads	pinch rollers
erase head	rubber belts
capstan	idlers
2. Demagnetize the record/playback head with a head demagnetizer.
3. Do not use a magnetized screwdriver for the adjustments.
4. After the adjustments, apply suitable locking compound to the parts adjusted.
5. The adjustments should be performed with the rated power supply voltage unless otherwise noted.

Torque Measurement

Mode	Torque meter	Meter reading
FWD	CQ-102C	2.94 – 7.84 mN • m (30 to 79 g • cm) (0.42 – 1.11 oz • inch)
FWD back tension	CQ-102C	0.15 – 0.6 mN • m 2 to 6 g • cm (0.03 – 0.08 oz • inch)
REV	CQ-102RC	2.94 – 7.84 mN • m (30 to 79 g • cm) (0.42 – 1.11 oz • inch)
REV back tension	CQ-102RC	0.15 – 0.6 mN • m 2 to 6 g • cm (0.03 – 0.08 oz • inch)
FF/REV	CQ-201B	6.86 – 17.64 mN • m (70 to 179 g • cm) (0.98 – 2.49 oz • inch)
FWD tension	CQ-403A	9.8 mN • m more (100 • cm or more) (1.4 oz • inch or more)
REV tension	CQ-403R	9.8 mN • m more (100 • cm or more) (1.4 oz • inch or more)

SECTION 7 ELECTRICAL ADJUSTMENTS

DECK SECTION

0 dB=0.775 V

Note: Confirm each contents of this section first of all. If the results are not satisfied, do the adjustment.


1. Demagnetize the record/playback head with a head demagnetizer.
2. Do not use a magnetized screwdriver for the adjustments.
3. After the adjustments, apply suitable locking compound to the parts adjust.
4. The adjustments should be performed with the rated power supply voltage unless otherwise noted.
5. The adjustments should be performed in the order given in this service manual. (As a general rule, playback circuit adjustment should be completed before performing recording circuit adjustment.)
6. The adjustments should be performed for both L-CH and R-CH.
7. Switches and controls should be set as follows unless otherwise specified.

• Test Tape


Tape	Signal	Used for
P-4-A63J	10 kHz, -10 dB	Azimuth Adjustment

Record/Playback Head Azimuth Adjustment**Procedure:**



1. Mode: Playback

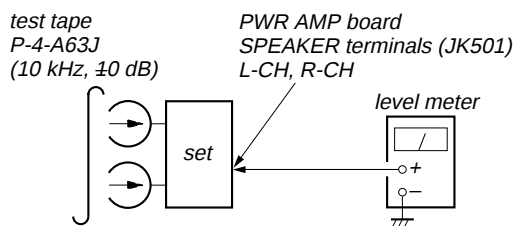


2. Turn the adjustment screw and check output peaks. If the peaks do not match for L-CH and R-CH, turn the adjustment screw so that outputs match within 1dB of peak.

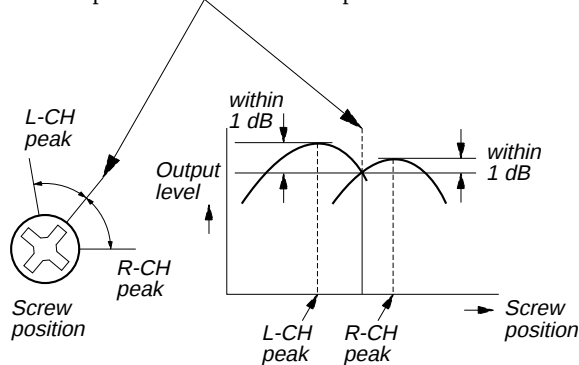

3. Mode: Playback

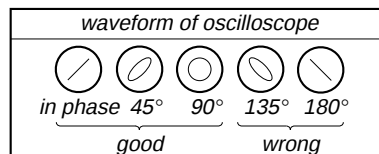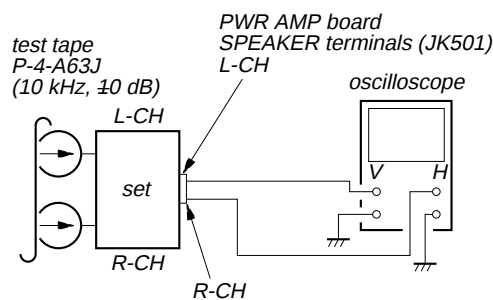


4. Repeat step 1 to 3 in playback (REV) mode.
5. After the adjustments, apply suitable locking compound to the parts adjusted.


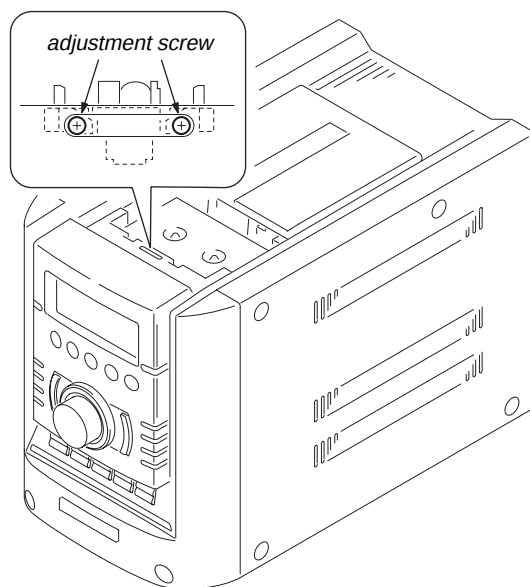
Adjustment Location : Record/Playback/Erase Head

CD SECTION**Note:**

1. CD Block is basically constructed to operate without adjustment.
2. Use YEDS-18 disc (3-702-101-01) unless otherwise indicated.
3. Use an oscilloscope with more than 10 M Ω impedance.
4. Clean the object lens by an applicator with neutral detergent when the signal level is low than specified value with the following checks.
5. Check the focus bias check when optical block is replaced.


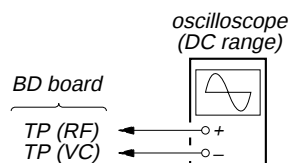
Focus Bias Check**Procedure :**

1. Connect oscilloscope to TP (RF) and TP (VC) on the BD board.
2. Press the  button to turn the power on.
3. Put disc (YEDS-18) in and press the  (CD) button to play-back.
4. Confirm that oscilloscope waveform is as shown in the figure below. (eye pattern)
A good eye pattern means that the diamond shape ($\diamond$) in the center of the waveform can be clearly distinguished.

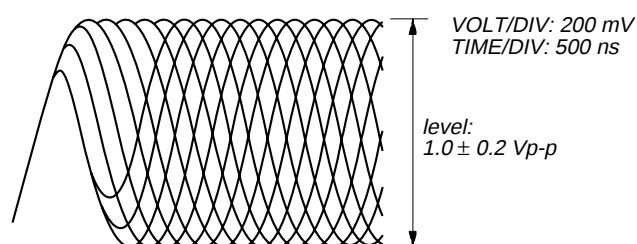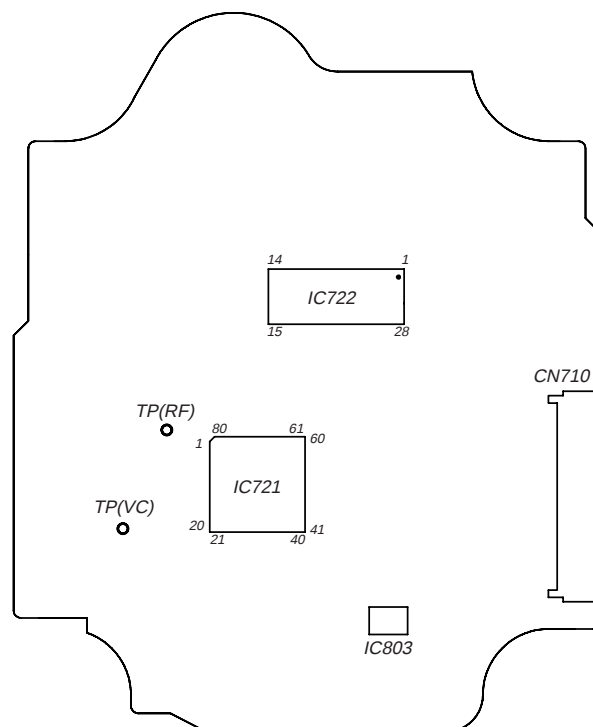**Checking Location:****– BD BOARD (Conductor Side) –**

SECTION 8 DIAGRAMS

• Circuit Boards Location

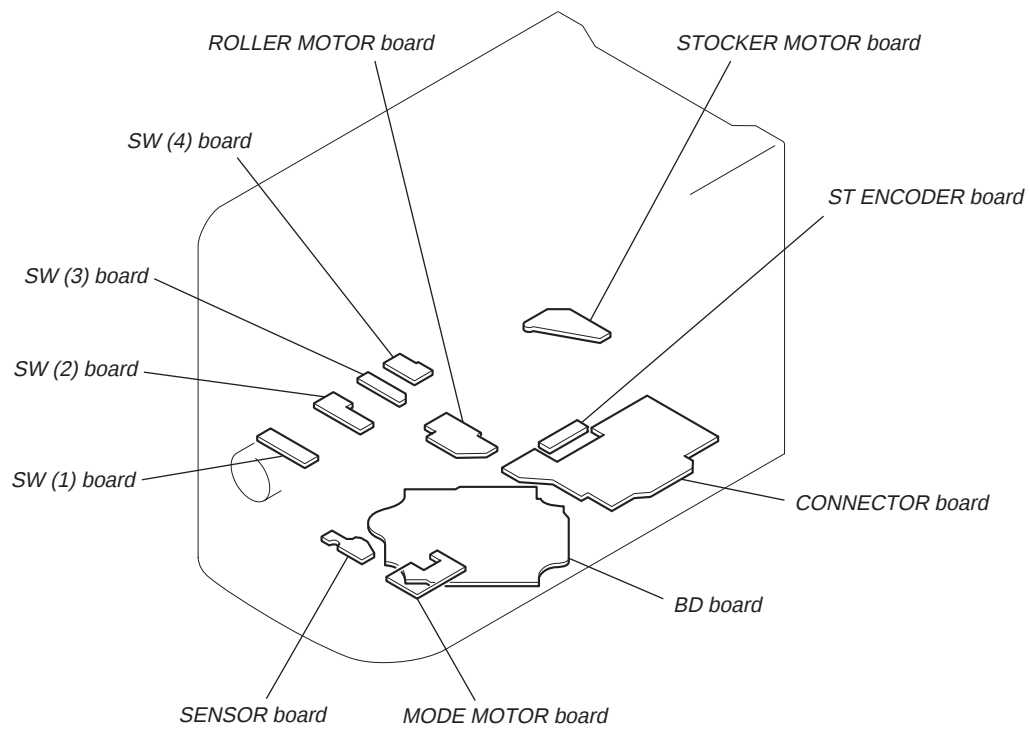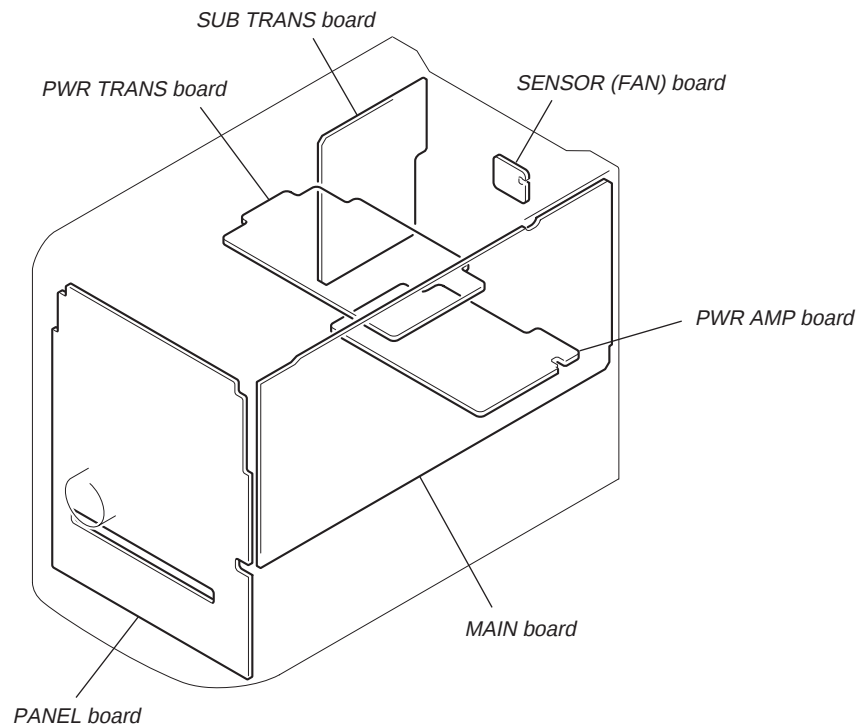

THIS NOTE IS COMMON FOR PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS.
(In addition to this, the necessary note is printed in each block.)

For schematic diagrams.

- Note:**
- All capacitors are in μF unless otherwise noted. pF : $\mu\mu\text{F}$ 50 WV or less are not indicated except for electrolytics and tantalums.
 - All resistors are in Ω and $\frac{1}{4}\text{W}$ or less unless otherwise specified.
 - Δ : internal component.
 -  : nonflammable resistor.
 -  : fusible resistor.
 -  : panel designation.

Note:
The components identified by mark Δ or dotted line with mark Δ are critical for safety.
Replace only with part number specified.

Note:
Les composants identifiés par une marque Δ sont critiques pour la sécurité.
Ne les remplacer que par une pièce portant le numéro spécifié.





-  : B+ Line.
-  : B-Line.
- V oltages and waveforms are dc with respect to ground under no-signal (detuned) conditions.
 - * : Impossible to measure
- V oltages are taken with a VOM (Input impedance $10\text{ M}\Omega$). Voltage variations may be noted due to normal production tolerances.
- W aveforms are taken with a oscilloscope.
- W aveforms are taken with a oscilloscope. Voltage variations may be noted due to normal production tolerances.
- Circled numbers refer to waveforms.
- Signal path.
 -  : TUNER
 -  : CD
 -  : MD
 -  : PB (TAPE)
 -  : REC (TAPE)
 -  : DIGITAL OUT
- A bbreviation
 - AUS : Australian model.
 - CND : Canadian model.
 - E2 : 120 V AC area in E model.
 - E3 : 220-240 V AC area in E model.
 - KR : Korean model.
 - MX : Mexican model.
 - RU : Russian model.
 - TH : Thai model.
 - TW : Taiwan model.

For printed wiring boards.


- Note:**
-  : parts extracted from the component side.
 -  : parts extracted from the conductor side.
 - Δ : internal component.
 -  : Pattern from the side which enables seeing.

Caution:
Pattern face side: Parts on the pattern face side seen from the pattern face are indicated.
Parts face side: Parts on the parts face side seen from the parts face are indicated.


• Indication of transistor

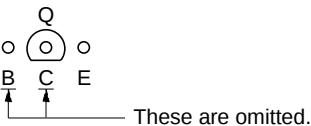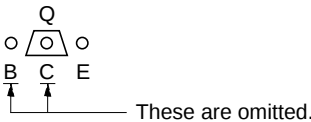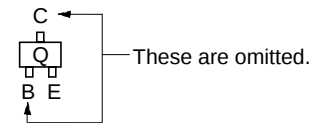


• Waveforms
– BD Board –

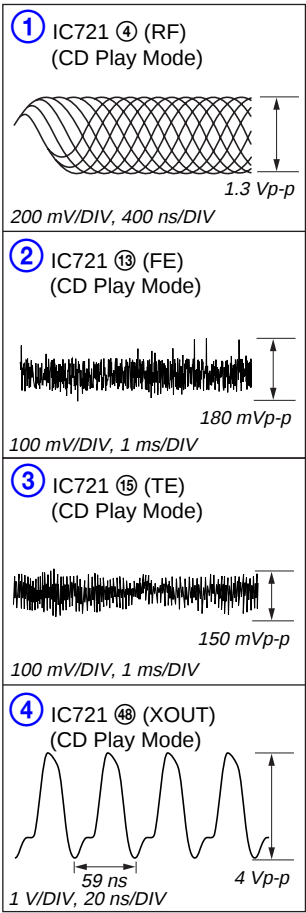


– PANEL Board –

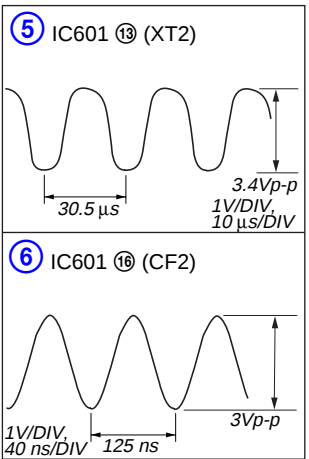


– MAIN Board –

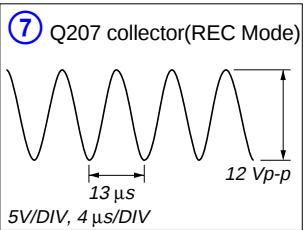

8-1. Block Diagram

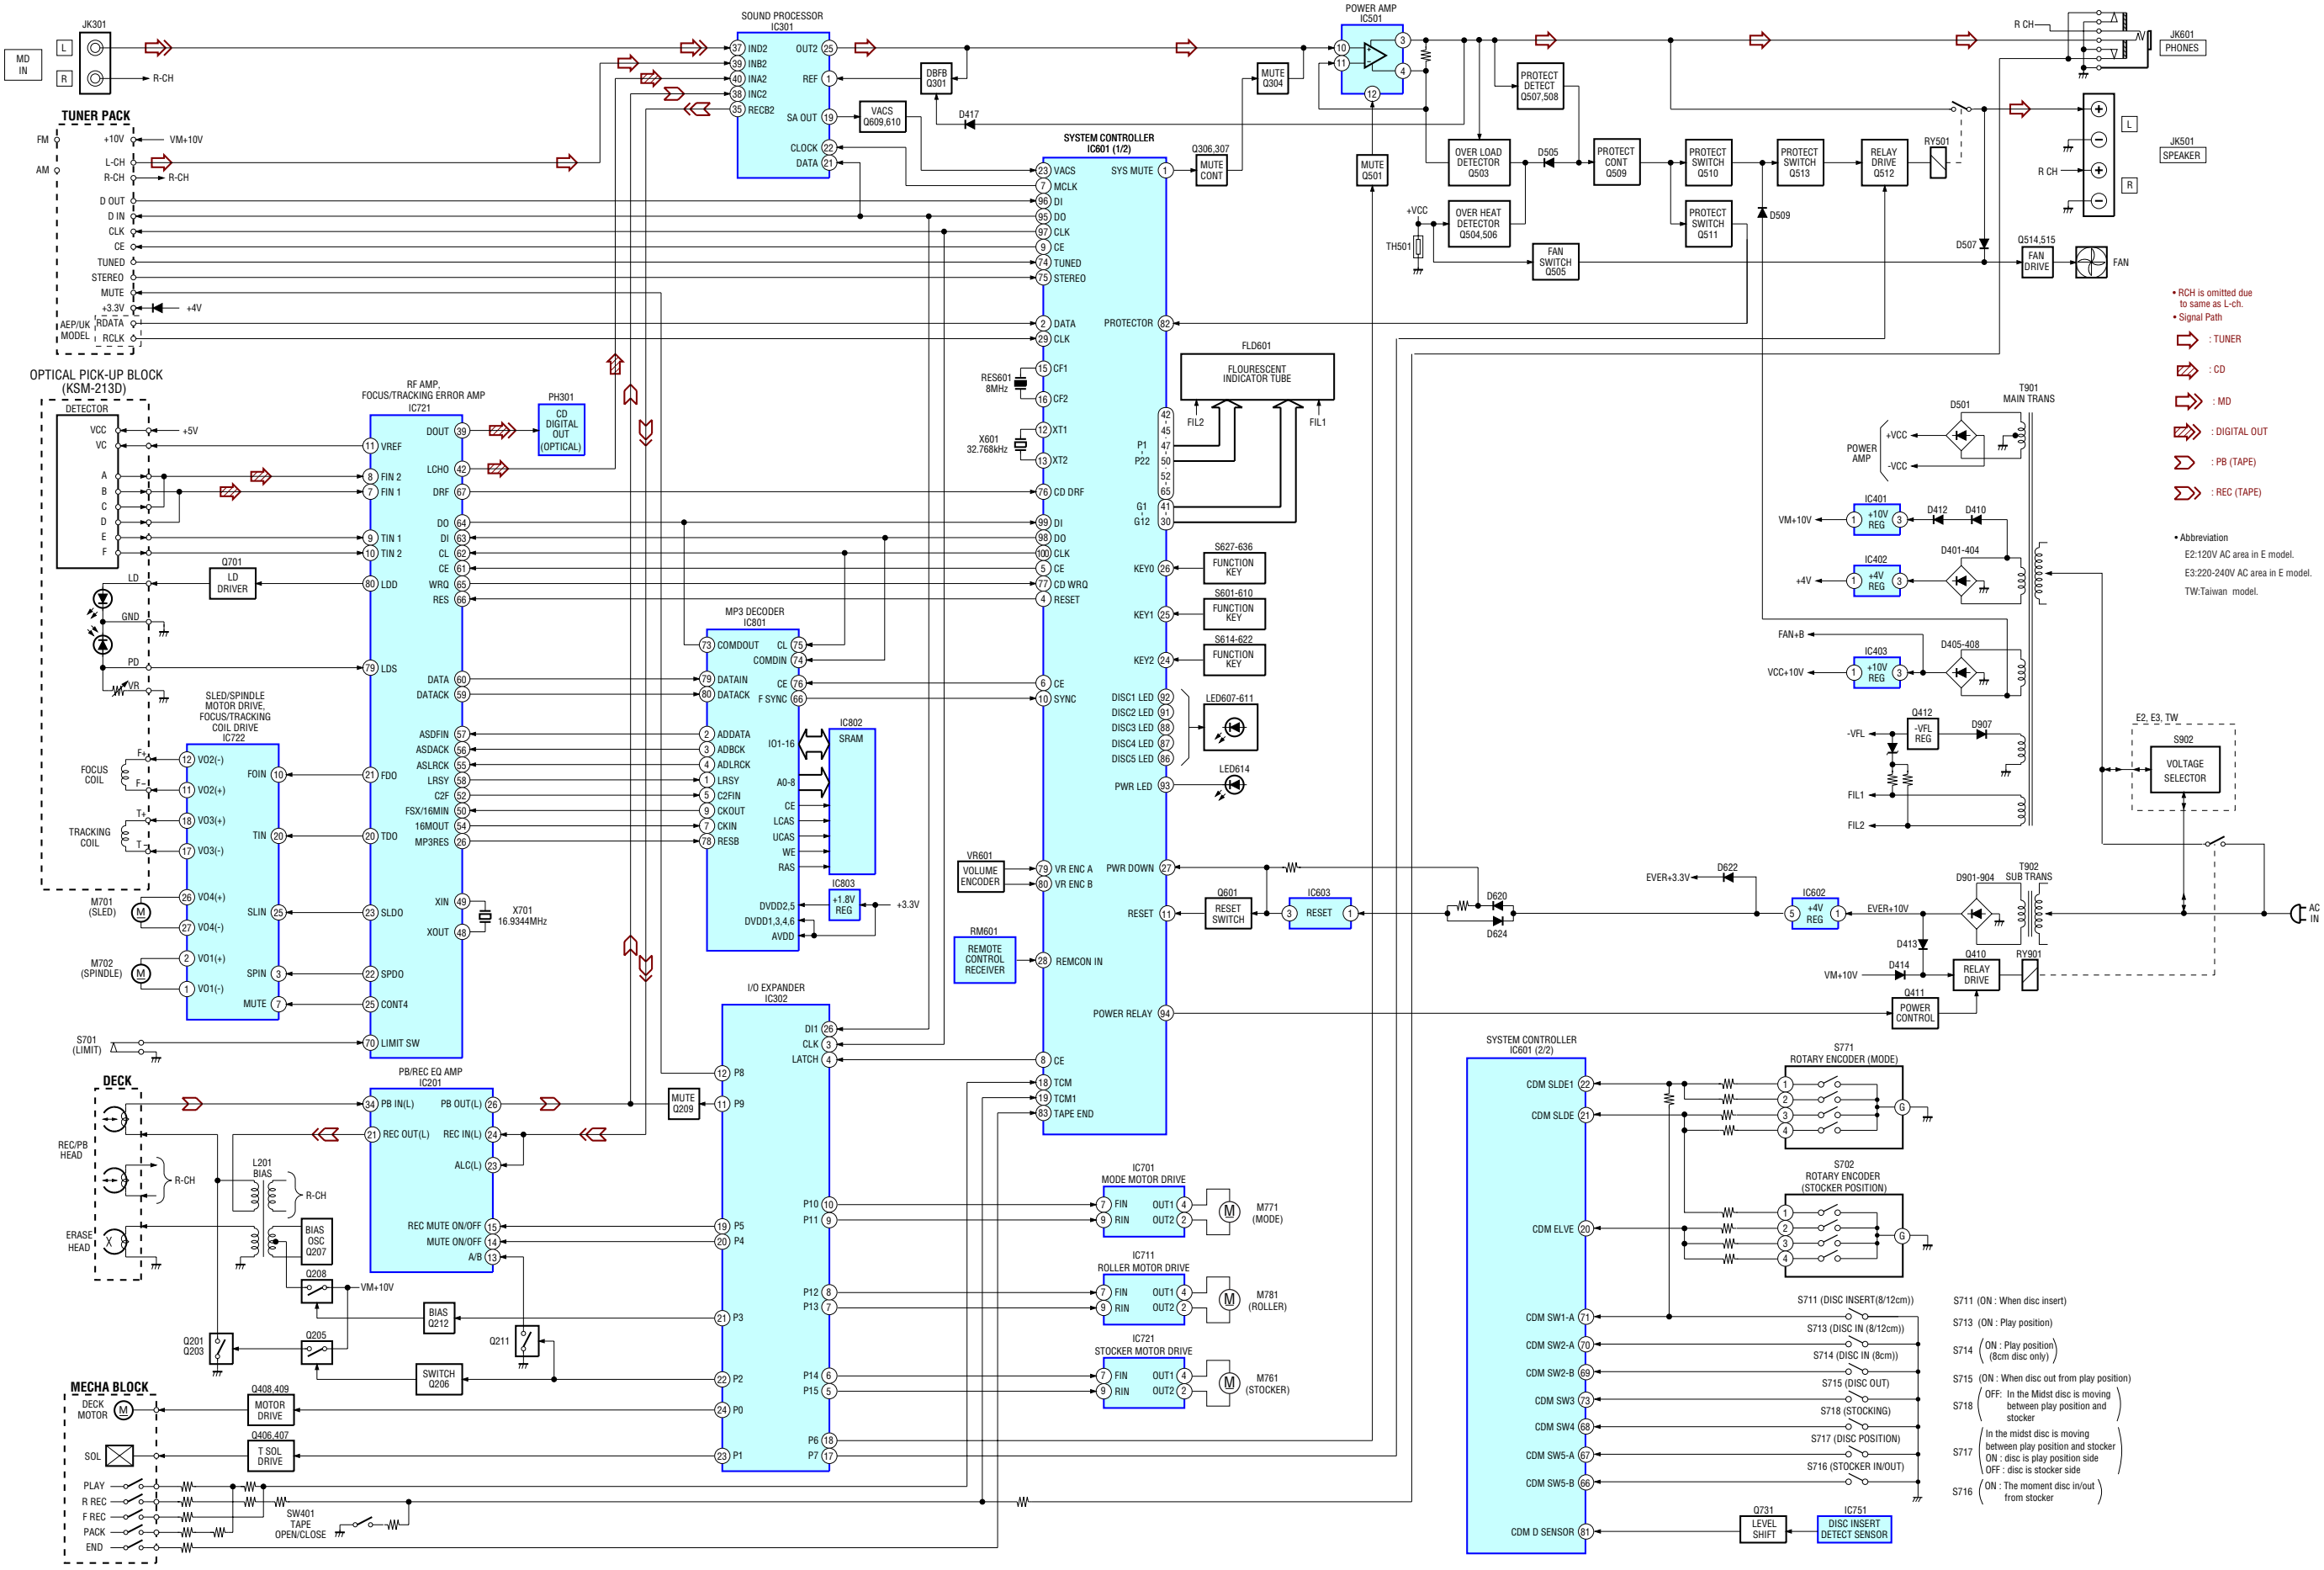

8-2. Printed Wiring Boards — BD Board — •See page 26 for Circuit Boards Location. • : Uses unleaded solder.

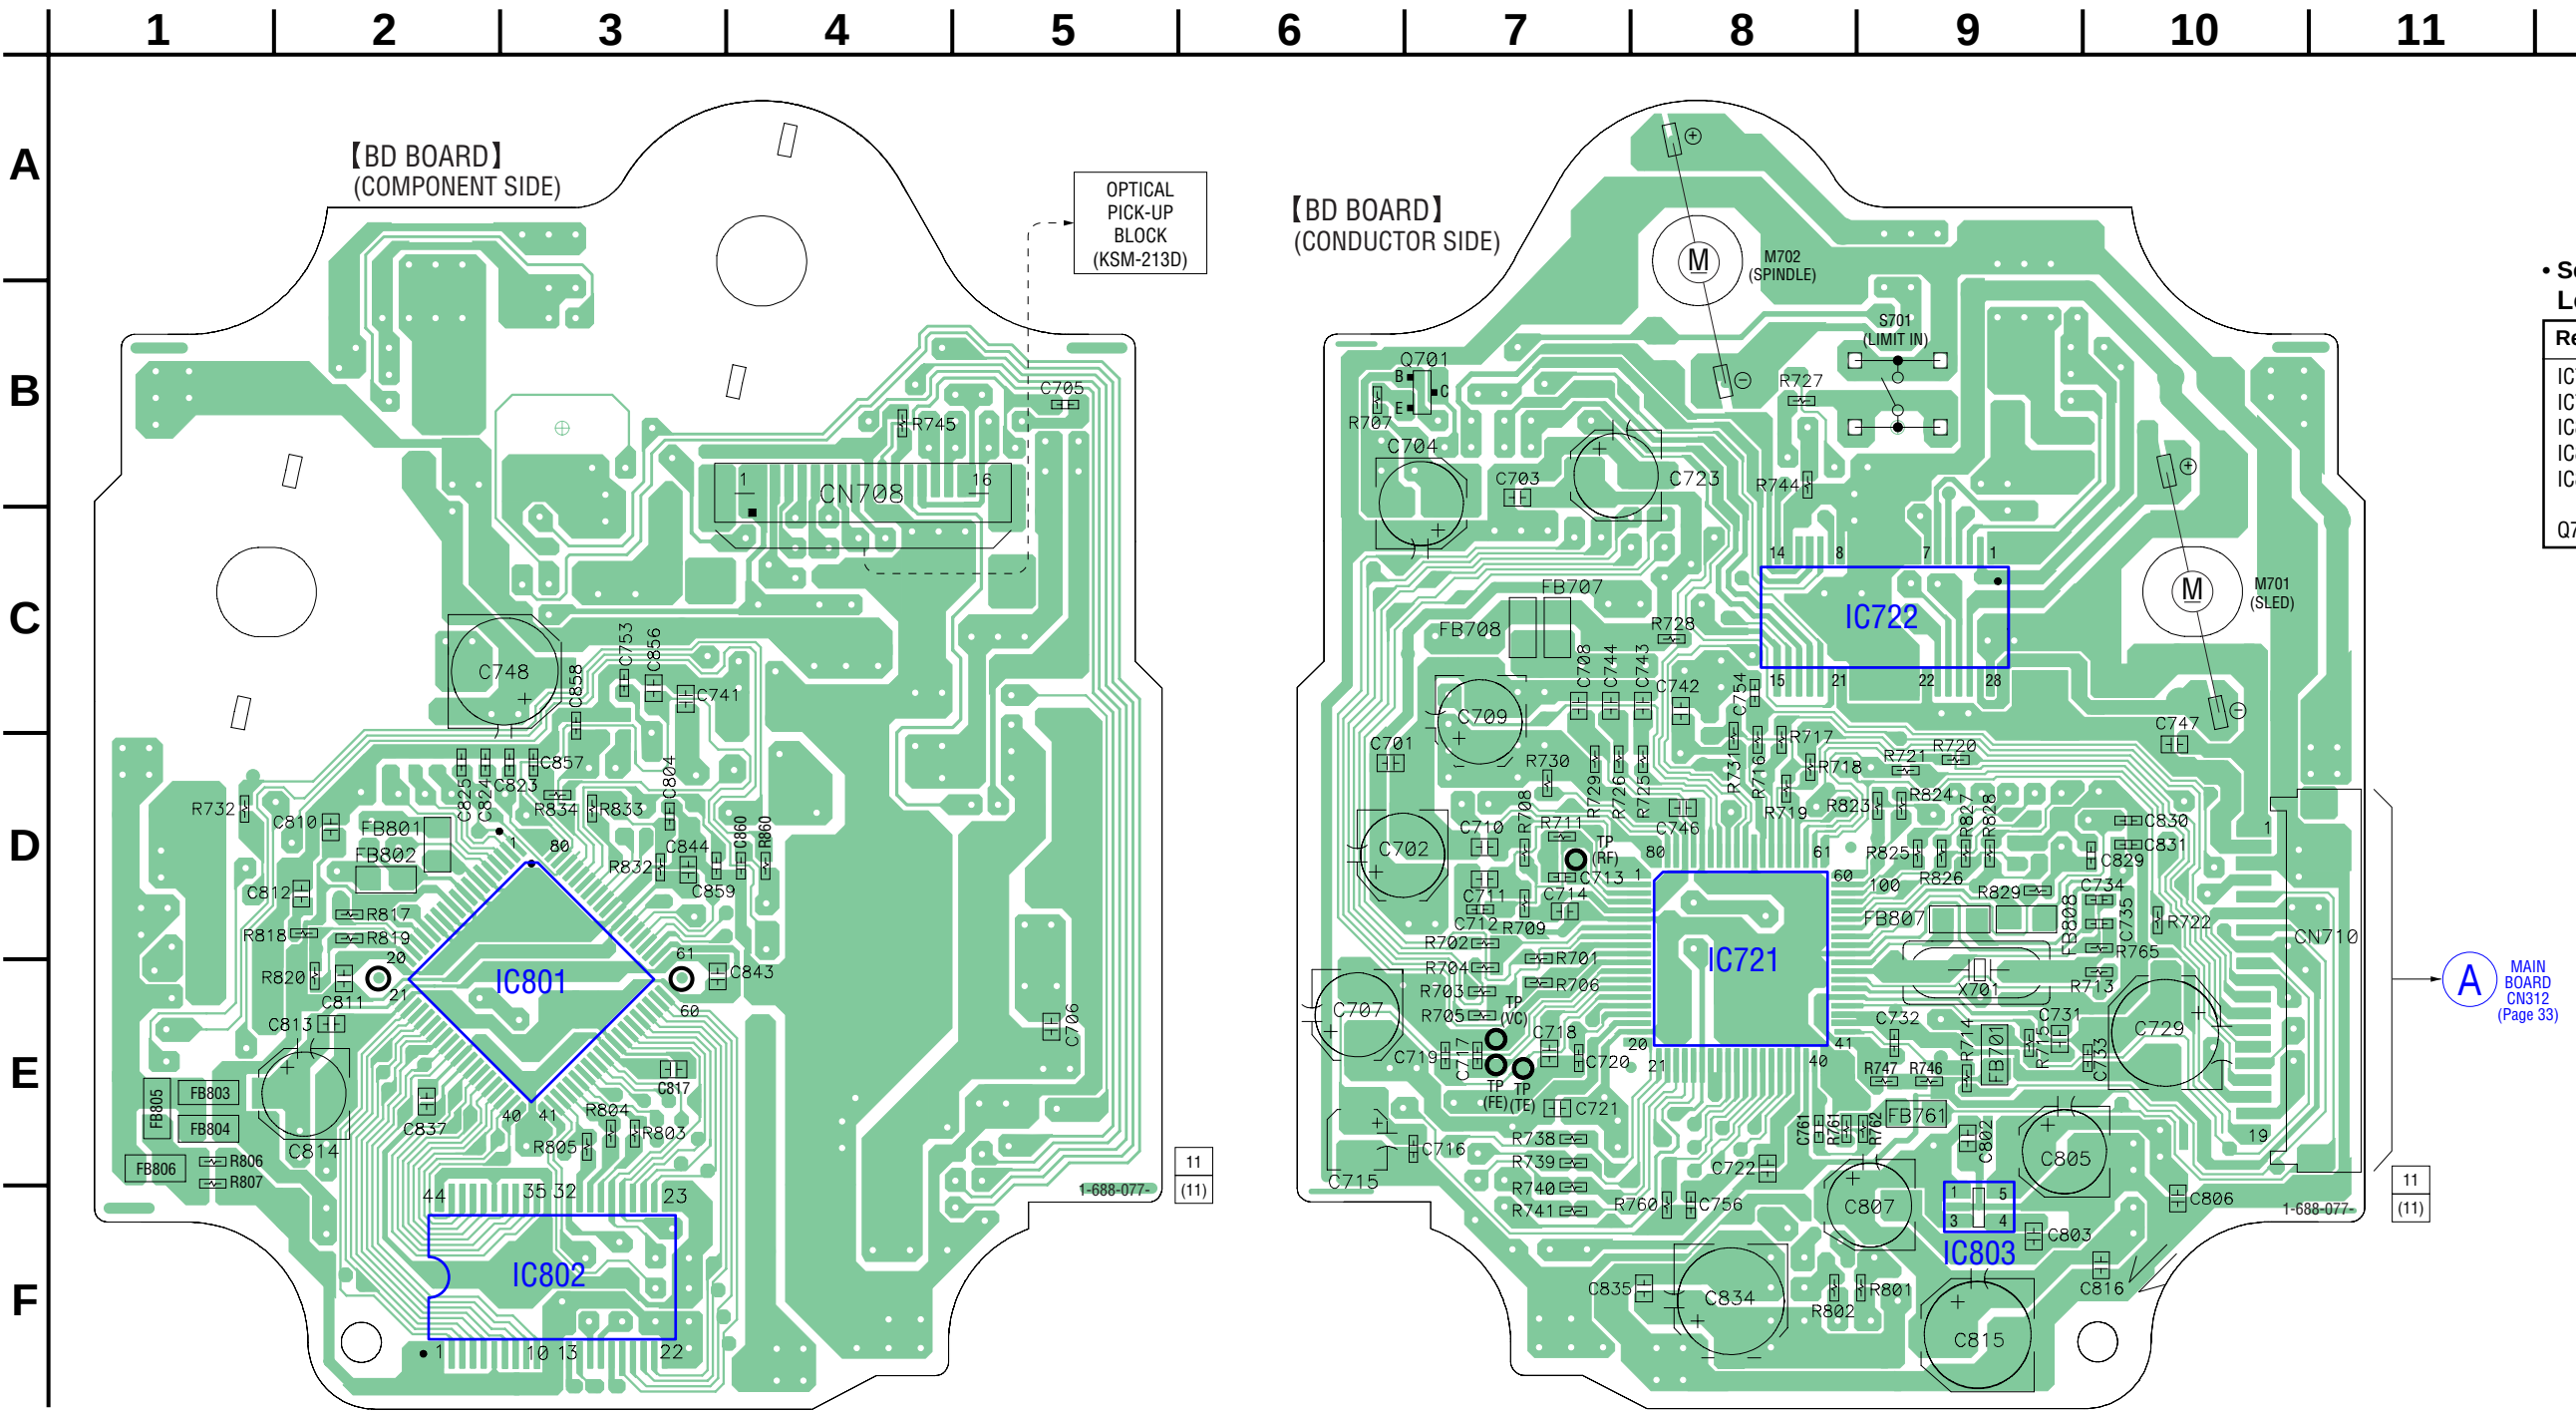


• Semiconductor Location

Ref. No.	Location
IC721	E-8
IC722	C-9
IC801	E-3
IC802	F-3
IC803	F-9
Q701	B-7




8-4. Printed Wiring Boards — Changer Section — •See page 26 for Circuit Boards Location. • : Uses unleaded solder.

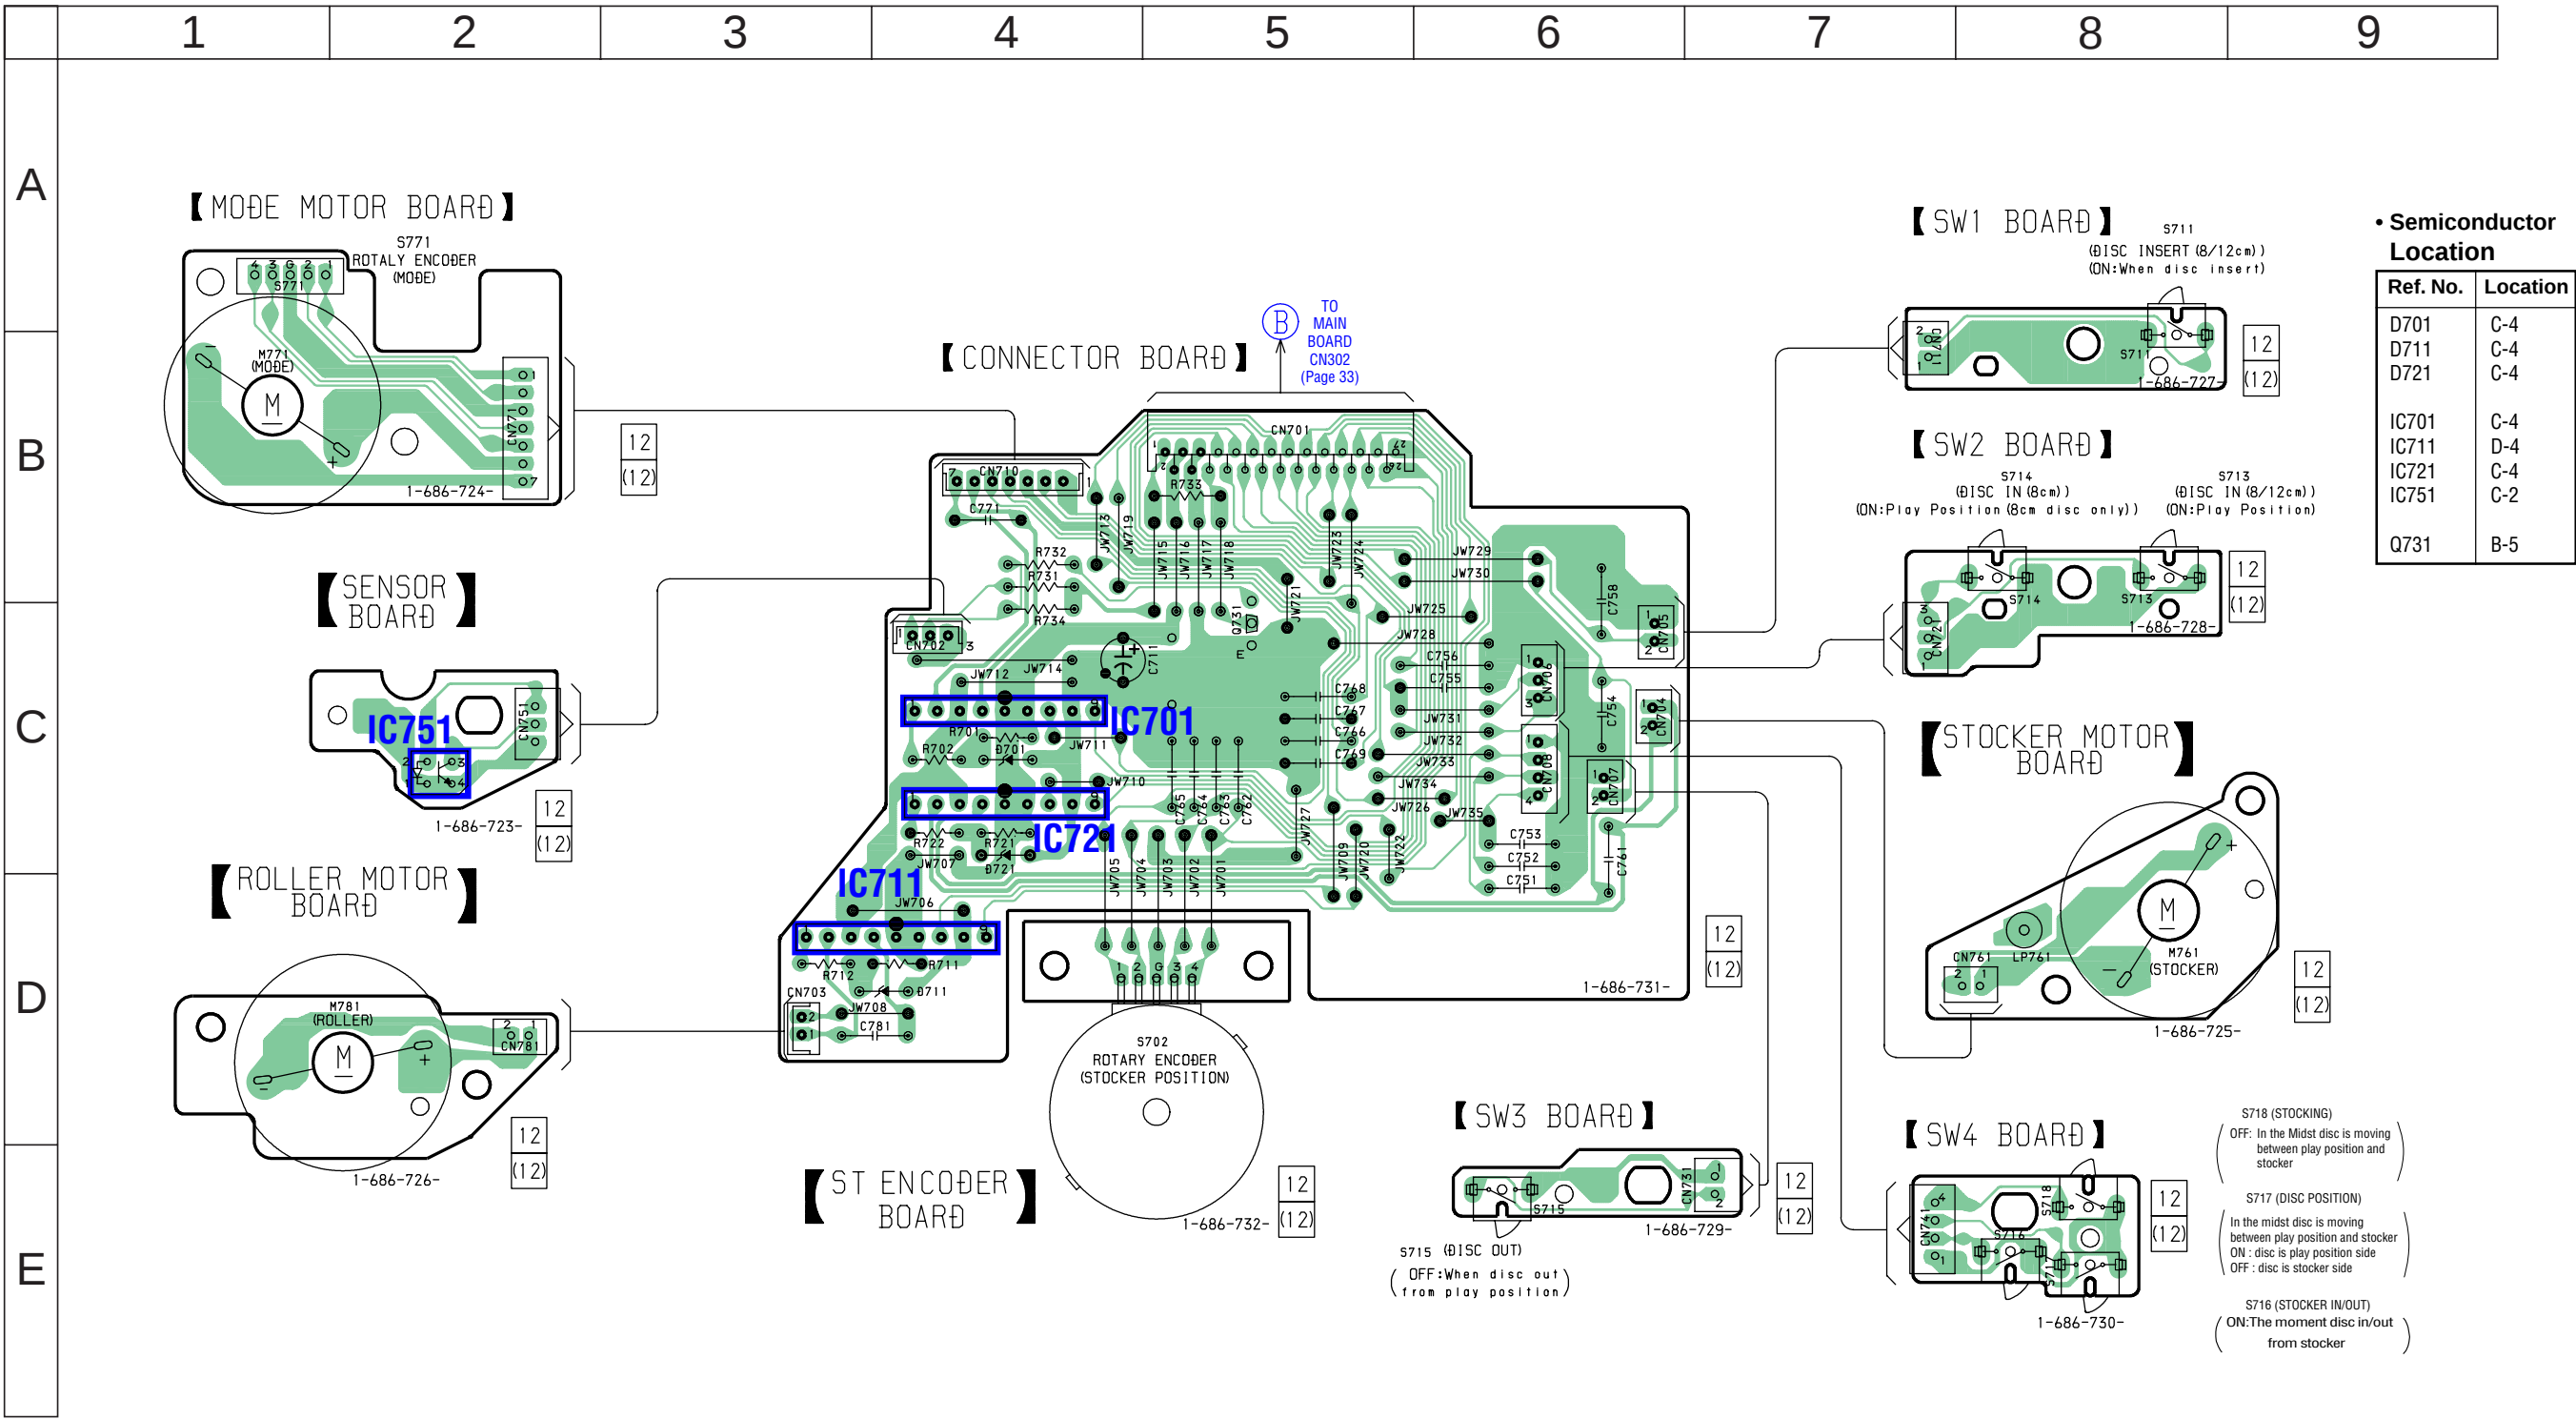

• Semiconductor Location

Ref. No.	Location
D701	C-4
D711	C-4
D721	C-4
IC701	C-4
IC711	D-4
IC721	C-4
IC751	C-2
Q731	B-5


8-5. Schematic Diagram — Changer Section — •See page 41 for IC Block Diagrams.

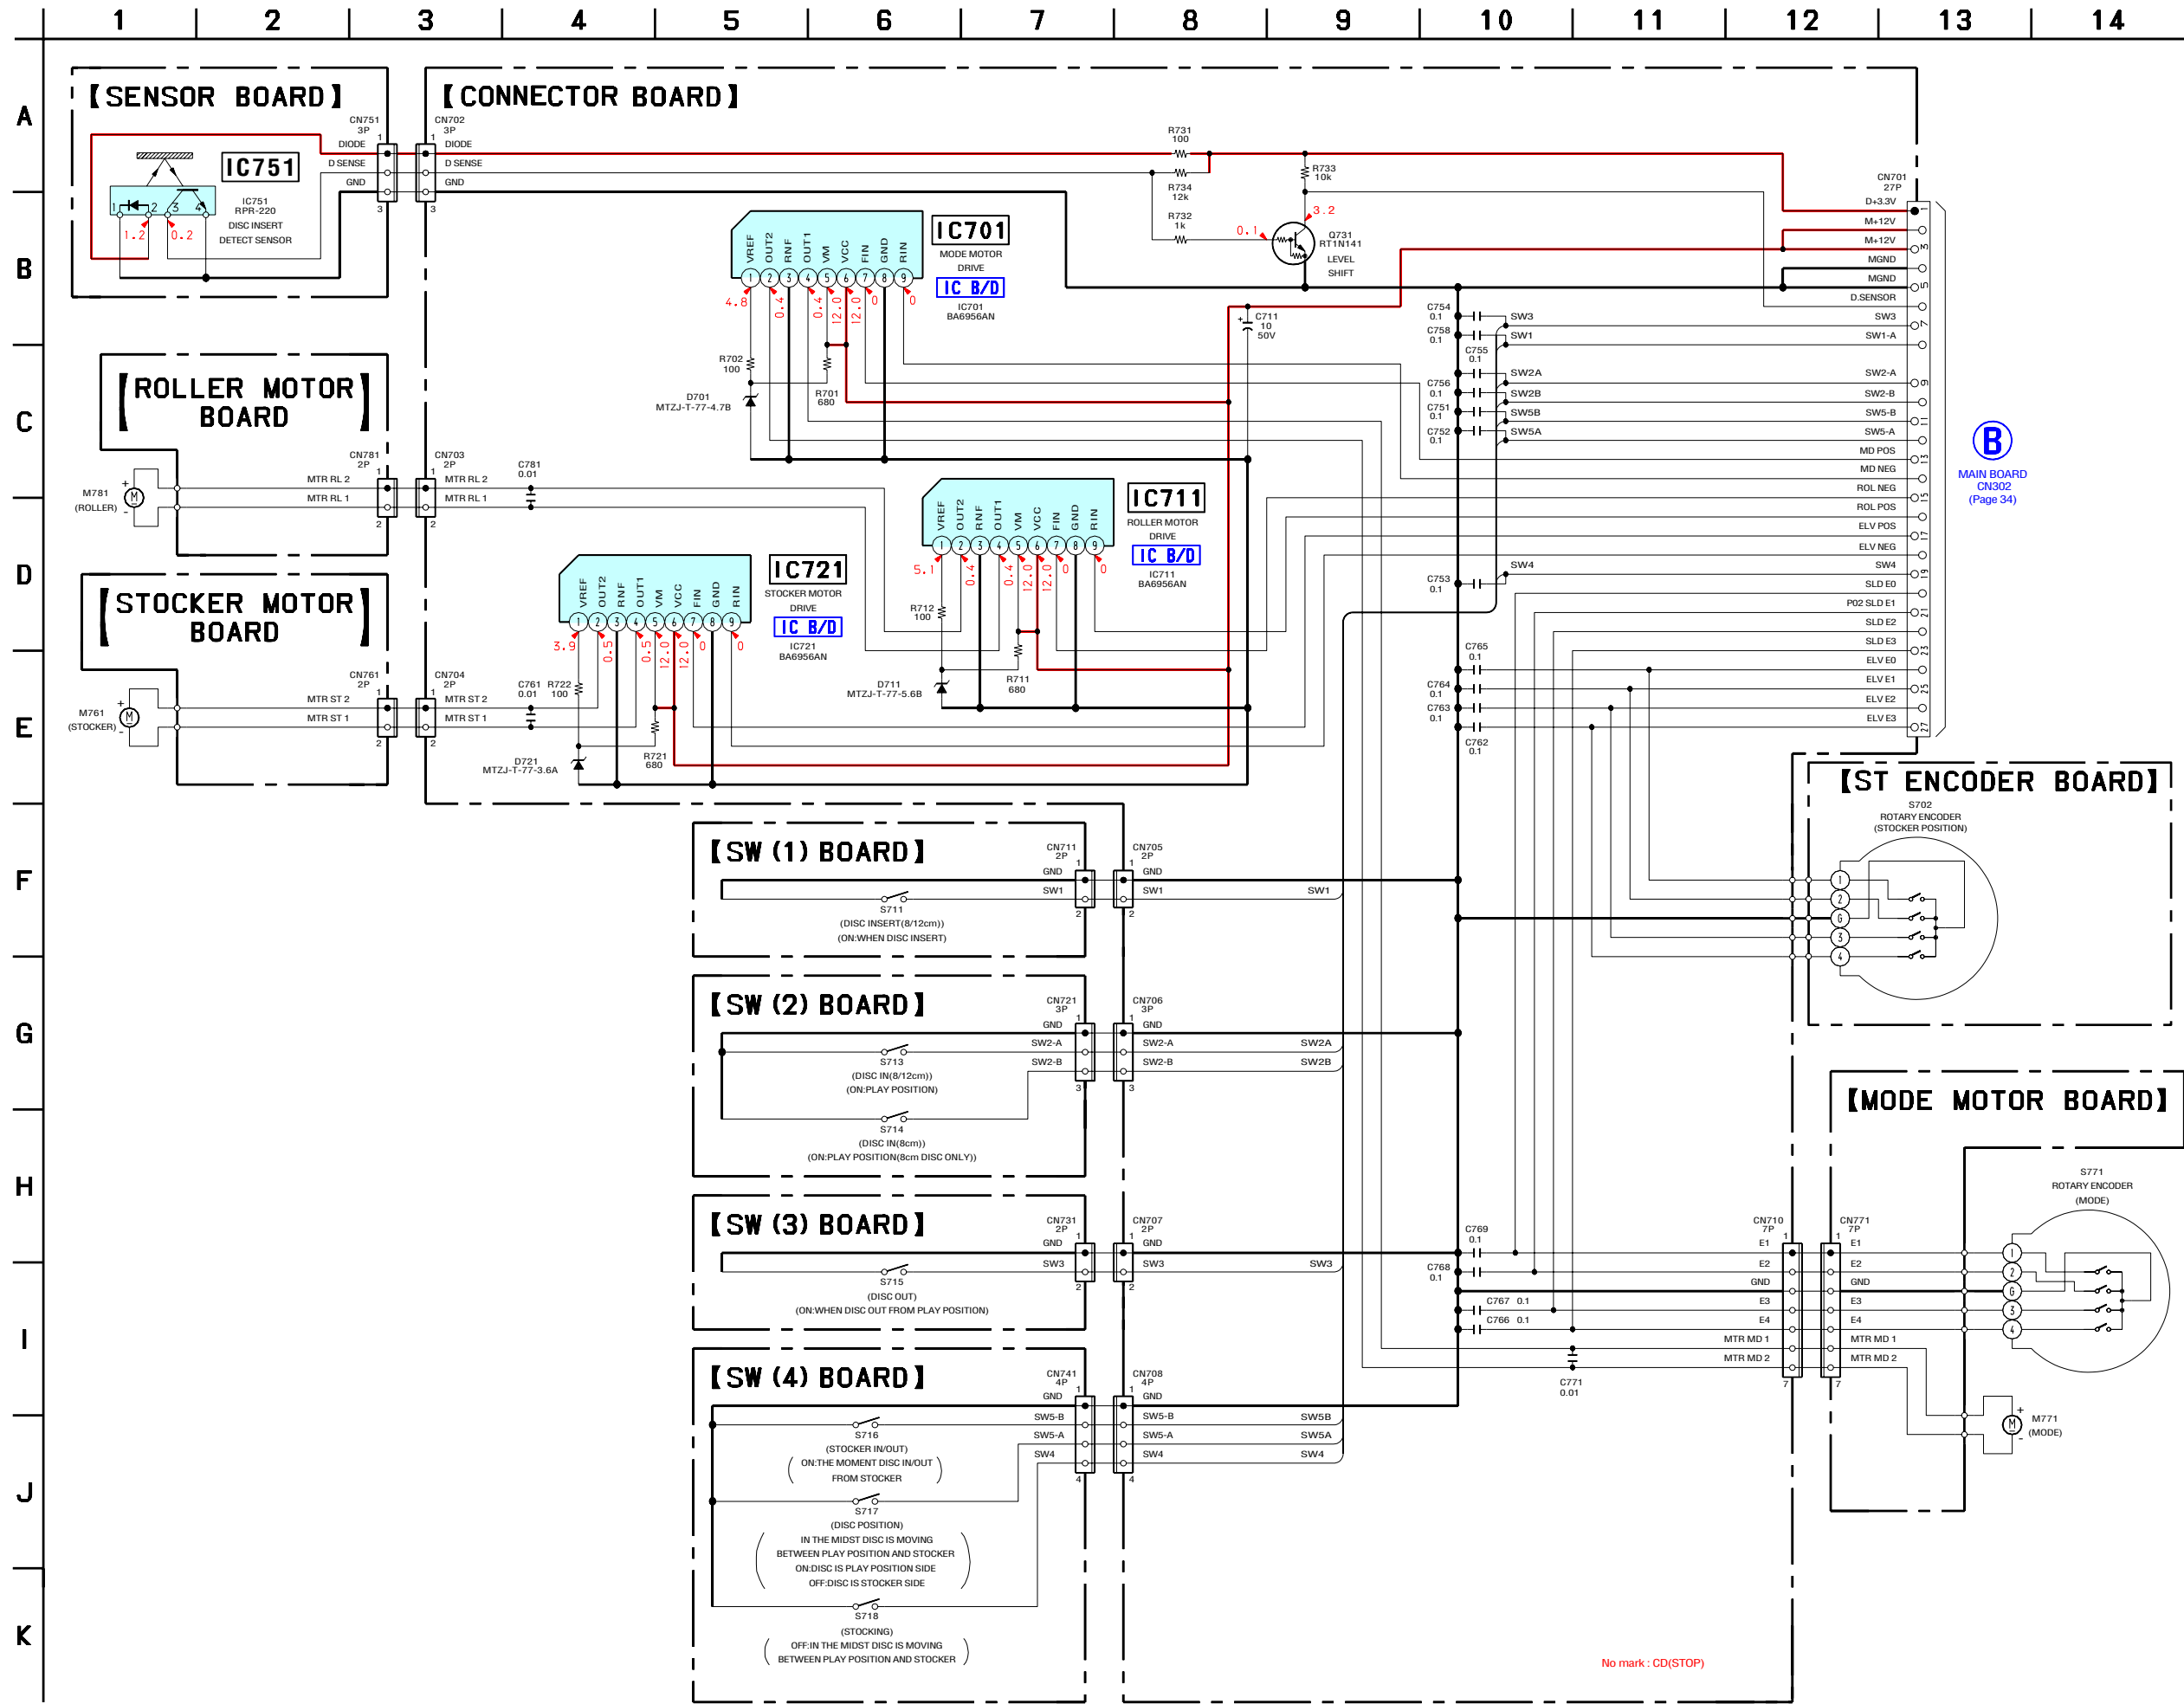

MAIN BOARD
CN302
(Page 34)

No mark : CD(STOP)

8-6. Printed Wiring Boards — Main Section — •See page 26 for Circuit Boards Location. • : Uses unleaded solder.

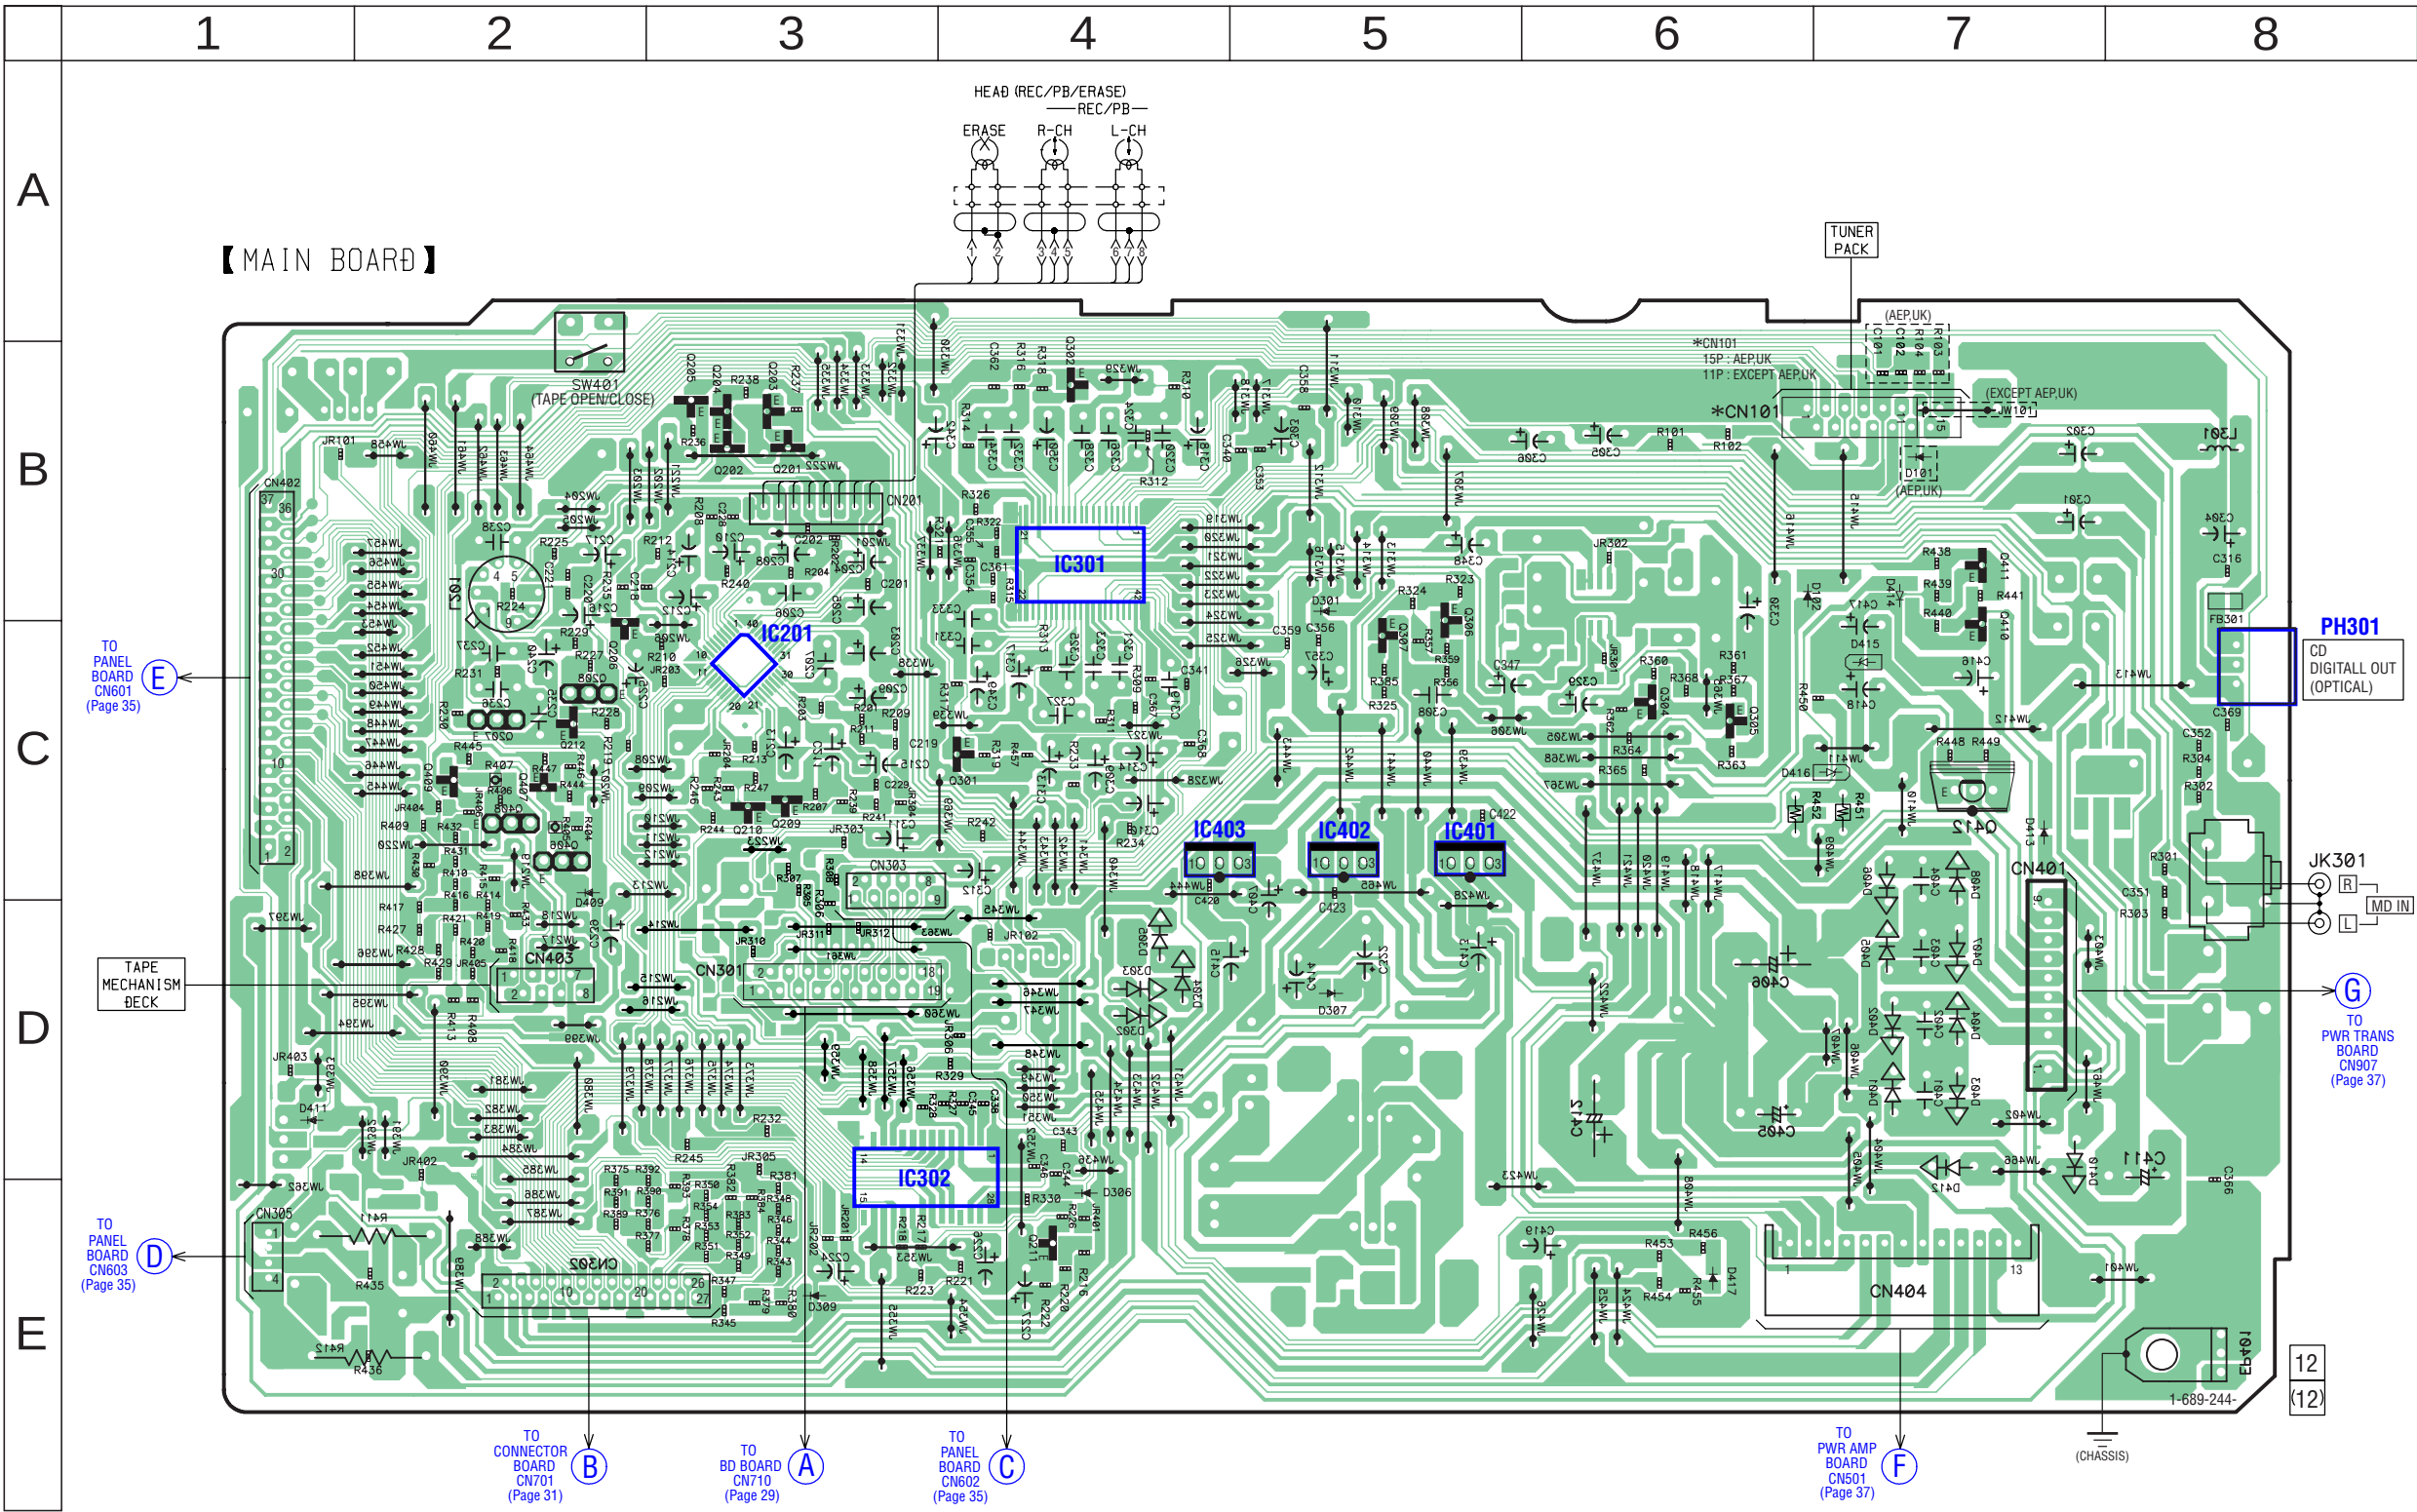


• Semiconductor Location


Ref. No.	Location
D101	B-7
D102	B-7
D301	B-5
D302	D-4
D303	D-4
D304	D-4
D305	D-4
D306	E-4
D307	D-5
D309	E-3
D401	D-7
D402	D-7
D403	D-7
D404	D-7
D405	D-7
D406	C-7
D407	D-7
D408	C-7
D409	D-2
D410	D-7
D411	D-1
D412	E-7
D413	C-7
D414	B-7
D415	C-7
D416	C-6
D417	E-6
IC201	C-3
IC301	B-4
IC302	D-3
IC401	C-5
IC402	C-5
IC403	C-4
PH301	C-8
Q201	B-3
Q202	B-3
Q203	B-3
Q204	B-3
Q205	B-3
Q206	C-2
Q207	C-2
Q208	C-2
Q209	C-3
Q210	C-3
Q211	E-4
Q212	C-2
Q301	C-4
Q302	B-4
Q304	C-6
Q305	C-6
Q306	B-5
Q307	C-5
Q406	C-2
Q407	C-2
Q408	C-2
Q409	C-2
Q410	B-7
Q411	B-7
Q412	C-7



8-9. Schematic Diagram — Front Section — •See page 40 for IC Block Diagrams. •See page 27 for Waveforms.

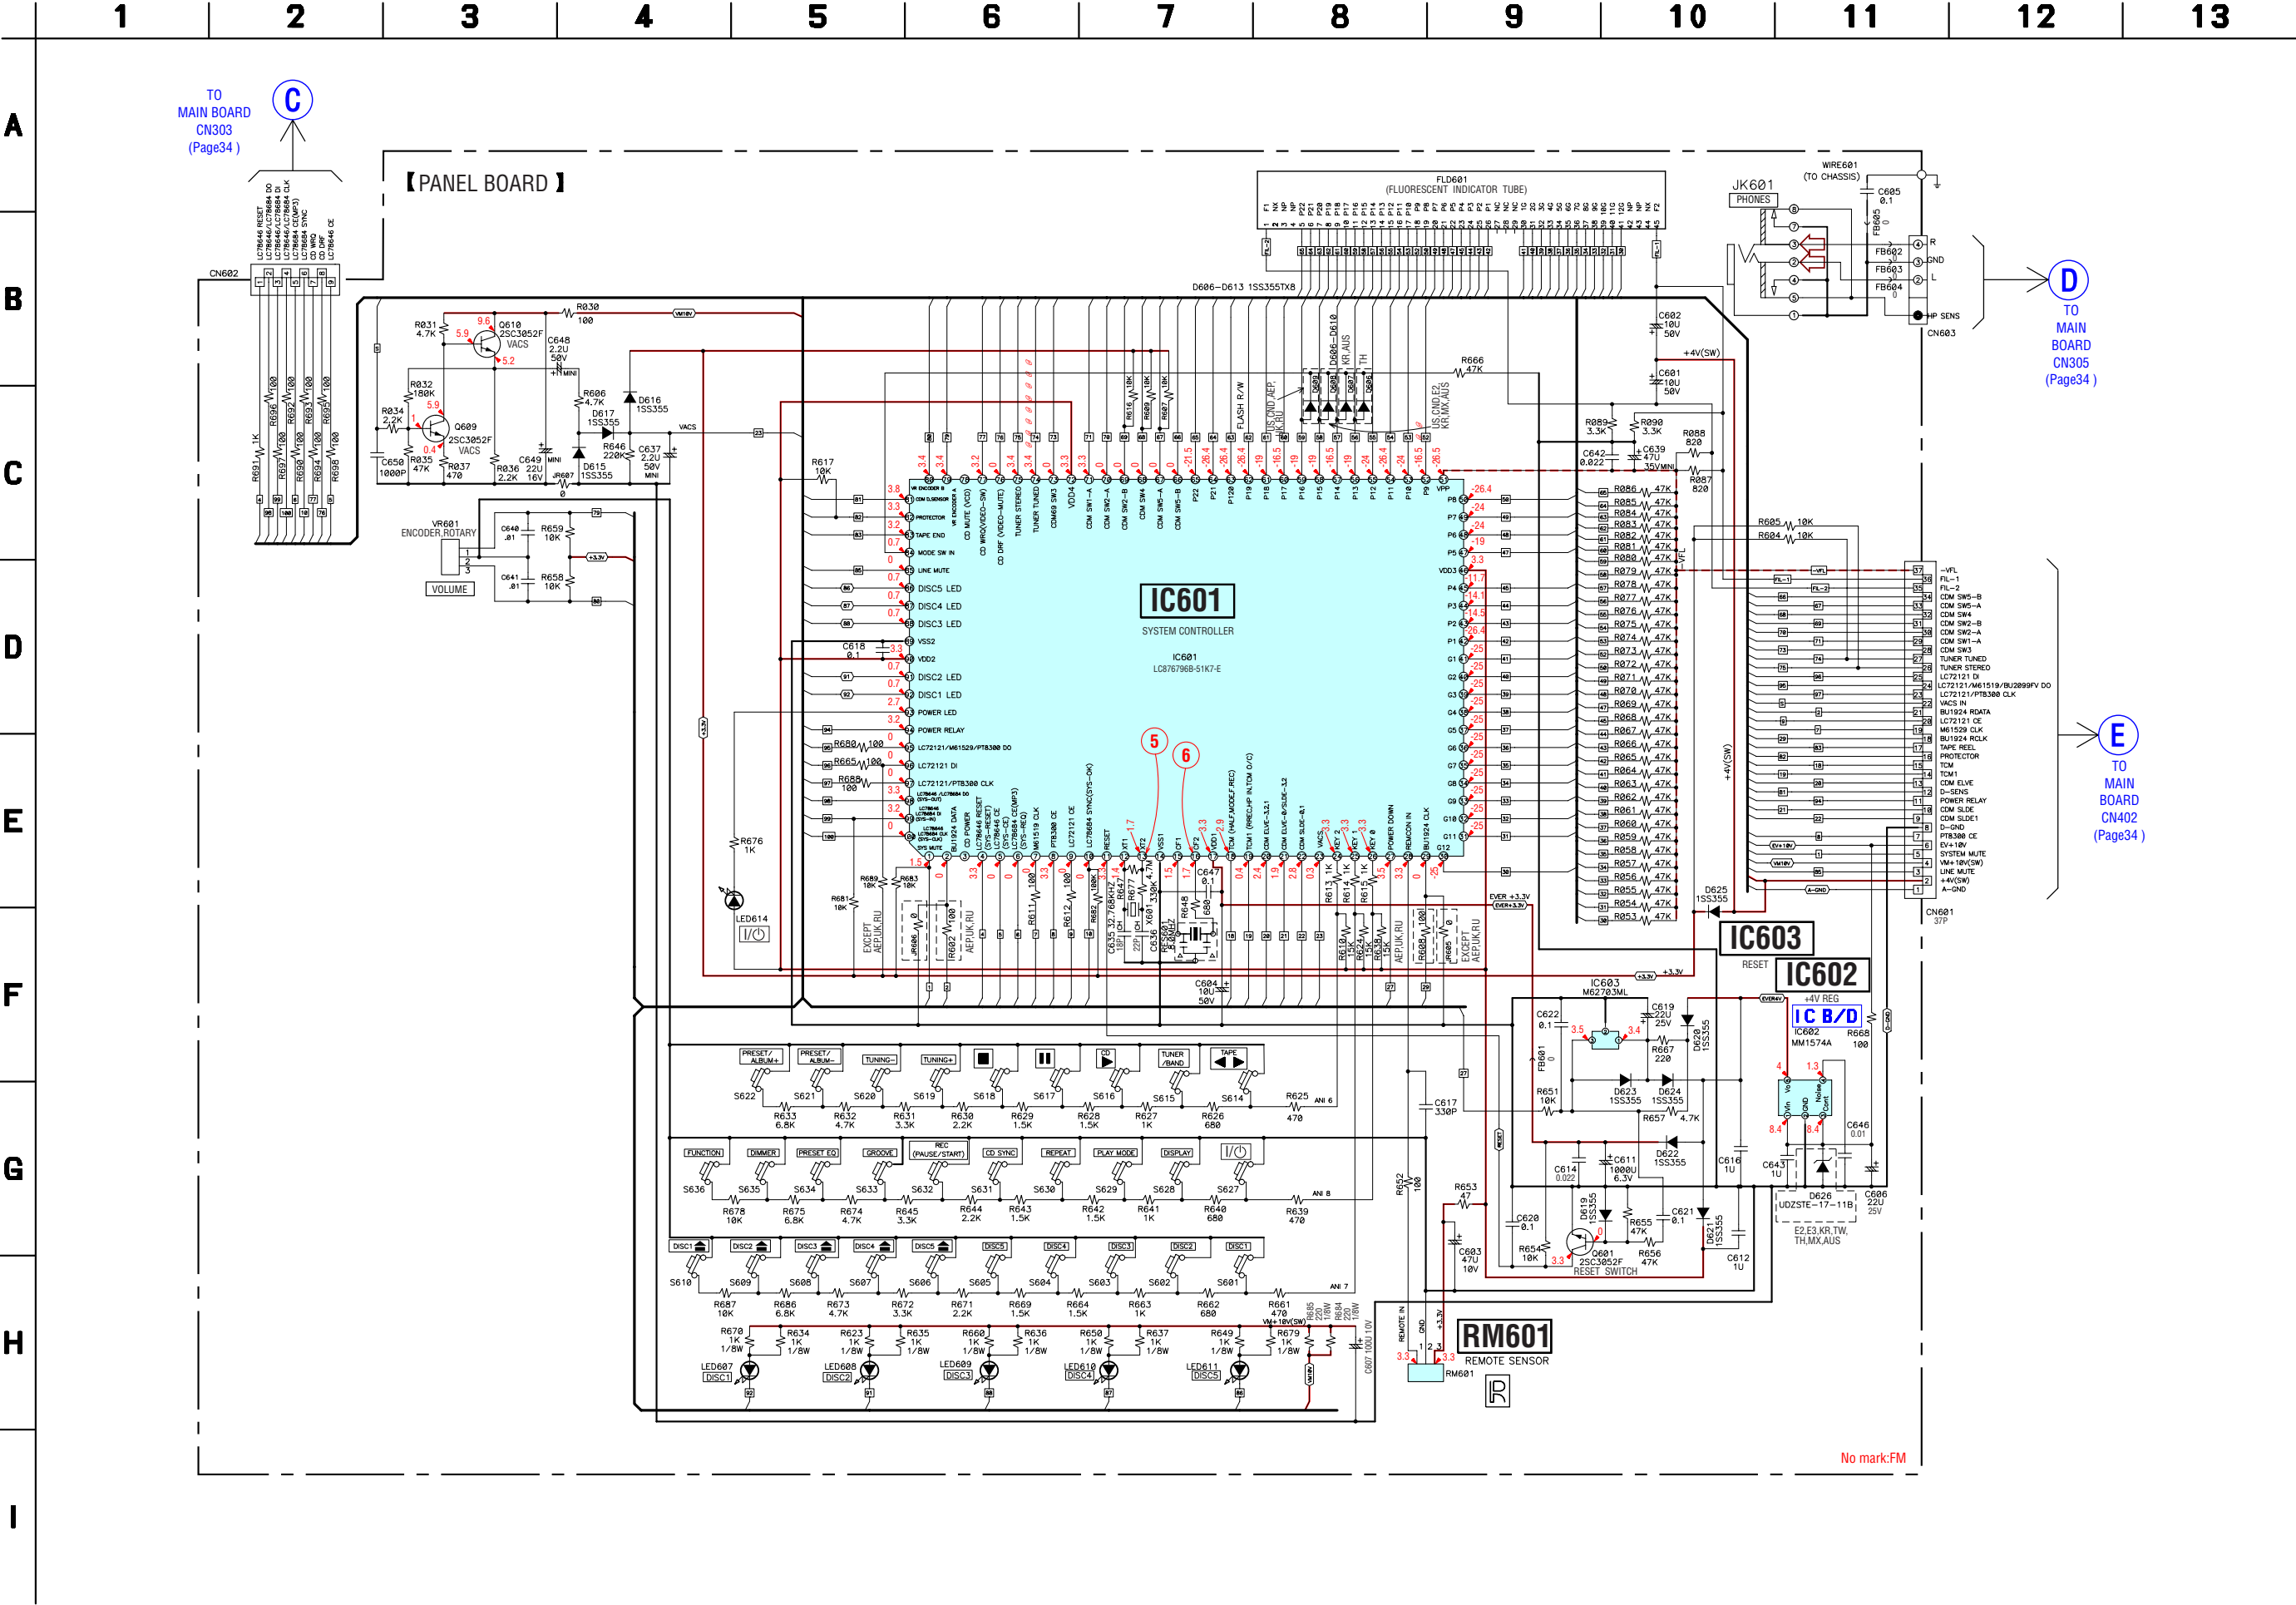


8-10. Printed Wiring Boards — PWR AMP/Power Section — •See page 26 for Circuit Boards Location. •  : Uses unleaded solder.

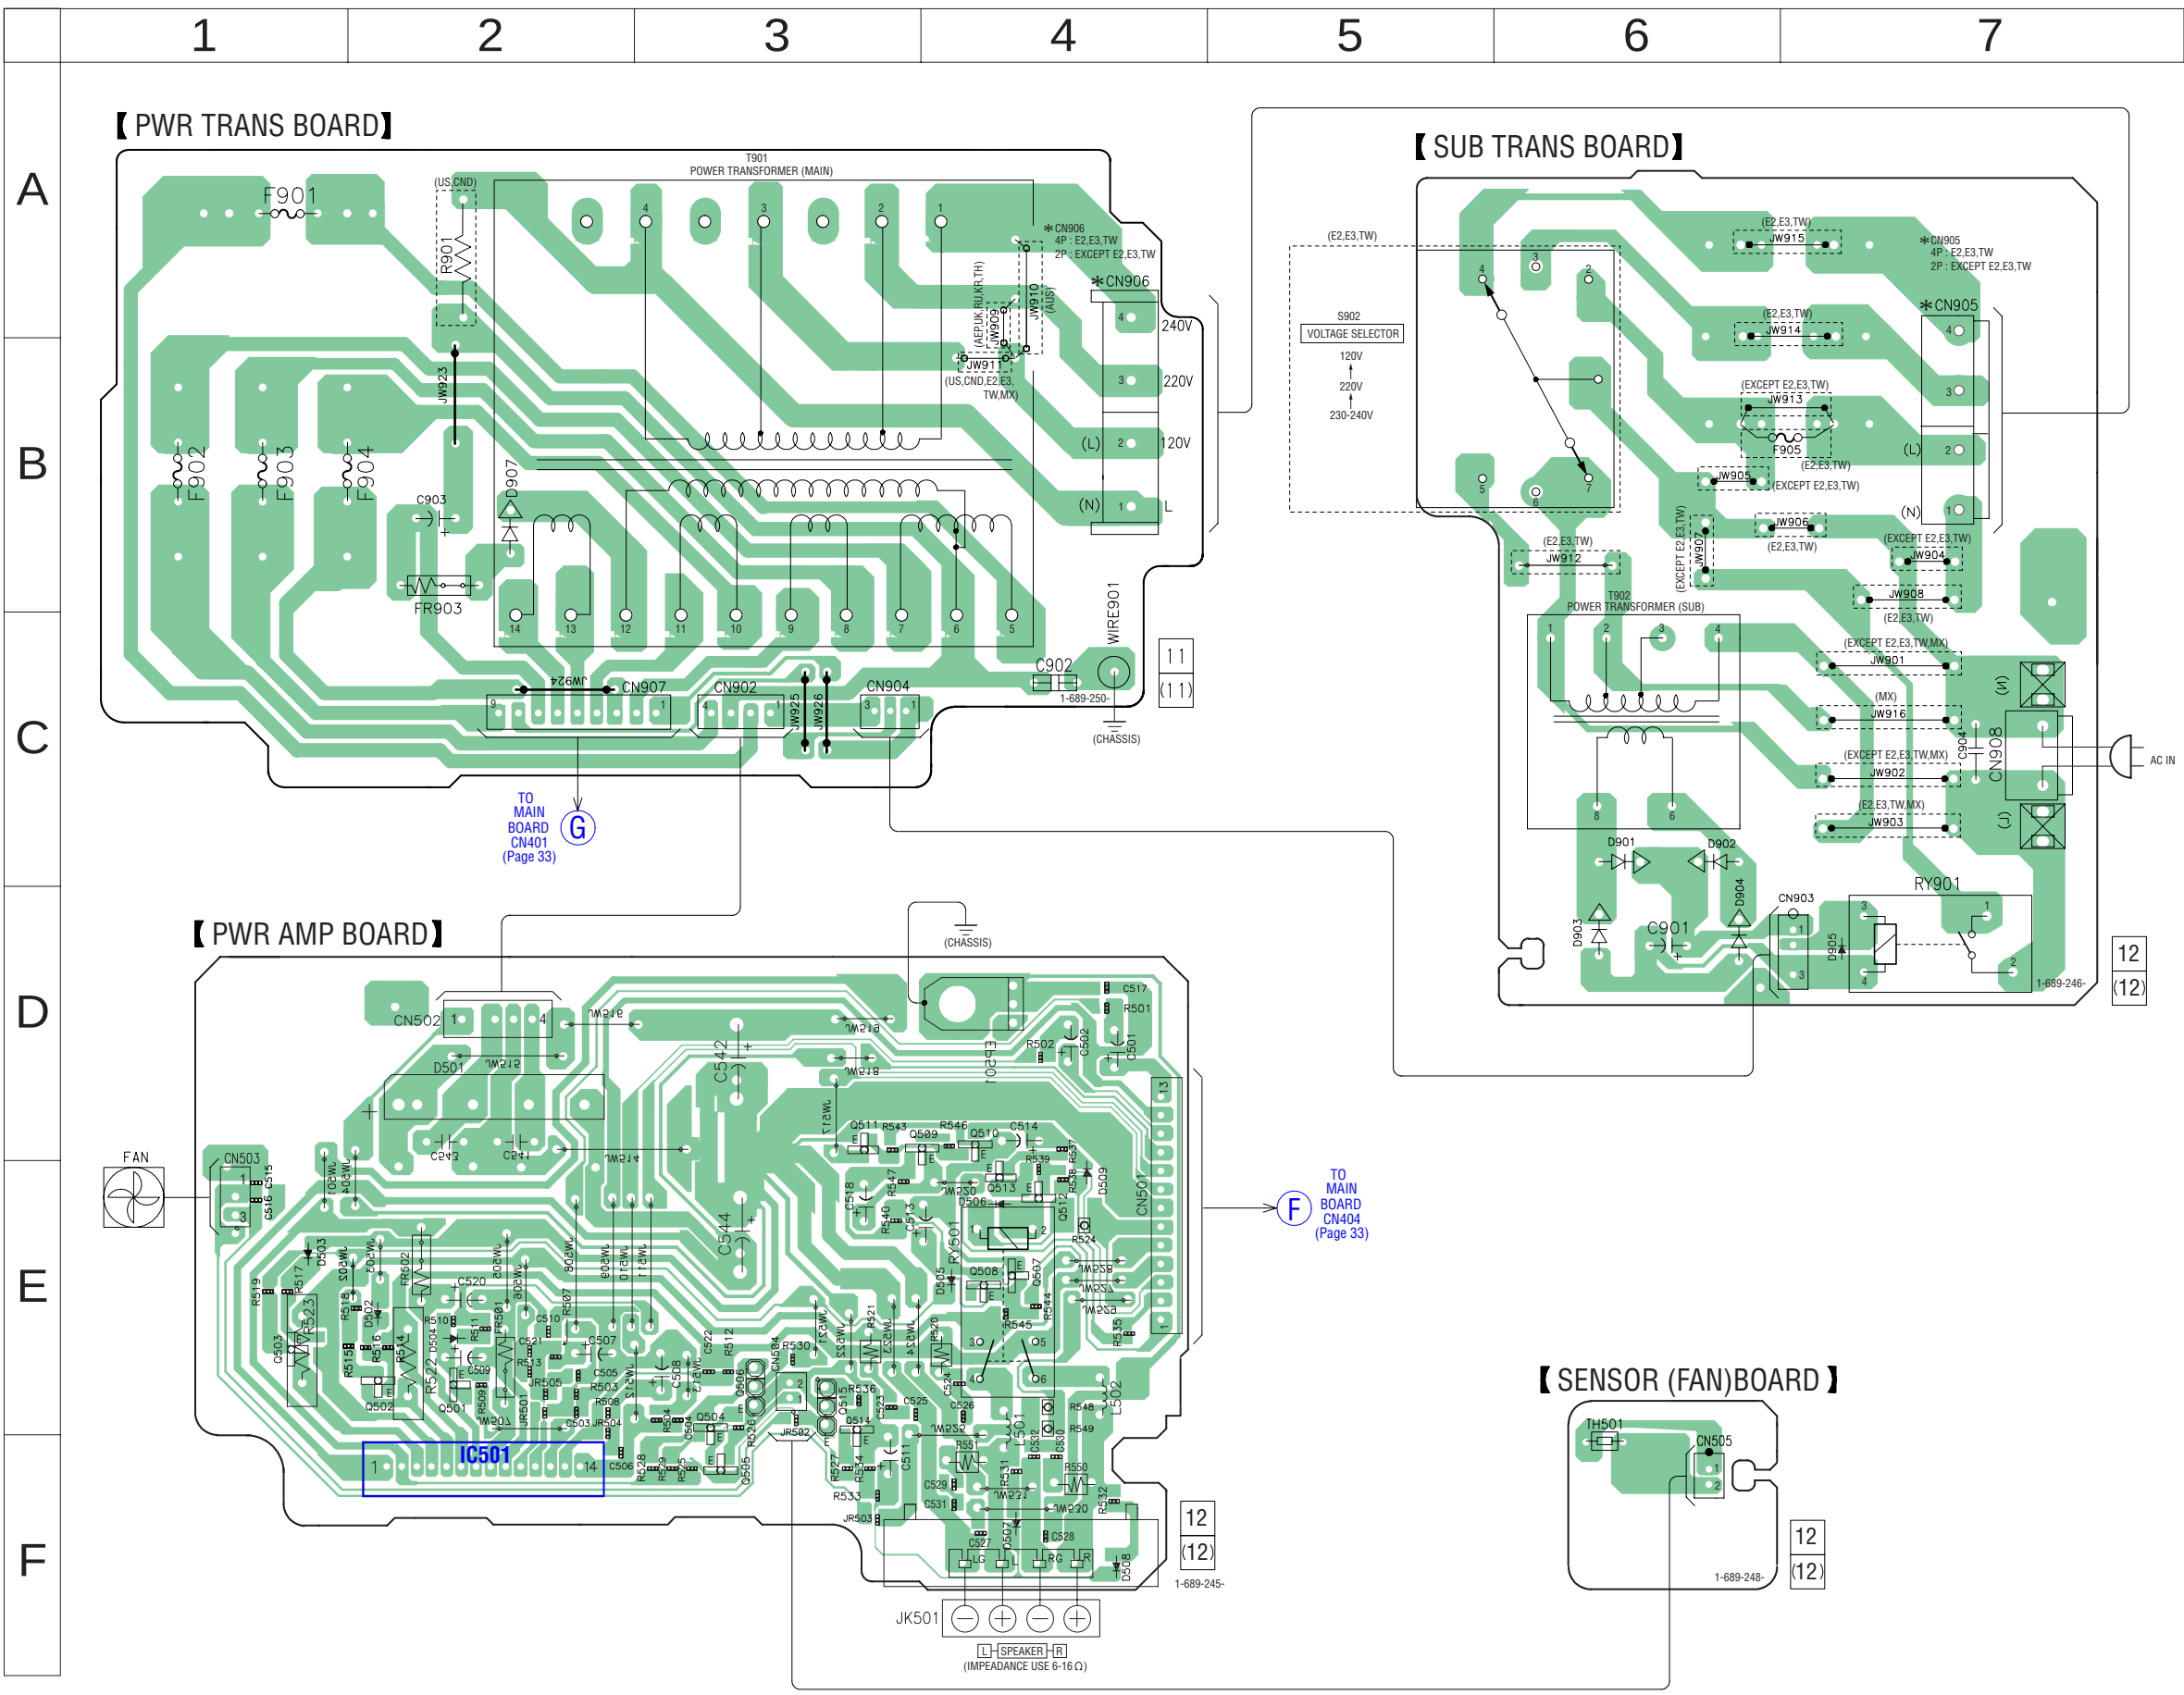

• Semiconductor Location

Ref. No.	Location
D501	D-2
D502	E-2
D503	E-1
D504	E-2
D505	E-4
D506	E-4
D507	F-4
D508	F-4
D509	E-4
D901	C-6
D902	C-6
D903	D-6
D904	D-6
D905	D-7
D907	B-2
IC501	F-2
Q501	E-2
Q502	E-2
Q503	E-1
Q504	E-3
Q505	F-3
Q506	E-3
Q507	E-4
Q508	E-4
Q509	D-3
Q510	D-4
Q511	D-3
Q512	E-4
Q513	E-4
Q514	E-3
Q515	E-3


8-11. Schematic Diagram — PWR AMP/Power Section — •See page 41 for IC Block Diagrams.

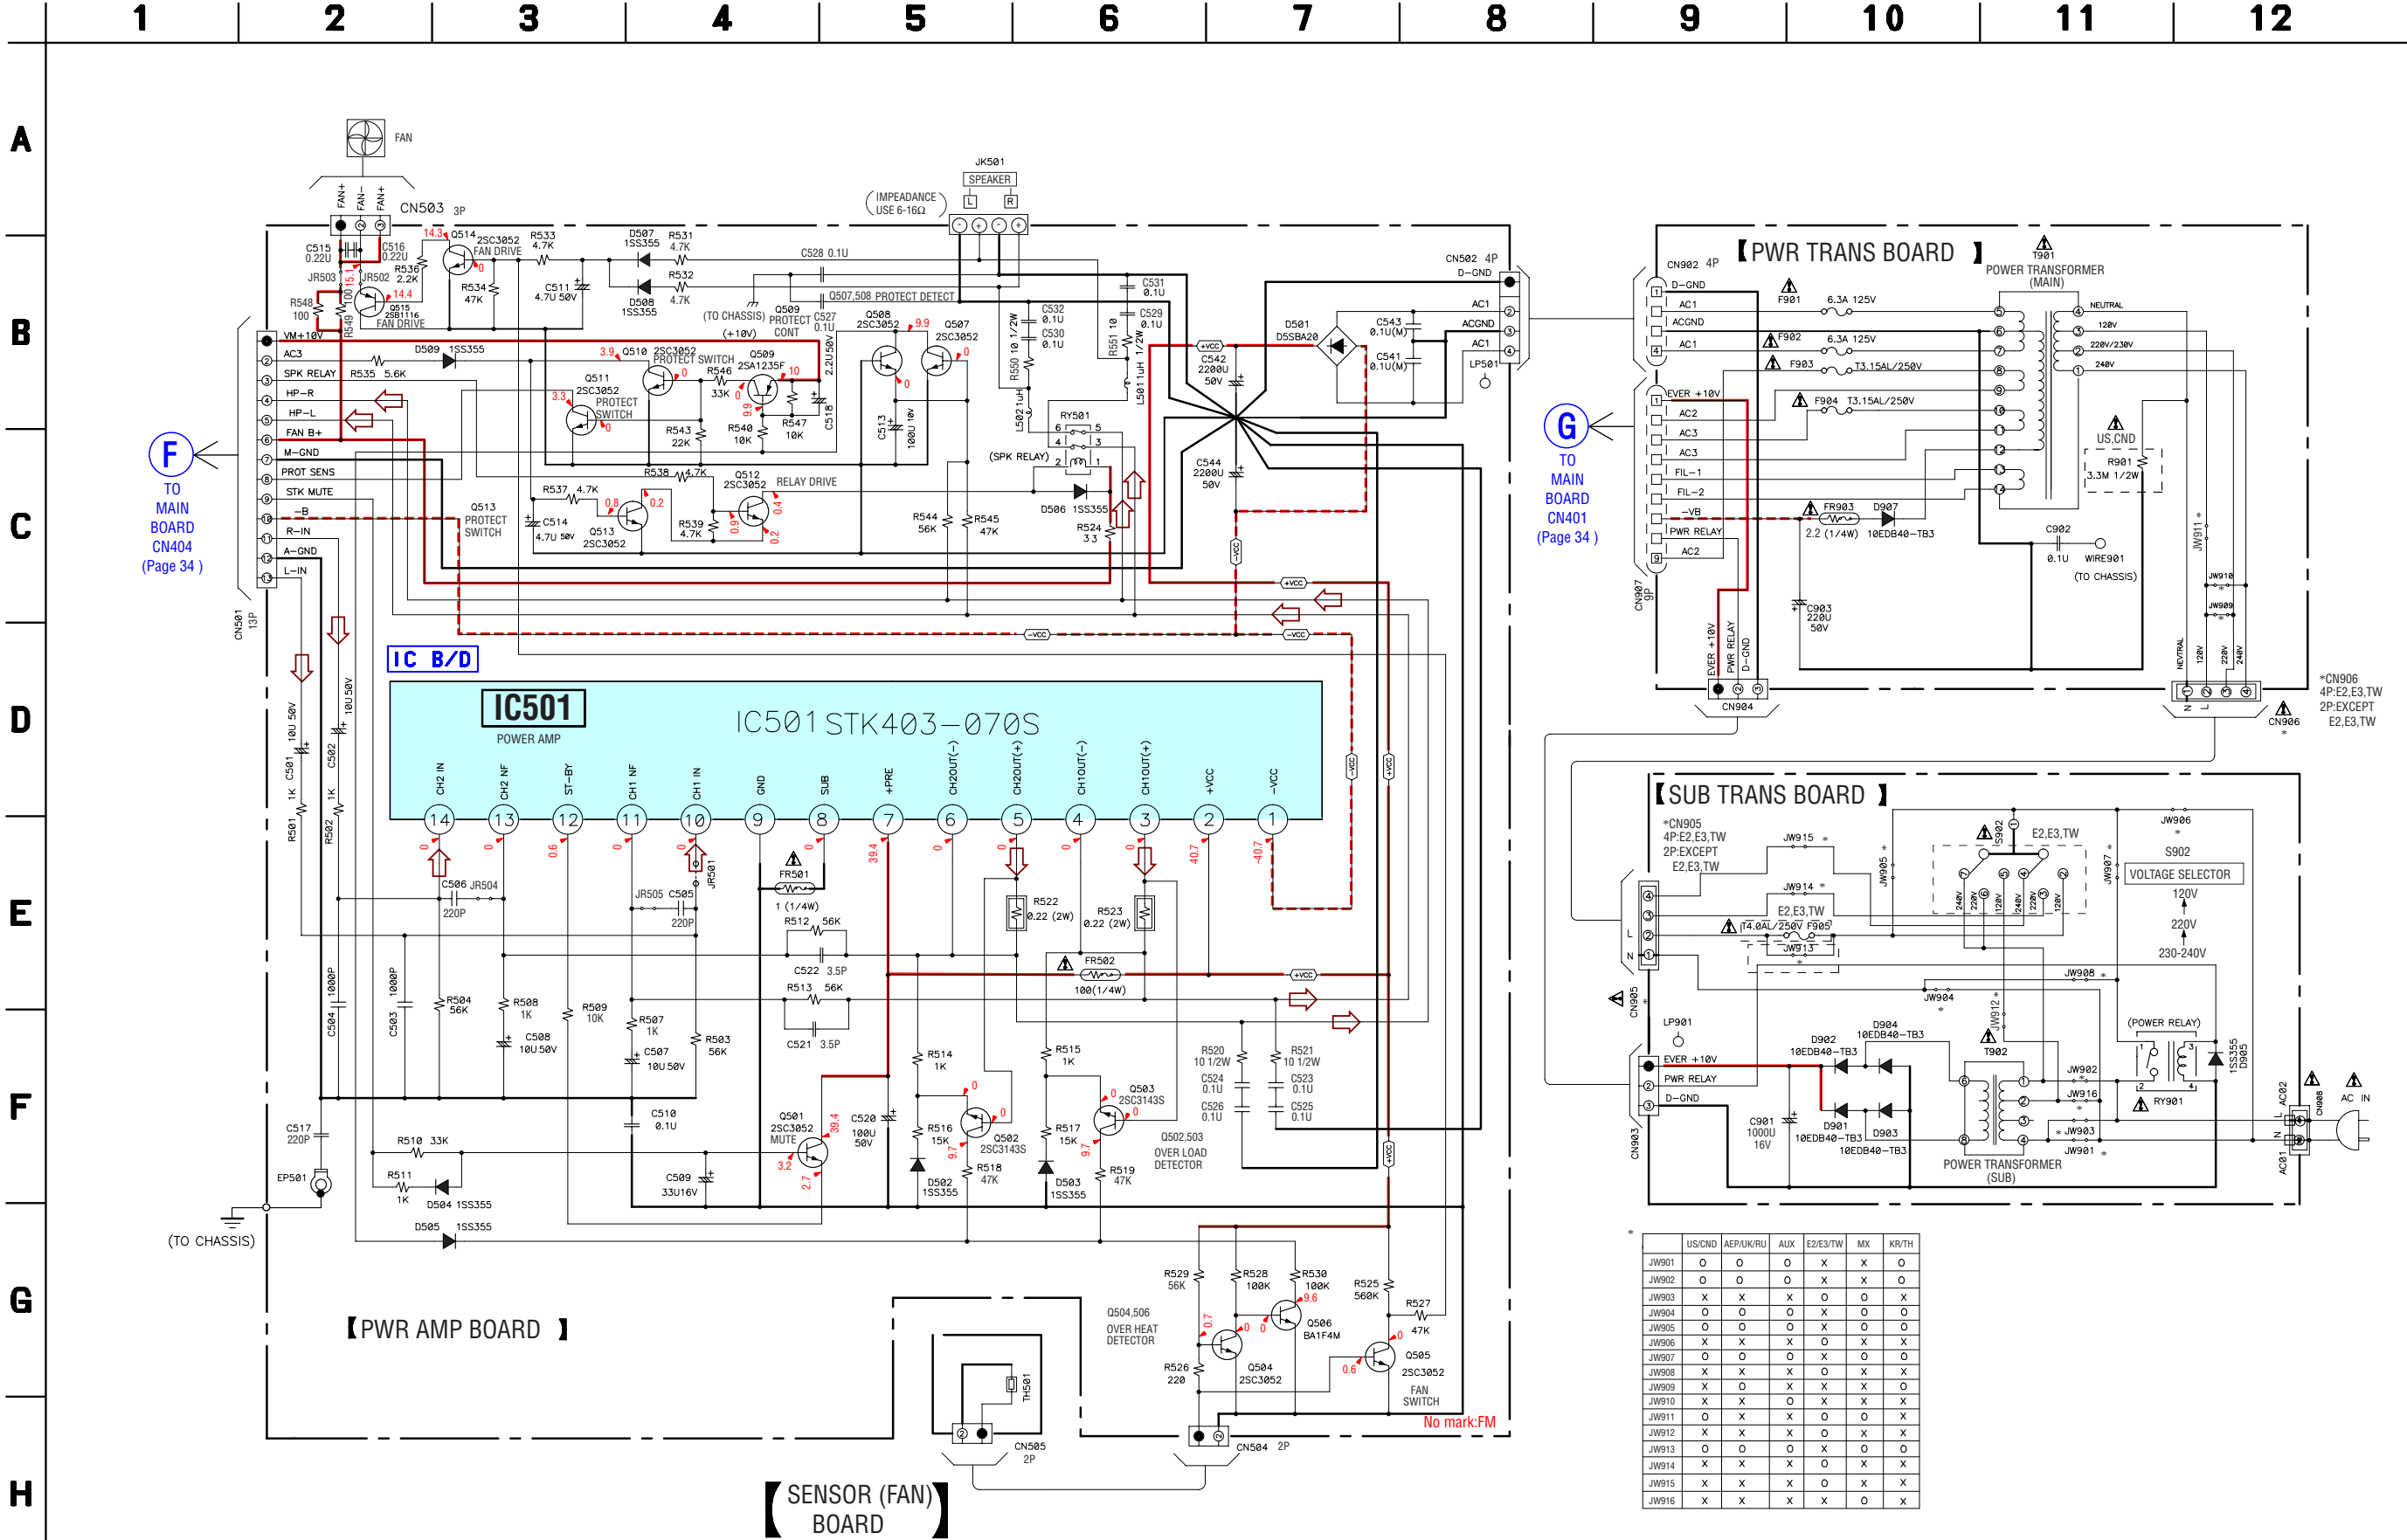


8-12. IC Block Diagrams

— BD Board —

IC721 LC78646E-E

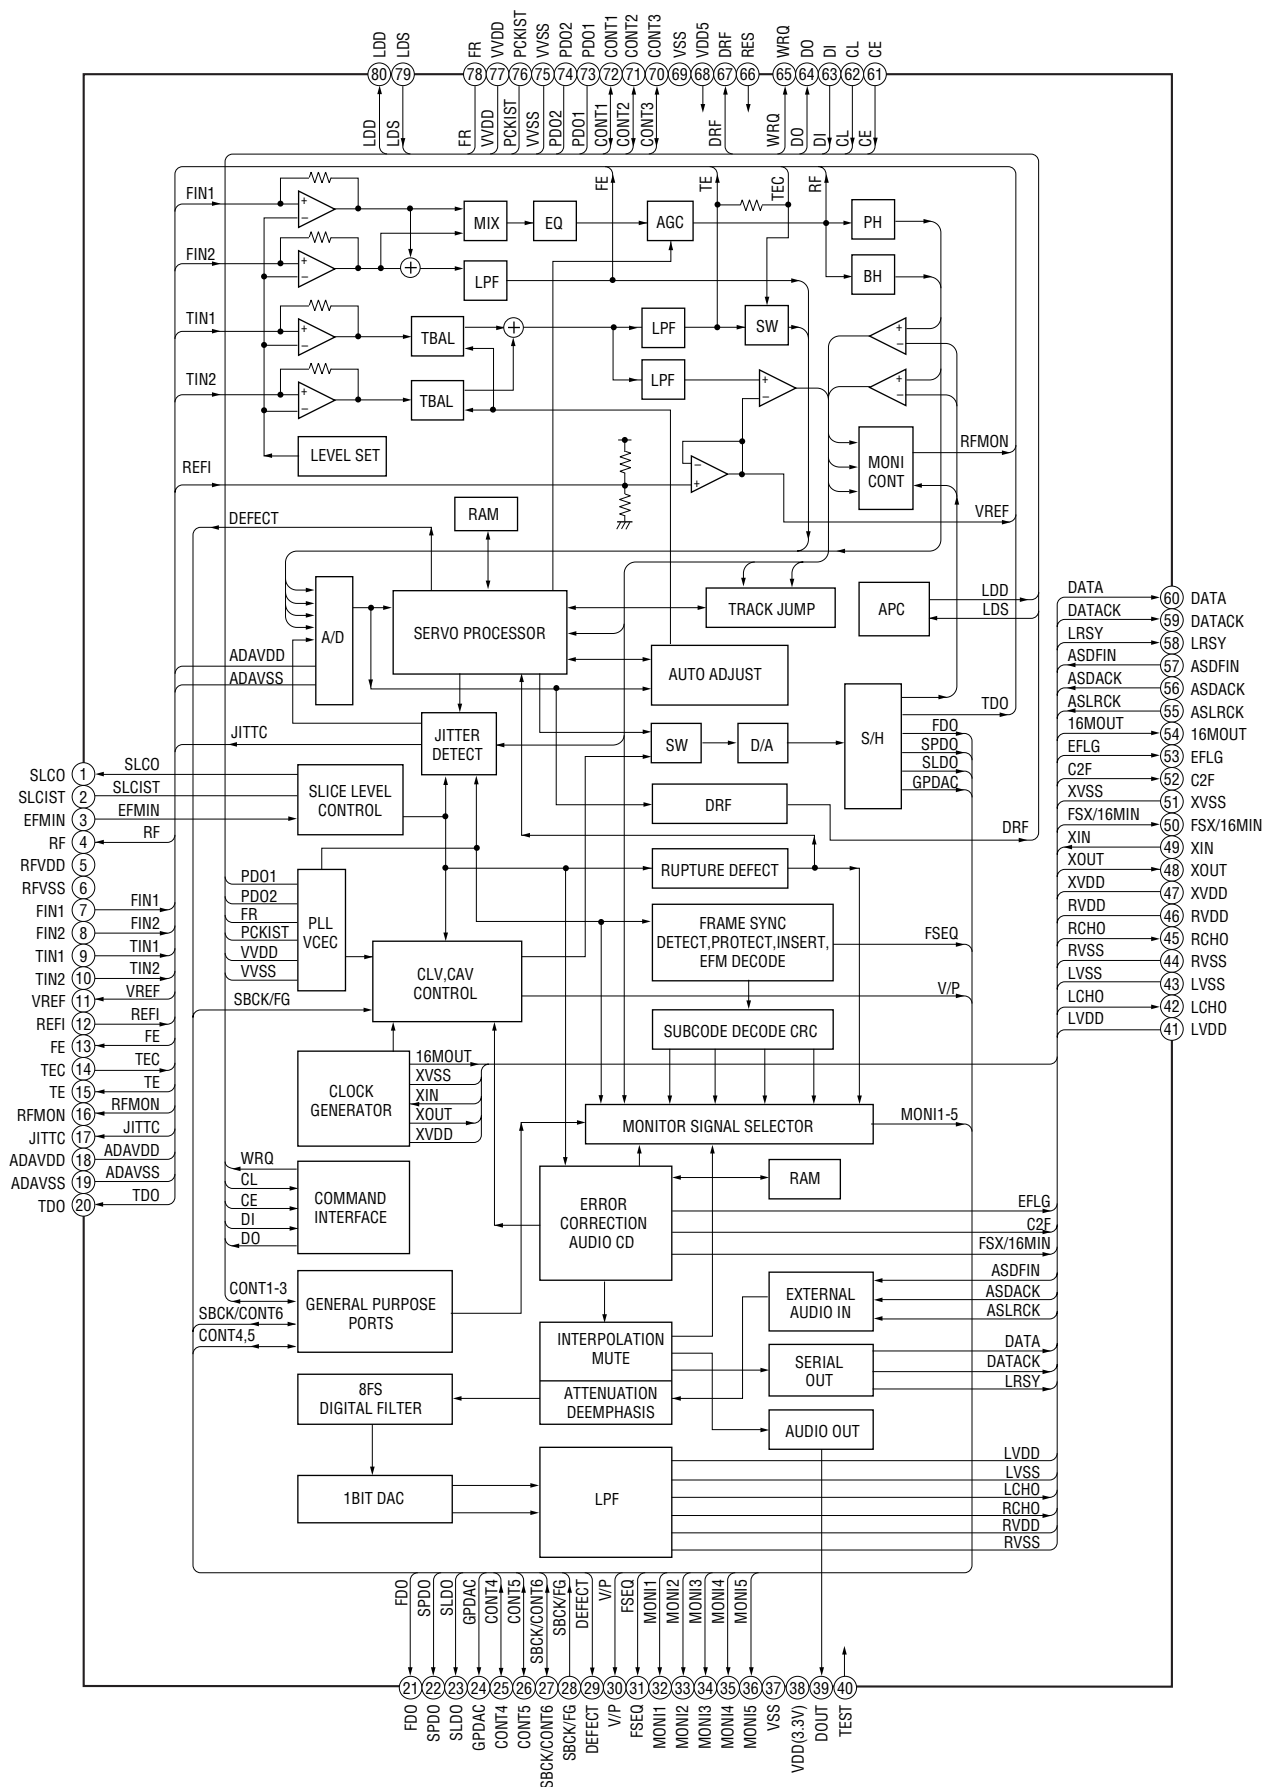


IC801 LC78684E-E

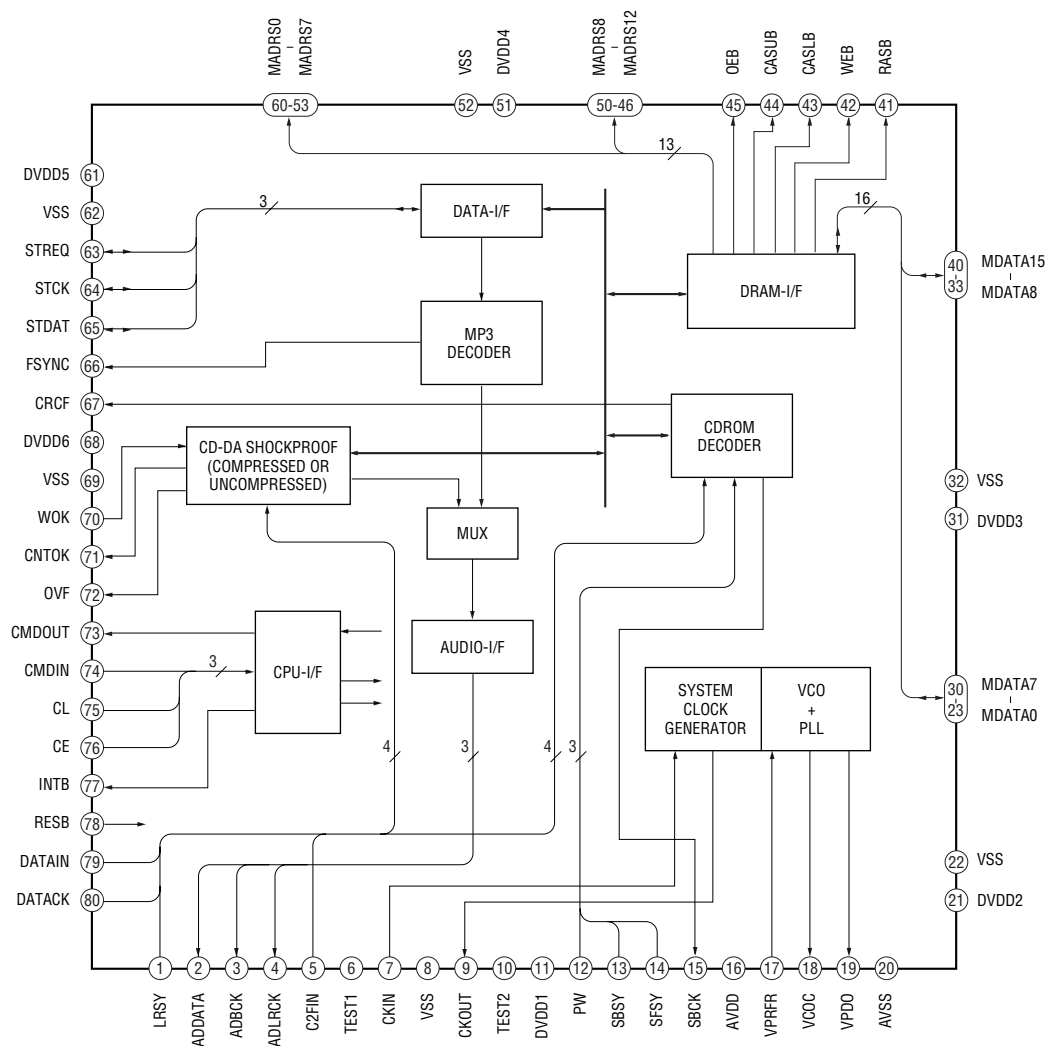


— PANEL Board —

IC602 MM1574A

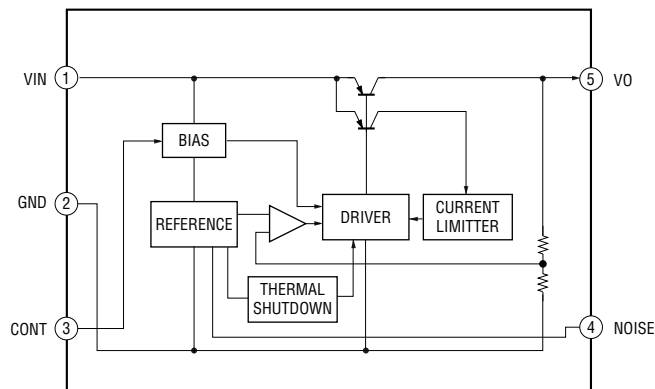


— MAIN Board —

IC201 HA12237F

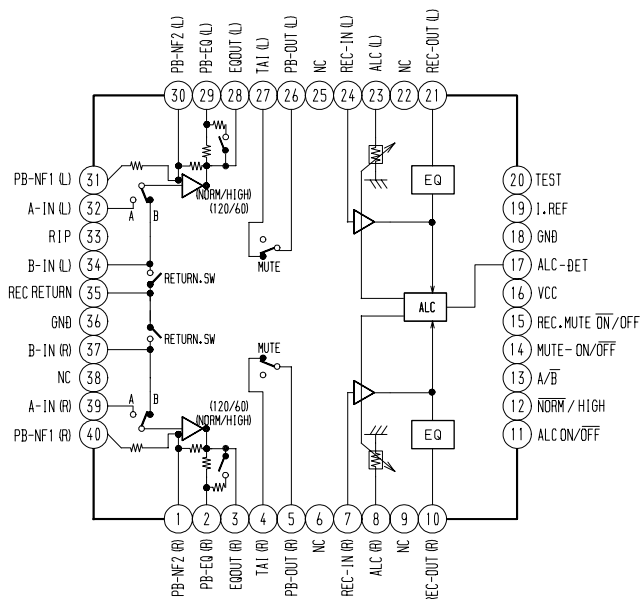


— PWR AMP Board —

IC501 STK403-070S

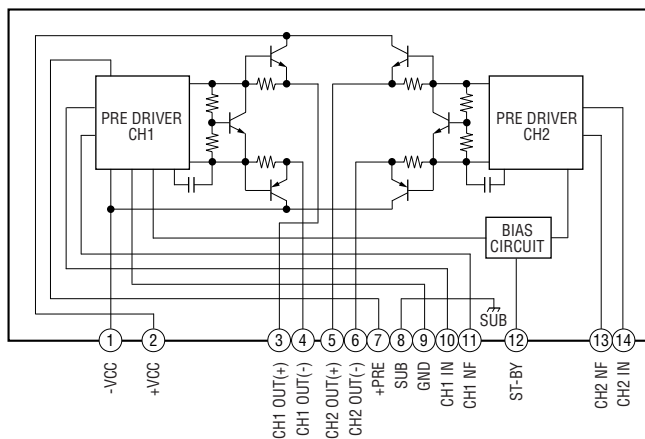

— CONNECTOR Board —

IC701, 711, 721 BA6956AN

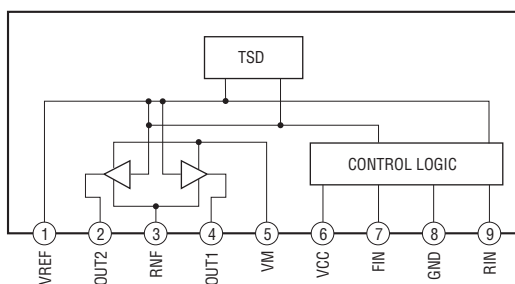

8-13. IC Pin Function Description

• IC601 LC876796B-51K7-E (SYSTEM CONTROLLER)(PANEL BOARD)

Pin No.	Pin Name	I/O	Description
1	SYS MUTE	O	System muting signal output
2	BU1924 DATA	I	RDS data input from the tuner
3	CD POWER	O	Not used (open)
4	LC87646 RESET	O	Reset signal output to the RF amplifier (IC721)
5	LC87646 CE	O	Chip enable signal output to the RF amplifier (IC721)
6	LC87684 CE	O	Chip enable signal output to the MP3 decoder (IC801)
7	M61529 CLK	O	Clock output to the sound processor (IC301)
8	PT8300 CE	O	Chip enable signal output to the I/O expander (IC302)
9	LC72121 CE	O	Chip enable signal output to the tuner
10	LC87684 SYNC	I	MP3 frame sync signal input from the MP3 decoder (IC801)
11	RESET	I	Reset signal input
12	XT1	I	Resonator terminal (32.768kHz)
13	XT2	O	Resonator terminal (32.768kHz)
14	VSS1	—	Ground terminal
15	CF 1	I	Resonator terminal (8MHz)
16	CF 2	O	Resonator terminal (8MHz)
17	VDD1	—	Power supply terminal
18	TCM	I	Switch detection signal input from the tape deck
19	TCM1	I	Switch detection signal input from the tape deck
20	CDM ELVE-3,2,1	I	Sensor signal input from the CD changer
21	CDM ELVE-0/ SLDE-3,2	I	Sensor signal input from the CD changer
22	CDM SLDE-1,0	I	Sensor signal input from the CD changer
23	VACS	I	VACS signal input
24	KEY 2	I	Key signal input from the S614 to 622
25	KEY 1	I	Key signal input from the S601 to 610
26	KEY 0	I	Key signal input from the S627 to 636
27	POWER DOWN	I	Power down detection signal input from the IC603
28	REMCON IN	I	Remote control signal input from the remote sensor (RM601)
29	BU1924 CLK	I	RDS clock input from the tuner
30 to 41	G12 to G1	O	Grid signal output to the fluorescent indicator tube
42 to 45	P1 to P4	O	Segment output to the fluorescent indicator tube
46	VDD3	—	Power supply terminal
47 to 50	P5 to P8	O	Segment output to the fluorescent indicator tube
51	VPP	—	Power supply terminal (negative)
52 to 65	P9 to P22	O	Segment output to the fluorescent indicator tube
66	CDM SW5-B	I	Stocker in/out switch signal input from the CD changer
67	CDM SW5-A	I	Disc position switch signal input from the CD changer
68	CDM SW4	I	Stocking switch signal input from the CD changer
69	CDMSW2-B	I	Disc in (8cm) switch signal input from the CD changer
70	CDM SW2-A	I	Disc in (play) switch signal input from the CD changer
71	CDMSW1-A	I	Disc insert switch signal input from the CD changer
72	VDD4	—	Power supply terminal
73	CDM SW3	I	Disc out switch signal input from the CD changer
74	TUNER TUNED	I	Tuner tuned status signal input from the tuner
75	TUNER STEREO	I	Stereo/mono signal input from the tuner
76	CD DRF	I	DRF signal input from the RF amplifier (IC721)
77	CD WRQ	I	Subcode Q output standby signal input from the RF amplifier (IC721)
78	CD MUTE	O	Not used (open)
79	VR ENCODER A	I	Volume signal input from the rotary encoder (VR601)

Pin No.	Pin Name	I/O	Description
80	VR ENCODER B	I	Volume signal input from the rotary encoder (VR601)
81	CDM D.SENSOR	I	Disc detection signal input
82	PROTECTOR	I	Protection signal input from the power amplifier circuit
83	TAPE END	I	Tape end detection signal input from the tape deck
84	MODE SW IN	I	Mode setting signal input
85	LINE MUTE	O	Line muting signal output
86	DISC5 LED	O	Disc LED control signal output
87	DISC4 LED	O	Disc LED control signal output
88	DISC3 LED	O	Disc LED control signal output
89	VSS2	—	Ground terminal
90	VDD2	—	Power supply terminal
91	DISC2 LED	O	Disc LED control signal output
92	DISC1 LED	O	Disc LED control signal output
93	POWER LED	O	Power LED control signal output
94	POWER RELAY	O	Power relay on/off control signal output
95	LC72121/M61529/ PT8300 DO	O	Data output to the tuner, the sound processor (IC301) and the I/O expander (IC302)
96	LC72121 DI	I	Data input from the tuner
97	LC72121/PT8300 CLK	O	Clock output to the tuner and the I/O expander (IC302)
98	LC87646/LC78684 DO	O	Serial command data output to the RF amplifier (IC721) and the MP3 decoder (IC801)
99	LC87646/LC78684 DI	I	Serial command data input from the RF amplifier (IC721) and the MP3 decoder (IC801)
100	LC87646/LC78684 CLK	O	Serial command clock output to the RF amplifier (IC721) and the MP3 decoder (IC801)

SECTION 9
EXPLODED VIEWS


- NOTE:
- XX, -X mean standardized parts, so they may have some differences from the original one.
 - Items marked “*” are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
 - The mechanical parts with no reference number in the exploded views are not supplied.

- Abbreviation
AUS : Australian model.
CND: Canadian model.
E2 : 120 V AC area in E model.
E3 : 220-240 V AC area in E model.
KR : Korean model.
MX : Mexican model.
RU : Russian model.
TH : Thai model.
TW : Taiwan model.

The components identified by mark Δ or dotted line with mark Δ are critical for safety. Replace only with part number specified.


Les composants identifiés par une marque Δ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

9-1. Case, Top Panel Section

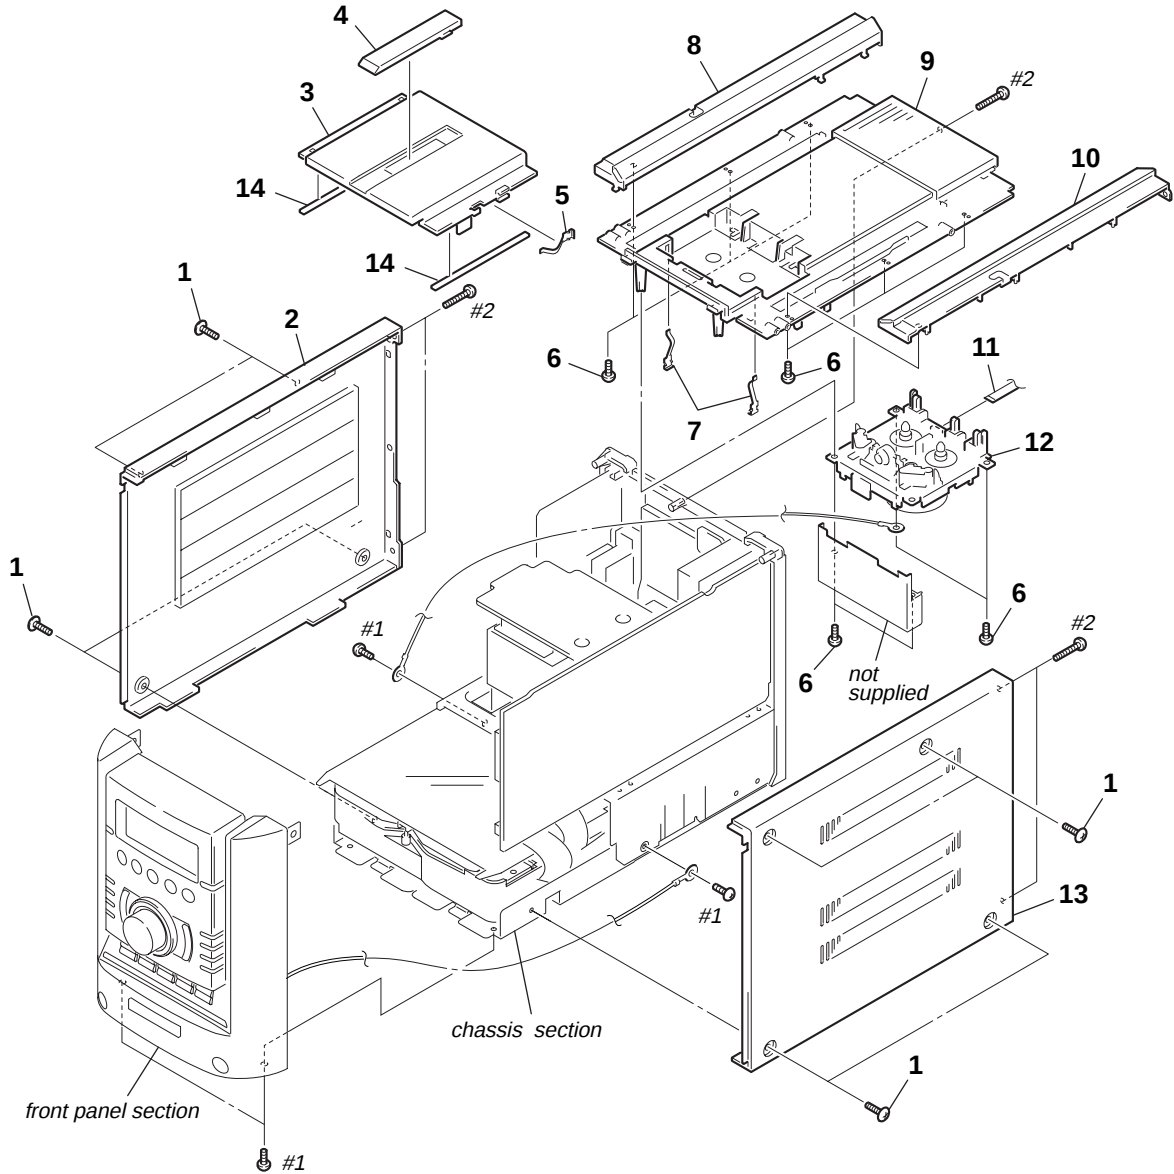


Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
1	3-363-099-71	SCREW (CASE 3 TP2)(EXCEPT KR)		9	4-246-389-01	PANEL, TOP (US)	
1	3-363-099-81	SCREW (CASE 3 TP2)(KR)		9	4-246-389-11	PANEL, TOP (EXCEPT US)	
2	4-246-394-01	CASE (SIDE-L)(US)		10	4-246-391-01	PANEL (R), SUB TOP	
2	4-246-394-11	CASE (SIDE-L)(EXCEPT US)		11	1-827-392-11	WIRE (FLAT TYPE)(8 CORE)	
3	4-246-395-01	LID (TC)		12	1-796-351-41	MECHANISM, SINGLE CASSETTE	
4	4-246-396-01	WINDOW (TC)		13	4-246-393-01	CASE (SIDE-R)(US)	
5	4-232-195-01	SPRING (LID)		13	4-246-393-11	CASE (SIDE-R)(EXCEPT US)	
6	4-951-620-01	SCREW (2.6X8), +BVTP		14	4-246-403-01	SPACER	
7	4-231-776-01	SPRING, CASSETTE DETENT		#1	7-685-646-79	SCREW +BVTP 3X8 TYPE2 IT-3	
8	4-246-390-01	PANEL (L), SUB TOP		#2	7-685-650-79	SCREW +BVTP 3X16 TYPE2 IT-3	

9-2. Front Panel Section

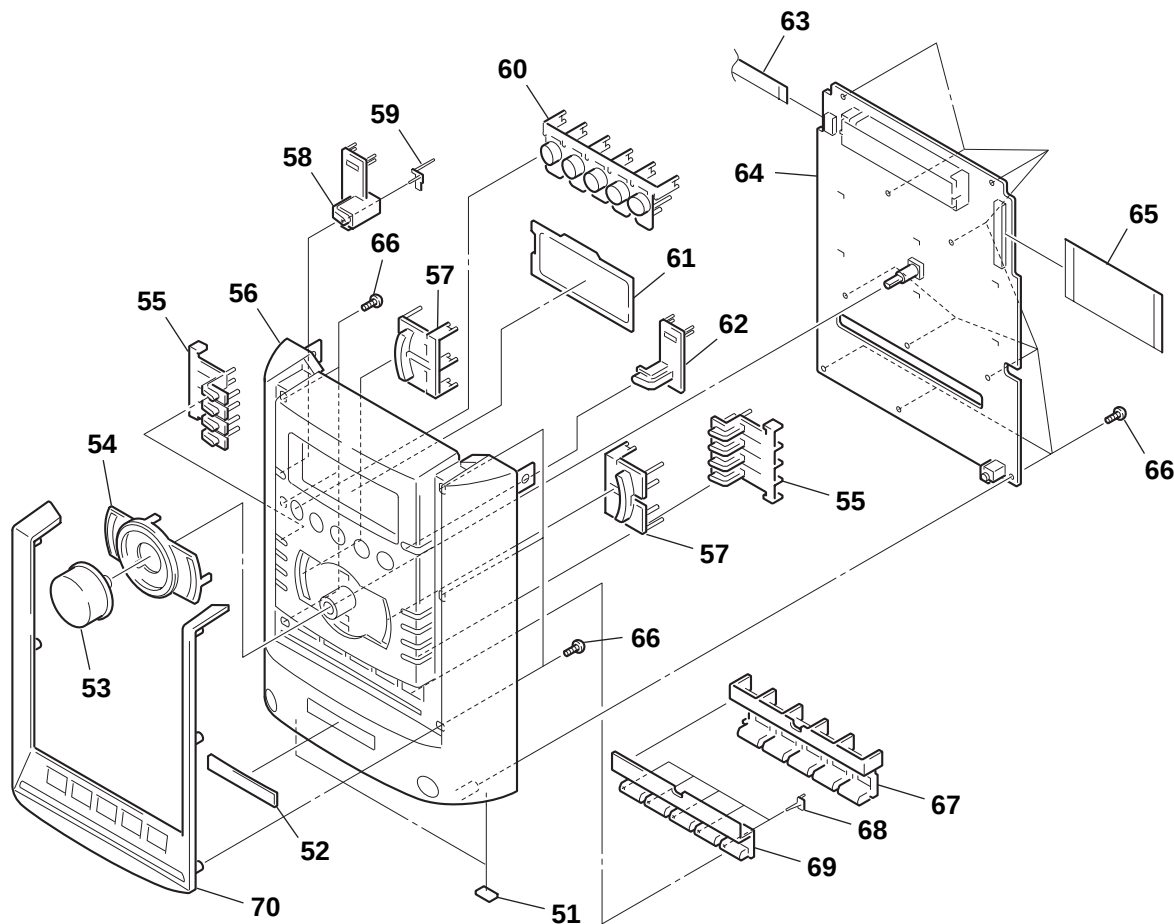

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
51	4-225-252-01	CUSHION (FOOT)		63	1-769-920-11	WIRE (FLAT TYPE)(9 CORE)	
52	4-246-397-01	EMBLEM (5CD)		64	A-4734-337-A	PANEL BOARD, COMPLETE (US,CND)	
53	4-246-384-01	KNOB (VOL)		64	A-4734-349-A	PANEL BOARD, COMPLETE (AEP,UK,RU)	
54	4-246-385-01	RING (VOL)		64	A-4734-360-A	PANEL BOARD, COMPLETE (E3,TW)	
55	4-246-382-01	BUTTON (FUNCTION)		64	A-4747-533-A	PANEL BOARD, COMPLETE (MX,E2)	
56	4-246-374-01	PANEL, FRONT (US)		64	A-4747-535-A	PANEL BOARD, COMPLETE (KR,AUS)	
56	4-246-374-11	PANEL, FRONT (AEP,UK)		64	A-4747-545-A	PANEL BOARD, COMPLETE (TH)	
56	4-246-374-21	PANEL, FRONT (EXCEPT US,AEP,UK)		65	1-827-395-11	WIRE (FLAT TYPE)(37 CORE)	
57	4-246-383-01	BUTTON (PRESET)		66	4-951-620-01	SCREW (2.6X8), +BVTP	
58	4-246-379-01	BUTTON (POWER)		67	4-246-388-01	BUTTON (EJECT)	
59	4-246-378-01	INDICATOR (POWER)		68	4-246-387-01	INDICATOR (DISC)	
60	4-246-381-01	BUTTON (PLAY)		69	4-246-386-01	BUTTON (DISC)	
61	4-246-376-01	WINDOW (DISPLAY)		70	4-246-375-01	PANEL, SUB	
62	4-246-380-01	BUTTON (DISPLAY)					

9-3. Chassis Section-1

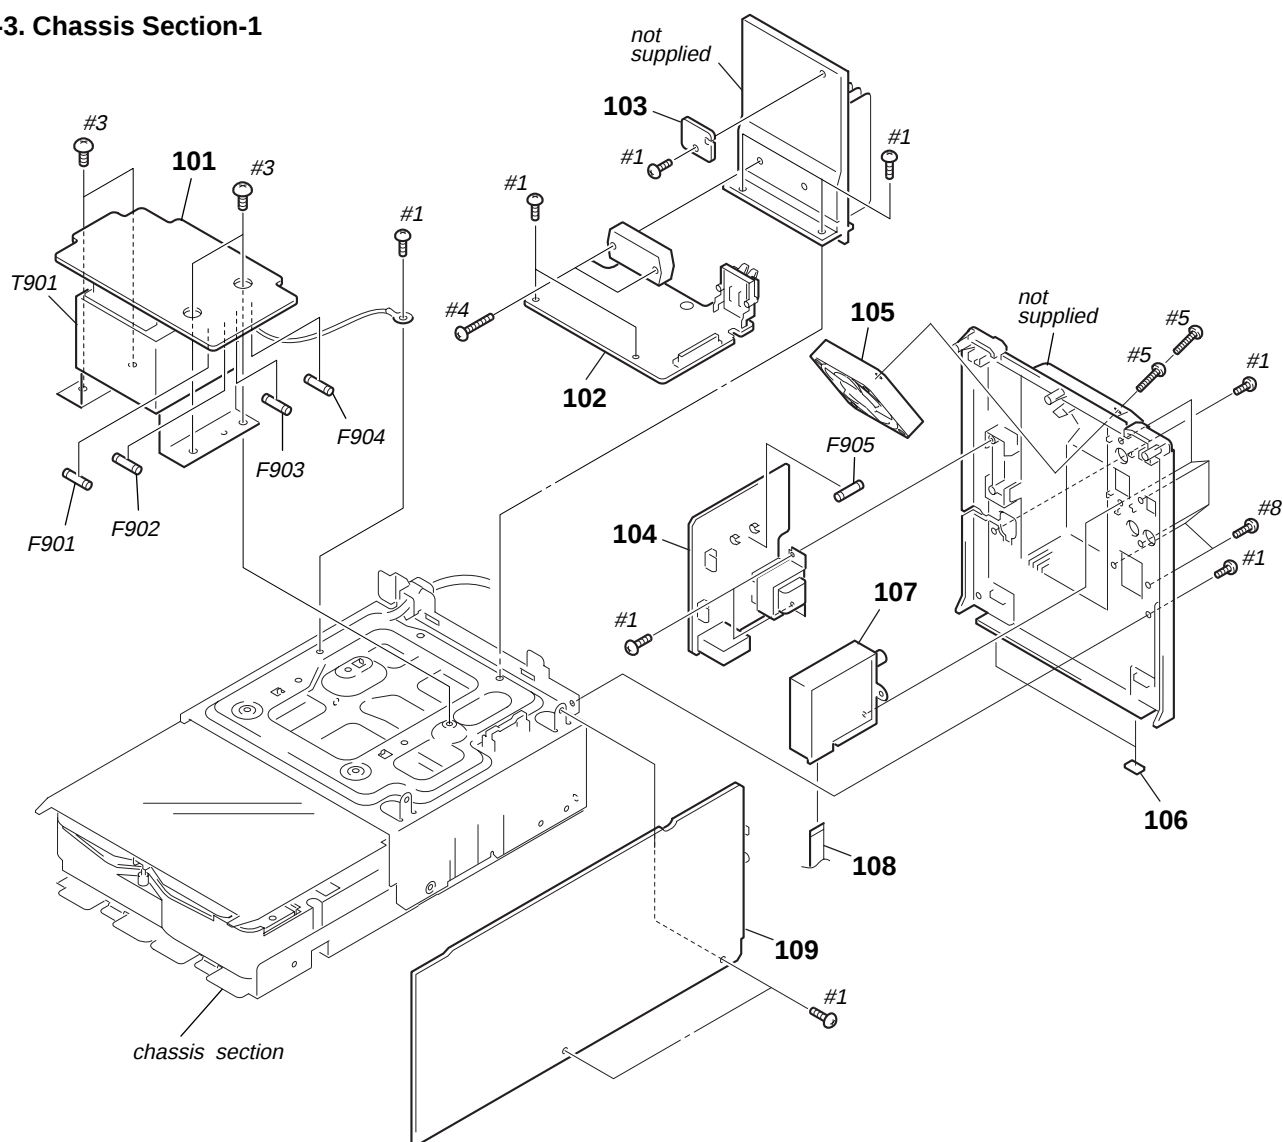


Ref. No.	Part No.	Description	Remark
101	1-689-250-11	PWR TRANS BOARD	
102	A-4734-342-A	PWR AMP BOARD, COMPLETE (EXCEPT TH)	
102	A-4747-550-A	PWR AMP BOARD, COMPLETE (TH)	
103	1-689-248-12	SENSOR (FAN) BOARD	
104	1-689-246-12	SUB TRANS BOARD	
105	1-787-025-11	DC FAN	
106	4-225-252-01	CUSHION (FOOT)	
107	1-693-625-11	TUNER (FM/AM)(US,CND)	
107	1-693-626-11	TUNER (FM/AM)(AEP,UK)	
107	1-693-627-11	TUNER (FM/AM)(RU)	
107	1-693-628-11	TUNER (FM/AM)(E2,E3,TW,TH,MX,AUS)	
107	1-693-629-11	TUNER (FM/AM)(KR)	
108	1-769-946-11	WIRE (FLAT TYPE)(11 CORE)(EXCEPT AEP,UK)	
108	1-773-009-11	WIRE (FLAT TYPE)(15 CORE)(AEP,UK)	
109	A-4734-344-A	MAIN BOARD, COMPLETE (EXCEPT AEP,UK,TH)	
109	A-4734-354-A	MAIN BOARD, COMPLETE (AEP,UK)	
109	A-4747-553-A	MAIN BOARD, COMPLETE (TH)	
△ F901	1-533-454-11	FUSE, GLASS TUBE (DIA. 5)(T6.3AL/125V)	(US,CND,MX)
△ F901	1-533-473-11	FUSE, GLASS TUBE (DIA. 5)(T6.3AL/250V)	(EXCEPT US,CND,MX)
△ F902	1-533-454-11	FUSE, GLASS TUBE (DIA. 5)(T6.3AL/125V)	(US,CND,MX)

Ref. No.	Part No.	Description	Remark
△ F902	1-533-473-11	FUSE, GLASS TUBE (DIA. 5)(T6.3AL/250V)	(EXCEPT US,CND,MX)
△ F903	1-533-451-11	FUSE, GLASS TUBE (DIA. 5)(T3.15AL/125V)	(US,CND,MX)
△ F903	1-533-470-11	FUSE, GLASS TUBE (DIA. 5)(T3.15AL/250V)	(EXCEPT US,CND,MX)
△ F904	1-533-451-11	FUSE, GLASS TUBE (DIA. 5)(T3.15AL/125V)	(US,CND,MX)
△ F904	1-533-470-11	FUSE, GLASS TUBE (DIA. 5)(T3.15AL/250V)	(EXCEPT US,CND,MX)
△ F905	1-533-471-11	FUSE, GLASS TUBE (DIA. 5)(T4AL/250V)	(E2,E3,TW)
△ T901	1-439-827-11	TRANSFORMER, POWER	(E2,E3,KR,TW,TH,AUS)
△ T901	1-439-828-11	TRANSFORMER, POWER (US,CND,MX)	
△ T901	1-439-829-11	TRANSFORMER, POWER (AEP,UK,RU)	
#1	7-685-646-79	SCREW +BVTP 3X8 TYPE2 IT-3	
#3	7-685-881-09	SCREW +BVTT 4X8 (S)	
#4	7-682-552-09	SCREW +B 3X16	
#5	7-684-023-04	N 3, TYPE 2	
#8	7-685-647-79	SCREW +BVTP 3X10 TYPE2 IT-3	

The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

9-4. Chassis Section-2

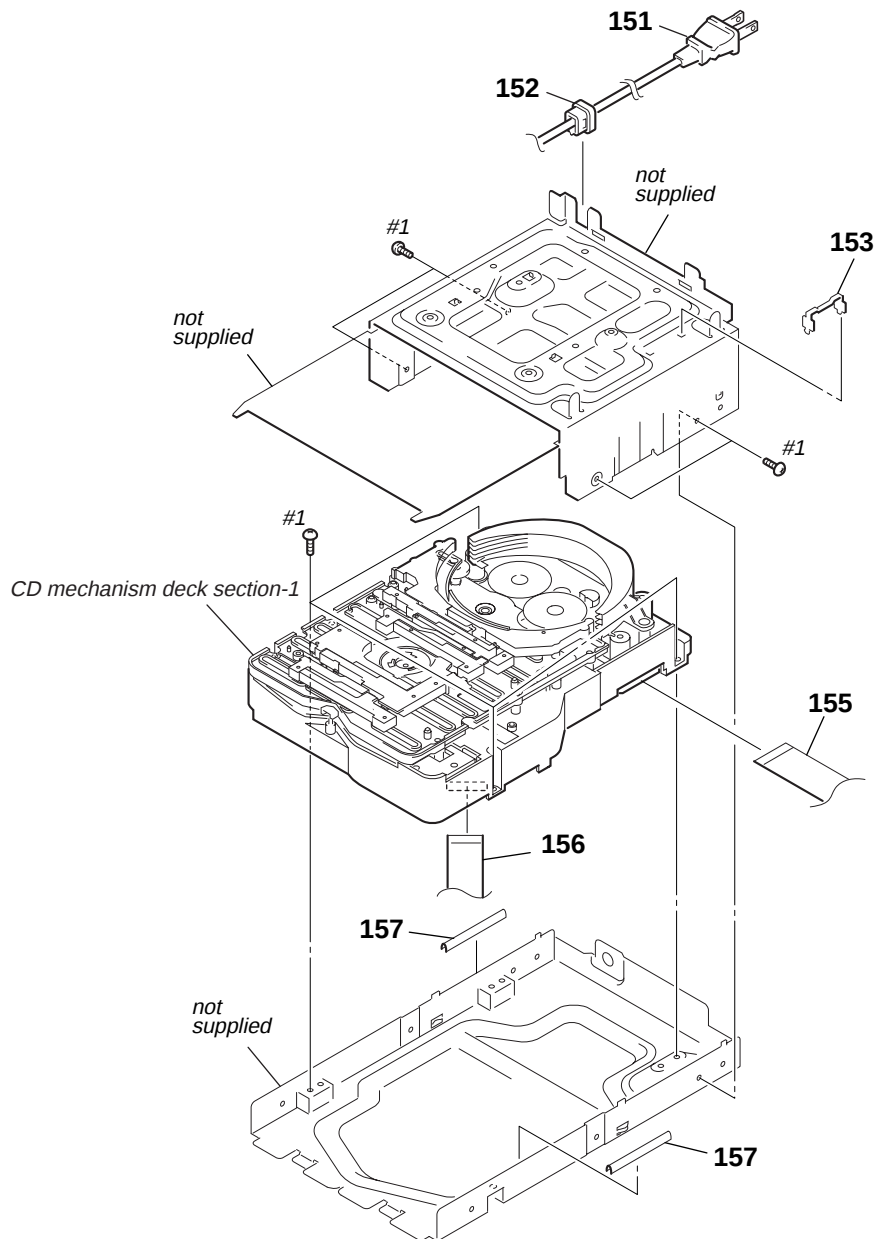


Ref. No.	Part No.	Description	Remark
△ 151	1-690-608-11	CORD, POWER (AUS)	
△ 151	1-769-079-22	CORD, POWER (KR)	
△ 151	1-783-531-11	CORD, POWER (US,CND)	
△ 151	1-783-532-11	CORD, POWER (AEP,UK,RU,TW)	
△ 151	1-791-901-12	CORD, POWER (E2,E3,MX)	
△ 151	1-824-818-11	CORD, POWER (WITH CONNECTOR) (TH)	
152	3-703-571-11	BUSHING (S)(4516), CORD (E2,E3,MX)	

Ref. No.	Part No.	Description	Remark
* 152	3-703-244-00	BUSHING (2104), CORD (EXCEPT E2,E3,MX)	
153	4-988-533-01	HOLDER, PWB	
155	1-827-390-11	WIRE (FLAT TYPE)(27 CORE)	
156	1-827-393-11	WIRE (FLAT TYPE)(19 CORE)	
157	3-378-109-12	CUSHION, SARANET	
#1	7-685-646-79	SCREW +BVTP 3X8 TYPE2 IT-3	

The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.


Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

9-5. CD Mechanism Section-1 (CDM69CH-K6BD71C)

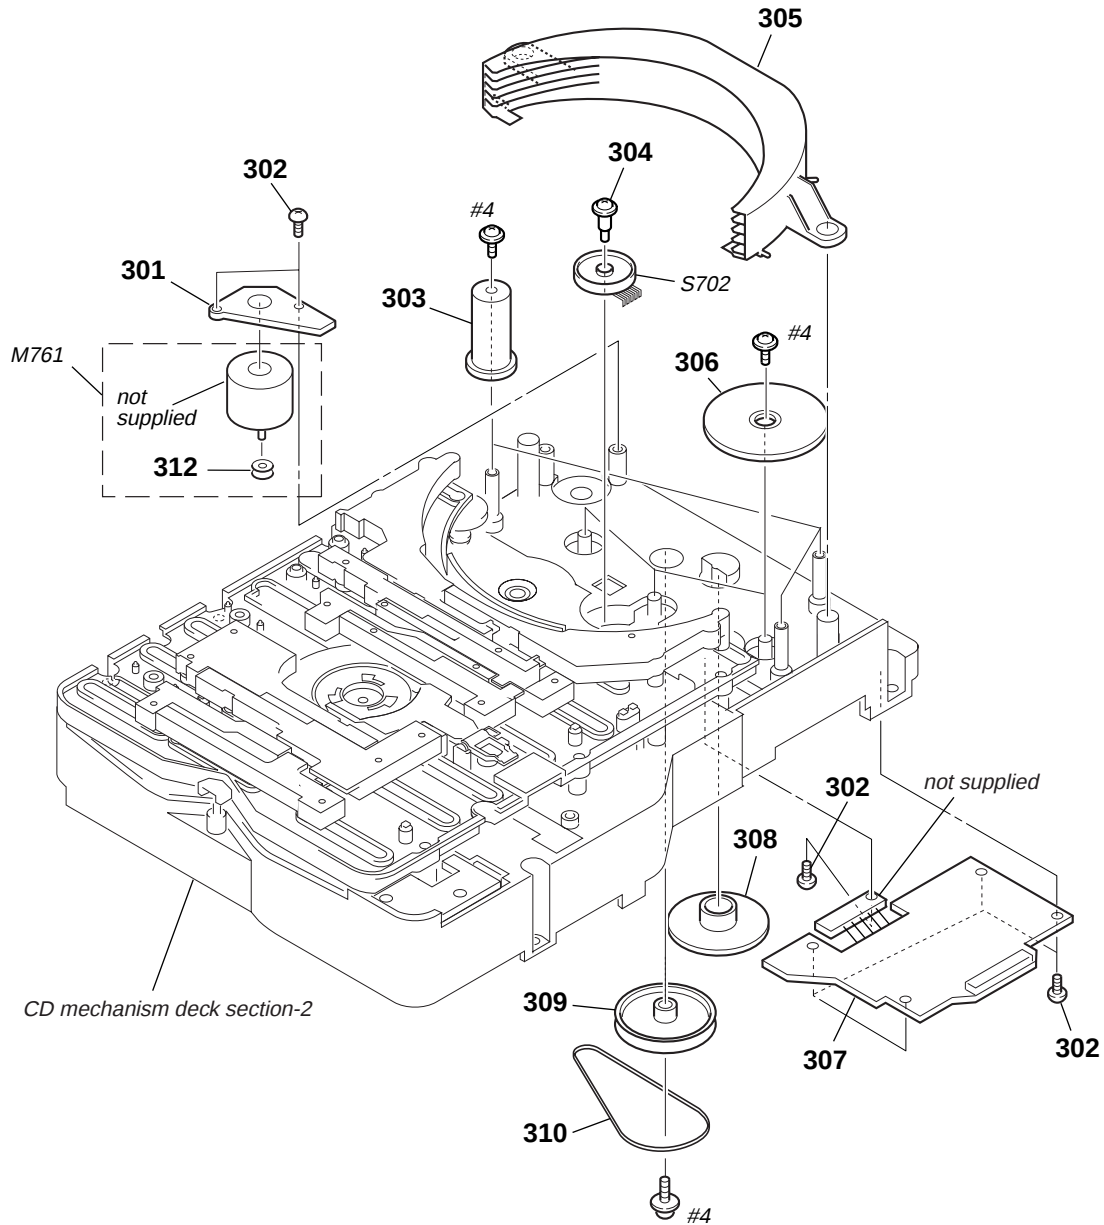


Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
301	1-686-725-12	STOCKER MOTOR BOARD		308	4-239-689-01	GEAR (STOCKER DECELERATION)	
302	4-951-620-01	SCREW (2.6X8), +BVTP		309	4-239-698-01	PULLEY (STOCKER)	
303	4-239-690-01	CAM (STOCKER U/D)		310	4-211-237-01	BELT (MODE)	
304	4-239-618-01	SCREW (+PWH,2X6), STEP TAPPING		312	4-986-156-01	PULLEY, MOTOR	
305	4-239-676-01	STOCKER		M761	A-4735-953-A	MOTOR ASSY (STOCKER)	
306	4-239-687-01	GEAR (STOCKER COMMUNICATION)		S702	1-477-299-11	ENCODER, ROTARY (STOCKER POSITION)	
307	A-4731-113-A	CONNECTOR BOARD, COMPLETE		#4	7-685-902-21	SCREW +PTPWH 2.6X8 (TYPE2)	

9-6. CD Mechanism Section-2 (CDM69CH-K6BD71C)

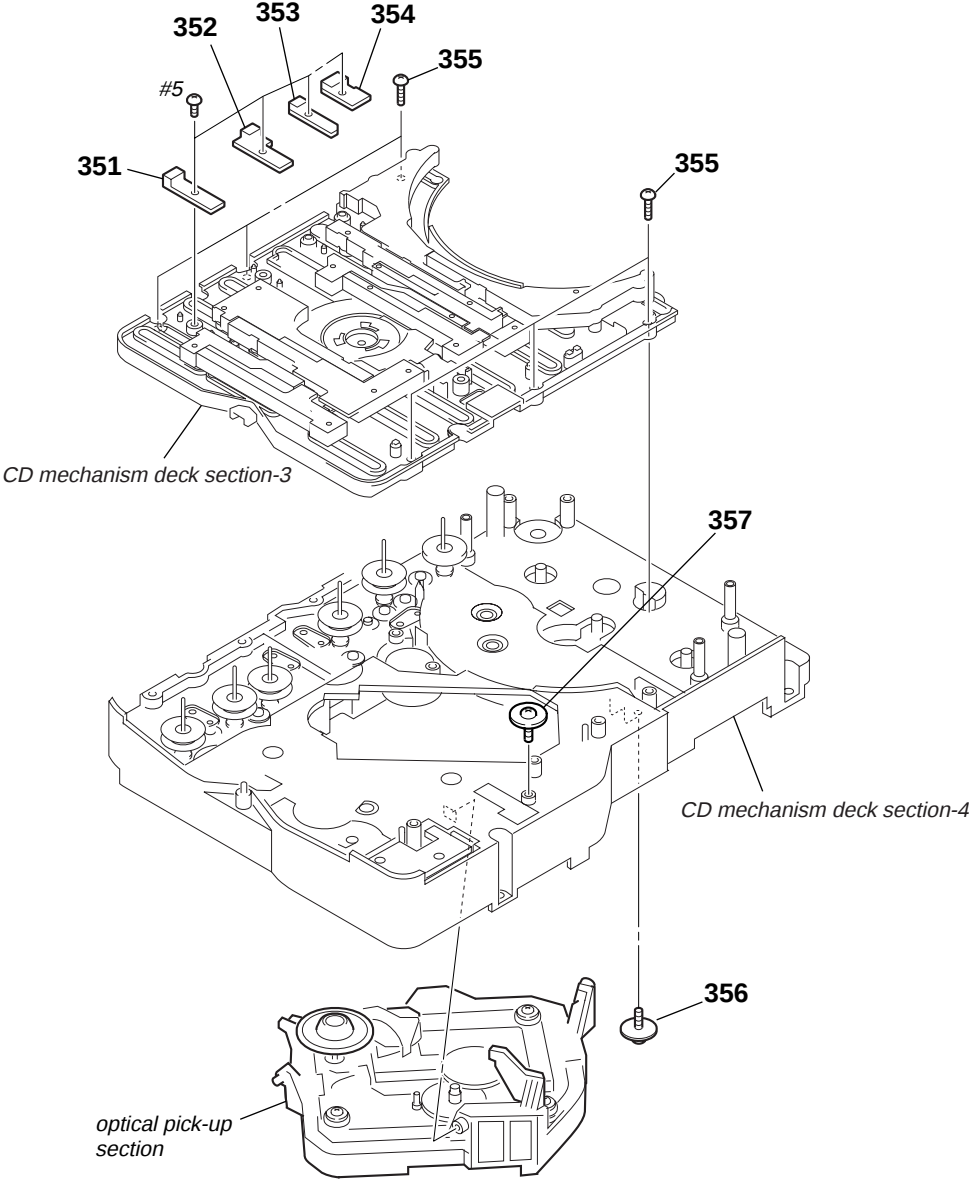


Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
351	1-686-727-12	SW (1) BOARD		355	4-951-620-01	SCREW (2.6X8), +BVTP	
352	1-686-728-12	SW (2) BOARD		356	4-985-672-01	SCREW (+PTPWHM2.6), FLOATING	
353	1-686-729-12	SW (3) BOARD		357	4-227-899-01	SCREW (DIA. 12), FROATING	
354	1-686-730-12	SW (4) BOARD		#5	7-685-533-14	SCREW +BTP 2.6X6 TYPE2 N-S	

9-7. CD Mechanism Section-3 (CDM69CH-K6BD71C)

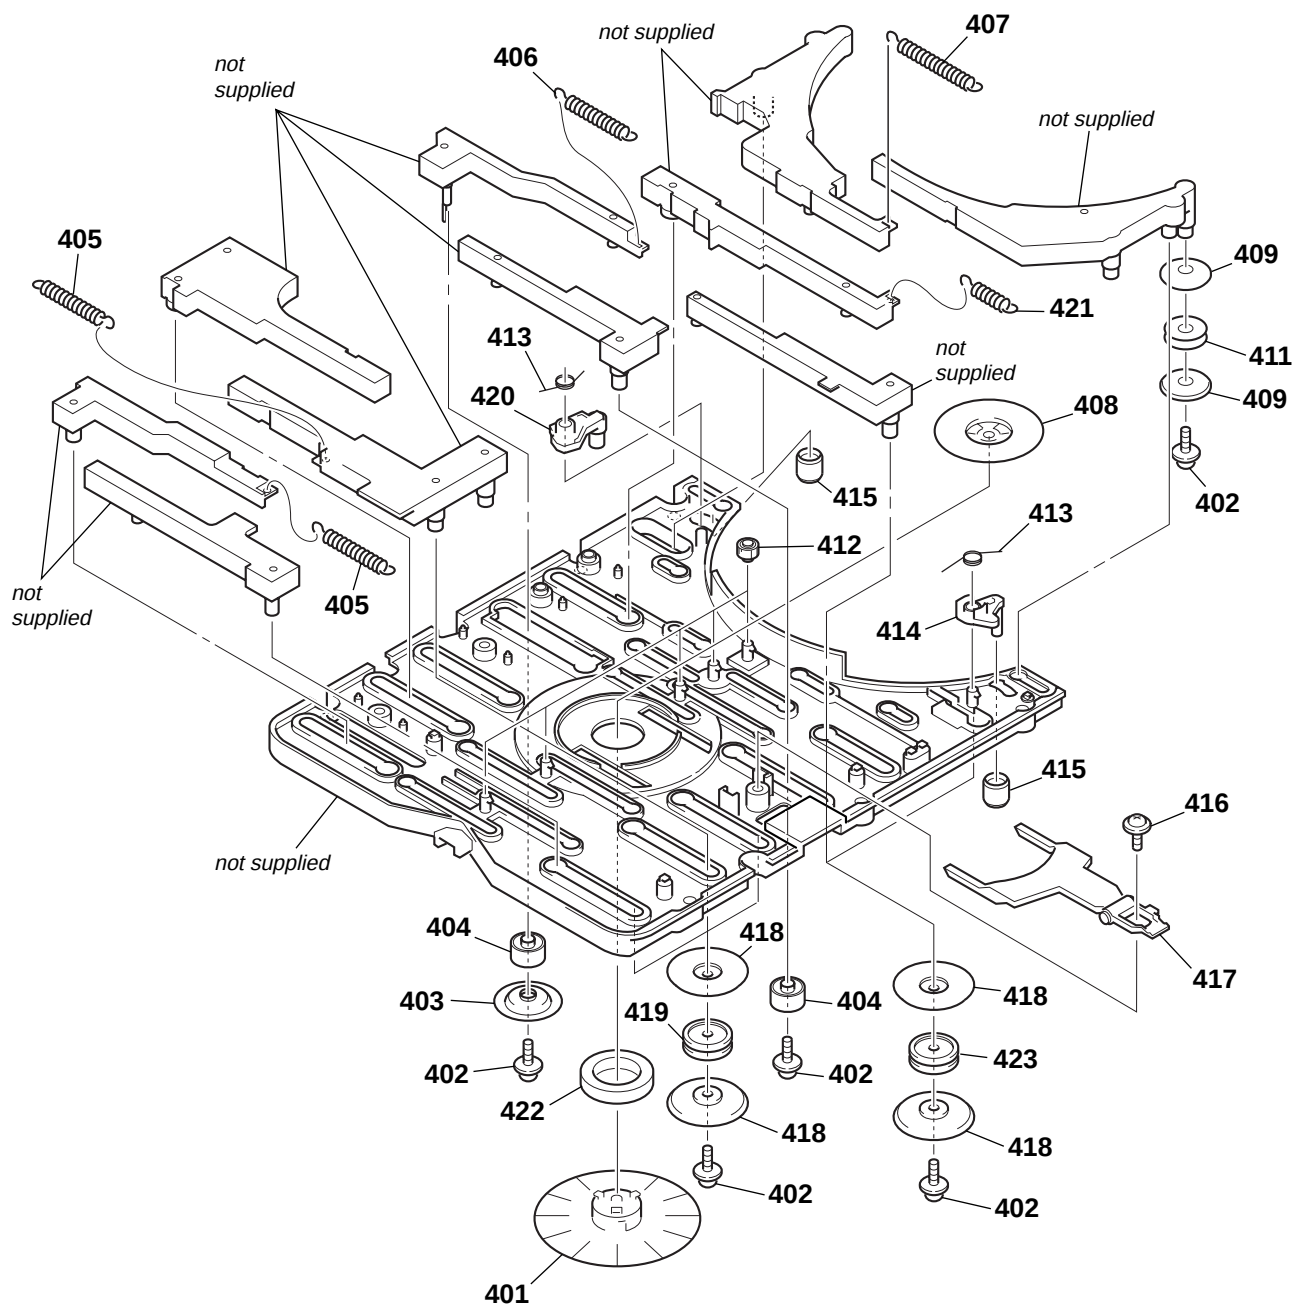


Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
401	X-4955-448-1	PULLEY(A)(KSM213)ASSY,CHUCKING		413	4-243-291-01	SPRING, TORSION	
402	4-992-069-01	SCREW (+PTPWH)(M2)(DIA. 7)		414	4-240-039-01	LEVER (DISC STOPPER)	
403	4-239-648-01	PARASOL (ROLLER)		415	4-239-702-01	ROLLER (DISC STOPPER)	
404	4-239-646-01	ROLLER (ROLLER)		416	4-985-672-01	SCREW (+PTPWHM2.6), FLOATING	
405	4-239-641-01	SPRING (1,2), TENSION		417	4-243-713-01	LEVER (LIFTER)	
406	4-239-642-01	SPRING (3), TENSION COIL		418	4-239-647-01	PARASOL (MAIN)	
407	4-239-679-01	SPRING (5), TENSION COIL		419	4-243-916-01	ROLLER (S), RUBBER	
408	4-243-703-01	YOKE (213)		420	4-241-599-01	LEVER (SUPPORT)	
409	4-239-649-01	PARASOL (STOCKER)		421	4-239-643-01	SPRING (4), TENSION COIL	
411	4-244-035-01	ROLLER (STOCKER), RUBBER		422	1-471-244-11	MAGNET	
412	4-239-640-01	PINION (SLIDER)		423	4-244-032-01	ROLLER, RUBBER	

9-8. CD Mechanism Section-4 (CDM69CH-K6BD71C)

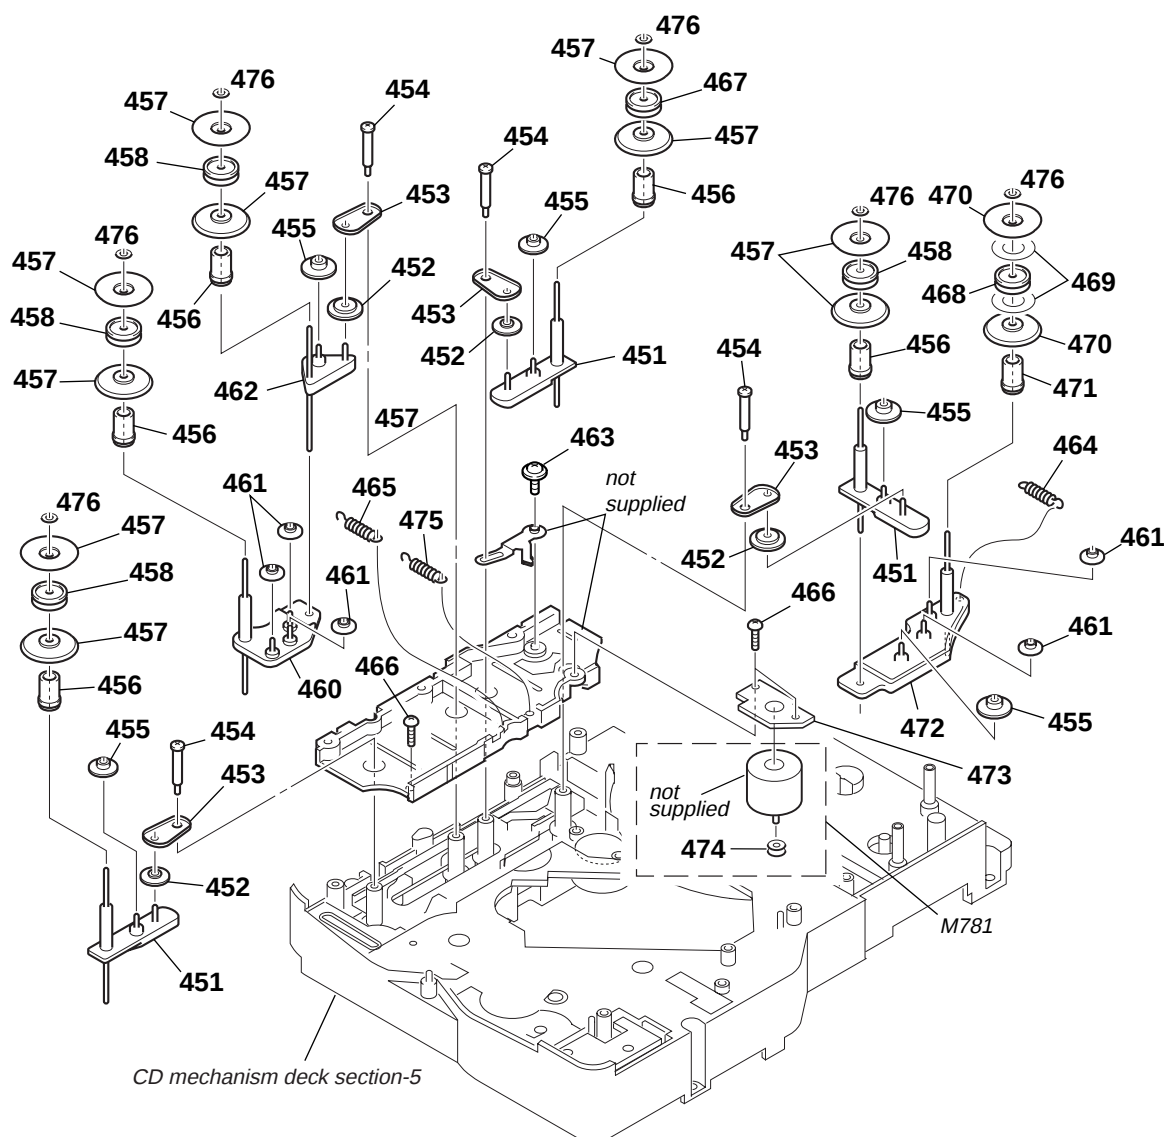


Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
451	X-4954-626-1	LEVER (ROLLER) ASSY		465	4-240-041-01	SPRING (SLIDER 2), TENSION	
452	4-239-666-01	GEAR		466	4-951-620-01	SCREW (2.6X8), +BVTP	
453	4-239-668-01	LEVER (CENTER)		467	4-243-916-01	ROLLER (S), RUBBER	
454	4-239-652-01	SCREW (ROLLER), STEP		468	4-244-035-01	ROLLER (STOCKER), RUBBER	
455	4-239-669-01	GEAR (ROLLER COMMUNICATION)		469	4-241-209-01	SHEET, ADHESIVE	
456	4-239-667-01	GEAR (ROLLER CENTER)		470	4-239-649-01	PARASOL (STOCKER)	
457	4-239-647-01	PARASOL (MAIN)		471	4-239-671-01	GEAR (ROLLER 5 CENTER)	
458	4-244-032-01	ROLLER, RUBBER		472	X-4954-627-1	BASE (SLIDER 5) ASSY	
460	X-4954-622-1	BASE (SLIDER 2) ASSY		473	1-686-726-12	ROLLER MOTOR BOARD	
461	4-239-670-01	GEAR (ROLLER 5 COMMUNICATION)		474	4-986-156-01	PULLEY, MOTOR	
462	X-4954-624-A	LEVER (SLIDER 4) ASSY		475	4-244-162-01	SPRING (SLIDER 4), TENSION	
463	4-992-069-01	SCREW (+PTPWH)(M2)(DIA. 7)		476	3-362-267-01	RING, RETAINING, CAPSTAN	
464	4-240-981-01	SPRING (BASE SLIDER 5), TENSION		M781	A-4735-953-A	MOTOR ASSY (ROLLER)	

9-9. CD Mechanism Section-5 (CDM69CH-K6BD71C)

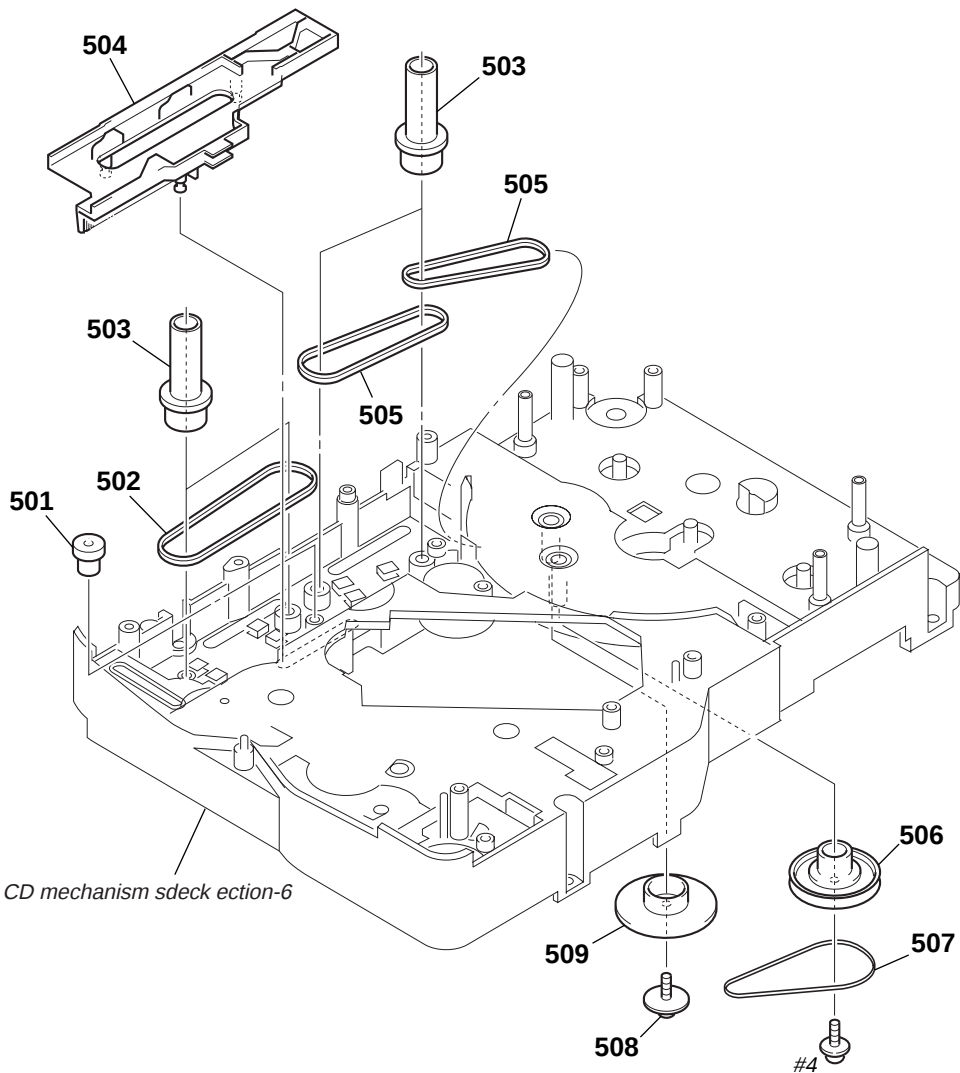


Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
501	4-240-020-01	GEAR (TIMING)		506	4-239-699-01	PULLEY	
502	4-239-708-02	BELT (FRONT), TIMING		507	4-247-349-02	BELT (ROLLER V)	
503	4-239-697-01	GEAR (CENTER)		508	4-227-899-01	SCREW (DIA. 12), FROATING	
504	X-4955-15701	SLIDER (MODE CAM V) ASSY		509	4-239-686-01	GEAR (ROLLER DECELERATION)	
505	4-239-706-02	BELT (REAR), TIMING		#4	7-685-902-21	SCREW +PTPWH 2.6X8 (TYPE2)	

9-10. CD Mechanism Section-6 (CDM69CH-K6BD71C)

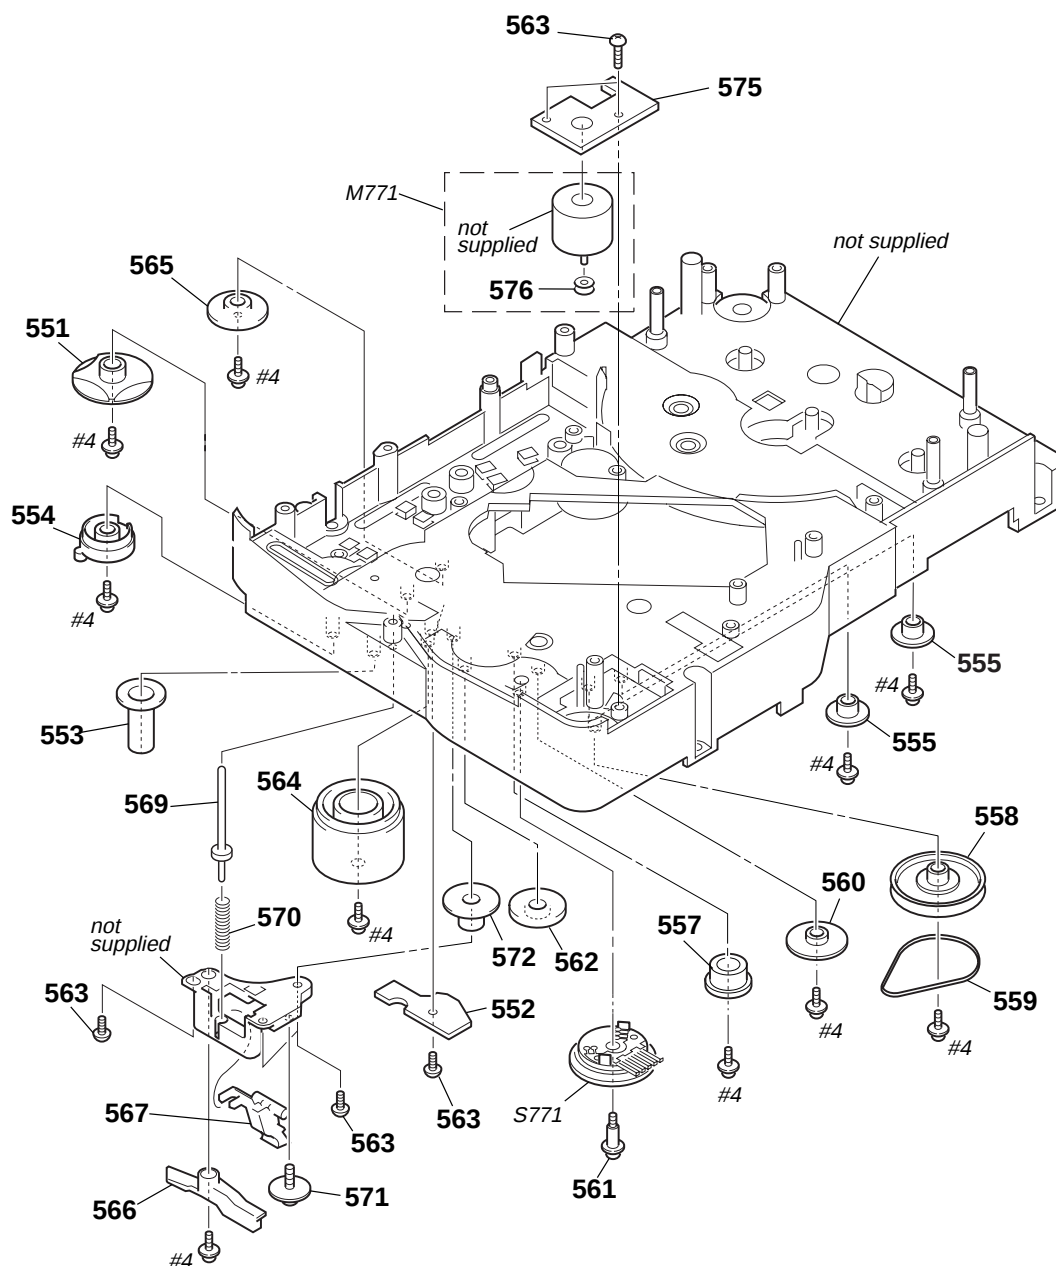

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
551	4-239-693-02	CAM (GEAR)		565	4-239-694-01	GEAR (MODE CAM)	
552	1-686-723-12	SENSOR BOARD		566	4-241-731-01	SHUTTER (A), LEVER	
553	4-239-696-01	GEAR (EJECT LOCK)		567	4-241-732-01	SHUTTER (B), LEVER	
554	4-239-695-02	CAM (EJECT LOCK)		569	4-241-734-01	SHAFT (SHUTTER)	
555	4-240-019-01	GEAR (MODE 5)		570	4-241-735-01	SPRING (SHUTTER), COMPRESSION	
557	4-243-682-01	GEAR (MODE C)		571	4-227-899-01	SCREW (DIA. 12), FLOATING	
558	4-239-683-01	PULLEY (MODE DECELERATION)		572	4-243-680-01	GEAR (MODE A)	
559	4-243-702-01	BELT (MODE V)		575	1-686-724-12	MODE MOTOR BOARD	
560	4-243-683-01	GEAR (MODE D)		576	4-986-156-01	PULLEY, MOTOR	
561	4-239-618-01	SCREW (+PWH, 2X6), STEP TAPPING		M771	A-4735-953-A	MOTOR ASSY (MODE)	
562	4-243-681-01	GEAR (MODE B)		S771	1-477-300-11	ENCODER, ROTARY (MODE)	
563	4-951-620-01	SCREW (2.6X8), +BVTP		#4	7-685-902-21	SCREW +PTPWH 2.6X8 (TYPE2)	
564	4-239-692-02	CAM (BU U/D)					

9-11. Optical Pick-up Section (KSM-213D)

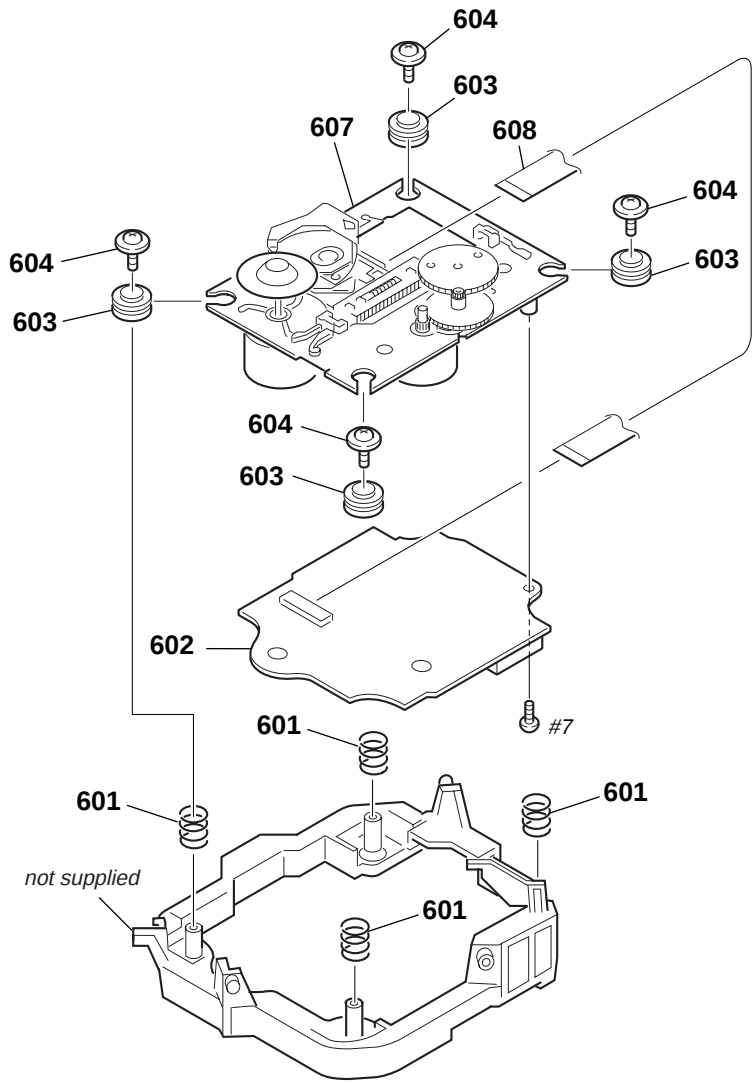

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
601	4-229-806-01	SPRING (213), COMPRESSION		604	4-985-672-01	SCREW (+PTPWHM2.6), FLOATING	
602	A-4747-707-A	BD BOARD, COMPLETE		△ 607	A-4735-357-A	BASE ASSY, OP (KSM-213D)	
603	4-227-679-01	INSULATOR (213)		#7	7-685-534-19	SCREW +BTP 2.6X8 TYPE2 N-S	

The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.	Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.
--	--

SECTION 10
ELECTRICAL PARTS LIST

BD

NOTE:

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- XX, -X mean standardized parts, so they may have some difference from the original one.
- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- CAPACITORS:
uF: μ F
- COILS
uH: μ H
- Accessories are given in the last of this parts list.

- RESISTORS
All resistors are in ohms.
METAL: metal-film resistor
METAL OXIDE: Metal Oxide-film resistor
F: nonflammable
- SEMICONDUCTORS
In each case, u: μ , for example:
uA..., μ A..., uPA..., μ PA...,
uPB..., μ PB..., uPC..., μ PC...,
uPD..., μ PD...
- Abbreviation
AUS : Australian model.
CND: Canadian model.
E2 : 120 V AC area in E model.
E3 : 220-240 V AC area in E model.
KR : Korean model.

MX : Mexican model.
RU : Russian model.
TH : Thai model.
TW : Taiwan model.

When indicating parts by reference number, please include the board name.

The components identified by mark Δ or dotted line with mark Δ are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque Δ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
	A-4747-707-A	BD BOARD, COMPLETE *****		C802	1-164-156-11	CERAMIC CHIP 0.1uF	25V
		< CAPACITOR >		C803	1-162-970-11	CERAMIC CHIP 0.01uF	10% 25V
C701	1-164-156-11	CERAMIC CHIP 0.1uF	25V	C804	1-162-945-11	CERAMIC CHIP 22PF	5% 50V
C702	1-126-392-11	ELECT CHIP 100uF	20% 6.3V	C805	1-126-392-11	ELECT CHIP 100uF	20% 6.3V
C703	1-164-156-11	CERAMIC CHIP 0.1uF	25V	C806	1-164-156-11	CERAMIC CHIP 0.1uF	25V
C704	1-126-391-11	ELECT CHIP 47uF	20% 6.3V	C807	1-126-392-11	ELECT CHIP 100uF	20% 6.3V
C705	1-162-964-11	CERAMIC CHIP 0.001uF	10% 50V	C810	1-164-156-11	CERAMIC CHIP 0.1uF	25V
C706	1-164-156-11	CERAMIC CHIP 0.1uF	25V	C811	1-164-156-11	CERAMIC CHIP 0.1uF	25V
C707	1-126-392-11	ELECT CHIP 100uF	20% 6.3V	C812	1-115-156-11	CERAMIC CHIP 1uF	10V
C708	1-164-156-11	CERAMIC CHIP 0.1uF	25V	C813	1-164-156-11	CERAMIC CHIP 0.1uF	25V
C709	1-126-392-11	ELECT CHIP 100uF	20% 6.3V	C814	1-126-392-11	ELECT CHIP 100uF	20% 6.3V
C710	1-165-176-11	CERAMIC CHIP 0.047uF	10% 16V	C815	1-128-360-11	ELECT CHIP 220uF	20% 10V
C711	1-164-156-11	CERAMIC CHIP 0.1uF	25V	C816	1-164-156-11	CERAMIC CHIP 0.1uF	25V
C712	1-162-949-11	CERAMIC CHIP 47PF	5% 50V	C817	1-164-156-11	CERAMIC CHIP 0.1uF	25V
C713	1-162-968-11	CERAMIC CHIP 0.0047uF	10% 50V	C823	1-162-949-11	CERAMIC CHIP 47PF	5% 50V
C714	1-164-156-11	CERAMIC CHIP 0.1uF	25V	C824	1-162-949-11	CERAMIC CHIP 47PF	5% 50V
C715	1-126-401-21	ELECT CHIP 1uF	20% 50V	C825	1-162-949-11	CERAMIC CHIP 47PF	5% 50V
C716	1-162-964-11	CERAMIC CHIP 0.001uF	10% 50V	C829	1-162-949-11	CERAMIC CHIP 47PF	5% 50V
C717	1-162-968-11	CERAMIC CHIP 0.0047uF	10% 50V	C830	1-162-945-11	CERAMIC CHIP 22PF	5% 50V
C718	1-115-156-11	CERAMIC CHIP 1uF	10V	C831	1-162-945-11	CERAMIC CHIP 22PF	5% 50V
C719	1-162-968-11	CERAMIC CHIP 0.0047uF	10% 50V	C834	1-128-360-11	ELECT CHIP 220uF	20% 10V
C720	1-162-953-11	CERAMIC CHIP 100PF	5% 50V	C835	1-164-156-11	CERAMIC CHIP 0.1uF	25V
C721	1-164-156-11	CERAMIC CHIP 0.1uF	25V	C837	1-164-156-11	CERAMIC CHIP 0.1uF	25V
C722	1-164-156-11	CERAMIC CHIP 0.1uF	25V	C843	1-164-156-11	CERAMIC CHIP 0.1uF	25V
C723	1-126-392-11	ELECT CHIP 100uF	20% 6.3V	C844	1-164-156-11	CERAMIC CHIP 0.1uF	25V
C729	1-128-360-11	ELECT CHIP 220uF	20% 10V	C856	1-115-156-11	CERAMIC CHIP 1uF	10V
C731	1-164-156-11	CERAMIC CHIP 0.1uF	25V	C857	1-162-945-11	CERAMIC CHIP 22PF	5% 50V
C732	1-162-970-11	CERAMIC CHIP 0.01uF	10% 25V	C858	1-162-945-11	CERAMIC CHIP 22PF	5% 50V
C733	1-162-970-11	CERAMIC CHIP 0.01uF	10% 25V	C859	1-162-945-11	CERAMIC CHIP 22PF	5% 50V
C734	1-162-917-11	CERAMIC CHIP 15PF	5% 50V	C860	1-162-953-11	CERAMIC CHIP 100PF	5% 50V
C735	1-162-918-11	CERAMIC CHIP 18PF	5% 50V			< CONNECTOR >	
C741	1-164-156-11	CERAMIC CHIP 0.1uF	25V	CN708	1-817-244-11	CONNECTOR, FFC 16P	
C742	1-164-156-11	CERAMIC CHIP 0.1uF	25V	CN710	1-778-874-11	CONNECTOR, FFC (LIF(NON-ZIF)) 19P	
C743	1-165-176-11	CERAMIC CHIP 0.047uF	10% 16V			< FERRITE BEAD >	
C744	1-125-837-11	CERAMIC CHIP 1uF	10% 6.3V	FB701	1-550-907-21	BEAD, FERRITE (CHIP)	
C746	1-164-156-11	CERAMIC CHIP 0.1uF	25V	FB707	1-550-907-21	BEAD, FERRITE (CHIP)	
C747	1-164-156-11	CERAMIC CHIP 0.1uF	25V	FB708	1-550-907-21	BEAD, FERRITE (CHIP)	
C748	1-128-360-11	ELECT CHIP 220uF	20% 10V	FB761	1-550-907-21	BEAD, FERRITE (CHIP)	
C753	1-162-949-11	CERAMIC CHIP 47PF	5% 50V	FB801	1-550-907-21	BEAD, FERRITE (CHIP)	
C754	1-162-949-11	CERAMIC CHIP 47PF	5% 50V	FB802	1-550-907-21	BEAD, FERRITE (CHIP)	
C756	1-162-949-11	CERAMIC CHIP 47PF	5% 50V	FB803	1-550-907-21	BEAD, FERRITE (CHIP)	
C761	1-162-941-11	CERAMIC CHIP 10PF	0.5PF 50V	FB804	1-550-907-21	BEAD, FERRITE (CHIP)	

BD CONNECTOR

Ref. No.	Part No.	Description				Remarks	Ref. No.	Part No.	Description				Remarks
FB805	1-550-907-21	BEAD, FERRITE (CHIP)					R803	1-216-809-11	METAL CHIP	100	5%	1/10W	
FB806	1-550-907-21	BEAD, FERRITE (CHIP)					R804	1-216-809-11	METAL CHIP	100	5%	1/10W	
FB807	1-550-907-21	BEAD, FERRITE (CHIP)					R805	1-216-809-11	METAL CHIP	100	5%	1/10W	
FB808	1-550-907-21	BEAD, FERRITE (CHIP)											
< IC >							R806	1-216-809-11	METAL CHIP	100	5%	1/10W	
							R807	1-216-809-11	METAL CHIP	100	5%	1/10W	
IC721	6-701-796-01	IC LC78646E-E					R817	1-216-827-11	METAL CHIP	3.3K	5%	1/10W	
IC722	6-704-220-01	IC BA5836FP					R818	1-216-811-11	METAL CHIP	150	5%	1/10W	
IC801	6-704-008-01	IC LC78684E-E					R819	1-216-821-11	METAL CHIP	1K	5%	1/10W	
IC802	6-704-009-01	IC LC32V4265CT-25-MPB-E											
IC803	6-704-007-01	IC MM1571J					R820	1-216-821-11	METAL CHIP	1K	5%	1/10W	
< TRANSISTOR >							R823	1-216-809-11	METAL CHIP	100	5%	1/10W	
Q701	8-729-054-57	TRANSISTOR KTN2907AS-RTK					R824	1-216-809-11	METAL CHIP	100	5%	1/10W	
< RESISTOR >							R825	1-216-809-11	METAL CHIP	100	5%	1/10W	
							R826	1-216-809-11	METAL CHIP	100	5%	1/10W	
R701	1-216-841-11	METAL CHIP	47K	5%	1/10W								
R702	1-216-835-11	METAL CHIP	15K	5%	1/10W		R827	1-216-809-11	METAL CHIP	100	5%	1/10W	
R703	1-216-835-11	METAL CHIP	15K	5%	1/10W		R828	1-216-809-11	METAL CHIP	100	5%	1/10W	
R704	1-216-835-11	METAL CHIP	15K	5%	1/10W		R829	1-216-809-11	METAL CHIP	100	5%	1/10W	
R705	1-216-835-11	METAL CHIP	15K	5%	1/10W		R832	1-216-825-11	METAL CHIP	2.2K	5%	1/10W	
							R833	1-216-809-11	METAL CHIP	100	5%	1/10W	
R706	1-216-841-11	METAL CHIP	47K	5%	1/10W								
R707	1-216-797-11	METAL CHIP	10	5%	1/10W		R834	1-216-809-11	METAL CHIP	100	5%	1/10W	
R708	1-216-833-11	METAL CHIP	10K	5%	1/10W		R860	1-216-809-11	METAL CHIP	100	5%	1/10W	
R709	1-216-838-11	METAL CHIP	27K	5%	1/10W		< SWITCH >						
R711	1-216-815-11	METAL CHIP	330	5%	1/10W		S701	1-771-853-11	SWITCH, DETECTION (LIMIT IN)				
< VIBRATOR >							< VIBRATOR >						
R713	1-216-821-11	METAL CHIP	1K	5%	1/10W		X701	1-767-408-21	VIBRATOR, CRYSTAL (16.9344MHz)				
R714	1-216-809-11	METAL CHIP	100	5%	1/10W		*****						
R715	1-216-809-11	METAL CHIP	100	5%	1/10W								
R716	1-216-809-11	METAL CHIP	100	5%	1/10W		A-4731-113-A	CONNECTOR BOARD,COMPLETE					
R717	1-216-809-11	METAL CHIP	100	5%	1/10W		*****						
							< CAPACITOR >						
R718	1-216-809-11	METAL CHIP	100	5%	1/10W		C711	1-126-795-11	ELECT	10uF	20.00%	50V	
R719	1-216-809-11	METAL CHIP	100	5%	1/10W		C751	1-164-159-21	CERAMIC	0.1uF		50V	
R720	1-216-809-11	METAL CHIP	100	5%	1/10W		C752	1-164-159-21	CERAMIC	0.1uF		50V	
R721	1-216-809-11	METAL CHIP	100	5%	1/10W		C753	1-164-159-21	CERAMIC	0.1uF		50V	
R722	1-216-809-11	METAL CHIP	100	5%	1/10W		C754	1-164-159-21	CERAMIC	0.1uF		50V	
R725	1-216-819-11	METAL CHIP	680	5%	1/10W		C755	1-164-159-21	CERAMIC	0.1uF		50V	
R726	1-216-819-11	METAL CHIP	680	5%	1/10W		C756	1-164-159-21	CERAMIC	0.1uF		50V	
R727	1-216-809-11	METAL CHIP	100	5%	1/10W		C758	1-164-159-21	CERAMIC	0.1uF		50V	
R728	1-216-841-11	METAL CHIP	47K	5%	1/10W		C761	1-162-306-11	CERAMIC	0.01uF	30.00%	16V	
R729	1-216-834-11	METAL CHIP	12K	5%	1/10W		C762	1-164-159-21	CERAMIC	0.1uF		50V	
R730	1-216-822-11	METAL CHIP	1.2K	5%	1/10W		C763	1-164-159-21	CERAMIC	0.1uF		50V	
R731	1-216-825-11	METAL CHIP	2.2K	5%	1/10W		C764	1-164-159-21	CERAMIC	0.1uF		50V	
R732	1-216-864-11	METAL CHIP	0	5%	1/10W		C765	1-164-159-21	CERAMIC	0.1uF		50V	
R738	1-218-867-11	METAL CHIP	6.8K	5%	1/10W		C766	1-164-159-21	CERAMIC	0.1uF		50V	
R739	1-216-864-11	METAL CHIP	0	5%	1/10W		C767	1-164-159-21	CERAMIC	0.1uF		50V	
R740	1-218-867-11	METAL CHIP	6.8K	5%	1/10W								
R741	1-216-864-11	METAL CHIP	0	5%	1/10W		C768	1-164-159-21	CERAMIC	0.1uF		50V	
R744	1-216-845-11	METAL CHIP	100K	5%	1/10W		C769	1-164-159-21	CERAMIC	0.1uF		50V	
R745	1-216-809-11	METAL CHIP	100	5%	1/10W		C771	1-162-306-11	CERAMIC	0.01uF	30.00%	16V	
R746	1-216-803-11	METAL CHIP	33	5%	1/10W		C781	1-162-306-11	CERAMIC	0.01uF	30.00%	16V	
							< CONNECTOR >						
R747	1-216-803-11	METAL CHIP	33	5%	1/10W		CN701	1-779-564-21	CONNECTOR,FFC (LIF (NON-ZIF)) 27P				
R760	1-216-809-11	METAL CHIP	100	5%	1/10W		CN702	1-785-329-11	PIN,CONNECTOR (LIGHT ANGLE) 3P				
R761	1-216-821-11	METAL CHIP	1K	5%	1/10W		CN703	1-785-328-11	PIN,CONNECTOR (LIGHT ANGRE) 2P				
R762	1-216-825-11	METAL CHIP	2.2K	5%	1/10W		* CN710	1-506-486-11	PIN,CONNECTOR 7P				
R765	1-216-857-11	METAL CHIP	1M	5%	1/10W								
R801	1-216-809-11	METAL CHIP	100	5%	1/10W								
R802	1-216-809-11	METAL CHIP	100	5%	1/10W								

CONNECTOR

MAIN

Ref. No.	Part No.	Description					Remarks	Ref. No.	Part No.	Description					Remarks
< DIODE >															
								C224	1-126-963-11	ELECT	4.7uF	20.00%	50V		
								C225	1-126-933-11	ELECT	100uF	20.00%	16V		
D701	8-719-921-40	DIODE MTZJ-T-77-4.7B													
D711	8-719-109-89	DIODE MTZJ-T-77-5.6B						C226	1-126-963-11	ELECT	4.7uF	20.00%	50V		
D721	8-719-982-03	DIODE MTZJ-T-77-3.6A						C227	1-128-551-11	ELECT	22uF	20.00%	25V		
< IC >															
								C228	1-162-966-11	CERAMIC CHIP	0.0022uF	10%	50V		
								C229	1-162-966-11	CERAMIC CHIP	0.0022uF	10%	50V		
								C235	1-130-479-00	MYLAR	0.0047uF	5%	50V		
IC701	8-759-598-69	IC BA6956AN													
IC711	8-759-598-69	IC BA6956AN						C236	1-130-485-00	MYLAR	0.015uF	5%	50V		
IC721	8-759-598-69	IC BA6956AN						C237	1-130-485-00	MYLAR	0.015uF	5%	50V		
< TRANSISTOR >															
Q731	8-729-029-66	TRANSISTOR	RT1N141S-TP												
< RESISTOR >															
								C301	1-126-964-11	ELECT	10uF	20.00%	50V		
								C302	1-126-964-11	ELECT	10uF	20.00%	50V		
								C303	1-104-665-11	ELECT	100uF	20.00%	10V		
R701	1-249-415-11	CARBON	680	5%	1/4W	F		C304	1-104-665-11	ELECT	100uF	20.00%	10V		
R702	1-247-807-31	CARBON	100	5%	1/4W			C305	1-126-964-11	ELECT	10uF	20.00%	50V		
R711	1-249-415-11	CARBON	680	5%	1/4W	F									
R712	1-247-807-31	CARBON	100	5%	1/4W			C306	1-126-964-11	ELECT	10uF	20.00%	50V		
R721	1-249-415-11	CARBON	680	5%	1/4W	F		C308	1-109-953-11	ELECT	2.2uF	20.00%	50V		
								C309	1-126-964-11	ELECT	10uF	20.00%	50V		
R722	1-247-807-31	CARBON	100	5%	1/4W			C310	1-126-964-11	ELECT	10uF	20.00%	50V		
R731	1-247-807-31	CARBON	100	5%	1/4W			C311	1-126-964-11	ELECT	10uF	20.00%	50V		
R732	1-249-417-11	CARBON	1K	5%	1/4W	F									
R733	1-249-429-11	CARBON	10K	5%	1/4W			C312	1-126-964-11	ELECT	10uF	20.00%	50V		
R734	1-249-430-11	CARBON	12K	5%	1/4W			C313	1-126-964-11	ELECT	10uF	20.00%	50V		

	A-4734-344-A	MAIN BOARD,COMPLETE (EXCEPT AEP,UK,TH)							C314	1-126-964-11	ELECT	10uF	20.00%	50V	
	A-4734-354-A	MAIN BOARD,COMPLETE (AEP,UK)							C316	1-162-962-11	CERAMIC CHIP	470PF	10%	50V	
	A-4747-553-A	MAIN BOARD,COMPLETE (TH)							C317	1-126-964-11	ELECT	10uF	20.00%	50V	
		*****							C318	1-126-964-11	ELECT	10uF	20.00%	50V	
								C319	1-136-161-00	FILM	0.047uF	5.00%	50V		
								C320	1-136-157-00	FILM	0.022uF	5.00%	50V		
	7-685-646-79	SCREW +BVTP 3X8 TYPE2 IT-3							C321	1-136-157-00	FILM	0.022uF	5.00%	50V	
								C322	1-126-916-11	ELECT	1000uF	20.00%	6.3V		
< CAPACITOR >															
								C323	1-136-157-00	FILM	0.022uF	5.00%	50V		
C101	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V			C324	1-136-157-00	FILM	0.022uF	5.00%	50V		
					(AEP,UK)			C325	1-136-161-00	FILM	0.047uF	5.00%	50V		
C102	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V			C326	1-136-161-00	FILM	0.047uF	5.00%	50V		
					(AEP,UK)			C327	1-130-476-00	MYLAR	0.0027uF	5%	50V		
C201	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V										
C202	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V			C328	1-130-476-00	MYLAR	0.0027uF	5%	50V		
C203	1-126-947-11	ELECT	47uF	20.00%	16V			C329	1-126-964-11	ELECT	10uF	20.00%	50V		
								C330	1-126-964-11	ELECT	10uF	20.00%	50V		
C204	1-126-947-11	ELECT	47uF	20.00%	16V			C331	1-136-165-00	FILM	0.1uF	5.00%	50V		
C205	1-126-960-11	ELECT	1uF	20.00%	50V			C332	1-136-165-00	FILM	0.1uF	5.00%	50V		
C206	1-130-485-00	MYLAR	0.015uF	5%	50V										
C207	1-130-485-00	MYLAR	0.015uF	5%	50V			C333	1-136-164-00	FILM	0.082uF	5.00%	50V		
C208	1-126-960-11	ELECT	1uF	20.00%	50V			C334	1-136-164-00	FILM	0.082uF	5.00%	50V		
								C338	1-164-227-11	CERAMIC CHIP	0.022uF	10%	25V		
C209	1-126-960-11	ELECT	1uF	20.00%	50V			C340	1-162-960-11	CERAMIC CHIP	220PF	10%	50V		
C210	1-126-961-11	ELECT	2.2uF	20.00%	50V			C341	1-162-960-11	CERAMIC CHIP	220PF	10%	50V		
C211	1-126-961-11	ELECT	2.2uF	20.00%	50V										
C212	1-126-960-11	ELECT	1uF	20.00%	50V			C342	1-126-964-11	ELECT	10uF	20.00%	50V		
C213	1-126-960-11	ELECT	1uF	20.00%	50V			C343	1-162-953-11	CERAMIC CHIP	100PF	5%	50V		
								C344	1-164-156-11	CERAMIC CHIP	0.1uF		25V		
C214	1-126-959-11	ELECT	0.47uF	20.00%	50V			C345	1-162-953-11	CERAMIC CHIP	100PF	5%	50V		
C215	1-126-959-11	ELECT	0.47uF	20.00%	50V			C346	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V		
C216	1-126-961-11	ELECT	2.2uF	20.00%	50V										
C217	1-126-961-11	ELECT	2.2uF	20.00%	50V			C347	1-126-964-11	ELECT	10uF	20.00%	50V		
C218	1-165-176-11	CERAMIC CHIP	0.047uF	10.00%	16V			C348	1-126-964-11	ELECT	10uF	20.00%	50V		
								C349	1-126-964-11	ELECT	10uF	20.00%	50V		
C219	1-165-176-11	CERAMIC CHIP	0.047uF	10.00%	16V			C350	1-126-964-11	ELECT	10uF	20.00%	50V		
C220	1-162-966-11	CERAMIC CHIP	0.0022uF	10%	50V			C351	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V		
C221	1-162-966-11	CERAMIC CHIP	0.0022uF	10%	50V										

MAIN

Ref. No.	Part No.	Description	Remarks
C352	1-162-964-11	CERAMIC CHIP 0.001uF 10% 50V	
C353	1-162-962-11	CERAMIC CHIP 470PF 10% 50V	
C354	1-162-962-11	CERAMIC CHIP 470PF 10% 50V	
C355	1-162-962-11	CERAMIC CHIP 470PF 10% 50V	
C356	1-162-962-11	CERAMIC CHIP 470PF 10% 50V	
C357	1-126-933-11	ELECT 100uF 20.00% 16V	
C358	1-162-960-11	CERAMIC CHIP 220PF 10% 50V	
C359	1-162-960-11	CERAMIC CHIP 220PF 10% 50V	
C361	1-162-960-11	CERAMIC CHIP 220PF 10% 50V	
C362	1-162-960-11	CERAMIC CHIP 220PF 10% 50V	
C366	1-164-156-11	CERAMIC CHIP 0.1uF 25V	
C367	1-162-960-11	CERAMIC CHIP 220PF 10% 50V	
C368	1-162-960-11	CERAMIC CHIP 220PF 10% 50V	
C369	1-164-156-11	CERAMIC CHIP 0.1uF 25V	
C401	1-136-165-00	FILM 0.1uF 5.00% 50V	
C402	1-136-165-00	FILM 0.1uF 5.00% 50V	
C403	1-136-165-00	FILM 0.1uF 5.00% 50V	
C404	1-136-165-00	FILM 0.1uF 5.00% 50V	
C405	1-126-768-11	ELECT 2200uF 20.00% 16V	
C406	1-126-943-11	ELECT 2200uF 20.00% 25V	
C407	1-126-964-11	ELECT 10uF 20.00% 50V	
C411	1-126-767-11	ELECT 1000uF 20.00% 16V	
C412	1-126-943-11	ELECT 2200uF 20.00% 25V	
C413	1-126-935-11	ELECT 470uF 20.00% 16V	
C414	1-126-947-11	ELECT 47uF 20.00% 10V	
C415	1-126-767-11	ELECT 1000uF 20.00% 16V	
C416	1-126-935-11	ELECT 470uF 20.00% 16V	
C417	1-126-964-11	ELECT 10uF 20.00% 50V	
C418	1-126-948-11	ELECT 100uF 20.00% 35V	
C419	1-126-959-11	ELECT 0.47uF 20.00% 50V	
C420	1-164-156-11	CERAMIC CHIP 0.1uF 25V	
C422	1-164-156-11	CERAMIC CHIP 0.1uF 25V	
C423	1-164-156-11	CERAMIC CHIP 0.1uF 25V	
< CONNECTOR >			
CN101	1-784-733-11	CONNECTOR,FFC 11P (EXCEPT AEP,UK)	
CN101	1-784-737-11	CONNECTOR,FFC 15P (AEP,UK)	
CN301	1-784-780-11	CONNECTOR,FFC 19P	
CN302	1-779-564-11	CONNECTOR,FFC (LIF (NON-ZIF)) 27P	
CN303	1-568-828-11	CONNECTOR,FFC 9P	
* CN305	1-564-706-11	PIN,CONNECTOR (SMALL TYPE) 4P	
CN402	1-784-798-11	CONNECTOR,FFC 37P	
CN403	1-691-040-31	CONNECTOR,FFC 8P	
CN404	1-778-982-21	CONNECTOR,BOARD TO BOARD 13P	
< DIODE >			
D101	8-719-988-61	DIODE 1SS355TE-17 (AEP,UK)	
D102	8-719-988-61	DIODE 1SS355TE-17	
D301	8-719-988-61	DIODE 1SS355TE-17	
D302	6-500-522-21	DIODE 10EDB40-TB3	
D303	6-500-522-21	DIODE 10EDB40-TB3	
D304	6-500-522-21	DIODE 10EDB40-TB3	
D305	6-500-522-21	DIODE 10EDB40-TB3	
D306	8-719-988-61	DIODE 1SS355TE-17	
D307	8-719-988-61	DIODE 1SS355TE-17	
D309	8-719-988-61	DIODE 1SS355TE-17	
D401	6-500-522-21	DIODE 10EDB40-TB3	
D402	6-500-522-21	DIODE 10EDB40-TB3	

Ref. No.	Part No.	Description	Remarks
D403	6-500-522-21	DIODE 10EDB40-TB3	
D404	6-500-522-21	DIODE 10EDB40-TB3	
D405	6-500-522-21	DIODE 10EDB40-TB3	
D406	6-500-522-21	DIODE 10EDB40-TB3	
D407	6-500-522-21	DIODE 10EDB40-TB3	
D408	6-500-522-21	DIODE 10EDB40-TB3	
D409	8-719-988-61	DIODE 1SS355TE-17	
D410	6-500-522-21	DIODE 10EDB40-TB3	
D411	8-719-988-61	DIODE 1SS355TE-17	
D412	6-500-522-21	DIODE 10EDB40-TB3	
D413	8-719-988-61	DIODE 1SS355TE-17	
D414	8-719-988-61	DIODE 1SS355TE-17	
D415	8-719-083-70	DIODE UDZSTE-1727B	
D416	8-719-069-55	DIODE UDZSTE-175.6B	
D417	8-719-988-61	DIODE 1SS355TE-17	
< EARTH TERMINAL >			
* EP401	1-537-738-21	TERMINAL,EARTH	
< FERRITE BEAD >			
FB301	1-550-907-21	FERRITE 0uH	
< IC >			
IC201	6-702-130-01	IC HA12237F	
IC301	6-703-650-11	IC M61529FP-D60G	
IC302	8-759-828-32	IC PT8300	
IC401	8-759-231-57	IC TA7810S	
IC402	6-701-760-01	IC uPC3504AHF	
IC403	8-759-231-57	IC TA7810S	
< JACK >			
JK301	1-793-987-11	JACK,PIN 2P (MD IN)	
< JUMPER RESISTOR >			
JR101	1-216-864-11	METAL CHIP 0 5% 1/10W	
JR102	1-216-864-11	METAL CHIP 0 5% 1/10W	
JR201	1-216-864-11	METAL CHIP 0 5% 1/10W	
JR202	1-216-864-11	METAL CHIP 0 5% 1/10W	
JR203	1-216-864-11	METAL CHIP 0 5% 1/10W	
JR204	1-216-864-11	METAL CHIP 0 5% 1/10W	
JR301	1-216-864-11	METAL CHIP 0 5% 1/10W	
JR302	1-216-864-11	METAL CHIP 0 5% 1/10W	
JR303	1-216-864-11	METAL CHIP 0 5% 1/10W	
JR304	1-216-864-11	METAL CHIP 0 5% 1/10W	
JR305	1-216-864-11	METAL CHIP 0 5% 1/10W	
JR306	1-216-864-11	METAL CHIP 0 5% 1/10W	
JR310	1-216-864-11	METAL CHIP 0 5% 1/10W	
JR401	1-216-864-11	METAL CHIP 0 5% 1/10W	
JR402	1-216-864-11	METAL CHIP 0 5% 1/10W	
JR403	1-216-864-11	METAL CHIP 0 5% 1/10W	
JR404	1-216-864-11	METAL CHIP 0 5% 1/10W	
JR405	1-216-864-11	METAL CHIP 0 5% 1/10W	
JR406	1-216-864-11	METAL CHIP 0 5% 1/10W	
< COIL >			
L201	1-424-849-11	COIL,OSCILLATION (BIAS)	

Ref. No.	Part No.	Description	Remarks			Ref. No.	Part No.	Description	Remarks		
L301	1-410-521-11	INDUCTOR	100uH			R219	1-216-813-11	METAL CHIP	220	5%	1/10W
		< IC >				R220	1-216-821-11	METAL CHIP	1K	5%	1/10W
PH301	8-749-019-25	IC TOTX141 (CD DIGITAL OUT (OPTICAL))				R221	1-216-841-11	METAL CHIP	47K	5%	1/10W
		< TRANSISTOR >				R222	1-216-841-11	METAL CHIP	47K	5%	1/10W
						R223	1-216-841-11	METAL CHIP	47K	5%	1/10W
Q201	8-729-120-28	TRANSISTOR	2SC3052F-T1-LF			R224	1-218-867-11	METAL CHIP	6.8K	5%	1/10W
Q202	8-729-120-28	TRANSISTOR	2SC3052F-T1-LF			R225	1-218-867-11	METAL CHIP	6.8K	5%	1/10W
Q203	8-729-120-28	TRANSISTOR	2SC3052F-T1-LF			R226	1-216-833-11	METAL CHIP	10K	5%	1/10W
Q204	8-729-120-28	TRANSISTOR	2SC3052F-T1-LF			R227	1-216-833-11	METAL CHIP	10K	5%	1/10W
Q205	6-550-289-01	TRANSISTOR	2SA1235F			R228	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
Q206	8-729-120-28	TRANSISTOR	2SC3052F-T1-LF			R229	1-216-815-11	METAL CHIP	330	5%	1/10W
Q207	8-729-142-46	TRANSISTOR	2SC2001TP-LK			R230	1-216-797-11	METAL CHIP	10	5%	1/10W
Q208	8-729-140-04	TRANSISTOR	2SB1116-TP-LK			R231	1-216-838-11	METAL CHIP	27K	5%	1/10W
Q209	8-729-120-28	TRANSISTOR	2SC3052F-T1-LF			R232	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
Q210	8-729-120-28	TRANSISTOR	2SC3052F-T1-LF			R233	1-216-837-11	METAL CHIP	22K	5%	1/10W
Q211	8-729-120-28	TRANSISTOR	2SC3052F-T1-LF			R234	1-216-837-11	METAL CHIP	22K	5%	1/10W
Q212	8-729-120-28	TRANSISTOR	2SC3052F-T1-LF			R235	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
Q301	8-729-120-28	TRANSISTOR	2SC3052F-T1-LF			R236	1-216-833-11	METAL CHIP	10K	5%	1/10W
Q302	8-729-120-28	TRANSISTOR	2SC3052F-T1-LF			R237	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
Q304	8-729-052-79	TRANSISTOR	2SD1306NETL			R238	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
Q305	8-729-052-79	TRANSISTOR	2SD1306NETL			R239	1-216-833-11	METAL CHIP	10K	5%	1/10W
Q306	6-550-289-01	TRANSISTOR	2SA1235F			R240	1-216-833-11	METAL CHIP	10K	5%	1/10W
Q307	8-729-120-28	TRANSISTOR	2SC3052F-T1-LF			R241	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
Q406	8-729-140-04	TRANSISTOR	2SB1116-TP-LK			R242	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
Q407	8-729-120-28	TRANSISTOR	2SC3052F-T1-LF			R243	1-216-833-11	METAL CHIP	10K	5%	1/10W
Q408	8-729-140-04	TRANSISTOR	2SB1116-TP-LK			R244	1-216-833-11	METAL CHIP	10K	5%	1/10W
Q409	8-729-120-28	TRANSISTOR	2SC3052F-T1-LF			R245	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
Q410	6-550-289-01	TRANSISTOR	2SA1235F			R246	1-216-833-11	METAL CHIP	10K	5%	1/10W
Q411	8-729-120-28	TRANSISTOR	2SC3052F-T1-LF			R247	1-216-833-11	METAL CHIP	10K	5%	1/10W
Q412	8-729-048-52	TRANSISTOR	2SA1932 (TP)			R301	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
		< RESISTOR >				R302	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R101	1-216-845-11	METAL CHIP	100K	5%	1/10W (EXCEPT AEP,UK)	R303	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R101	1-216-841-11	METAL CHIP	47K	5%	1/10W (AEP,UK)	R304	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R102	1-216-845-11	METAL CHIP	100K	5%	1/10W (EXCEPT AEP,UK)	R305	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R102	1-216-841-11	METAL CHIP	47K	5%	1/10W (AEP,UK)	R306	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R103	1-216-813-11	METAL CHIP	220	5%	1/10W (AEP,UK)	R307	1-216-833-11	METAL CHIP	10K	5%	1/10W
R104	1-216-829-11	METAL CHIP	4.7K	5%	1/10W (AEP,UK)	R308	1-216-833-11	METAL CHIP	10K	5%	1/10W
R201	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	R309	1-216-833-11	METAL CHIP	10K	5%	1/10W
R202	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	R310	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R203	1-216-832-11	METAL CHIP	8.2K	5%	1/10W	R311	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R204	1-216-832-11	METAL CHIP	8.2K	5%	1/10W	R312	1-216-833-11	METAL CHIP	10K	5%	1/10W
R207	1-216-833-11	METAL CHIP	10K	5%	1/10W	R313	1-216-833-11	METAL CHIP	10K	5%	1/10W
R208	1-216-833-11	METAL CHIP	10K	5%	1/10W	R314	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R209	1-216-825-11	METAL CHIP	2.2K	5%	1/10W	R315	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R210	1-216-825-11	METAL CHIP	2.2K	5%	1/10W	R316	1-216-833-11	METAL CHIP	10K	5%	1/10W
R211	1-216-824-11	METAL CHIP	1.8K	5%	1/10W	R317	1-216-833-11	METAL CHIP	10K	5%	1/10W
R212	1-216-824-11	METAL CHIP	1.8K	5%	1/10W	R318	1-216-841-11	METAL CHIP	47K	5%	1/10W
R213	1-216-837-11	METAL CHIP	22K	5%	1/10W	R319	1-216-841-11	METAL CHIP	47K	5%	1/10W
R216	1-216-833-11	METAL CHIP	10K	5%	1/10W	R321	1-216-821-11	METAL CHIP	1K	5%	1/10W
R217	1-216-833-11	METAL CHIP	10K	5%	1/10W	R322	1-216-821-11	METAL CHIP	1K	5%	1/10W
R218	1-216-833-11	METAL CHIP	10K	5%	1/10W	R323	1-216-833-11	METAL CHIP	10K	5%	1/10W
						R324	1-216-821-11	METAL CHIP	1K	5%	1/10W
						R325	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
						R326	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
						R327	1-216-821-11	METAL CHIP	1K	5%	1/10W
						R328	1-216-809-11	METAL CHIP	100	5%	1/10W
						R329	1-216-809-11	METAL CHIP	100	5%	1/10W
						R330	1-216-833-11	METAL CHIP	10K	5%	1/10W

HCD-HP7

MAIN

MODE MOTOR

PANEL

Ref. No.	Part No.	Description	Remarks		
R343	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R344	1-216-837-11	METAL CHIP	22K	5%	1/10W
R345	1-216-837-11	METAL CHIP	22K	5%	1/10W
R346	1-216-837-11	METAL CHIP	22K	5%	1/10W
R347	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R348	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R349	1-216-837-11	METAL CHIP	22K	5%	1/10W
R350	1-216-837-11	METAL CHIP	22K	5%	1/10W
R351	1-216-837-11	METAL CHIP	22K	5%	1/10W
R352	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R353	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R354	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R356	1-216-837-11	METAL CHIP	22K	5%	1/10W
R357	1-216-845-11	METAL CHIP	100K	5%	1/10W
R359	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R360	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R361	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R362	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R363	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R364	1-216-845-11	METAL CHIP	100K	5%	1/10W
R365	1-216-845-11	METAL CHIP	100K	5%	1/10W
R367	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R368	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R375	1-216-837-11	METAL CHIP	22K	5%	1/10W
R376	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R377	1-216-837-11	METAL CHIP	22K	5%	1/10W
R378	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R379	1-218-717-11	METAL CHIP	11K	5%	1/10W
R380	1-218-717-11	METAL CHIP	11K	5%	1/10W
R381	1-216-837-11	METAL CHIP	22K	5%	1/10W
R382	1-218-717-11	METAL CHIP	11K	5%	1/10W
R383	1-218-717-11	METAL CHIP	11K	5%	1/10W
R384	1-216-837-11	METAL CHIP	22K	5%	1/10W
R385	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R389	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R390	1-216-837-11	METAL CHIP	22K	5%	1/10W
R391	1-218-717-11	METAL CHIP	11K	5%	1/10W
R392	1-218-717-11	METAL CHIP	11K	5%	1/10W
R393	1-216-837-11	METAL CHIP	22K	5%	1/10W
R404	1-216-821-11	METAL CHIP	1K	5%	1/10W
R405	1-216-198-91	RES-CHIP	1K	5%	1/8W
R406	1-216-821-11	METAL CHIP	1K	5%	1/10W
R407	1-216-198-91	RES-CHIP	1K	5%	1/8W
R408	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R409	1-216-837-11	METAL CHIP	22K	5%	1/10W
R410	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R411	1-215-891-11	METAL OXIDE	680	5%	2W
R412	1-215-891-11	METAL OXIDE	680	5%	2W
R413	1-216-837-11	METAL CHIP	22K	5%	1/10W
R414	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R415	1-216-837-11	METAL CHIP	22K	5%	1/10W
R416	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R417	1-216-837-11	METAL CHIP	22K	5%	1/10W
R418	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R419	1-216-837-11	METAL CHIP	22K	5%	1/10W
R420	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R421	1-216-837-11	METAL CHIP	22K	5%	1/10W

Ref. No.	Part No.	Description	Remarks		
R427	1-218-717-11	METAL CHIP	11K	5%	1/10W
R428	1-218-717-11	METAL CHIP	11K	5%	1/10W
R429	1-216-837-11	METAL CHIP	22K	5%	1/10W
R430	1-218-717-11	METAL CHIP	11K	5%	1/10W
R431	1-218-717-11	METAL CHIP	11K	5%	1/10W
R432	1-216-837-11	METAL CHIP	22K	5%	1/10W
R433	1-216-841-11	METAL CHIP	47K	5%	1/10W
R435	1-216-806-11	METAL CHIP	56	5%	1/10W
R436	1-216-806-11	METAL CHIP	56	5%	1/10W
R438	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R439	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R440	1-216-833-11	METAL CHIP	10K	5%	1/10W
R441	1-216-821-11	METAL CHIP	1K	5%	1/10W
R444	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R445	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R446	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R447	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R448	1-216-833-11	METAL CHIP	10K	5%	1/10W
R449	1-216-821-11	METAL CHIP	1K	5%	1/10W
R450	1-216-833-11	METAL CHIP	10K	5%	1/10W
R451	1-260-087-21	CARBON	100	5%	1/2W
R452	1-260-087-21	CARBON	100	5%	1/2W
R453	1-216-837-11	METAL CHIP	22K	5%	1/10W
R454	1-216-837-11	METAL CHIP	22K	5%	1/10W
R455	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R456	1-216-845-11	METAL CHIP	100K	5%	1/10W
R457	1-216-857-11	METAL CHIP	1M	5%	1/10W
< SWITCH >					
SW401	1-771-264-11	SWITCH,PUSH (DETECTION)(1 KEY) (TAPE OPEN/CLOSE)			

	1-686-724-12	MODE MOTOR BOARD			

	A-4734-337-A	PANEL BOARD,COMPLETE (US,CND)			
	A-4734-349-A	PANEL BOARD,COMPLETE (AEP,UK,RU)			
	A-4734-360-A	PANEL BOARD,COMPLETE (E3,TW)			
	A-4747-533-A	PANEL BOARD,COMPLETE (MX,E2)			
	A-4747-535-A	PANEL BOARD,COMPLETE (KR,AUS)			
	A-4747-545-A	PANEL BOARD,COMPLETE (TH)			

	4-238-614-01	FL HOLDER (R)			
< CAPACITOR >					
C601	1-126-964-11	ELECT	10uF	20.00%	50V
C602	1-126-964-11	ELECT	10uF	20.00%	50V
C603	1-126-947-11	ELECT	47uF	20.00%	10V
C604	1-126-964-11	ELECT	10uF	20.00%	50V
C605	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C606	1-128-551-11	ELECT	22uF	20.00%	25V
C607	1-124-584-00	ELECT	100uF	20%	10V
C611	1-126-916-11	ELECT	1000uF	20.00%	6.3V
C612	1-115-156-11	CERAMIC CHIP	1uF		10V
C614	1-164-227-11	CERAMIC CHIP	0.022uF	10%	25V
C616	1-115-156-11	CERAMIC CHIP	1uF		10V

PANEL

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
C617	1-162-961-11	CERAMIC CHIP	330PF 10% 50V	< JUMPER RESISTOR >			
C618	1-164-156-11	CERAMIC CHIP	0.1uF 25V	JR605	1-216-864-11	METAL CHIP	0 5% 1/10W (EXCEPT AEP,UK,RU)
C619	1-128-551-11	ELECT	22uF 20.00% 25V	JR606	1-216-864-11	METAL CHIP	0 5% 1/10W (EXCEPT AEP,UK,RU)
C620	1-164-156-11	CERAMIC CHIP	0.1uF 25V	JR607	1-216-864-11	METAL CHIP	0 5% 1/10W
C621	1-164-156-11	CERAMIC CHIP	0.1uF 25V	< DIODE >			
C622	1-164-156-11	CERAMIC CHIP	0.1uF 25V	LED607	6-500-414-01	DIODE HL-30105Q2AT (DISC 1)	
C635	1-162-918-11	CERAMIC CHIP	18PF 5.00% 50V	LED608	6-500-414-01	DIODE HL-30105Q2AT (DISC 2)	
C636	1-162-919-11	CERAMIC CHIP	22PF 5% 50V	LED609	6-500-414-01	DIODE HL-30105Q2AT (DISC 3)	
C637	1-124-257-00	ELECT	2.2uF 20% 50V	LED610	6-500-414-01	DIODE HL-30105Q2AT (DISC 4)	
C639	1-119-772-91	ELECT	47uF 20.00% 35V	LED611	6-500-414-01	DIODE HL-30105Q2AT (DISC 5)	
C640	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V	LED614	6-500-415-01	DIODE HL-30105Q2IT (I/⬆)	
C641	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V	< TRANSISTOR >			
C642	1-164-227-11	CERAMIC CHIP	0.022uF 10% 25V	Q601	8-729-120-28	TRANSISTOR	2SC3052F-T1-LF
C643	1-115-156-11	CERAMIC CHIP	1uF 10V	Q609	8-729-120-28	TRANSISTOR	2SC3052F-T1-LF
C646	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V	Q610	8-729-120-28	TRANSISTOR	2SC3052F-T1-LF
C647	1-164-156-11	CERAMIC CHIP	0.1uF 25V	< RESISTOR >			
C648	1-124-257-00	ELECT	2.2uF 20% 50V	R030	1-216-809-11	METAL CHIP	100 5% 1/10W
C649	1-124-234-00	ELECT	22uF 20% 16V	R031	1-216-829-11	METAL CHIP	4.7K 5% 1/10W
C650	1-162-964-11	CERAMIC CHIP	0.001uF 10% 50V	R032	1-216-848-11	METAL CHIP	180K 5% 1/10W
< CONNECTOR >				R034	1-216-825-11	METAL CHIP	2.2K 5% 1/10W
CN601	1-784-759-11	CONNECTOR,FFC 37P		R035	1-216-841-11	METAL CHIP	47K 5% 1/10W
CN602	1-784-731-11	CONNECTOR,FFC 9P		R036	1-216-825-11	METAL CHIP	2.2K 5% 1/10W
< DIODE >				R037	1-216-817-11	METAL CHIP	470 5% 1/10W
D606	8-719-988-61	DIODE 1SS355TE-17 (TH)		R053	1-216-841-11	METAL CHIP	47K 5% 1/10W
D607	8-719-988-61	DIODE 1SS355TE-17 (KR,AUS)		R054	1-216-841-11	METAL CHIP	47K 5% 1/10W
D608	8-719-988-61	DIODE 1SS355TE-17 (US,CND,E2,KR,MX,AUS)		R055	1-216-841-11	METAL CHIP	47K 5% 1/10W
D609	8-719-988-61	DIODE 1SS355TE-17 (US,CND,AEP,UK,RU)		R056	1-216-841-11	METAL CHIP	47K 5% 1/10W
D615	8-719-988-61	DIODE 1SS355TE-17		R057	1-216-841-11	METAL CHIP	47K 5% 1/10W
D616	8-719-988-61	DIODE 1SS355TE-17		R058	1-216-841-11	METAL CHIP	47K 5% 1/10W
D617	8-719-988-61	DIODE 1SS355TE-17		R059	1-216-841-11	METAL CHIP	47K 5% 1/10W
D619	8-719-988-61	DIODE 1SS355TE-17		R060	1-216-841-11	METAL CHIP	47K 5% 1/10W
D620	8-719-988-61	DIODE 1SS355TE-17		R061	1-216-841-11	METAL CHIP	47K 5% 1/10W
D621	8-719-988-61	DIODE 1SS355TE-17		R062	1-216-841-11	METAL CHIP	47K 5% 1/10W
D622	8-719-988-61	DIODE 1SS355TE-17		R063	1-216-841-11	METAL CHIP	47K 5% 1/10W
D623	8-719-988-61	DIODE 1SS355TE-17		R064	1-216-841-11	METAL CHIP	47K 5% 1/10W
D624	8-719-988-61	DIODE 1SS355TE-17		R065	1-216-841-11	METAL CHIP	47K 5% 1/10W
D625	8-719-988-61	DIODE 1SS355TE-17		R066	1-216-841-11	METAL CHIP	47K 5% 1/10W
D626	8-719-083-61	DIODE UDZSTE-1711B (E2,E3,KR,TW,TH,MX,AUS)		R067	1-216-841-11	METAL CHIP	47K 5% 1/10W
< FERRITE BEAD >				R068	1-216-841-11	METAL CHIP	47K 5% 1/10W
FB601	1-412-473-21	INDUCTOR	0uH	R069	1-216-841-11	METAL CHIP	47K 5% 1/10W
FB602	1-550-907-21	FERRITE	0uH	R070	1-216-841-11	METAL CHIP	47K 5% 1/10W
FB603	1-550-907-21	FERRITE	0uH	R071	1-216-841-11	METAL CHIP	47K 5% 1/10W
FB604	1-550-907-21	FERRITE	0uH	R072	1-216-841-11	METAL CHIP	47K 5% 1/10W
FB605	1-550-907-21	FERRITE	0uH	R073	1-216-841-11	METAL CHIP	47K 5% 1/10W
< FLUORESCENT INDICATOR TUBE >				R074	1-216-841-11	METAL CHIP	47K 5% 1/10W
FLD601	1-518-923-11	INDICATOR TUBE,FLUORESCENT		R075	1-216-841-11	METAL CHIP	47K 5% 1/10W
< IC >				R076	1-216-841-11	METAL CHIP	47K 5% 1/10W
IC601	6-803-002-01	IC LC876796B-51K7-E		R077	1-216-841-11	METAL CHIP	47K 5% 1/10W
IC602	6-704-045-01	IC MM1574A		R078	1-216-841-11	METAL CHIP	47K 5% 1/10W
IC603	8-759-533-04	IC M62703ML-E1		R079	1-216-841-11	METAL CHIP	47K 5% 1/10W
< JACK >				R080	1-216-841-11	METAL CHIP	47K 5% 1/10W
JK601	1-691-293-21	JACK (PHONES)		R081	1-216-841-11	METAL CHIP	47K 5% 1/10W
				R082	1-216-841-11	METAL CHIP	47K 5% 1/10W

PANEL

Ref. No.	Part No.	Description			Remarks
R083	1-216-841-11	METAL CHIP	47K	5%	1/10W
R084	1-216-841-11	METAL CHIP	47K	5%	1/10W
R085	1-216-841-11	METAL CHIP	47K	5%	1/10W
R086	1-216-841-11	METAL CHIP	47K	5%	1/10W
R087	1-216-820-11	METAL CHIP	820	5%	1/10W
R088	1-216-820-11	METAL CHIP	820	5%	1/10W
R089	1-216-827-11	METAL CHIP	3.3K	5%	1/10W
R090	1-216-827-11	METAL CHIP	3.3K	5%	1/10W
R602	1-216-809-11	METAL CHIP	100	5%	1/10W (AEP,UK,RU)
R604	1-216-833-11	METAL CHIP	10K	5%	1/10W
R605	1-216-833-11	METAL CHIP	10K	5%	1/10W
R606	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R607	1-216-833-11	METAL CHIP	10K	5%	1/10W
R608	1-216-809-11	METAL CHIP	100	5%	1/10W (AEP,UK,RU)
R609	1-216-833-11	METAL CHIP	10K	5%	1/10W
R610	1-216-835-11	METAL CHIP	15K	5%	1/10W
R611	1-216-809-11	METAL CHIP	100	5%	1/10W
R612	1-216-809-11	METAL CHIP	100	5%	1/10W
R613	1-216-821-11	METAL CHIP	1K	5%	1/10W
R614	1-216-821-11	METAL CHIP	1K	5%	1/10W
R615	1-216-821-11	METAL CHIP	1K	5%	1/10W
R616	1-216-833-11	METAL CHIP	10K	5%	1/10W
R617	1-216-833-11	METAL CHIP	10K	5%	1/10W
R623	1-216-198-91	RES-CHIP	1K	5%	1/8W
R624	1-216-835-11	METAL CHIP	15K	5%	1/10W
R625	1-216-817-11	METAL CHIP	470	5%	1/10W
R626	1-216-819-11	METAL CHIP	680	5%	1/10W
R627	1-216-821-11	METAL CHIP	1K	5%	1/10W
R628	1-216-823-11	METAL CHIP	1.5K	5%	1/10W
R629	1-216-823-11	METAL CHIP	1.5K	5%	1/10W
R630	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R631	1-216-827-11	METAL CHIP	3.3K	5%	1/10W
R632	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R633	1-218-867-11	METAL CHIP	6.8K	5%	1/10W
R634	1-216-198-91	RES-CHIP	1K	5%	1/8W
R635	1-216-198-91	RES-CHIP	1K	5%	1/8W
R636	1-216-198-91	RES-CHIP	1K	5%	1/8W
R637	1-216-198-91	RES-CHIP	1K	5%	1/8W
R638	1-216-835-11	METAL CHIP	15K	5%	1/10W
R639	1-216-817-11	METAL CHIP	470	5%	1/10W
R640	1-216-819-11	METAL CHIP	680	5%	1/10W
R641	1-216-821-11	METAL CHIP	1K	5%	1/10W
R642	1-216-823-11	METAL CHIP	1.5K	5%	1/10W
R643	1-216-823-11	METAL CHIP	1.5K	5%	1/10W
R644	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R645	1-216-827-11	METAL CHIP	3.3K	5%	1/10W
R646	1-216-849-11	METAL CHIP	220K	5%	1/10W
R647	1-220-397-11	RES-CHIP	4.7M	5%	1/10W
R648	1-216-819-11	METAL CHIP	680	5%	1/10W
R649	1-216-198-91	RES-CHIP	1K	5%	1/8W
R650	1-216-198-91	RES-CHIP	1K	5%	1/8W
R651	1-216-833-11	METAL CHIP	10K	5%	1/10W
R652	1-216-809-11	METAL CHIP	100	5%	1/10W
R653	1-216-805-11	METAL CHIP	47	5%	1/10W
R654	1-216-833-11	METAL CHIP	10K	5%	1/10W
R655	1-216-841-11	METAL CHIP	47K	5%	1/10W

Ref. No.	Part No.	Description			Remarks
R656	1-216-841-11	METAL CHIP	47K	5%	1/10W
R657	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R658	1-216-833-11	METAL CHIP	10K	5%	1/10W
R659	1-216-833-11	METAL CHIP	10K	5%	1/10W
R660	1-216-198-91	RES-CHIP	1K	5%	1/8W
R661	1-216-817-11	METAL CHIP	470	5%	1/10W
R662	1-216-819-11	METAL CHIP	680	5%	1/10W
R663	1-216-821-11	METAL CHIP	1K	5%	1/10W
R664	1-216-823-11	METAL CHIP	1.5K	5%	1/10W
R665	1-216-809-11	METAL CHIP	100	5%	1/10W
R666	1-216-841-11	METAL CHIP	47K	5%	1/10W
R667	1-216-813-11	METAL CHIP	220	5%	1/10W
R668	1-216-809-11	METAL CHIP	100	5%	1/10W
R669	1-216-823-11	METAL CHIP	1.5K	5%	1/10W
R670	1-216-198-91	RES-CHIP	1K	5%	1/8W
R671	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R672	1-216-827-11	METAL CHIP	3.3K	5%	1/10W
R673	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R674	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R675	1-218-867-11	METAL CHIP	6.8K	5%	1/10W
R676	1-216-821-11	METAL CHIP	1K	5%	1/10W
R677	1-216-851-11	METAL CHIP	330K	5%	1/10W
R678	1-216-833-11	METAL CHIP	10K	5%	1/10W
R679	1-216-198-91	RES-CHIP	1K	5%	1/8W
R680	1-216-809-11	METAL CHIP	100	5%	1/10W
R681	1-216-833-11	METAL CHIP	10K	5%	1/10W
R682	1-216-845-11	METAL CHIP	100K	5%	1/10W
R683	1-216-833-11	METAL CHIP	10K	5%	1/10W
R684	1-216-182-00	RES-CHIP	220	5%	1/8W
R685	1-216-182-00	RES-CHIP	220	5%	1/8W
R686	1-218-867-11	METAL CHIP	6.8K	5%	1/10W
R687	1-216-833-11	METAL CHIP	10K	5%	1/10W
R688	1-216-809-11	METAL CHIP	100	5%	1/10W
R689	1-216-833-11	METAL CHIP	10K	5%	1/10W
R690	1-216-809-11	METAL CHIP	100	5%	1/10W
R691	1-216-821-11	METAL CHIP	1K	5%	1/10W
R692	1-216-809-11	METAL CHIP	100	5%	1/10W
R693	1-216-809-11	METAL CHIP	100	5%	1/10W
R694	1-216-809-11	METAL CHIP	100	5%	1/10W
R695	1-216-809-11	METAL CHIP	100	5%	1/10W
R696	1-216-809-11	METAL CHIP	100	5%	1/10W
R697	1-216-809-11	METAL CHIP	100	5%	1/10W
R698	1-216-809-11	METAL CHIP	100	5%	1/10W
< VIBRATOR >					
RES601	1-579-125-11	VIBRATOR,CERAMIC (8.0MHz)			
< IC >					
RM601	6-600-174-01	IC RPM7240-H4 (B)			
< SWITCH >					
S601	1-762-196-21	SWITCH,TACT (DISC 1)			
S602	1-762-196-21	SWITCH,TACT (DISC 2)			
S603	1-762-196-21	SWITCH,TACT (DISC 3)			
S604	1-762-196-21	SWITCH,TACT (DISC 4)			
S605	1-762-196-21	SWITCH,TACT (DISC 5)			

PANEL

PWR AMP

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
S606	1-762-196-21	SWITCH,TACT (DISC 5 ▲)		C524	1-164-156-11	CERAMIC CHIP 0.1uF	25V
S607	1-762-196-21	SWITCH,TACT (DISC 4 ▲)		C525	1-164-156-11	CERAMIC CHIP 0.1uF	25V
S608	1-762-196-21	SWITCH,TACT (DISC 3 ▲)		C526	1-164-156-11	CERAMIC CHIP 0.1uF	25V
S609	1-762-196-21	SWITCH,TACT (DISC 2 ▲)		C527	1-164-156-11	CERAMIC CHIP 0.1uF	25V
S610	1-762-196-21	SWITCH,TACT (DISC 1 ▲)					
S614	1-762-196-21	SWITCH,TACT (TAPE ◀▶)		C528	1-164-156-11	CERAMIC CHIP 0.1uF	25V
S615	1-762-196-21	SWITCH,TACT (TUNER/BAND)		C529	1-164-156-11	CERAMIC CHIP 0.1uF	25V
S616	1-762-196-21	SWITCH,TACT (CD)		C530	1-164-156-11	CERAMIC CHIP 0.1uF	25V
S617	1-762-196-21	SWITCH,TACT (▶)		C531	1-164-156-11	CERAMIC CHIP 0.1uF	25V
S618	1-762-196-21	SWITCH,TACT (■)		C532	1-164-156-11	CERAMIC CHIP 0.1uF	25V
S619	1-762-196-21	SWITCH,TACT (TUNING +)		C541	1-136-165-00	FILM 0.1uF	5.00% 50V
S620	1-762-196-21	SWITCH,TACT (TUNING -)		C542	1-128-550-11	ELECT 2200uF	20.00% 50V
S621	1-762-196-21	SWITCH,TACT (PRESET/ALBUM-)		C543	1-136-165-00	FILM 0.1uF	5.00% 50V
S622	1-762-196-21	SWITCH,TACT (PRESET/ALBUM+)		C544	1-128-550-11	ELECT 2200uF	20.00% 50V
S627	1-762-196-21	SWITCH,TACT (⏮/⏭)				< CONNECTOR >	
S628	1-762-196-21	SWITCH,TACT (DISPLAY)		CN501	1-778-982-21	CONNECTOR,BOARD TO BOARD 13P	
S629	1-762-196-21	SWITCH,TACT (PLAY MODE)		CN503	1-564-506-11	PLUG,CONNECTOR 3P	
S630	1-762-196-21	SWITCH,TACT (REPEAT)		* CN504	1-564-704-11	PIN,CONNECTOR (SMALL TYPE) 2P	
S631	1-762-196-21	SWITCH,TACT (CD SYNC)				< DIODE >	
S632	1-762-196-21	SWITCH,TACT (REC (PAUSE/START))		D501	8-719-510-68	DIODE D5SBA204101	
S633	1-762-196-21	SWITCH,TACT (GROOVE)		D502	8-719-988-61	DIODE 1SS355TE-17	
S634	1-762-196-21	SWITCH,TACT (PRESET EQ)		D503	8-719-988-61	DIODE 1SS355TE-17	
S635	1-762-196-21	SWITCH,TACT (DIMMER)		D504	8-719-988-61	DIODE 1SS355TE-17	
S636	1-762-196-21	SWITCH,TACT (FUNCTION)		D505	8-719-988-61	DIODE 1SS355TE-17	
		< VARIABLE RESISTOR >		D506	8-719-988-61	DIODE 1SS355TE-17	
VR601	1-477-194-11	ENCODER,ROTARY (12 TYPE)(VOLUME)		D507	8-719-988-61	DIODE 1SS355TE-17	
		< VIBRATOR >		D508	8-719-988-61	DIODE 1SS355TE-17	
X601	1-760-252-12	VIBRATOR,CRYSTAL (32.768kHz)		D509	8-719-988-61	DIODE 1SS355TE-17	
*****						< EARTH TERMINAL >	
	A-4734-342-A	PWR AMP BOARD,COMPLETE (EXCEPT TH)		* EP501	1-537-738-21	TERMINAL,EARTH	
	A-4747-550-A	PWR AMP BOARD,COMPLETE (TH)				< FUSIBLE >	
		*****		△ FR501	1-202-972-61	FUSIBLE 1	5% 1/4W
		< CAPACITOR >		△ FR502	1-212-881-11	FUSIBLE 100	5% 1/4W
C501	1-126-964-11	ELECT 10uF	20.00% 50V			< IC >	
C502	1-126-964-11	ELECT 10uF	20.00% 50V	IC501	6-600-089-01	IC STK403-070	
C503	1-162-964-11	CERAMIC CHIP 0.001uF	10% 50V			< TERMINAL BOARD >	
C504	1-162-964-11	CERAMIC CHIP 0.001uF	10% 50V	JK501	1-694-884-11	TERMINAL BOARD (4P)(SPEAKER)	
C505	1-162-960-11	CERAMIC CHIP 220PF	10% 50V			< JUMPER RESISTOR >	
C506	1-162-960-11	CERAMIC CHIP 220PF	10% 50V	JR501	1-216-864-11	METAL CHIP 0	5% 1/10W
C507	1-126-964-11	ELECT 10uF	20.00% 50V	JR502	1-216-864-11	METAL CHIP 0	5% 1/10W
C508	1-126-964-11	ELECT 10uF	20.00% 50V	JR503	1-216-864-11	METAL CHIP 0	5% 1/10W
C509	1-126-966-11	ELECT 33uF	20.00% 16V	JR504	1-216-864-11	METAL CHIP 0	5% 1/10W
C510	1-164-156-11	CERAMIC CHIP 0.1uF	25V	JR505	1-216-864-11	METAL CHIP 0	5% 1/10W
C511	1-126-963-11	ELECT 4.7uF	20.00% 50V			< COIL >	
C513	1-104-665-11	ELECT 100uF	20.00% 10V	L501	1-422-009-13	COIL,AIR-CORE	
C514	1-126-963-11	ELECT 4.7uF	20.00% 50V	L502	1-422-009-13	COIL,AIR-CORE	
C515	1-165-128-11	CERAMIC CHIP 0.22uF	16V				
C516	1-165-128-11	CERAMIC CHIP 0.22uF	16V				
C517	1-162-960-11	CERAMIC CHIP 220PF	10% 50V				
C518	1-126-961-11	ELECT 2.2uF	20.00% 50V				
C520	1-126-968-11	ELECT 100uF	20.00% 50V				
C521	1-165-183-91	CERAMIC CHIP 3.5PF	0.25PF 50V				
C522	1-165-183-91	CERAMIC CHIP 3.5PF	0.25PF 50V				
C523	1-164-156-11	CERAMIC CHIP 0.1uF	25V				

The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

HCD-HP7

PWR AMP	PWR TRANS	ROLLER MOTOR
SENSOR	SENSOR (FAN)	ST ENCODER

Ref. No.	Part No.	Description	Remarks
< TRANSISTOR >			
Q501	8-729-120-28	TRANSISTOR	2SC3052F-T1-LF
Q502	6-550-646-01	TRANSISTOR	2SC3143K4/K5-TB
Q503	6-550-646-01	TRANSISTOR	2SC3143K4/K5-TB
Q504	8-729-120-28	TRANSISTOR	2SC3052F-T1-LF
Q505	8-729-120-28	TRANSISTOR	2SC3052F-T1-LF
Q506	8-729-900-36	TRANSISTOR	BA1F4M-TP
Q507	8-729-120-28	TRANSISTOR	2SC3052F-T1-LF
Q508	8-729-120-28	TRANSISTOR	2SC3052F-T1-LF
Q509	6-550-289-01	TRANSISTOR	2SA1235F
Q510	8-729-120-28	TRANSISTOR	2SC3052F-T1-LF
Q511	8-729-120-28	TRANSISTOR	2SC3052F-T1-LF
Q512	8-729-120-28	TRANSISTOR	2SC3052F-T1-LF
Q513	8-729-120-28	TRANSISTOR	2SC3052F-T1-LF
Q514	8-729-120-28	TRANSISTOR	2SC3052F-T1-LF
Q515	8-729-140-04	TRANSISTOR	2SB1116-TP-LK
< RESISTOR >			
R501	1-216-821-11	METAL CHIP	1K 5% 1/10W
R502	1-216-821-11	METAL CHIP	1K 5% 1/10W
R503	1-216-842-11	METAL CHIP	56K 5% 1/10W
R504	1-216-842-11	METAL CHIP	56K 5% 1/10W
R507	1-216-821-11	METAL CHIP	1K 5% 1/10W
R508	1-216-821-11	METAL CHIP	1K 5% 1/10W
R509	1-216-833-11	METAL CHIP	10K 5% 1/10W
R510	1-216-839-11	METAL CHIP	33K 5% 1/10W
R511	1-216-821-11	METAL CHIP	1K 5% 1/10W
R512	1-216-842-11	METAL CHIP	56K 5% 1/10W
R513	1-216-842-11	METAL CHIP	56K 5% 1/10W
R514	1-216-821-11	METAL CHIP	1K 5% 1/10W
R515	1-216-821-11	METAL CHIP	1K 5% 1/10W
R516	1-216-835-11	METAL CHIP	15K 5% 1/10W
R517	1-216-835-11	METAL CHIP	15K 5% 1/10W
R518	1-216-841-11	METAL CHIP	47K 5% 1/10W
R519	1-216-841-11	METAL CHIP	47K 5% 1/10W
R520	1-260-076-21	CARBON	10 5% 1/2W
R521	1-260-076-21	CARBON	10 5% 1/2W
R522	1-217-151-00	METAL	0.22 10% 2W
R523	1-217-151-00	METAL	0.22 10% 2W
R524	1-216-162-00	RES-CHIP	33 5% 1/8W
R525	1-216-854-11	METAL CHIP	560K 5% 1/10W
R526	1-216-813-11	METAL CHIP	220 5% 1/10W
R527	1-216-841-11	METAL CHIP	47K 5% 1/10W
R528	1-216-845-11	METAL CHIP	100K 5% 1/10W
R529	1-216-842-11	METAL CHIP	56K 5% 1/10W
R530	1-216-845-11	METAL CHIP	100K 5% 1/10W
R531	1-216-829-11	METAL CHIP	4.7K 5% 1/10W
R532	1-216-829-11	METAL CHIP	4.7K 5% 1/10W
R533	1-216-829-11	METAL CHIP	4.7K 5% 1/10W
R534	1-216-841-11	METAL CHIP	47K 5% 1/10W
R535	1-216-830-11	RES-CHIP	5.6K 5% 1/10W
R536	1-216-825-11	METAL CHIP	2.2K 5% 1/10W
R537	1-216-829-11	METAL CHIP	4.7K 5% 1/10W
R538	1-216-829-11	METAL CHIP	4.7K 5% 1/10W
R539	1-216-829-11	METAL CHIP	4.7K 5% 1/10W
R540	1-216-833-11	METAL CHIP	10K 5% 1/10W
R543	1-216-837-11	METAL CHIP	22K 5% 1/10W
R544	1-216-842-11	METAL CHIP	56K 5% 1/10W
R545	1-216-841-11	METAL CHIP	47K 5% 1/10W

Ref. No.	Part No.	Description			Remarks
R546	1-216-839-11	METAL CHIP	33K	5%	1/10W
R547	1-216-833-11	METAL CHIP	10K	5%	1/10W
R548	1-216-174-00	RES-CHIP	100	5%	1/8W
R549	1-216-174-00	RES-CHIP	100	5%	1/8W
R550	1-260-076-21	CARBON	10	5%	1/2W
R551	1-260-076-21	CARBON	10	5%	1/2W
< RELAY >					
RY501	1-755-373-11	RELAY			

	1-689-250-11	PWR TRANS BOARD			

< CAPACITOR >					
C902	1-164-159-21	CERAMIC	0.1uF		50V
C903	1-126-969-11	ELECT	220uF	20.00%	50V
< CONNECTOR >					
* CN902	1-564-519-11	PLUG,CONNECTOR 4P			
* CN904	1-564-719-11	PIN,CONNECTOR (SMALL TYPE) 3P			
* CN907	1-564-524-11	PLUG,CONNECTOR 9P			
< DIODE >					
D907	6-500-522-21	DIODE 10EDB40-TB3			
< FUSIBLE >					
△FR903	1-217-639-00	FUSIBLE	2.2	5%	1/4W
< RESISTOR >					
△R901	1-219-237-91	SOLID	3.3M	20%	1/2W (US,CND)

	1-686-726-12	ROLLER MOTOR BOARD			

	1-686-723-12	SENSOR BOARD			

< IC >					
IC751	8-749-017-45	SENSOR,PHONT RPR-220C1N			
(DISC INSERT DETECT SENSOR)					

	1-689-248-12	SENSOR (FAN) BOARD			

< THERMISTOR >					
TH501	1-807-796-11	THERMISTOR			

ST ENCODER BOARD					

The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.	Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.
--	--

STOCKER MOTOR

SUB TURANS

SW (1)

SW (2)

SW (3)

SW (4)

Ref. No.	Part No.	Description	Remarks
	1-686-725-12	STOCKER MOTOR BOARD *****	

	1-689-246-12	SUB TRANS BOARD *****	
		< CAPACITOR >	
C901	1-126-767-11	ELECT 1000uF 20.00% 16V	
		< CONNECTOR >	
△ CN905	1-564-321-21	PIN,CONNECTOR (3.96mm PITCH) 2P (EXCEPT E2,E3,TW)	
△ CN905	1-568-106-11	PIN,CONNECTOR (3.96mm PITCH) 4P (E2,E3,TW)	
△ CN908	1-564-321-00	PIN,CONNECTOR (3.96mm PITCH) 2P	
		< DIODE >	
D901	6-500-522-21	DIODE 10EDB40-TB3	
D902	6-500-522-21	DIODE 10EDB40-TB3	
D903	6-500-522-21	DIODE 10EDB40-TB3	
D904	6-500-522-21	DIODE 10EDB40-TB3	
D905	8-719-988-61	DIODE 1SS355TE-17	
		< RELAY >	
△ RY901	1-755-276-11	RELAY,POWER	
		< SWITCH >	
△ S902	1-786-055-21	SELECTOR,VOLTAGE (VOLTAGE SELECTOR) (E2,E3,TW)	
		< TRANSFORMER >	
△ T902	1-439-830-11	TRANSFORMER,POWER (US,CND,MX)	
△ T902	1-439-832-11	TRANSFORMER,POWER (E2,E3,KR,TW,TH,AUS)	
△ T902	1-439-831-11	TRANSFORMER,POWER (AEP,UK,RU)	

	1-686-727-12	SW (1) BOARD *****	
		< SWITCH >	
S711	1-786-382-11	SWITCH,PUSH (1 KEY)(DISC INSERT (8/12cm))	

	1-686-728-12	SW (2) BOARD *****	
S713	1-786-382-11	SWITCH,PUSH (1 KEY)(DISC IN (8/12cm))	
S714	1-786-382-11	SWITCH,PUSH (1 KEY)(DISC IN (8cm))	

	1-686-729-12	SW (3) BOARD *****	
S715	1-786-382-11	SWITCH,PUSH (1 KEY)(DISC OUT)	

	1-686-730-12	SW (4) BOARD *****	
S716	1-786-382-11	SWITCH,PUSH (1 KEY)(STOCKER IN/OUT)	

Ref. No.	Part No.	Description	Remarks
S717	1-786-382-11	SWITCH,PUSH (1 KEY)(DISC POSITION)	
S718	1-786-382-11	SWITCH,PUSH (1 KEY)(STOCKING)	

		MISCELLANEOUS *****	
11	1-827-392-11	WIRE (FLAT TYPE)(8 CORE)	
12	1-796-351-41	MECHANISM,SINGLE CASSETTE	
63	1-769-920-11	WIRE (FLAT TYPE)(9 CORE)	
65	1-827-395-11	WIRE (FLAT TYPE)(37 CORE)	
105	1-787-025-11	DC FAN	
107	1-693-625-11	TUNER (FM/AM)(US,CND)	
107	1-693-626-11	TUNER (FM/AM)(AEP,UK)	
107	1-693-627-11	TUNER (FM/AM)(RU)	
107	1-693-628-11	TUNER (FM/AM)(E2,E3,TW,TH,MX,AUS)	
107	1-693-629-11	TUNER (FM/AM)(KR)	
108	1-769-946-11	WIRE (FLAT TYPE)(11 CORE)(EXCEPT AEP,UK)	
108	1-773-009-11	WIRE (FLAT TYPE)(15 CORE)(AEP,UK)	
△ 151	1-690-608-11	CORD,POWER (AUS)	
△ 151	1-769-079-22	CORD,POWER (KR)	
△ 151	1-783-531-11	CORD,POWER (US,CND)	
△ 151	1-783-532-11	CORD,POWER (AEP,UK,RU,TW)	
△ 151	1-791-901-12	CORD,POWER (E2,E3,MX)	
△ 151	1-824-818-11	CORD,POWER (WITH CONNECTOR)(TH)	
155	1-827-390-11	WIRE (FLAT TYPE)(27 CORE)	
156	1-827-393-11	WIRE (FLAT TYPE)(19 CORE)	
422	1-471-244-11	MAGNET	
△ 607	A-4735-357-A	BASE ASSY, OP (KSM-213D)	
608	1-823-859-11	WIRE (FLAT TYPE)(16 CORE)	
△ F901	1-533-454-11	FUSE,GLASS TUBE (DIA. 5)(T6.3AL/125V) (US,CND,MX)	
△ F901	1-533-473-11	FUSE,GLASS TUBE (DIA. 5)(T6.3AL/250V) (EXCEPT US,CND,MX)	
△ F902	1-533-454-11	FUSE,GLASS TUBE (DIA. 5)(T6.3AL/125V) (US,CND,MX)	
△ F902	1-533-473-11	FUSE,GLASS TUBE (DIA. 5)(T6.3AL/250V) (EXCEPT US,CND,MX)	
△ F903	1-533-451-11	FUSE,GLASS TUBE (DIA. 5)(T3.15AL/125V) (US,CND,MX)	
△ F903	1-533-470-11	FUSE,GLASS TUBE (DIA. 5)(T3.15AL/250V) (EXCEPT US,CND,MX)	
△ F904	1-533-451-11	FUSE,GLASS TUBE (DIA. 5)(T3.15AL/125V) (US,CND,MX)	
△ F904	1-533-470-11	FUSE,GLASS TUBE (DIA. 5)(T3.15AL/250V) (EXCEPT US,CND,MX)	
△ F905	1-533-471-11	FUSE,GLASS TUBE (DIA. 5)(T4AL/250V) (E2,E3,TW)	
M761	A-4735-953-A	MOTOR ASSY (STOCKER)	
M771	A-4735-953-A	MOTOR ASSY (MODE)	
M781	A-4735-953-A	MOTOR ASSY (ROLLER)	
S702	1-477-299-11	ENCODER,ROTARY (STOCKER POSITION)	
S771	1-477-300-11	ENCODER,ROTARY (MODE)	
△ T901	1-439-827-11	TRANSFORMER,POWER (E2,E3,KR,TW,TH,AUS)	
△ T901	1-439-828-11	TRANSFORMER,POWER (US,CND,MX)	
△ T901	1-439-829-11	TRANSFORMER,POWER (AEP,UK,RU)	

The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

REVISION HISTORY

Clicking the version allows you to jump to the revised page.

Also, clicking the version at the upper right on the revised page allows you to jump to the next revised page.

[illegible]