

Service Manual

Computer Drive New Class A
Stereo Integrated Amplifier

Amplifier

SU-V10X

Color

(K).....Black Type



Color	Areas
(K)	[D]Scandinavia
(K)	[EF].....France
(K)	[Ei].....Italy
(K)	[EW].....Switzerland
(K)	[EK].....United Kingdom
(K)	[EH].....Holland
(K)	[EGA].....F. R. Germany
(K)	[EB].....Belgium
(K)	[XA].....Southeast, Asia, Oceania, Africa, Middle Near East and Central South America
(K)	[XL].....Australia

SPECIFICATIONS

(DIN 45 500)

■ MAIN AMPLIFIER SECTION

(Input Signal: EXT. INPUT)

1 kHz continuous power output both channels driven	2 × 120W (4Ω) 2 × 120W (8Ω)
40 Hz~16 kHz continuous power output both channels driven	2 × 120W (4Ω) 2 × 120W (8Ω)
20 Hz~20 kHz continuous power output both channels driven	2 × 120W (4Ω) 2 × 120W (8Ω)
Total harmonic distortion	
rated power at 20 Hz~20 kHz	0.007% (4Ω) 0.003% (8Ω)
rated power at 40 Hz~16 kHz	0.007% (4Ω) 0.003% (8Ω)
rated power at 1 kHz	0.0015% (4Ω) 0.001% (8Ω)
half power at 20 Hz~20 kHz	0.002% (8Ω)
half power at 1 kHz	0.001% (8Ω)
Intermodulation distortion	
rated power at 250 Hz: 8 kHz=4:1, 8Ω	0.01%
rated power at 60 Hz: 7 kHz=4:1, SMPTE, 8Ω	0.007%
Power bandwidth	
both channels driven, -3 dB	5 Hz~70 kHz (4Ω, 0.03%) 5 Hz~70 kHz (8Ω, 0.02%)
Residual hum and noise	0.5 mV
Damping factor	40 (4Ω), 80 (8Ω)
Headphones output level and impedance	740 mV/330Ω
Load impedance	
MAIN or REMOTE	4Ω~16Ω
MAIN and REMOTE	8Ω~16Ω

■ PRE AMPLIFIER SECTION

Input sensitivity and impedance

PHONO MM	2.5 mV/47kΩ
MC	170 μV/220Ω
TUNER, CD, TV/AUX 1, VIDEO/AUX 2, TAPE 1/DA TAPE, TAPE 2/VCR	150 mV/18kΩ
PHONO maximum input voltage (1 kHz, RMS)	
MM	170 mV
MC	12 mV

S/N

rated power (4Ω)	
PHONO MM	79 dB (IHF, A: 90 dB)
MC	72 dB (IHF, A: 72 dB (250 μV))
TUNER, CD, TV/AUX 1, VIDEO/AUX 2, TAPE 1/DA TAPE, TAPE 2/VCR	98 dB (IHF, A: 110 dB)

Frequency response

PHONO	RIAA standard curve ±0.2 dB (30 Hz~15 kHz)
TUNER, CD, TV/AUX 1, VIDEO/AUX 2, TAPE 1/DA TAPE, TAPE 2/VCR	-3 dB (2 Hz~140 kHz) +0 dB, -0.1 dB (20 Hz~20 kHz)

Tone controls

BASS	50 Hz, +10 dB~-10 dB
TREBLE	20 kHz, +10 dB~-10 dB

Turnover frequency

BASS	125 Hz, 250 Hz, 500 Hz
TREBLE	2 kHz, 4 kHz, 8 kHz

Muting

Subsonic filter	20 Hz, -6 dB/oct.
-----------------	-------------------

Loudness control (volume at -30 dB)

Output voltage and impedance	150 mV
------------------------------	--------

TAPE 1, 2, REC OUT

Channel balance, CD, AUX 1, 2	±1 dB
-------------------------------	-------

Channel separation, CD, AUX 1, 2

1 kHz	55 dB
-------	-------

Technics

Matsushita Electric Trading Co., Ltd.

P.O. Box 288, Centra Osaka Japan

VIDEO SECTION
(TV/AUX 1, VIDEO/AUX 2, TAPE 2/VCR)

Output voltage (at 1V input 75 ohms unbalanced) 1±0.1 Vp-p
Maximum input voltage 1.5 Vp-p
Input/output impedance 75 ohms unbalanced

Notes:
• Total harmonic distortion is measured by the digital spectrum analyzer (H.P. 3045 system).

CONTENTS

	Page
SAFETY PRECAUTION	2
LOCATION OF CONTROL	3, 4
VOICE AND VIDEO SIGNAL TERMINAL	4
OPERATION	5
RECORDING	6, 7
PROTECTION CIRCUITRY	7
BEFORE REPAIR AND ADJUSTMENT	7
DISASSEMBLY INSTRUCTIONS	7~10
FUNCTION OF TERMINAL (IC801: MN1421STA)	10, 11
FUNCTION OF TERMINAL (IC251: μPD7506C043)	11, 12

GENERAL

Power consumption 670W
Power supply AC 50 Hz/60 Hz, 110V/127V/220V/240V
Dimensions (W×H×D) 430 × 147 × 392 mm
(16-15/16" × 5-25/32" × 15-13/32")
Weight 13.5 kg
(29.8 lb.)

• Specifications are subject to change without notice.
Weight and dimensions shown are approximate.

	Page
TERMINAL GUIDE OF TRANSISTORS, DIODES AND IC'S	12
HOW TO REPLACE IC'S (Small outline type)	13
WIRING CONNECTION DIAGRAM	14 ~ 16
PRINTED CIRCUIT BOARDS	17 ~ 22
MEASUREMENT AND ADJUSTMENTS	23
BLOCK DIAGRAM	24, 25
SCHEMATIC DIAGRAM	26 ~ 33
CIRCUITS TO BE CHANGED AND THE AREAS	34
REPLACEMENT PARTS LIST	35, 36
EXPLODED VIEW	37, 38


SAFETY PRECAUTION (thes "safety precaution " is applied only in U.S.A.)

- 1. Before servicing, unplug the power cord to prevent an electric shock.
- 2. When replacing parts, use only manufacturer's recommended components for safety.
- 3. Check the condition of the power cord. Replace if wear or damage is evident.
- 4. After servicing, be sure to restore the lead dress, insulation barriers, insulation papers, shields, etc.
- 5. Before returning the serviced equipment to the customer, be sure to make the following insulation resistance test to prevent the customer from being exposed to a shock hazard.


INSULATION RESISTANCE TEST

- 1. Unplug the power cord and short the two prongs of the plug with a jumper wire.
- 2. Turn on the power switch.
- 3. Measure the resistance value with ohmmeter between the jumpered AC plug and each exposed metal cabinet part, such as screwheads antenna, control shafts, handle brackets, etc. Equipment with antenna terminals should read between 3MΩ and 5.2MΩ to all exposed parts. (Fig. A) Equipment without antenna terminals should read approximately infinity to all exposed parts. (Fig. B)

Note: Some exposed parts may be isolated from the chassis by design. These will read infinity.

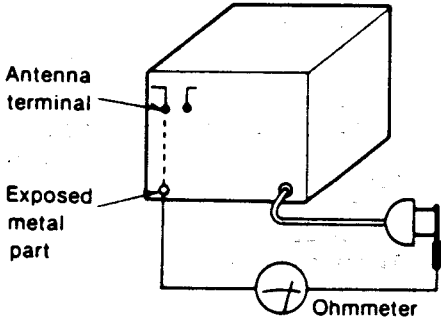


(Fig. A)
Resistance = 3MΩ—5.2MΩ

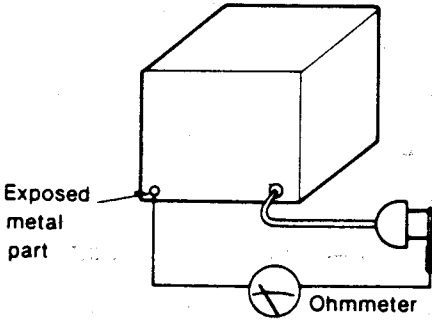


(Fig. B)
Resistance = Approx ∞

- 4. If the measurement is outside the specified limits, there is a possibility of a shock hazard. The equipment should be repaired and rechecked before it is returned to the customer.

LOCATION OF CONTROLS

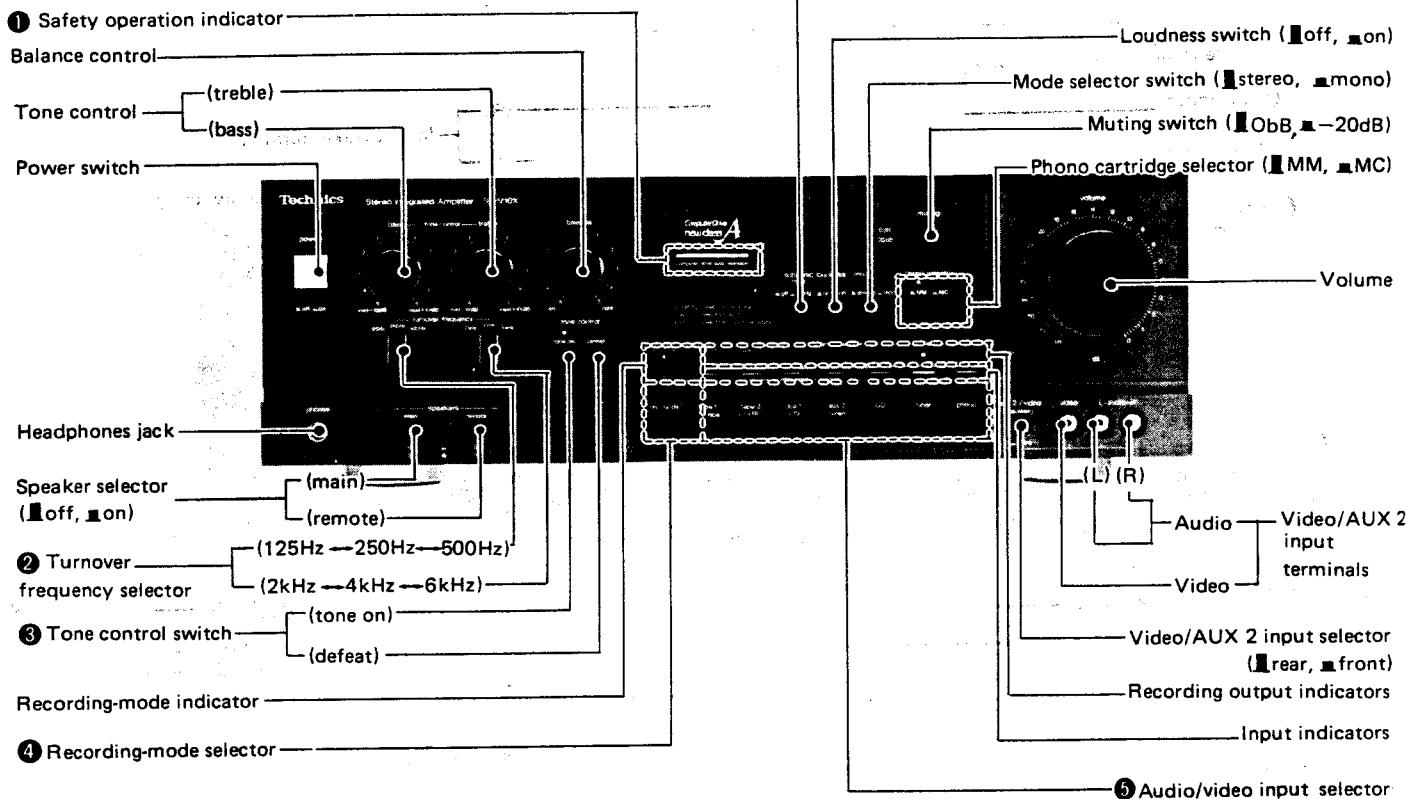


- When the power is switched ON, this indicator flashes for about 5 seconds, and then illuminates steadily when the unit is in the operation condition.
If an abnormal condition in the circuitry is detected, such as DC voltage appearing in the output, or a short-circuit of the positive (+) and negative (-) wires from the speaker terminals, the protection circuit functions and this indicator flashes rapidly. If this occurs, switch the power OFF, find the cause of the trouble and correct it, and then switch the power ON once again.
- These selectors are used to select the range within which changes of tone control characteristics occur.
- This switch is used to switch the tone control circuit (bass, treble) ON or OFF.
defeat: Set to this position to switch the bass/ treble tone control circuit OFF. Regardless of the positions of the tone controls, the characteristics will remain flat.
tone on: Set to this position for adjustment of the tone quality with the tone controls.

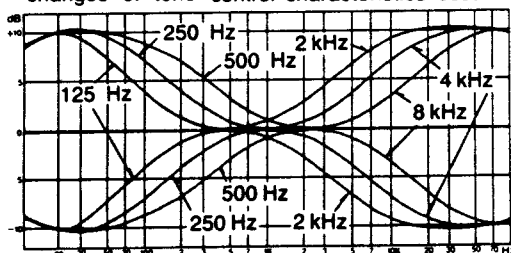

- This button can be used to switch the mode to the source to be heard (or watched) as selected by one of the source selectors, or to the source to be recorded.
When this button is pressed, the recording-mode indicator flashes, and, when one of the source selectors is pressed, the indicator illuminates steadily. If the indicator flashes, the flashing can be stopped by pressing this button once again.
When the recording-mode indicator is not illuminated:
If one of the source selectors is pressed, the program source to be heard or watched and the recording source will both be switched at the same time.
Note, however, that only the program source to be heard or watched will be switched, and the tape can be monitored during recording, if the "tape 1/DA tape" or "tape 2/VCR" source selector is pressed.
When the recording-mode indicator is flashing:
This is the mode for selection of the source you want to record. If one of the source selectors is pressed, only the recording program source will be switched.
When the recording-mode indicator is illuminated:
This is the mode for listening to (or watching) one source while recording another source. If one of the source selectors is pressed, only the program source to be heard or watched will be switched.
- These buttons have two functions:
When the recording-mode indicator is not flashing or not illuminated, these buttons are used to select the program source to be heard or watched. (The signal is available at the speaker terminals and headphones jack.)
When the recording-mode indicator is flashing, these buttons are used to select the program source to be recorded. (The signal is available at the REC OUT terminals.)

SU-V10X

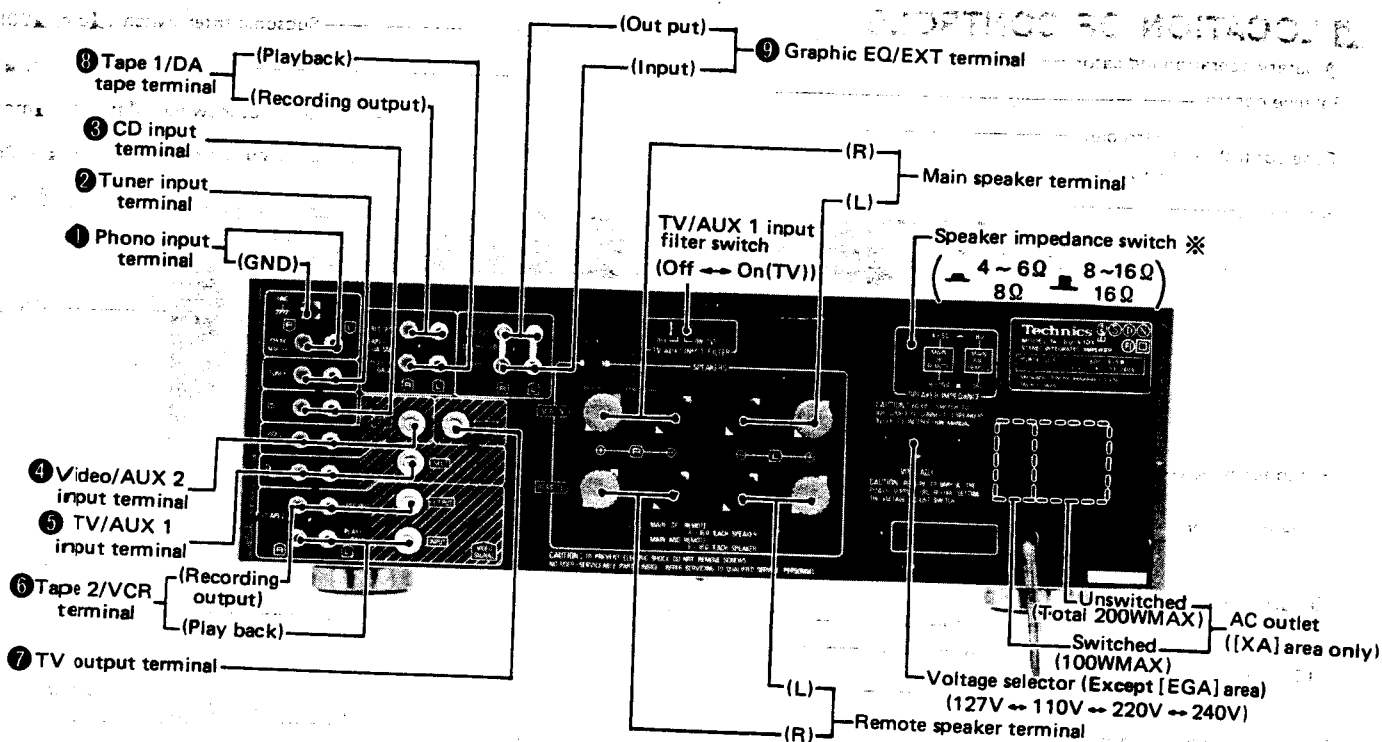

★ [EGA] area is provided without voltage selector.
★ Phono input capacitance is about 150pF.


※ If only the main or the remote speaker system is used (4~16Ω):

4~6Ω (■—■):
For speaker impedance of 4~6Ω.
8~16Ω (■—■):
For speaker impedance of 8~16Ω.

■ If both the main and remote speaker systems (8~16Ω each speaker) are used:

- 1) If the impedance of both systems is 16 ohms, set the speaker impedance selector to "16Ω".
- 2) If the impedance of both systems is 8 ohms, or one is 8 ohms and the other is 16 ohms, set the speaker impedance selector to "8Ω".


VOICE AND VIDEO SIGNAL TERMINAL

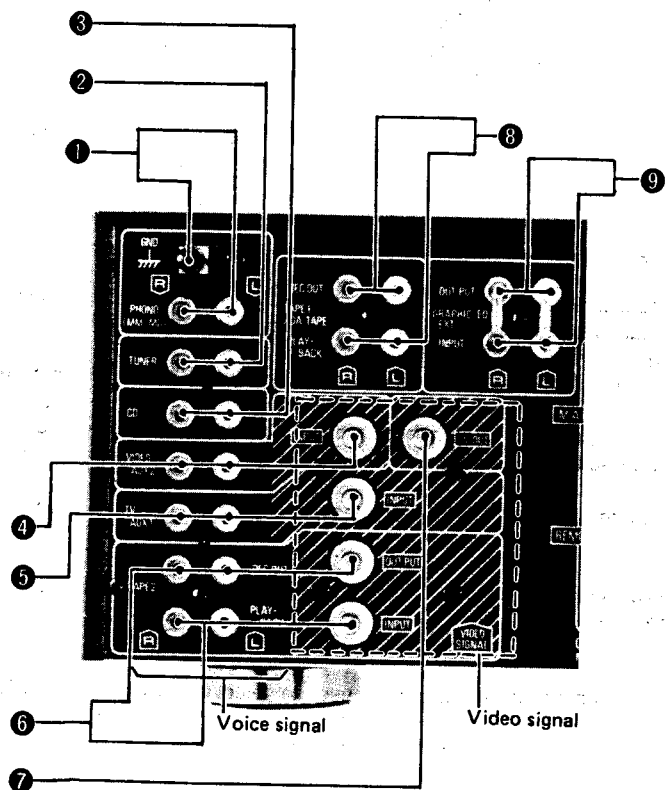

OPERATION

Standard operating procedures

- 1 **Power: "on" (I→II)**
Be sure to reduce the volume level to a low ("∞→60") position before switching ON the power.
- 2 **Select the speaker systems to be used.**
If sound from speakers is not wanted, set the speaker selectors to the "off" position.
Headphones (option) Plug type: 1/4-inch phone plug, stereo type
Note: Set volume control to the minimum ("∞") position before connecting headphones.

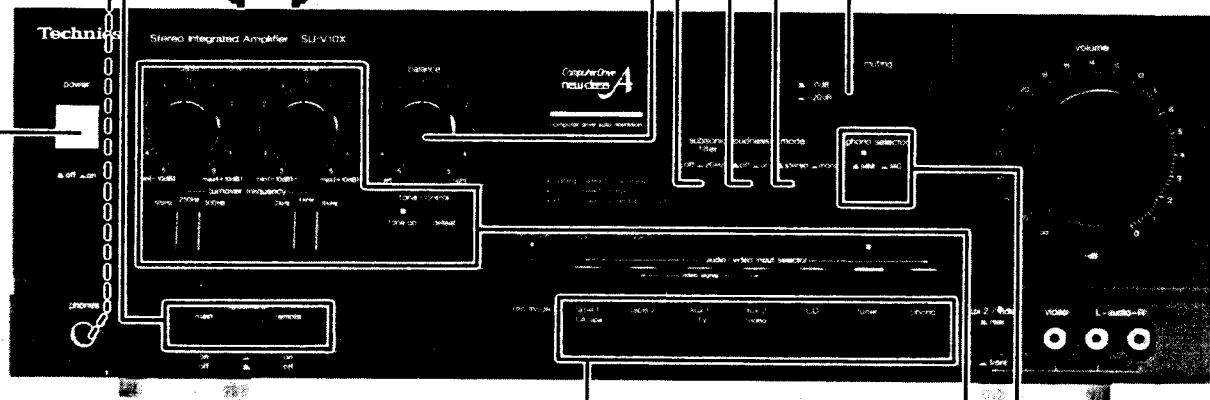

- 3 **Select the program source.**
(The picture and sound can be switched at the same time.)
tape 1/DA tape:
Press this button to listen to a tape or a digital-audio processor.
tape 2/VCR:
Set to this position for playback from a VCR or tape deck.
aux 1/TV:
Press this button to watch a TV.
aux 2/video:
Press this button to watch a video disc player, etc., is connected to the "VIDEO/AUX 2" terminals (on the front or rear panel).
CD:
Press this button to listen to a compact-disc.
tuner:
Press this button to listen to radio broadcasts.
phono:
Press this button to listen to phono discs.

- 4 **Operate each component.**
(Refer to the operating instructions for the other equipment used.)

- 5 **Adjust the volume level and the tone quality.**

After disc play or radio broadcast, etc. has started

- Adjust left/right volume balance.
- Press inward to the "20 Hz" position to eliminate ultra-low-frequency noise (turntable motor "rumble", etc.).
- Press inward to the "on" position when listening to music at a low volume level (for compensation of the bass range).
- Press inward to the "mono" position to listen to sound monaurally (when adjusting left/right volume balance, etc.).
- Press inward to the "-20 dB" position to temporarily reduce the volume level or for more precise control of the volume level.

- Adjust the tone quality as desired.
- Select either "MM" or "MC" when listening to phono discs.
- 1 "tone on"
If set to the "defeat" position, tone controls have no effect, and frequency response becomes flat.

- 2 Select the tone range.
- 3 Adjust the tone quality.

Suggestions

- If noise is very annoying while listening to an FM or AM broadcast, switch OFF the TV, compact-disc player and turntable.
- Switch OFF the TV power if noise is excessive while listening to an audio tape, compact disc or regular phono disc.
- If a striped pattern appears and makes viewing difficult, switch OFF the digital audio processor.

After use

After listening is finished, power switches of all equipment should be switched OFF.

RECORDING

With this unit, you can record an FM broadcast, etc. while watching TV, or record one sound source while listening to another. In addition, the "aux 2/video" terminals on the front panel can be used for easy audio or video tape editing.

- 1 **Power: "on" (■→■)**
Be sure to reduce the volume level to a low ("∞→60") position switching ON the power.
- 2 **Select the speaker systems to be used.**
●Recording-mode selector
- 3 **Press.**
The recording mode indicator will flash.
(Refer to note 1.)
- 4 **Select the desired program source for recording.**
(The recording mode indicator and recording output signal indicator will illuminate.)
●Press this button in order to record from a tape deck connected to the "TAPE 1/DA TAPE" terminals to a tape deck connected to the "TAPE 2/VCR" terminals.
●Press this button in order to record from a tape deck connected to the "TAPE 2/VCR" terminals to a tape deck connected to the "TAPE 1/DA TAPE" terminals.
- 5 **Begin recording.**
By using the controls on the tape deck, adjust the recording level. Then begin recording.
- 6 **Set to the position corresponding to the program source to be heard.**
(One of the input signal indicators will illuminate.)
●If the program source being recorded is selected:
The sound going to the tape deck will be heard.
●If the tape deck making the recording is selected:
The sound going through the tape deck will be heard.
●If some other sound source is selected:
The sound of the selected source can be heard. (This will not effect the recording which is being made.)
To record one program source and listen to another:
Follow steps 3 through 6.

Notes:

1. While a recording is in progress:
Do not press the recording-mode selector, because the recording will be interrupted and the recording source will be changed.
2. For timer recordings:
Be sure to check that the recording-mode indicator is illuminated steadily (not flashing).
Note that the recording might not be made if the recording-mode indicator is flashing.


Tape-to-tape recording of video tapes

A copy of a video tape can be made by connecting a video deck for playback to the "aux 2/video" terminals on the front panel.

Note:

Follow these steps in addition to step 4 above.


- 1 **Connect the VCR to be used for playback to the "aux 2/video" terminals on the front panel.**

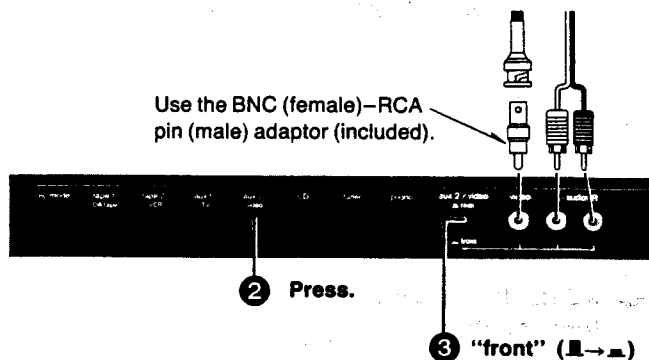

● Placement on top of other equipment

To accommodate equipment of different depths, use the additional feet (included) to support this unit.

Bottom of this unit ↓ Rear

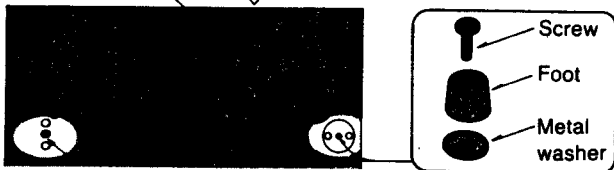

● If a TV is connected to this unit

● If speakers are placed near the television

Move the speakers away from the TV to a position where the picture is improved if the TV's picture color changes or distortion appears on the TV screen.

(This is not necessary, however, for shielded speakers.)

● If a turntable is placed near the TV

Place it on the right side of the TV.

TV magnetism might otherwise affect the record player's cartridge performance, causing interference noise.

■ PROTECTION CIRCUITRY

The protection circuitry may have operated if either of the following conditions is noticed:

- No sound is heard when the power is switched ON.
- Sound stops during a performance.

The function of this circuitry is to prevent circuitry damage if, for example, the positive and negative speaker connection wires are "shorted", or if speaker systems with an impedance less than the indicated rated impedance of this unit are used.

If this occurs, follow the procedure outlined below:

1. Switch OFF the power.
2. Determine the cause of the problem and correct it.
3. Switch ON the power once again.

Note:


When the protection circuitry functions, the unit will not operate unless the power is first switched OFF and then ON again.

■ BEFORE REPAIR AND ADJUSTMENT

- (1) Turn off the power supply. Using a 10Ω, 5W resistor, shortcircuit both ends of power supply capacitors(C901~ 904, 10000μF) in order to discharge the voltage.
- (2) Before turning the power supply on, after completion of repair, slowly apply the primary voltage by using a power supply voltage controller to make sure that the consumed current at 50/60 Hz in NO SIGNAL mode should be shown below with respect to supply voltage 110V/127V/220V/240V.

Power supply voltage		AC110V	AC127V	AC220V	AC240V
Consumed current	50/60Hz	270 ~ 730mA	250 ~ 670mA	135 ~ 370mA	125 ~ 340mA

■ DISASSEMBLY INSTRUCTIONS

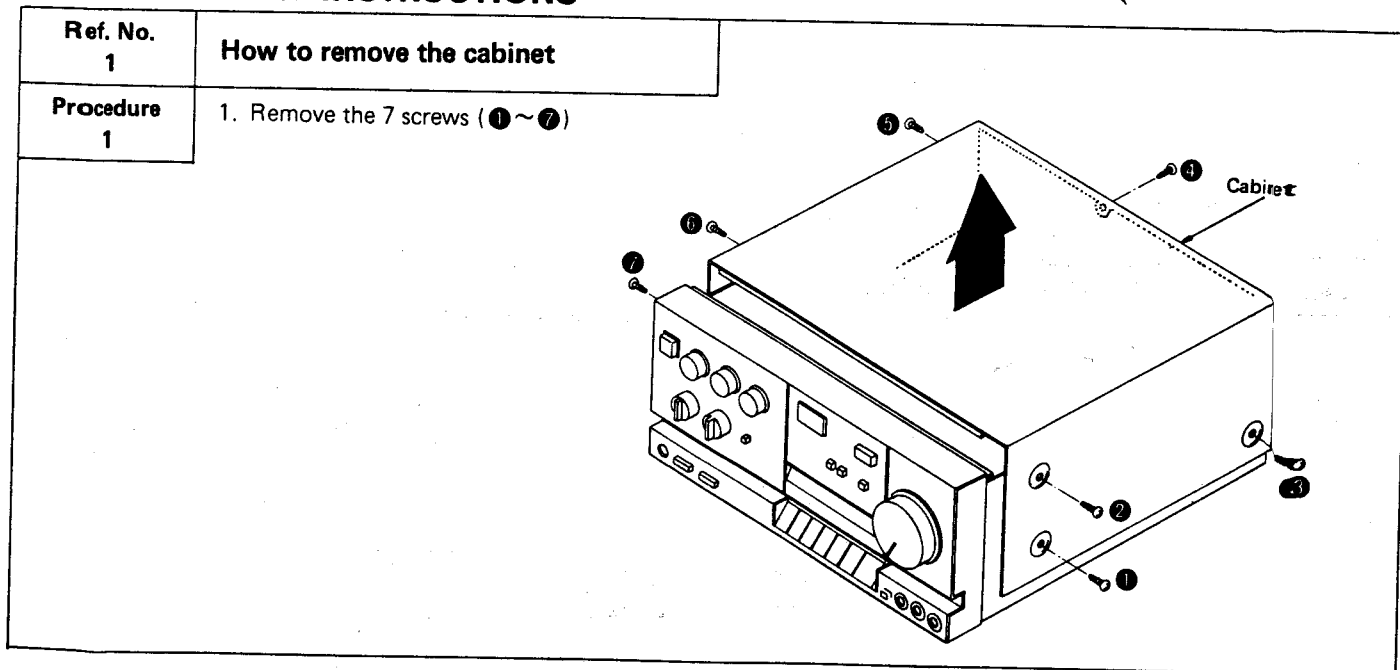


Ref. No. 2	How to remove the front panel	2. Remove the front panel (refer to the arrow).
Procedure 1 → 2	Remove the 5 screws (① ~ ⑤) and 4 nuts (⑥ ~ ⑨).	Note Remove the flat cable Flat cable Connector Pushing the connector and extract the flat cable
Ref. No. 3	How to remove the sub panel	
Procedure 1 → 2 → 3	1. Push down the 10 tabs (up side) and Push up the (under side) of sub panel.	Front panel Push down Sub panel Sub panel Push up Front panel
Ref. No. 4	How to remove the AUX2/VIDEO P.C.B and speaker selector P.C.B	2. Pull the tab (up side) and 2 tabs (under side) of Speaker selector P.C.B.
Procedure 2 → 3 → 4	1. Pull the 3 tabs (up side) and 4 tabs (under side) of AUX2/VIDEO Input P.C.B.	

Ref. No.
5

How to remove the indicator panel

Procedure
1→2→3→4→5

1. Pull the 4 tabs of indicator panel.

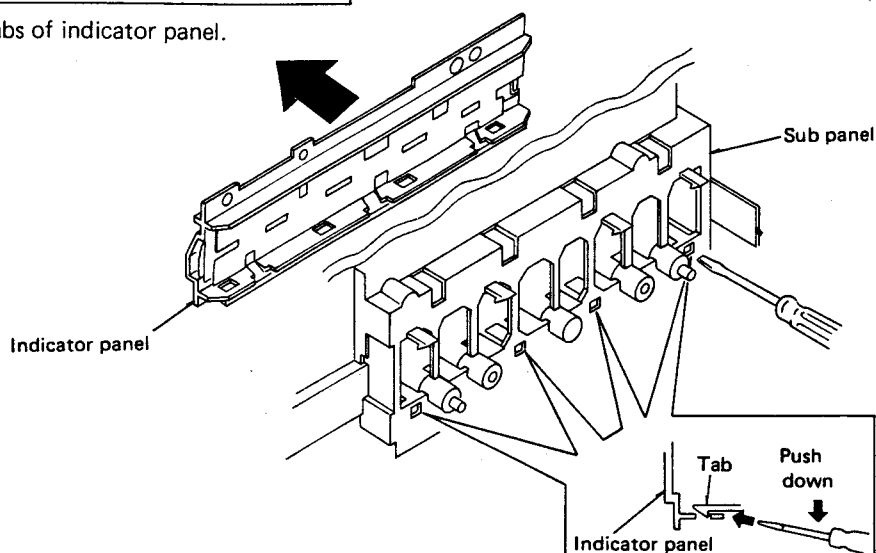


Ref. No.
6

How to remove the selector button and selector P.C.B

Procedure
1→2→3→4→5→6

1. Remove the 3 screws (① ~ ③) of selector button.
2. Remove the 3 screws (④ ~ ⑥) of selector P.C.B.

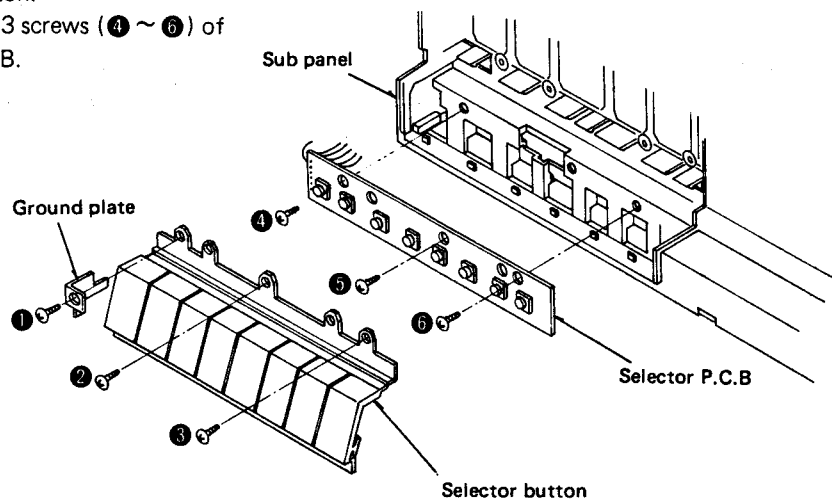


Ref. No.
7


How to remove the bottom board

Procedure
7

1. Remove the 4 screws (① ~ ④).

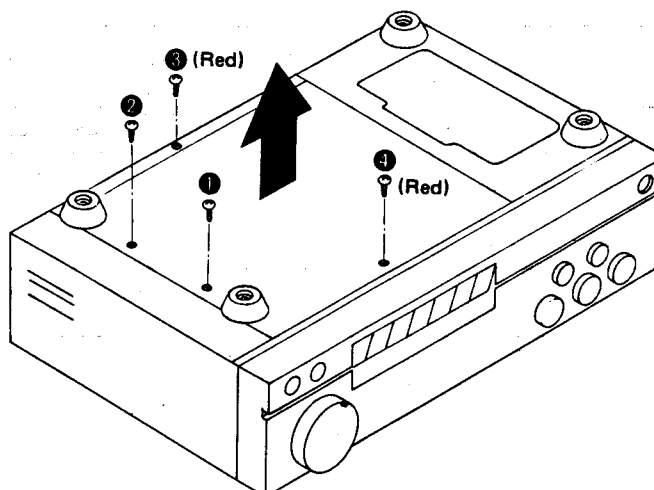

Ref. No. 8	How to remove the power transistor	2. Unsolder the power transistor. 3. Remove the 2 screws (4, 5) of heat sink.
Procedure 1 → 7 → 8	1. Remove the 2 screws (1, 2) of bracket and screw (3) of hold bracket.	

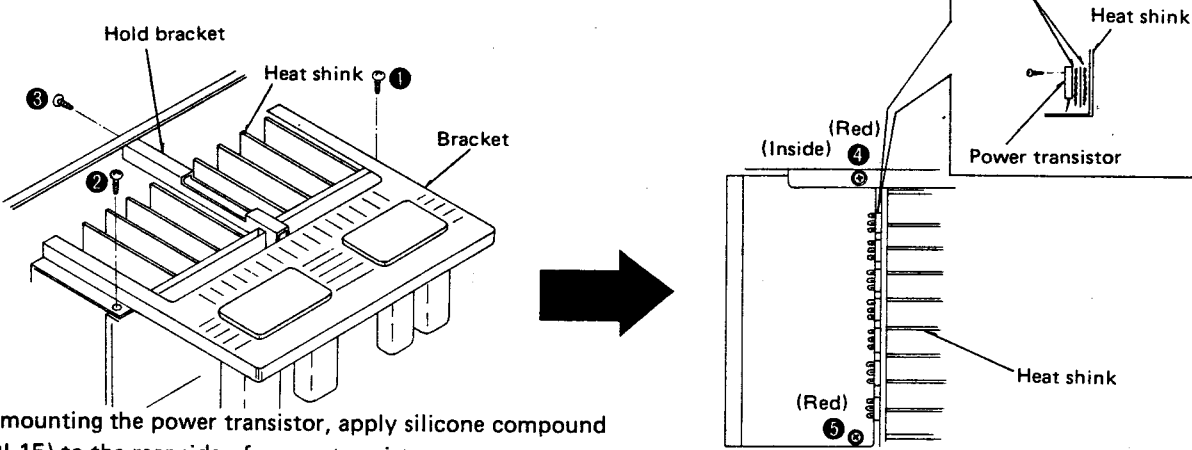

● When mounting the power transistor, apply silicone compound (SZZ0L15) to the rear side of power transistor.

■ FUNCTION OF TERMINAL (Ic_Q Controller IC801 : MN1421STA)


Pin No.	Mark	Name of block	Description of terminal
1	Vss	Power supply input terminal	Ground
2	CO ₉	Output	It delivers Ic _Q control signal through input port A (9) (thermal sensor) and input port B (11, 12) (signal sensor). [Output "H"]
3	CO ₈		
4	CO ₇		
5	CO ₆		
6	CO ₅		
7	AI ₃		
8	AI ₂		
9	AI ₁	Input	When 60°C (140°F) sensor of power amplifier operates, the input level becomes "L".
10	AI ₀	—	Ground
11	BI ₃	Input	Input level changes to "L" as effective output 2V signal sensor of power amplifier operates.
12	BI ₂		Input level changes to "L" as effective output 5V signal sensor of power amplifier operates.
13	BI ₁	—	—
14	BI ₀		
15	EO ₀	—	—
16	EO ₁		
17	EO ₂		
18	EO ₃	Output	Indicator "Computer drive auto operation" light up at "H" output.
19	TST	Test input terminal	Terminal for testing LSI (Grounded)
20	RST	Reset input terminal	All outputs are cleared or reset with input at "L" (It is connected to power supply circuit)
21	SNS ₀	—	Not used in this unit
22	SNS ₁	Input	Input level changes to "H" as power amplifier output short-circuit operates.

Pin No.	Mark	Name of block	Description of terminal
23	PRE HEAT	—	No used
24	DO1	—	Ground
25	DO2	—	Ground
26	DO3	Output	Output relay turns ON with output at "H"
27	VDD	Power supply input terminal	Apply 5V.
28	OSC	OSC input terminal	Clock signal (about 300 kHz) can be obtained by internal oscillation circuit.

■ FUNCTION OF TERMINAL (Analog Function Control IC251 : μ PD7506C043)

Pin. No.	Symbol	Input/Output	Active	Description of terminal
1	P43	—	—	Not used in this unit.
2	x 2	—	—	Not used in this unit.
3	P03/x 1	Input	—	It detects the level of pin ⑤. Push (once) the "rec selector" switch. Selection of input selector 4.3V 0V
4	P20/PSTB	Output	H	Clock output port for analog switch. Clock signal output to IC201 pin ⑮ and IC202 pin ⑮ during data transmission. [Refer to A]
5	P21/PTOUT	Output	H	Indicator "rec selector" light up at "H". Push (once) the "rec selector" switch. Selection of input selector 4.3V 0V
6	P22	Output	H	Data output for analog switch. Data signal output to IC201 pin ⑮ and IC202 pin ⑮. [Refer to A]
7	P23	Output	H	Strobe output port for analog switch. Strobe signal output to IC201 pin ⑮ and IC202 pin ⑮ during data transmission. [Refer to A]
8	P60	Output	H	Rec side indicator 3-bit output. Rec indicator drive signal output to IC253 pins ⑮ ~ ⑰. [Refer to E]
9	P61			
10	P62			
11	P63	Input	H	Stop mode sensing input. With high pulse signal input, the stop command is executed and the mode is shifted to standby. 4.4V 0V Power switch "OFF"
12	CL1	—	—	External clock oscillation frequency (400KHz) input port. [Refer to C]
13	CL2	—	—	Not used in this unit.
14	VDD	—	—	Power supply input terminal. (Apply 4.4V)
15	RESET	Input	H	Input terminal for reset signal. 4.3V 0V Power switch "ON" 1V 0V Power switch "OFF"
16	P10	Input	H	Input terminal for key return signal from external key matrix. [Refer to D]
17	P11			
18	P12			
19	P13			
20	P50			
21	P51			
22	P52			
23	P53	Output	H	Muting signal output during input switch or Rec switch operation. 4.3V 0V Push the each input selector or muting switch.
24	P00	Input	—	Mode shifting port. $\begin{cases} \text{H} = \text{Function 1 mode} \\ \text{L} = \text{Function 2 mode} \end{cases}$ The input of this unit is "H" (4.9V) because the mode used is Function 1.
25	P40	Output	H	Input side indicator 3-bit output. Input indicator drive signal to IC254 pins ⑮ ~ ⑰. [Refer to E]
26	P41			
27	P42			
28	VSS	—	—	Ground terminal.


C IC251 ⑫ 2V DIV/1 μ SEC

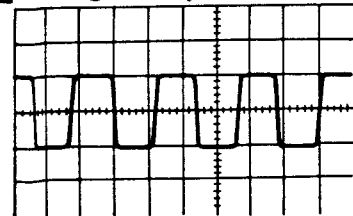

- ① Push the rec selector switch. ("rec indicator" blinking)
② Push the each input selector switch.

		L = 0V, H = 4.3V		
Pin No. of IC251		⑧	⑨	⑩
Input selector				
phono		L	H	L
tuner		H	L	L
CD		L	H	L
video/aux		H	H	L
tape 2		H	L	H
tape 1/DA tape		L	L	H

		L = 0V, H = 4.3V			
Pin No. of IC251		⑮	⑯	⑰	⑱
Input selector					
phono		L	L	L	H
tuner		L	L	H	L
CD		L	H	L	L
video/aux		H	L	L	L
tape 2		L	L	H	L
tape 1/DA tape		L	L	L	H
rec selector		H	L	L	L



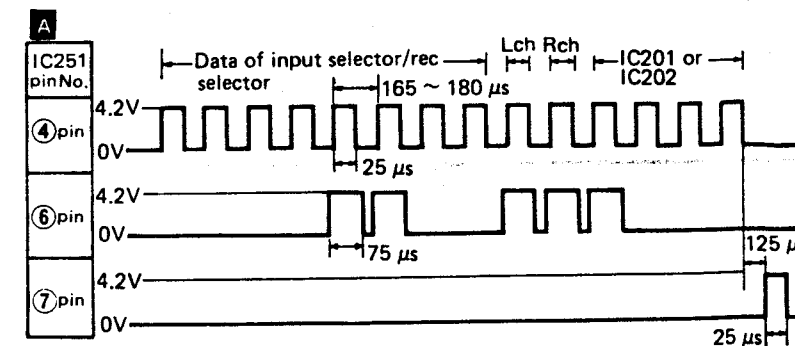


Pin No. of IC251		⑮	⑯	⑰
Input selector				
phono		L	L	L
tuner		H	L	L
CD		L	H	L
video/aux		H	H	L
tape 2		H	L	H
tape 1/DA tape		L	L	H
rec selector		L	L	L
muting		L	L	L

■ TERMINAL GUIDE OF TRANSISTORS, DIODES AND IC'S

TC9163N 28 Pin TC9164N 28 Pin MN1421STA 28 Pin μ PD7506C043 28 Pin AN7062 18 Pin DN74LS145 16 Pin MN4069UB 14 Pin μ PD4066BC 14 Pin	M5219P M5218P	AN78M05	2SK369
2SA1123, 2SD592ANC, 2SC1845 2SA992, 2SC2631, 2SB621, 2SC3112 2SC1685, 2SA1370, 2SA722	2SC3467	2SK301 2SK170	2SC3298A 2SA1306A
LN41YCPHL	LN81CPHL	20A90	MA4180M
MC911	MA162A	MA167	SVDS10VB20F 1SR35200
MA4200 MA4150 MA4068	MA4180M	LN846RP	2SD1265 2SB941

■ HOW TO REPLACE IC'S (Small outline type)

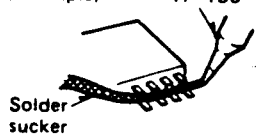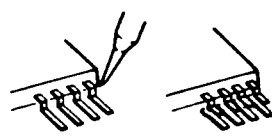Replacing procedure			Cautions
1	Reduce the amount of solder on each pin of the integrated circuit by use of a solder sucker.	(Example) H-130 	● Recommended toolSpecial soldering iron *H605M and H-130. *H605E and H-130. ● Do not touch the soldering iron to the area for a long time. It may otherwise cause removal of the print foil. ● When shifting the pin upward, do the job quickly while the solder is melting. If the solder is hard, it may cause removal or breakage of the print foil. ● When using a pencil type soldering iron. 1. Completely remove the solder from each IC pin by use of solder sucker. 2. Raise each pin by means of an eyeleteer, hold the pliers then remove IC package from P.C.B.
2	Melt the solder on the pin (one electrode) with the soldering iron.		
3	While the solder is melting, shift the pin upward by the soldering iron to remove it from the foil.		
4	Remove each pin from the foil according to the above-mentioned procedure.		



* Special soldering iron

(Refer to Technical Information, ORDER NO. GAD84125486T1)... For U.S.A. and Canada
(Refer to Technical Information, ORDER NO. GAD84115476T8)... For others

● H-605 Spot Heater (hot-air solder iron)

This device that uses hot air to melt solder was developed to remove Flat-Package ICs, RHCs and chip parts.

- H-605M (For 120V power source)
- H-605E (For 200V/220V/240V power source)

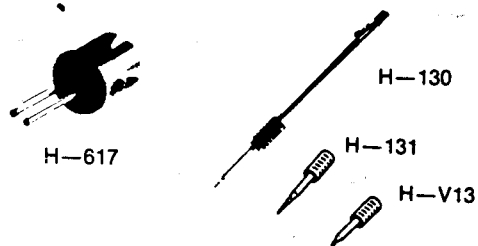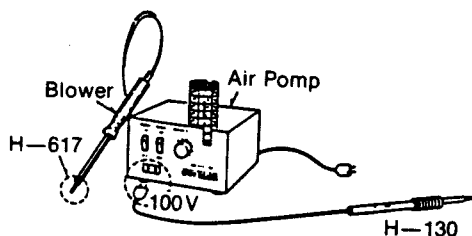

● H-617 Twin Nozzle (for spot heater)

Special nozzle for the removal of RHCs and chip resistors.
(Nozzle diameter : 1.0 mm x 2)

● H-130 Slim Pencil Solder Iron

An ultrasmall ceramic heater solder iron is extremely handy for soldering chip parts, RHCs, ICs, etc., to high-density circuit boards.

Features:


- Rated power: 100V, 15W
- Max. temp.: 400°C
- Heater: ceramic (long life)
- Insulation resistance: 100MΩ
- Length: 178 mm
- Weight: 16 g (not including cord)

● H-131, H-V13 Cap Bits


Solder tip for the slim pencil Solder Iron and is composed of a bit holder and a corrosion resistance solder tip. Permits changing of solder tips even while still hot.

- Solder tip: 0.3 mm

WIRING CONNECTION DIAGRAM



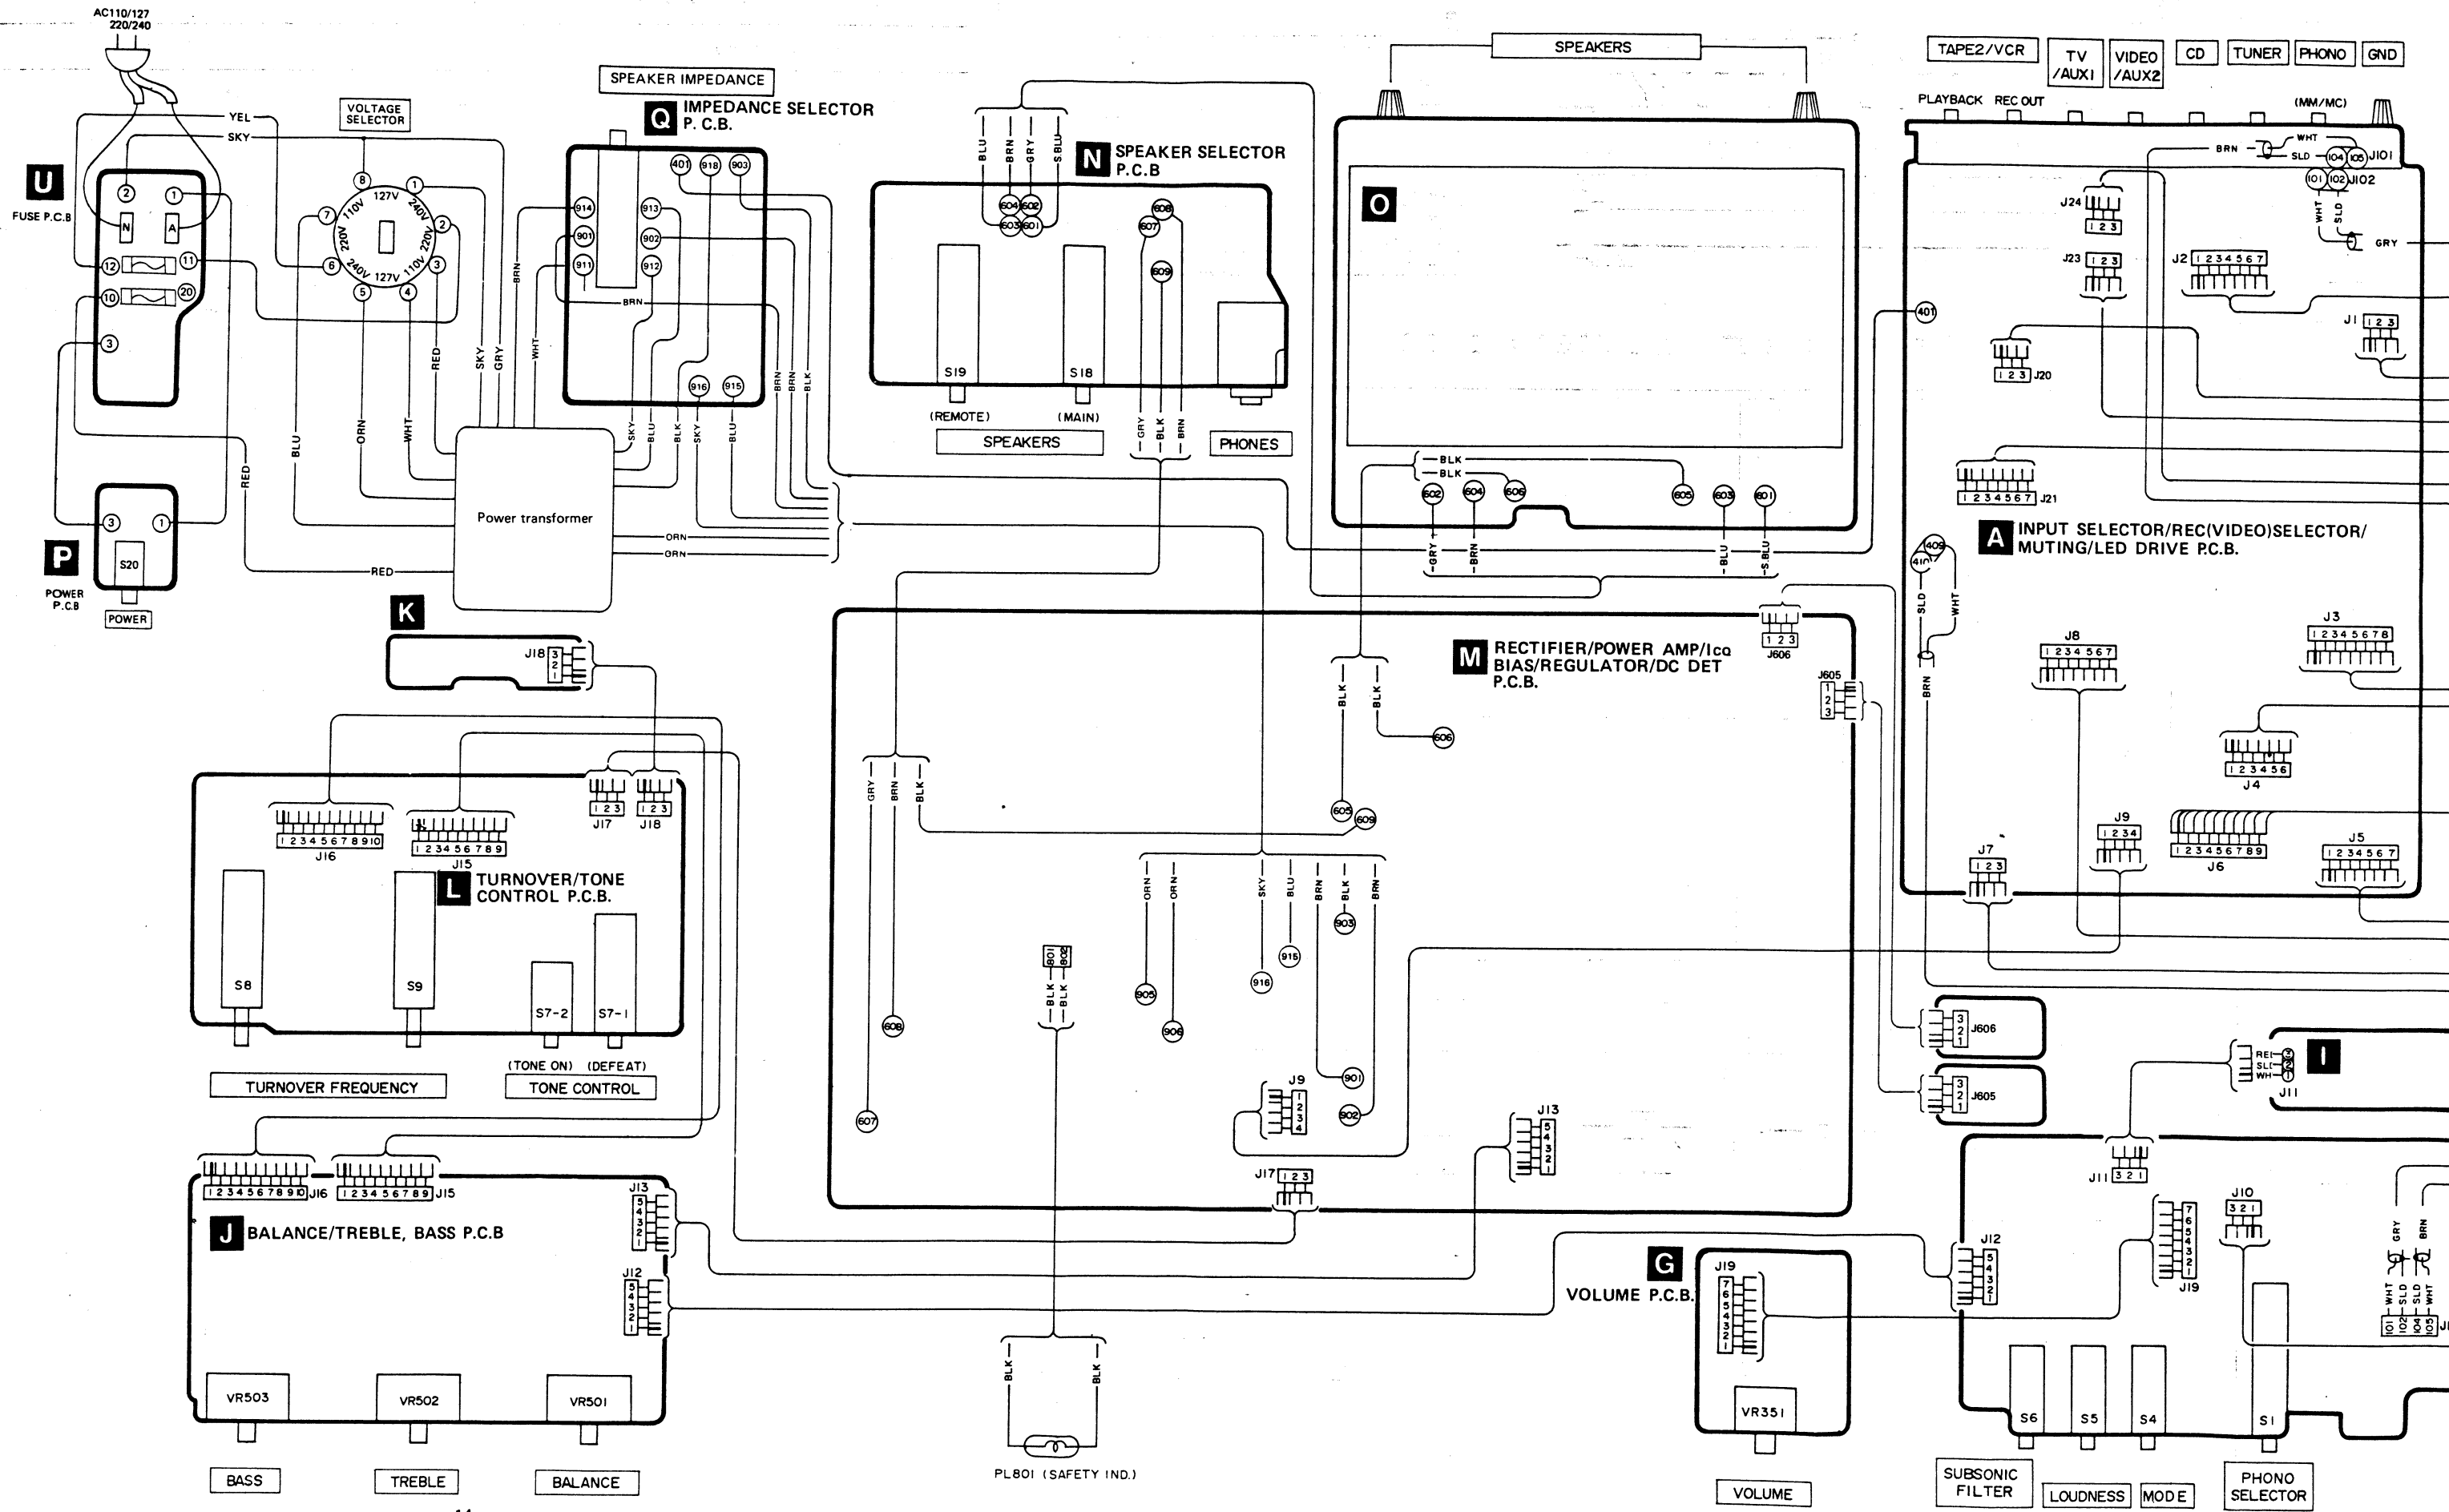


SU-V10X


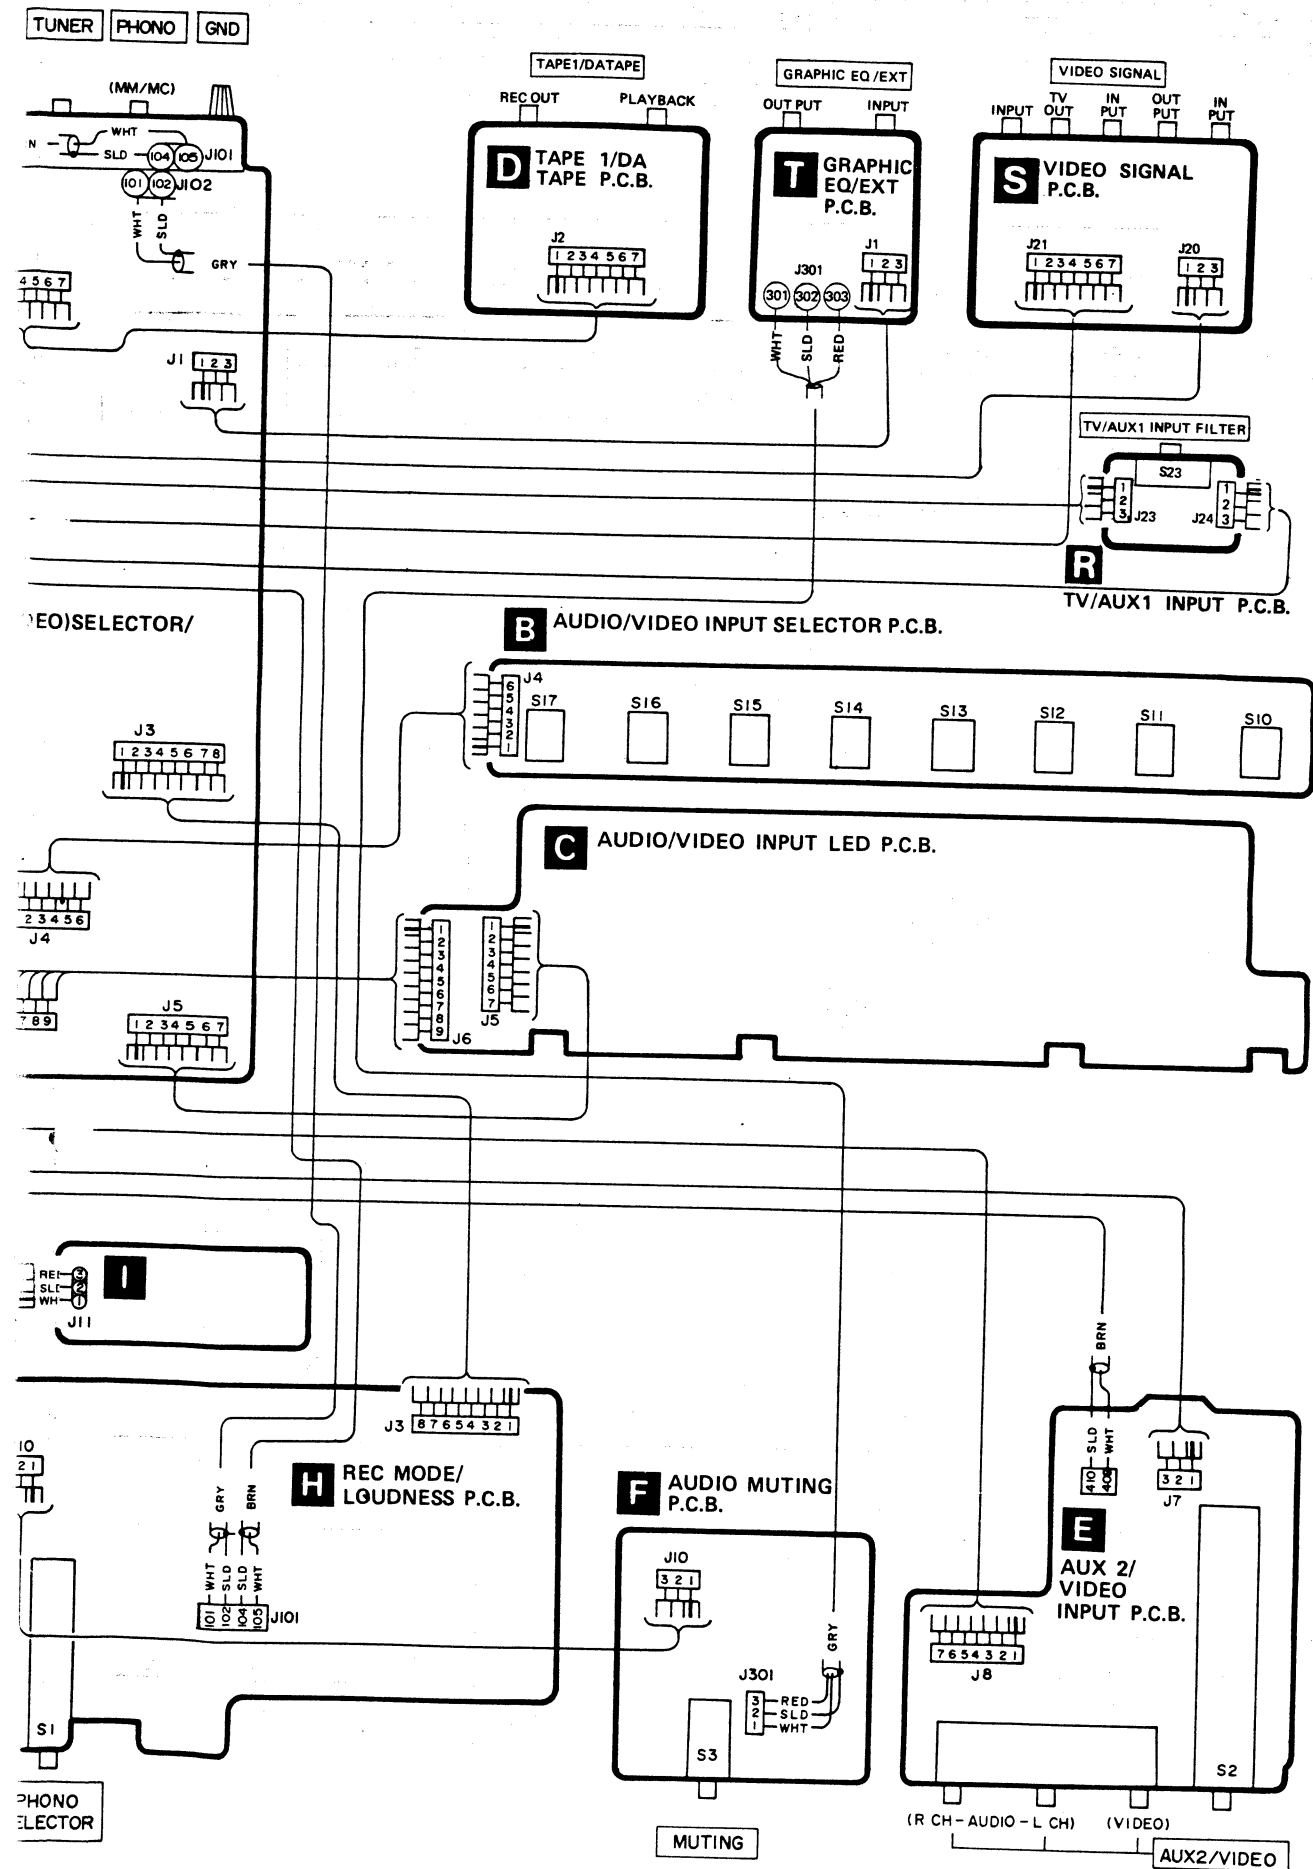


PRINTED CIRCUIT BOARDS


N SPEAKER SELECTOR P.C.B.

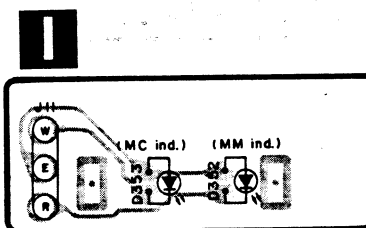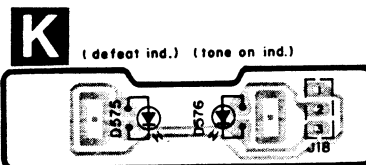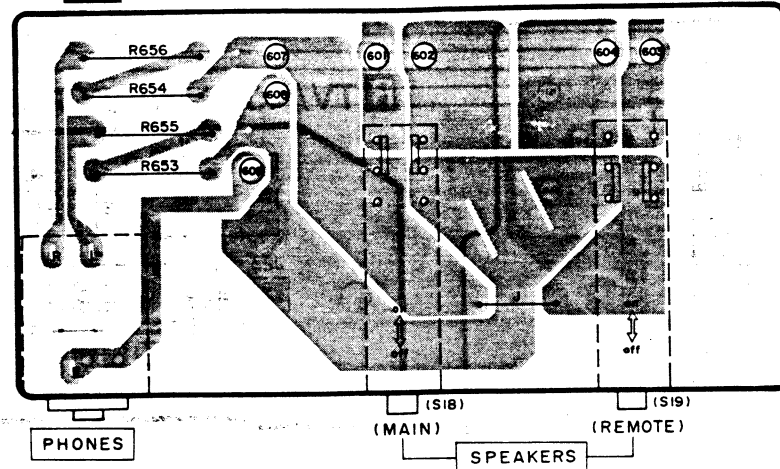


P POWER P.C.B.

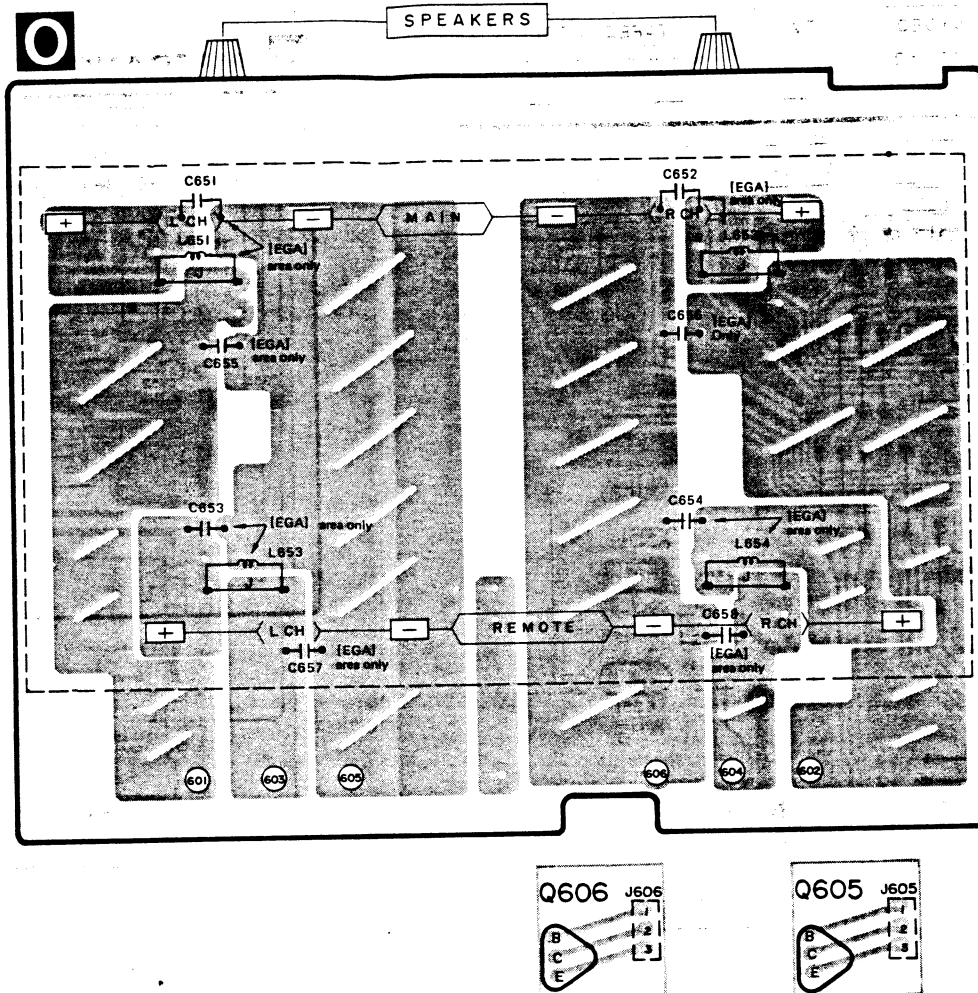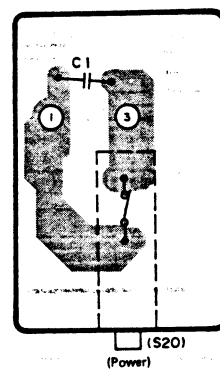


B AUDIO/VIDEO INPUT SELECTOR P.C.B.

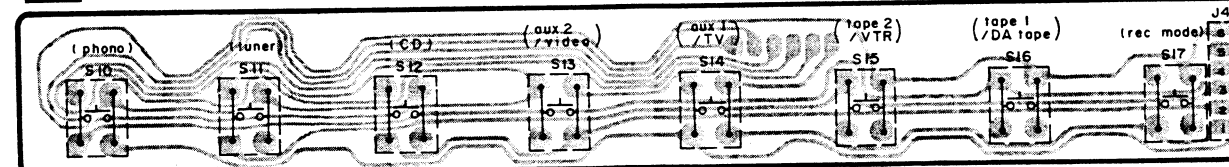


C AUDIO/VIDEO INPUT LED P.C.B.

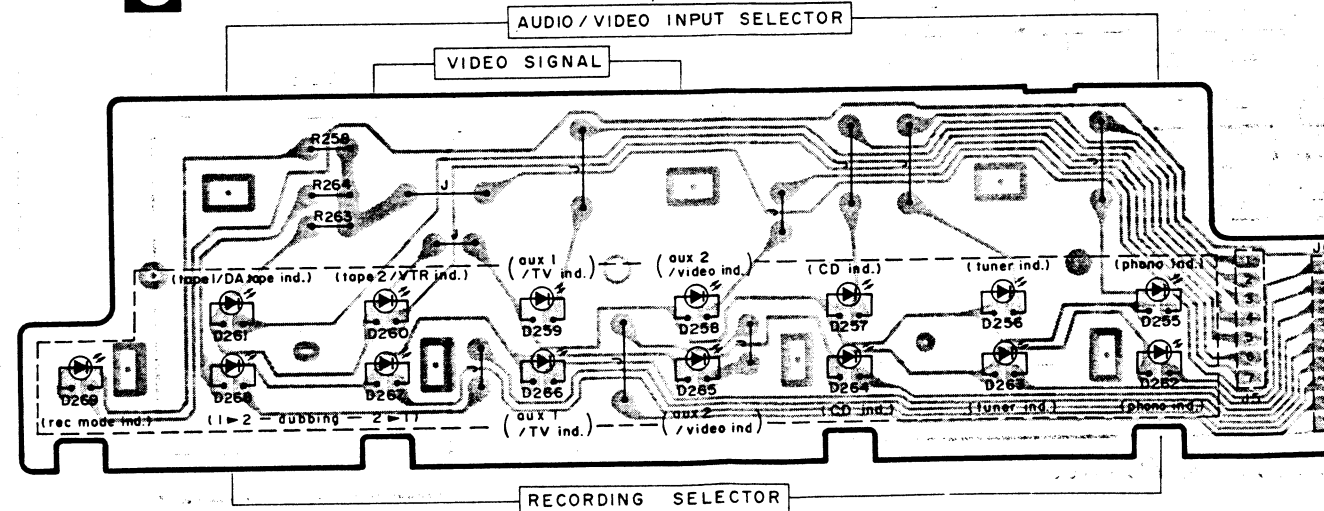


M RECTIFIER/POWER AMP/IC BIAS/REGULATOR/DC DET P.C.B.

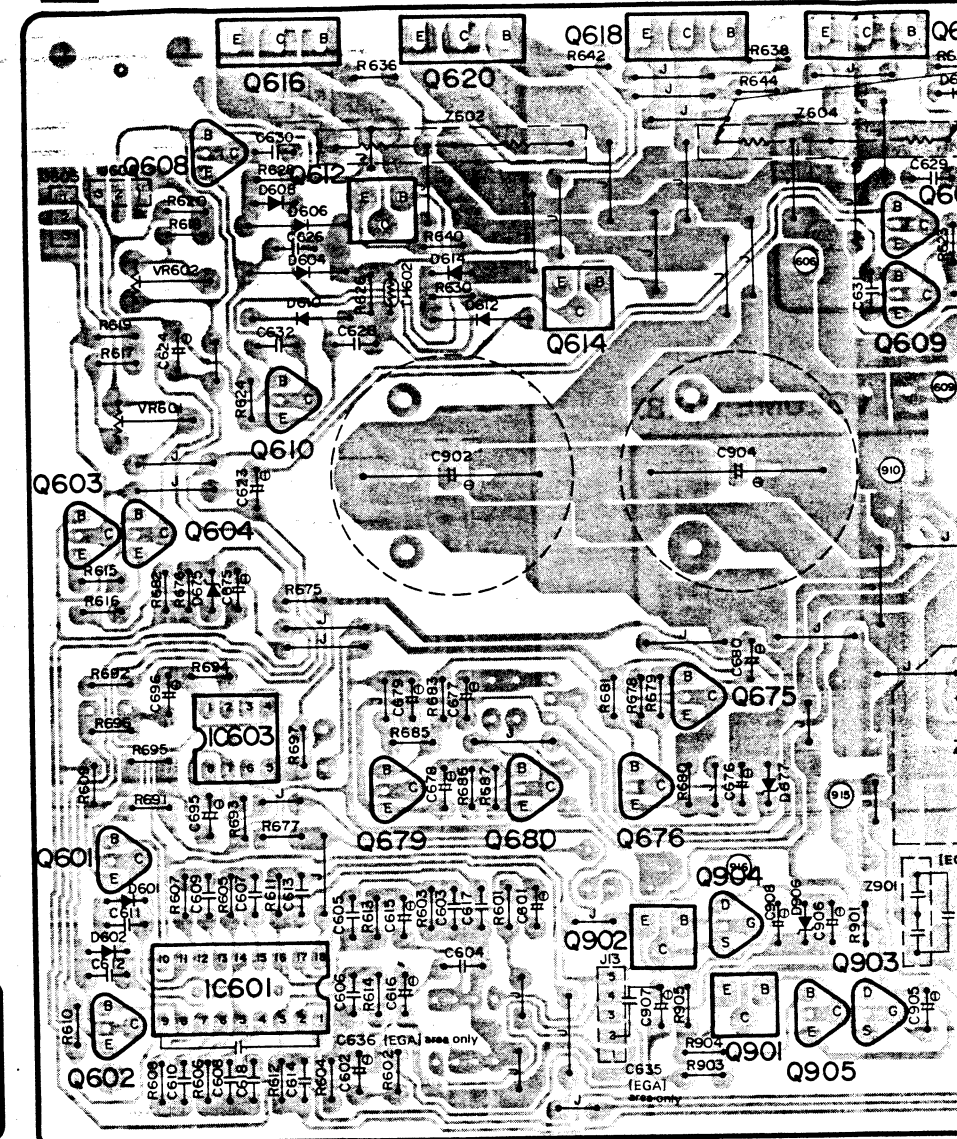



J BALANCE/TREBLE, BASS P.C.B.

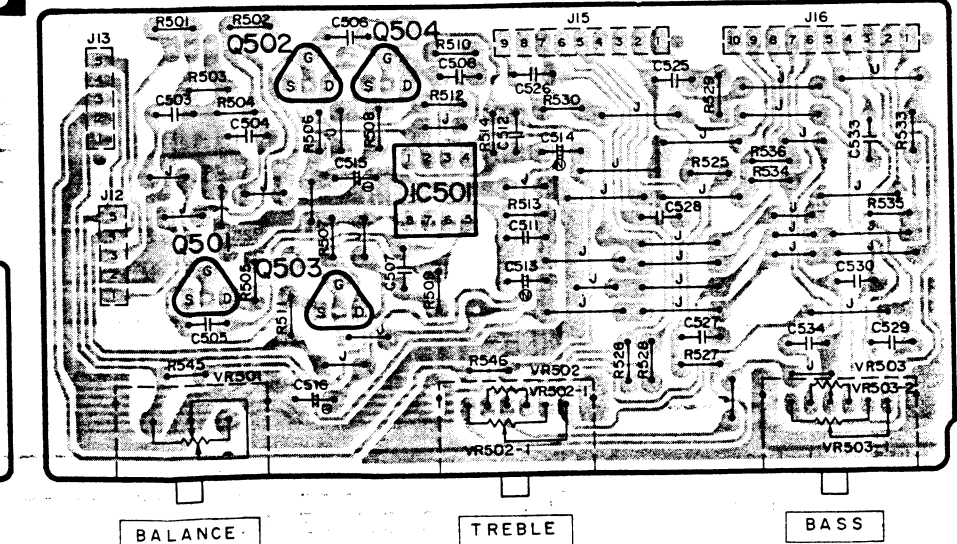

PLATOR/DC DET P.C.B.

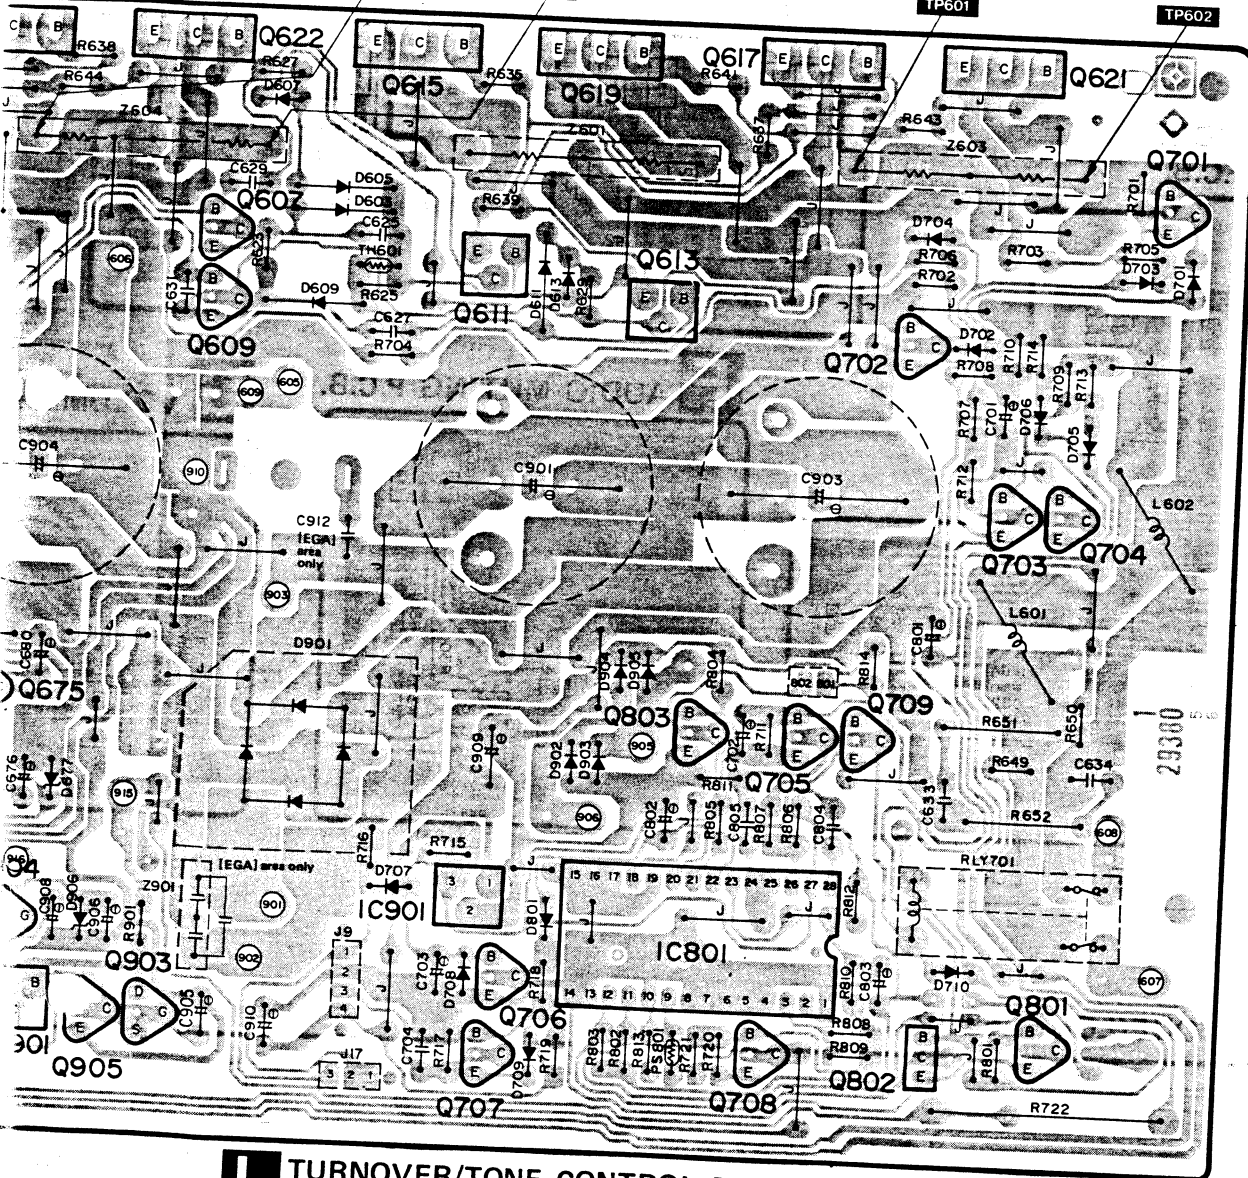

TURNOVER/TONE CONTROL P.C.B.

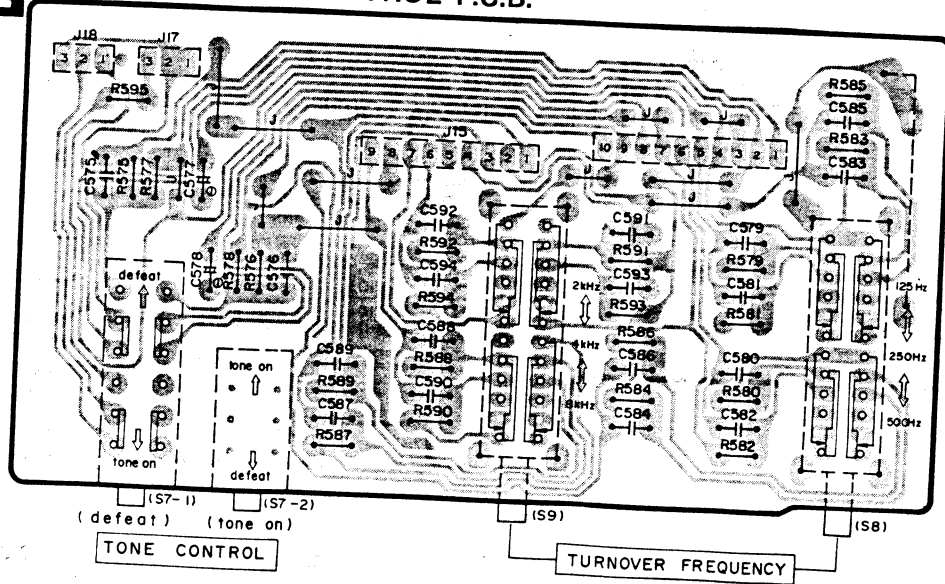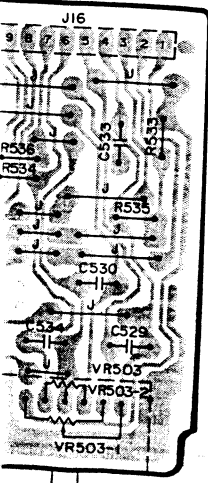


BASS

(S7-1) (S7-2)
(defeat) (tone on)
TONE CONTROL


(S9)
TURNOVER FREQUENCY

(S8)


E AUX 2/VIDEO INPUT P.C.B.

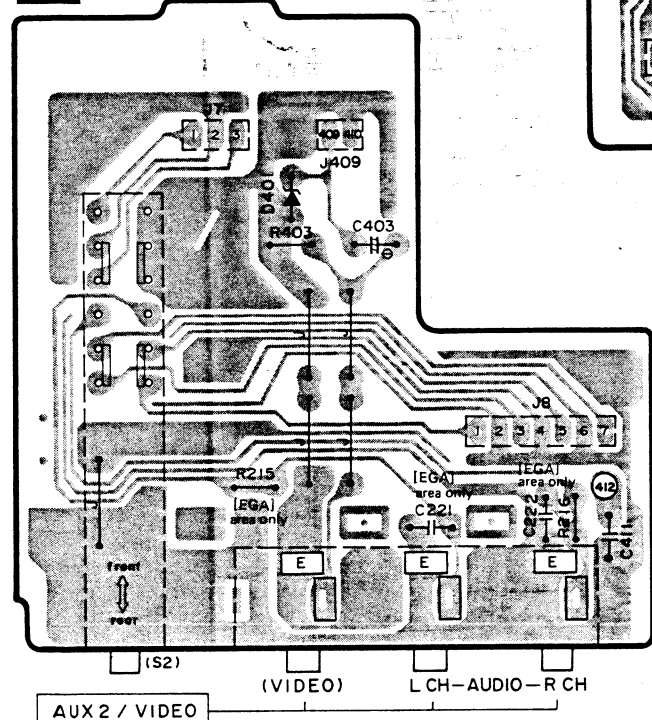


TAPE1/DA TAPE
(PLAYBACK) (REC OUT)

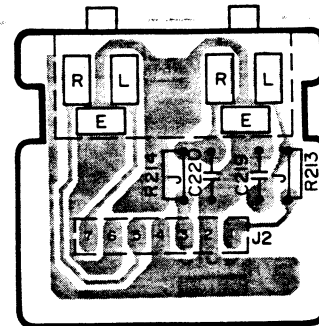


GRAPHIC EQ/EXT
(OUT) (1N)

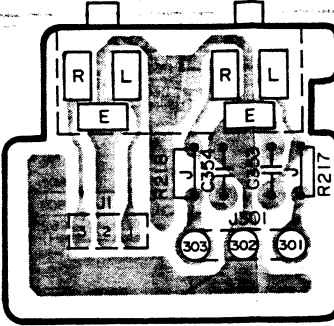


F AUDIO MUTING P.C.B.

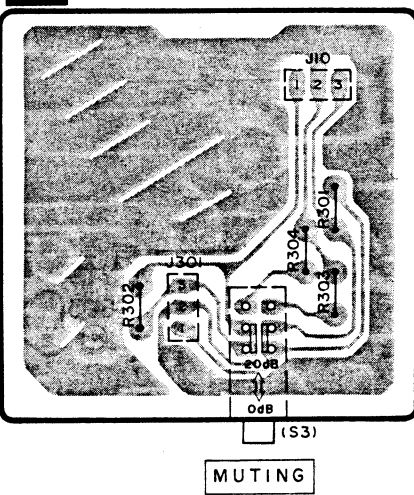


G VOLUME P.C.B.

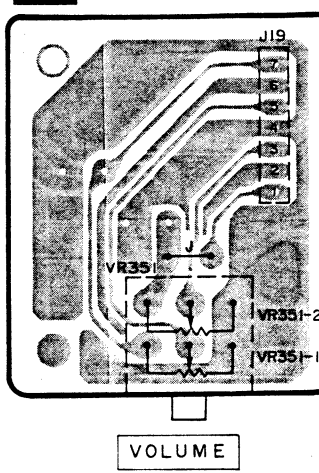


GROUND POINT GND PHONO (MM/MC) TUNER CD VIDEO /AU X2 TV /AU X1 TAPE2/VTR (REC OUT) (PLAYBACK)

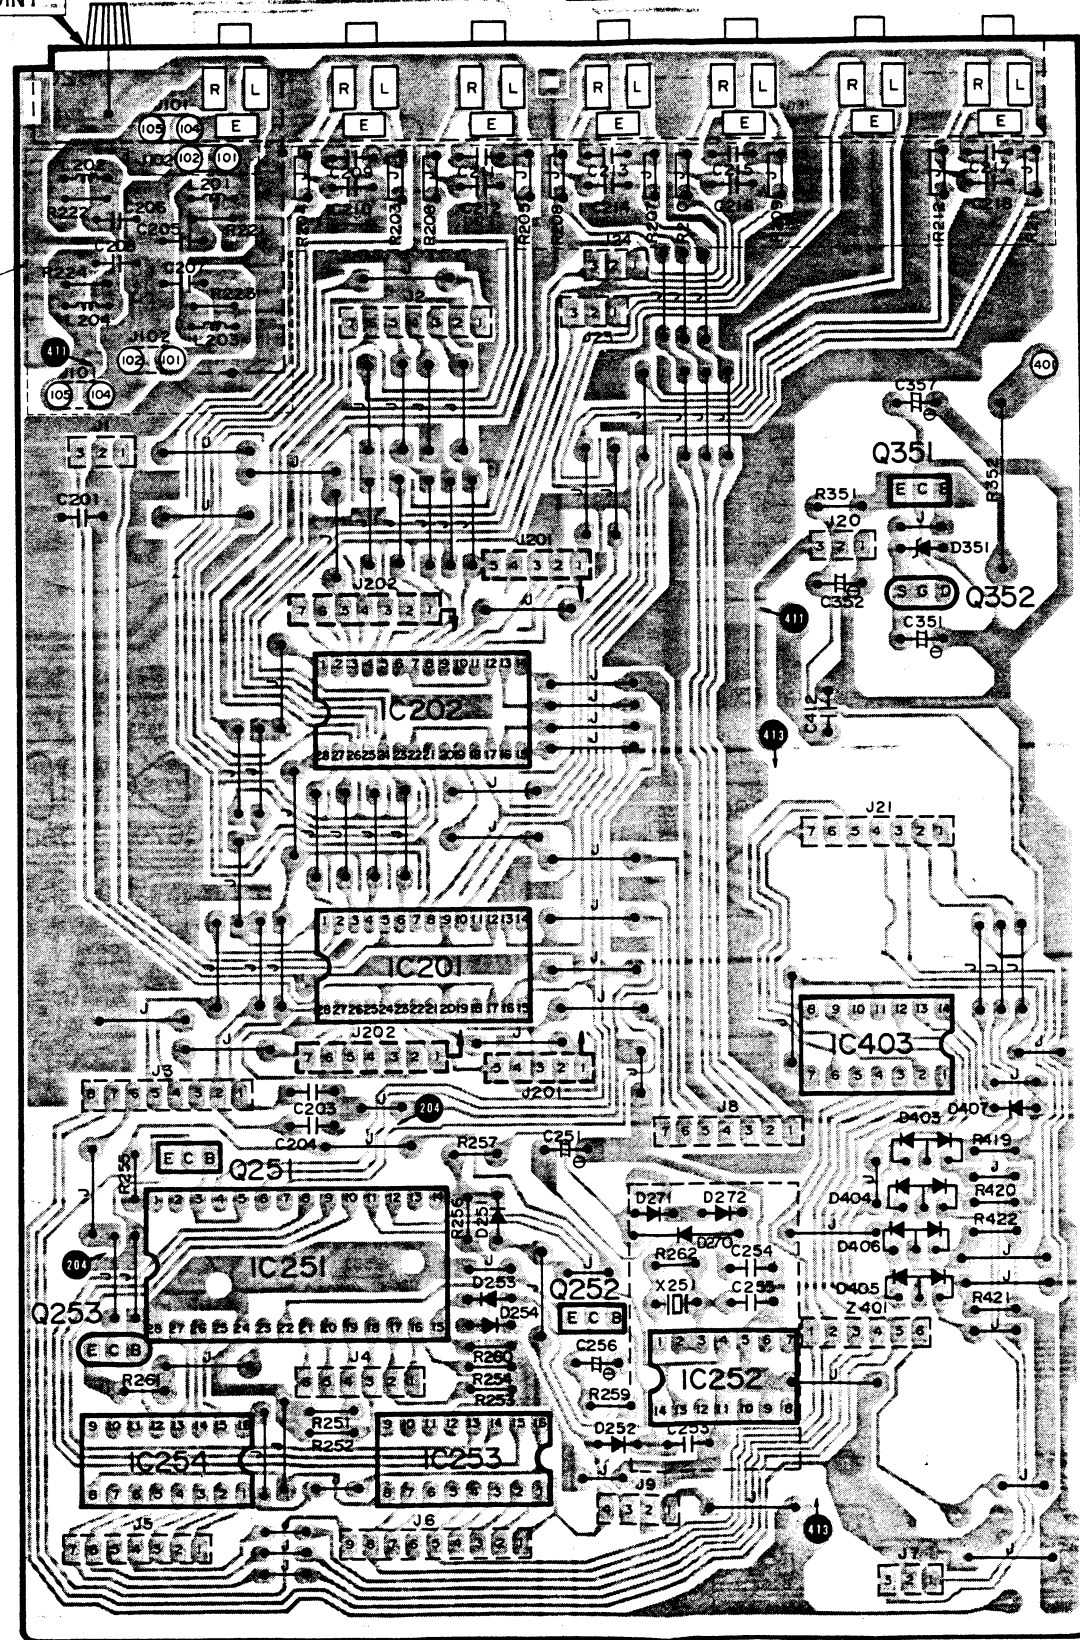


Q IMPEDANCE SELECTOR P.C.B.

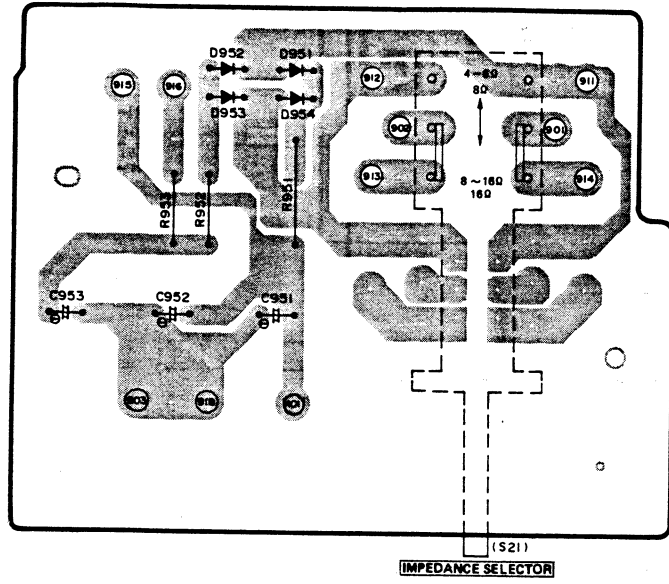


R TV/AUX1 INPUT FILTER P.C.B.

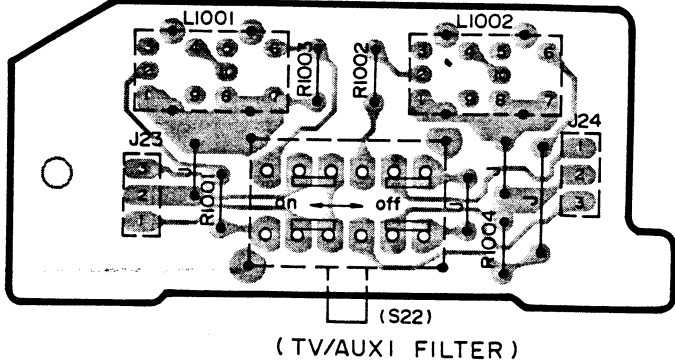

U FUSE P.C.B.

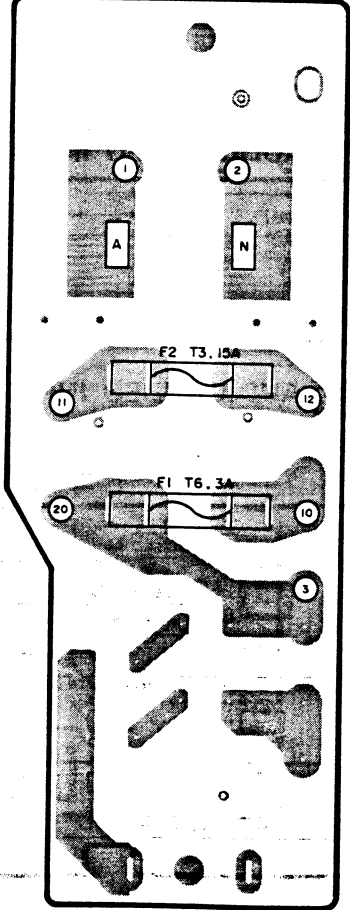

S VIDEO SIGNAL P.C.B.

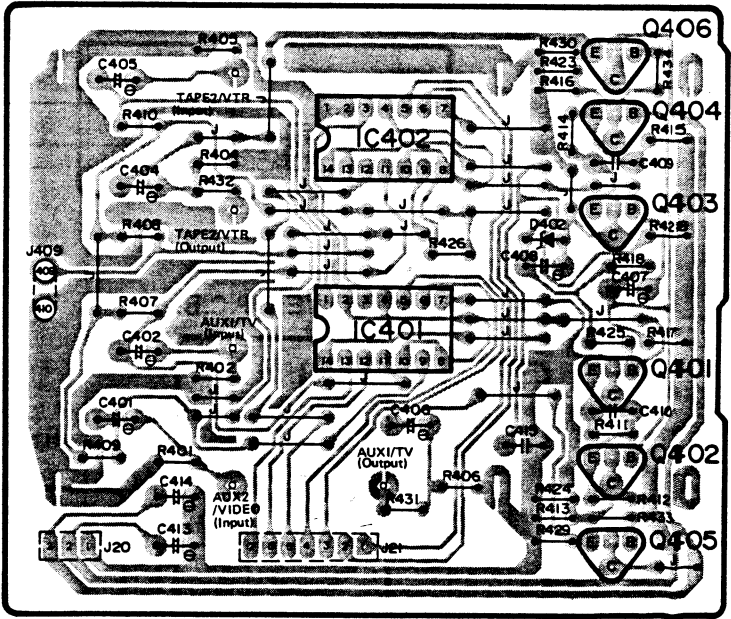


MEASUREMENT AND ADJUSTMENTS

Control positions and equipment used

- Volume knob ∞
- Main speaker selector off
- Remote speaker selector off
- Recording selector aux 1/TV
- Speaker impedance swith. 16Ω
- AC and DC electronic voltmeter (EVM)
- Signal generator
- Resistor (0.33Ω)

Idling (ICQ) Adjustment



1. Test equipment connection is shown in figure.
2. Turn the ICQ control volume (VR601, VR602) counter-clockwise.
3. After turning the power switch "on", adjust VR601 (left channel) and VR602 (right channel) about 20mV respectively as in Fig. 1.

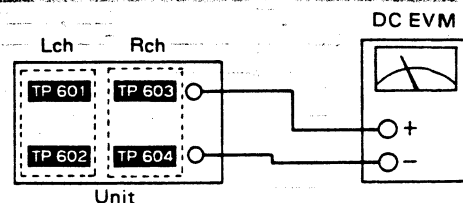

Overload detection circuit check


1. Test equipment connection is shown in figure
2. Apply 1 kHz, 8 mV (output about 5 V) signal to the aux. input terminal (aux 1/TV).
3. The speaker switch turned "off".
4. Connect 0.33Ω (about 1 W) resistor to main speaker terminal.
5. With main speaker switch turned "on", make sure that
 - relay is "OFF" and
 - computer drive auto operation blinks.
6. Also check the right (R) channel in the same manner as mentioned above.

(Note) When turning the relay on again, wait for a while after turning the power supply OFF. Otherwise, it will not be reset even when the circuit and load are in normal conditions.

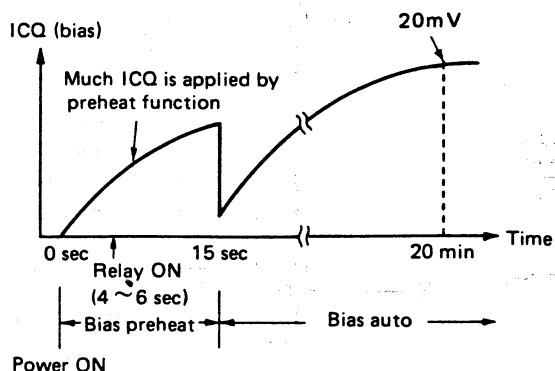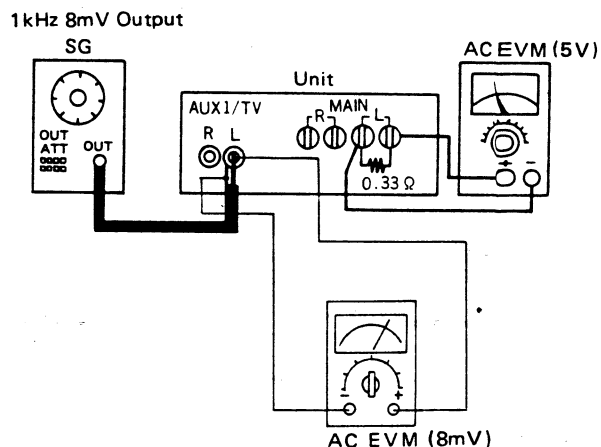


[Fig. 1]



Adjustment points

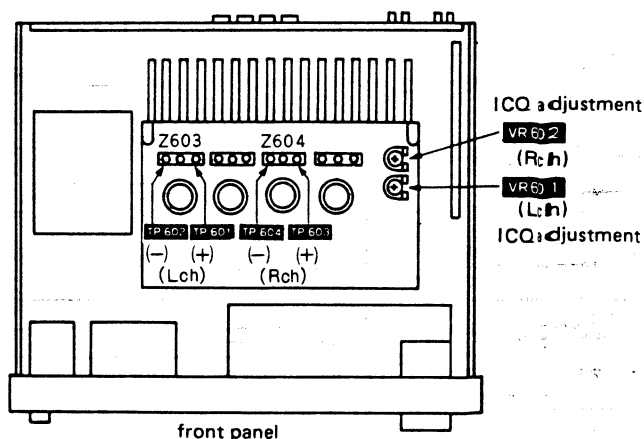





■ BLOCK DIAGRAM

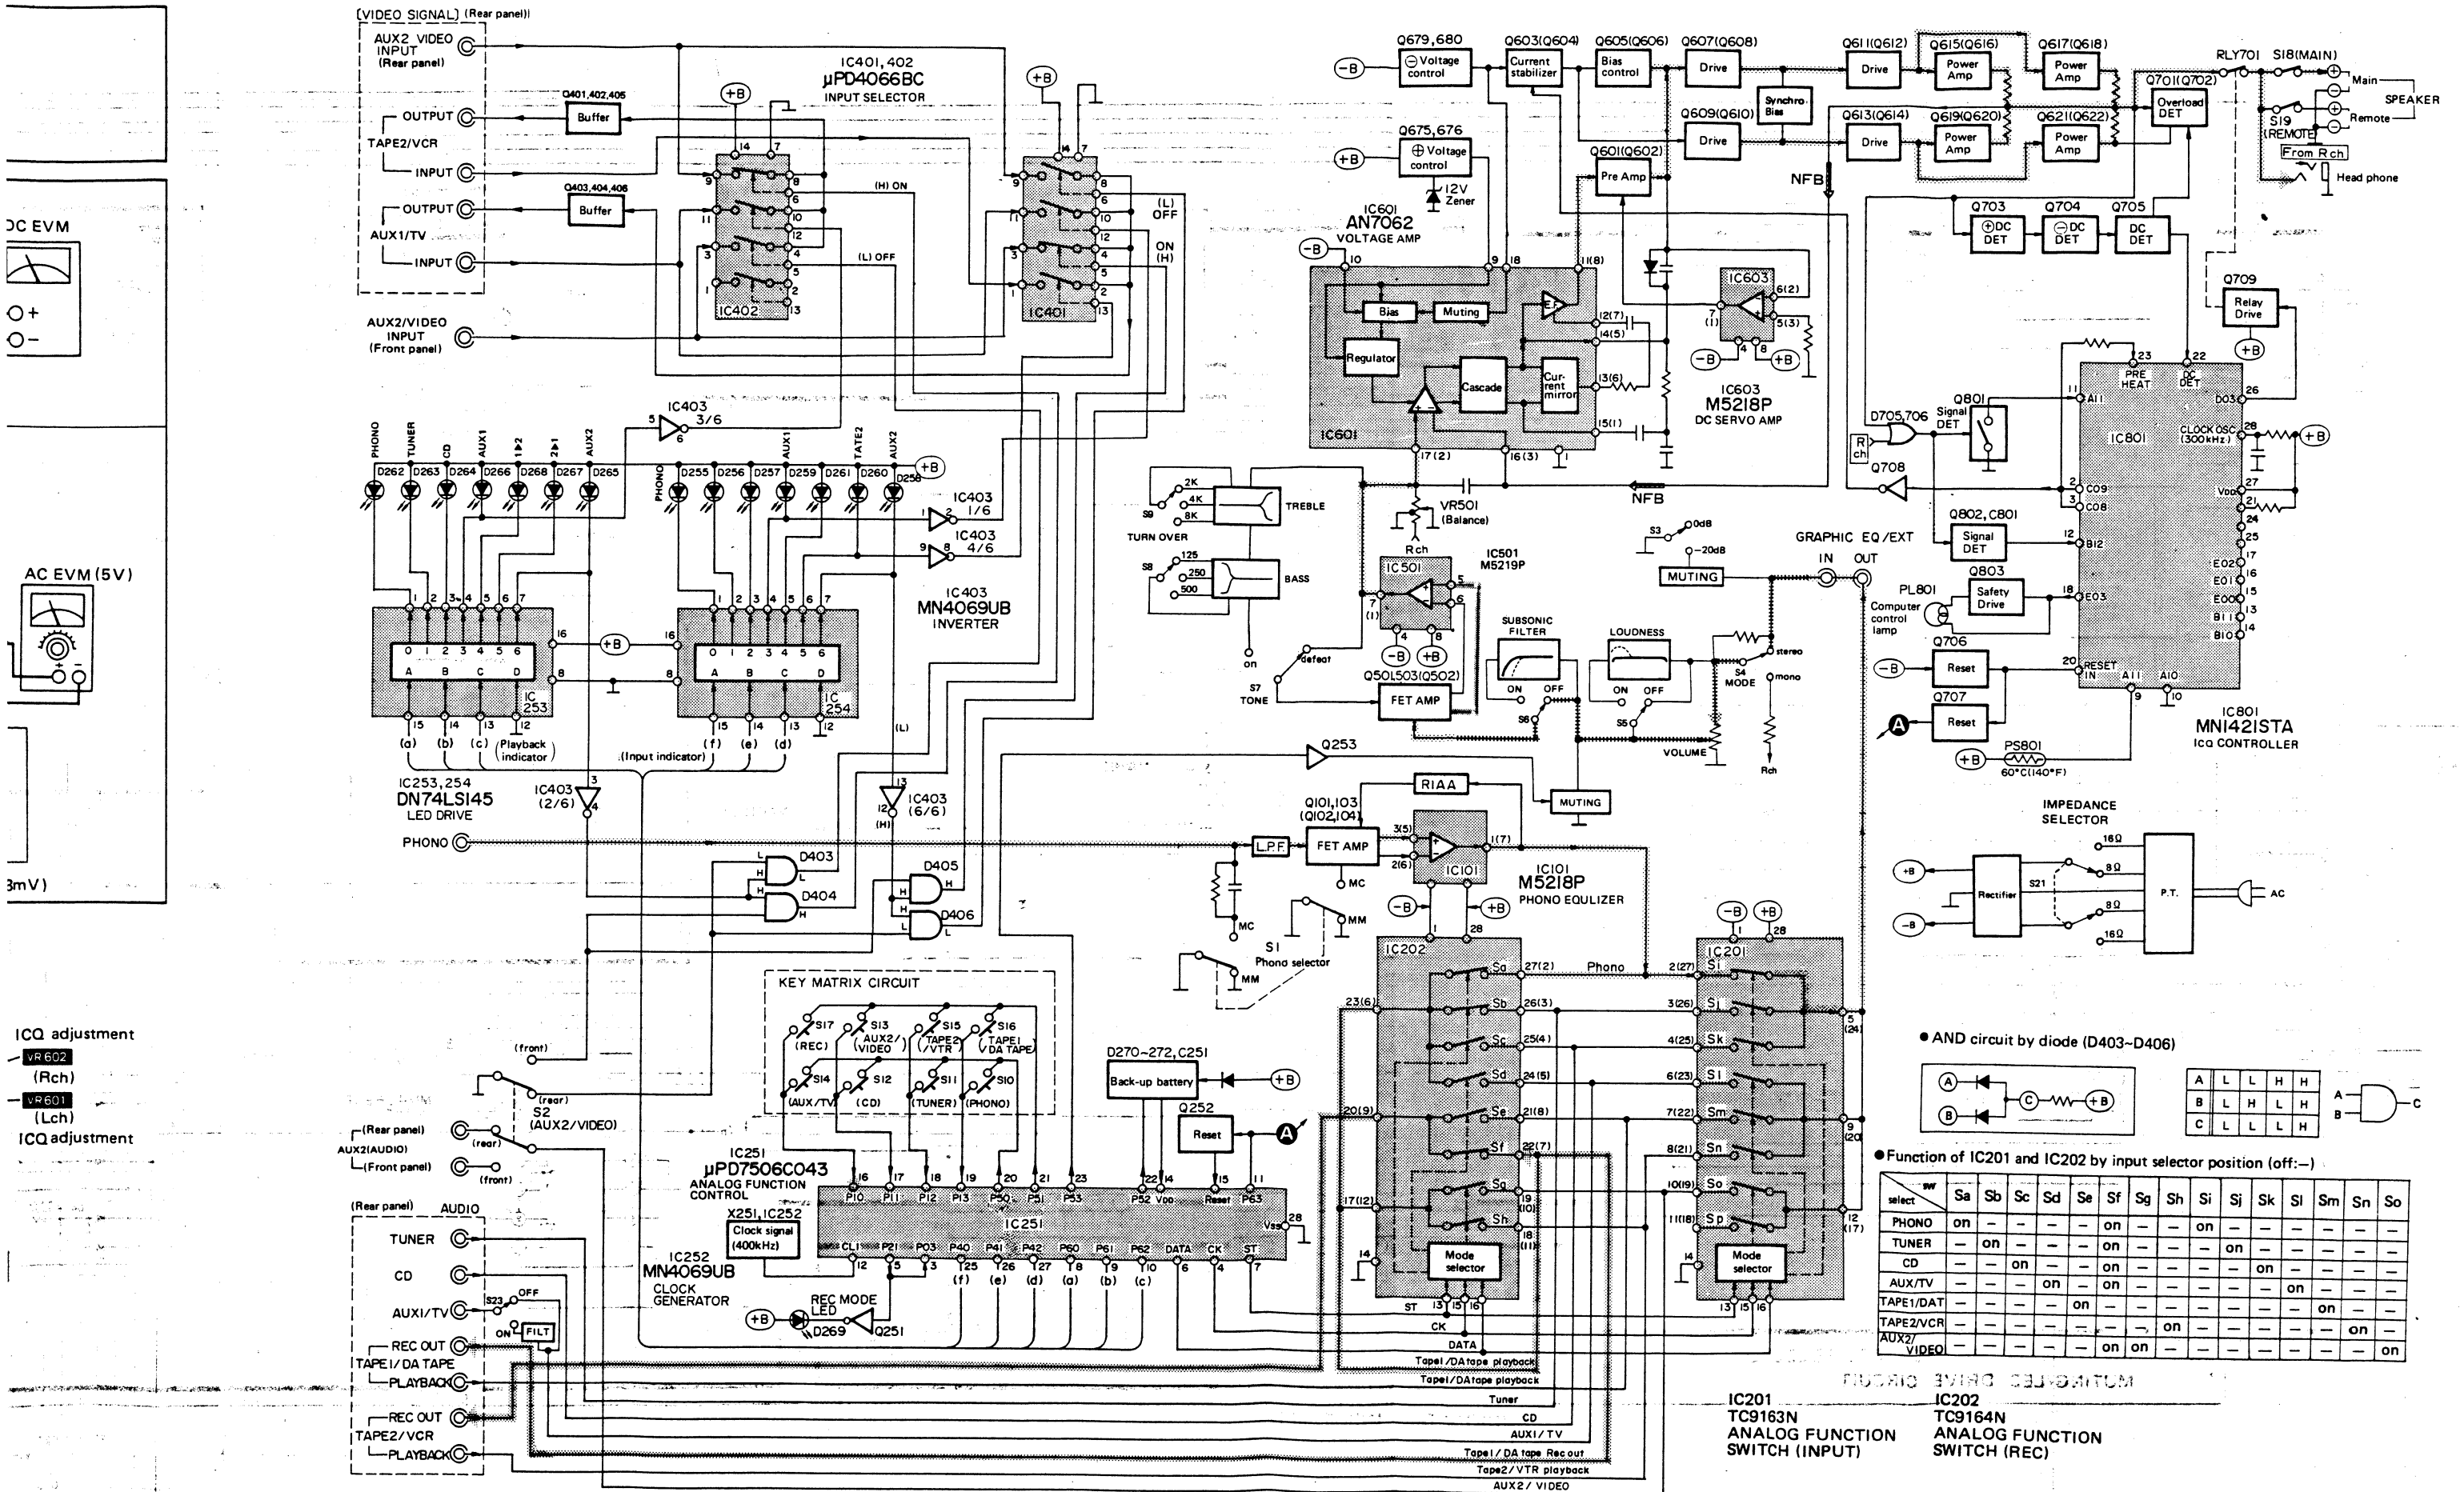




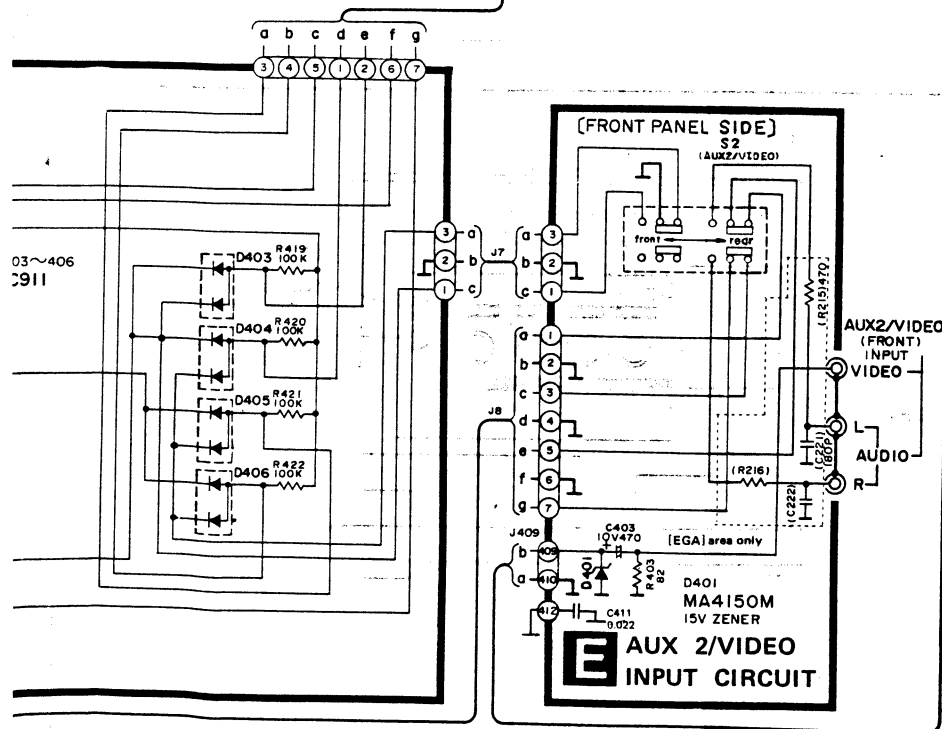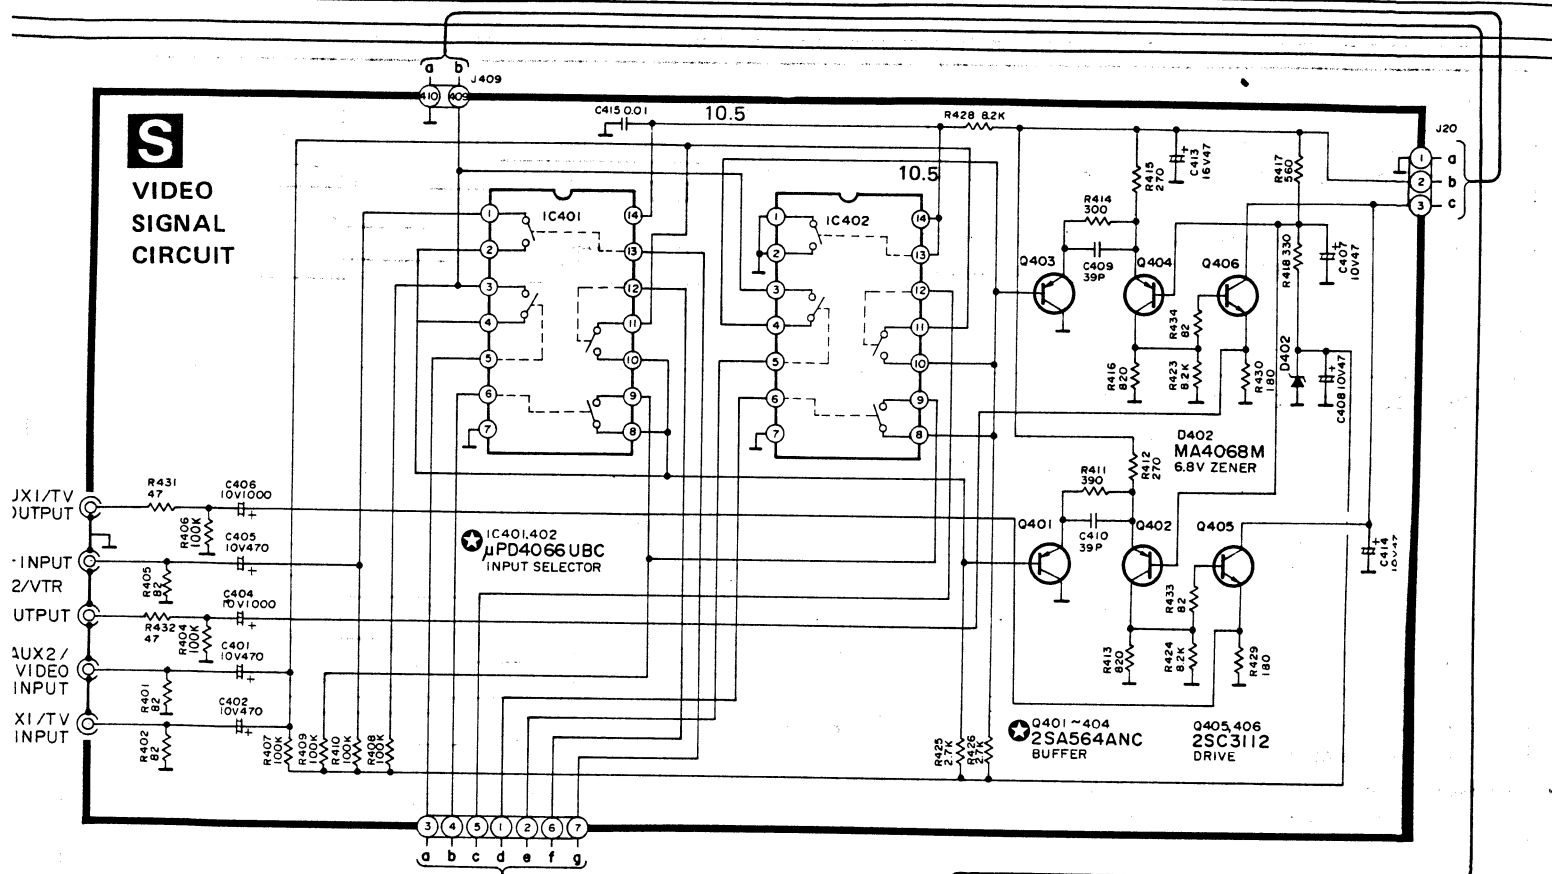



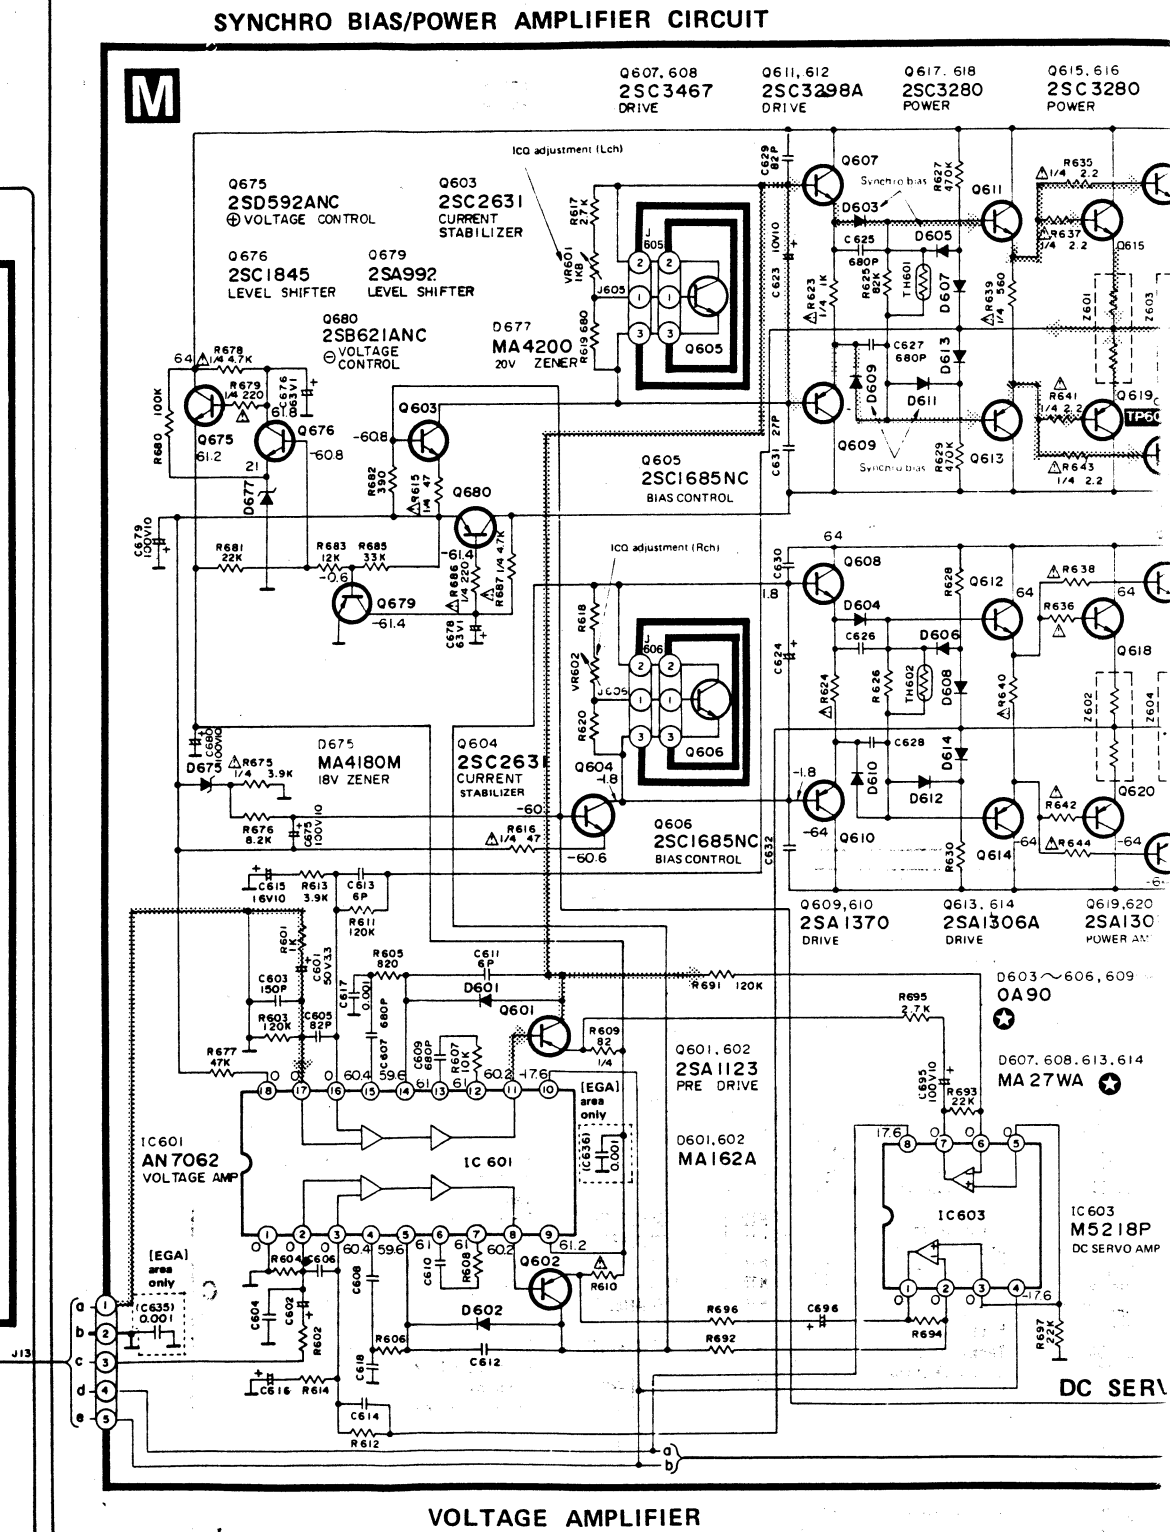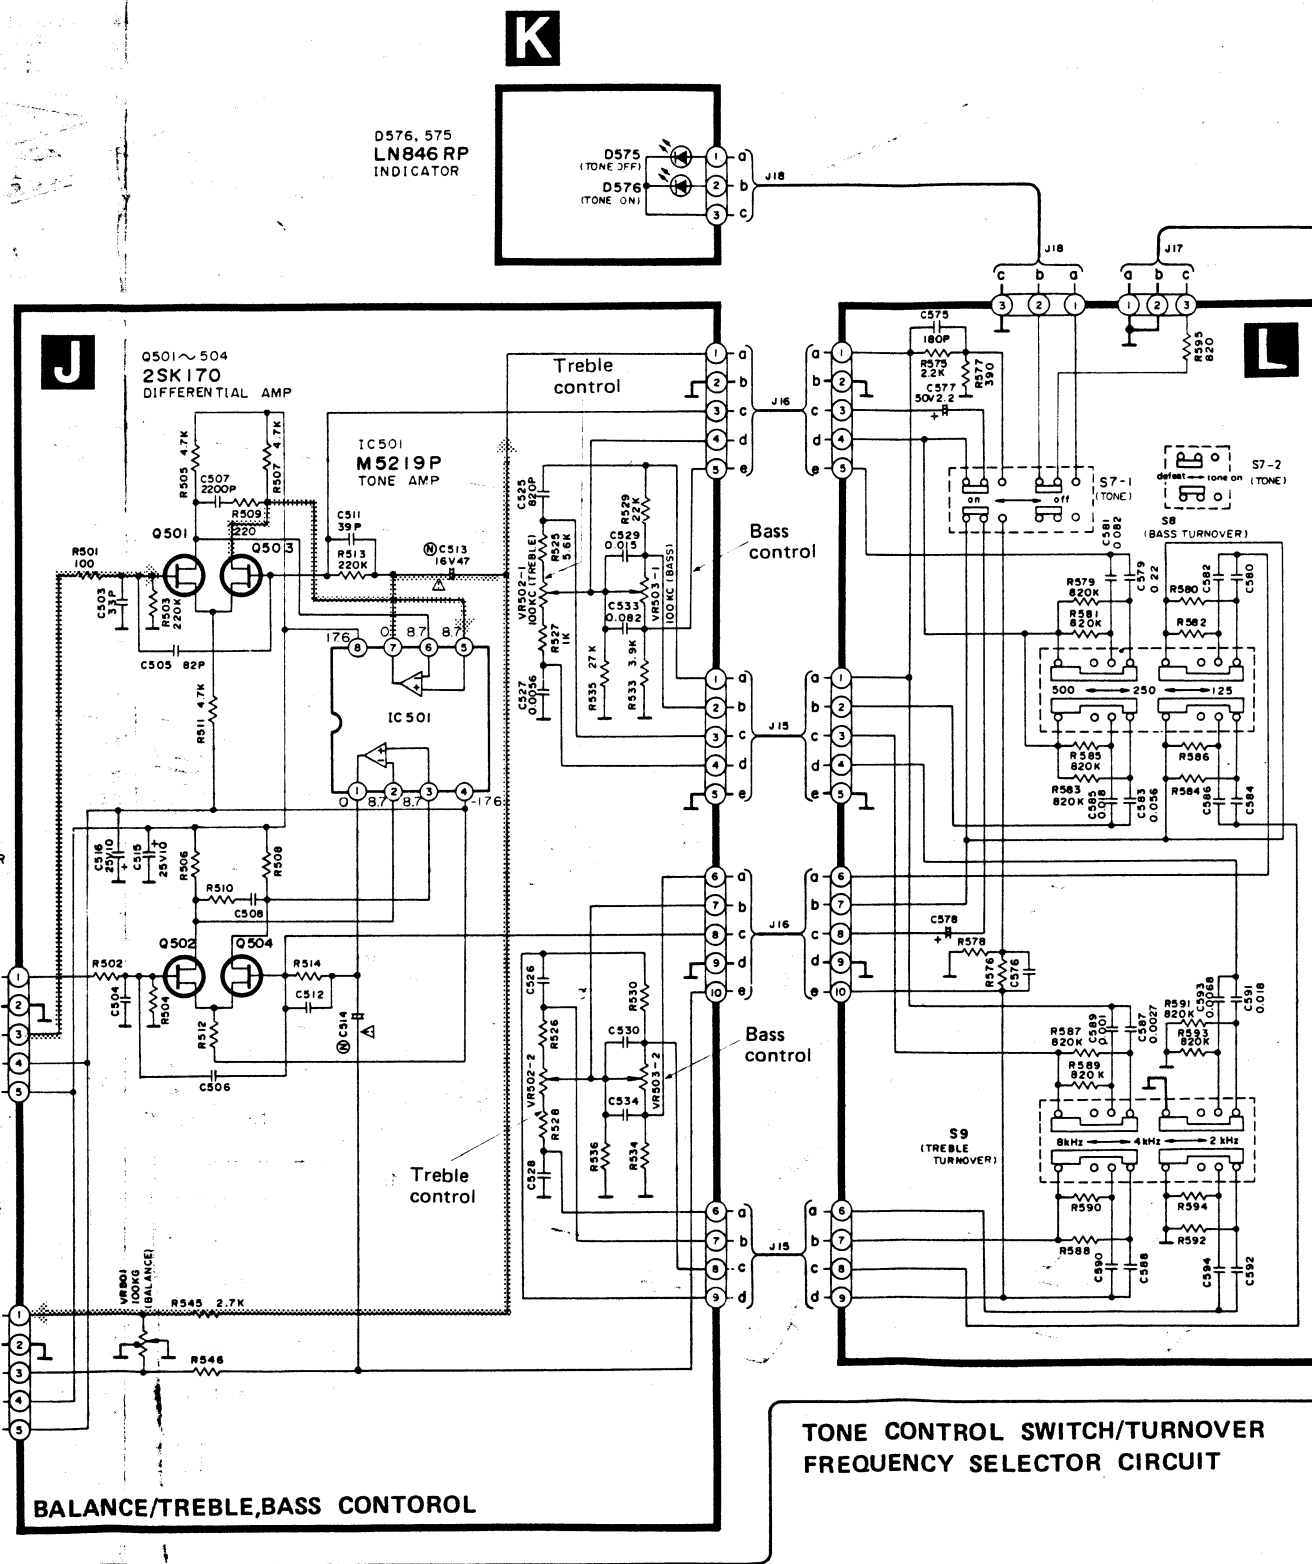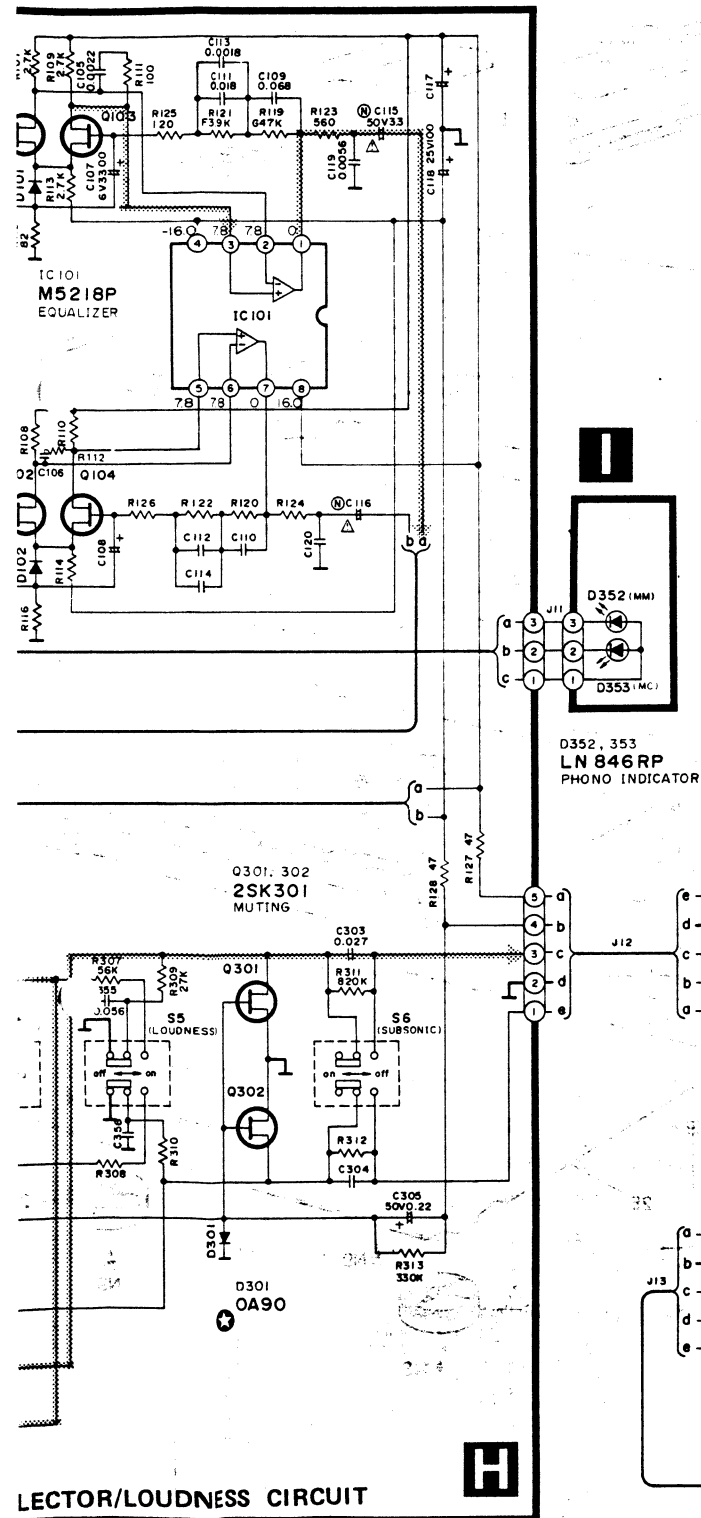

SPEAKER SELECTOR CIRCUIT

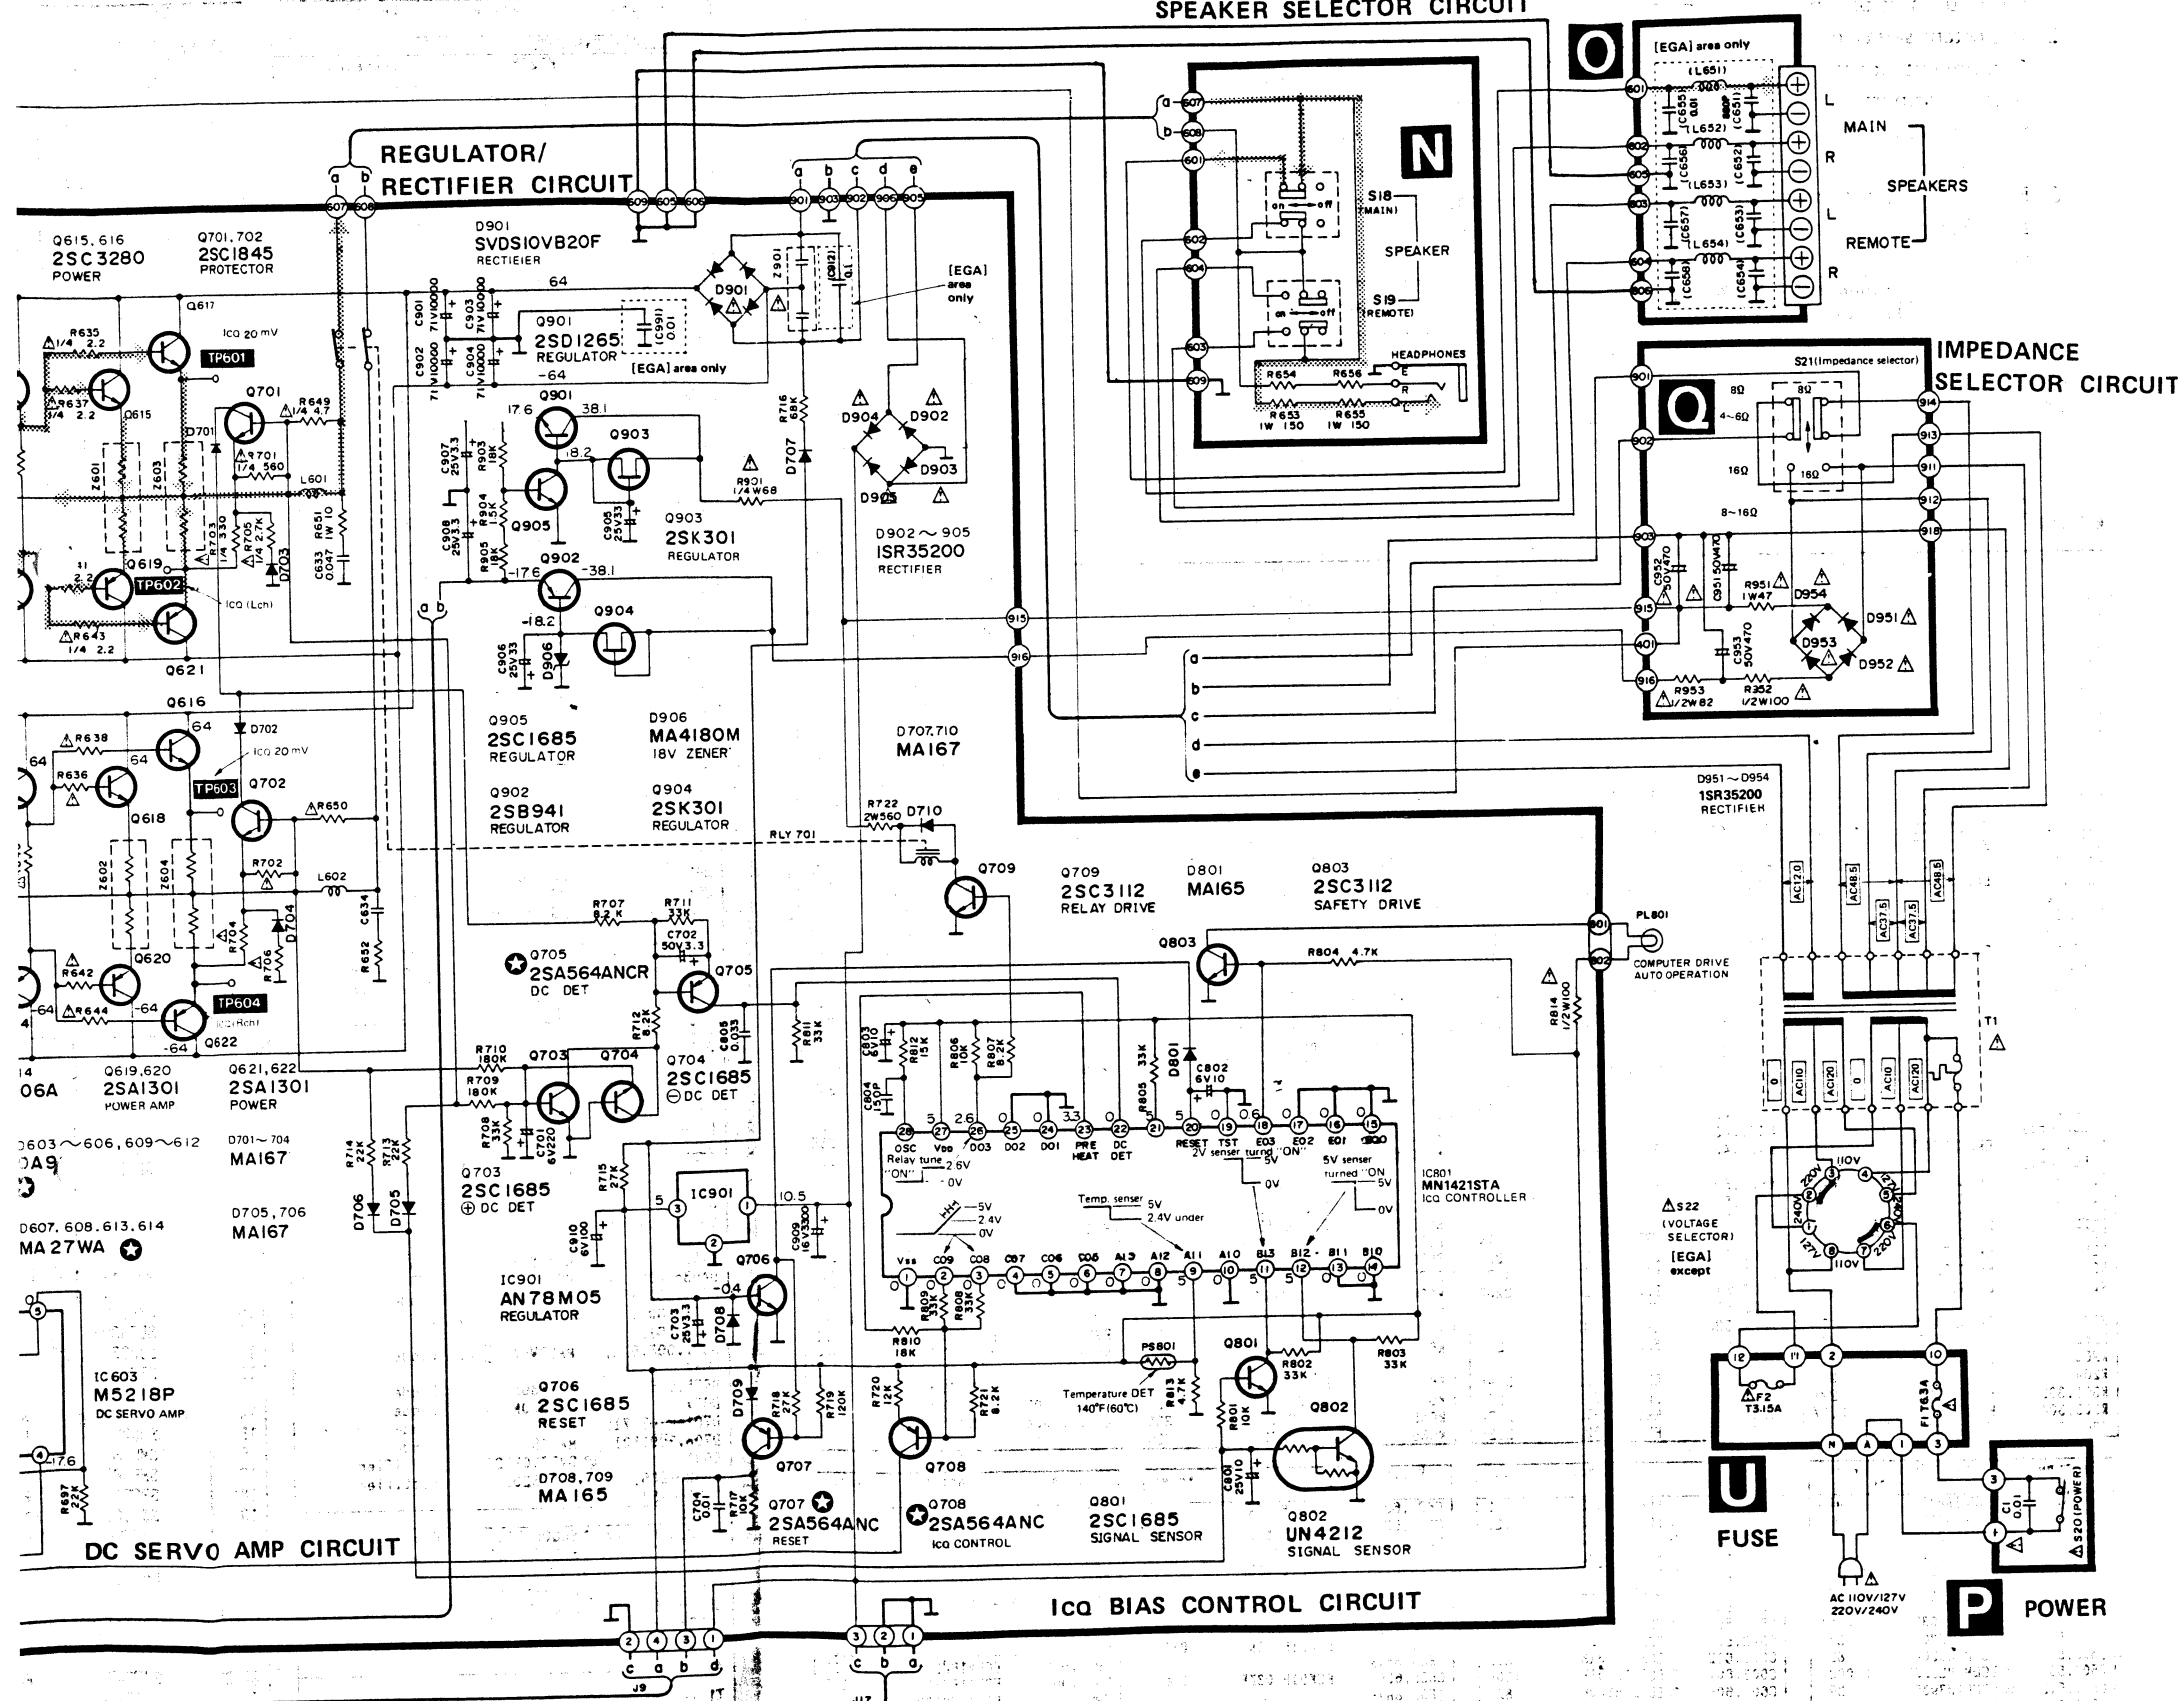REGULATOR/
RECTIFIER CIRCUIT


SCHEMATIC DIAGRAM

The part No. of transistors, IC and diodes mentioned in the schematic diagram stand for production part No. Regarding the part No. with $\star$ mark, the production part No. are different from the replacement part No. Therefore, when placing an order for replacement part, please use the part No. in the replacement parts list.


- S1:** Phono selection switch in "MM" position.
MM $\rightarrow$ MC
 - S2:** AUX 2 / Video selection switch in "rear" position.
front $\rightarrow$ rear
 - S3:** Muting switch in "off" position.
off $\rightarrow$ on (-20dB)
 - S4:** Mode switch in "stereo" position.
stereo $\rightarrow$ mono
 - S5:** Loudness switch in "off" position.
off $\rightarrow$ on
 - S6:** Subsonic switch in "off" position.
off $\rightarrow$ -20Hz
 - S7-1, 7-2:** Tone control switch in "on" position.
tone on $\rightarrow$ defeat
 - S8:** Bass turnover switch in "500Hz" position.
500Hz $\rightarrow$ 250Hz $\rightarrow$ 125Hz
 - S9:** Treble turnover switch in "8kHz" position.
8kHz $\rightarrow$ 4kHz $\rightarrow$ 2kHz
 - S10-S17:** Input selection switch
S10: Phono, S11: tuner, S12: CD,
S13: AUX 2 / Video, S14: AUX 1 / TV,
S15: TAPE 2 / VCR,
S16: TAPE 1 / DA TAPE, S17: REC mode
 - S18:** Main speaker switch in "on" position.
on $\rightarrow$ off
 - S19:** Remote speaker switch in "off" position.
on $\rightarrow$ off
 - S20:** Power switch in "on" position.
 - S21:** Impedance selection switch in "4 ~ 6 Ω / 8 Ω " position.
4 ~ 6 Ω $\rightarrow$ 8 ~ 16 Ω
8 Ω $\rightarrow$ 16 Ω
 - S22 (Except for [EGA]):** Voltage selector switch "220V" position.
127 $\rightarrow$ 110V $\rightarrow$ 220V $\rightarrow$ 240V
 - S23:** TV/AUX 1 input filter switch in "on(TV)" position.
off $\rightarrow$ on(TV)
- Indicated voltage values are the standard values for the unit measured by the DC electronic circuit tester (high-impedance) with the chassis taken as standard. Therefore, there may exist some errors in the voltage values, depending on the internal impedance of the DC circuit tester.
- Phono signal (Lch)
Positive voltage lines or Negative voltage lines.
- Important safety notice:
Components identified by Δ mark have special characteristics important for safety. When replacing any of these components use only manufacturer's specified parts.

CIRCUITS TO BE CHANGED AND THE AREA

[EGA] area

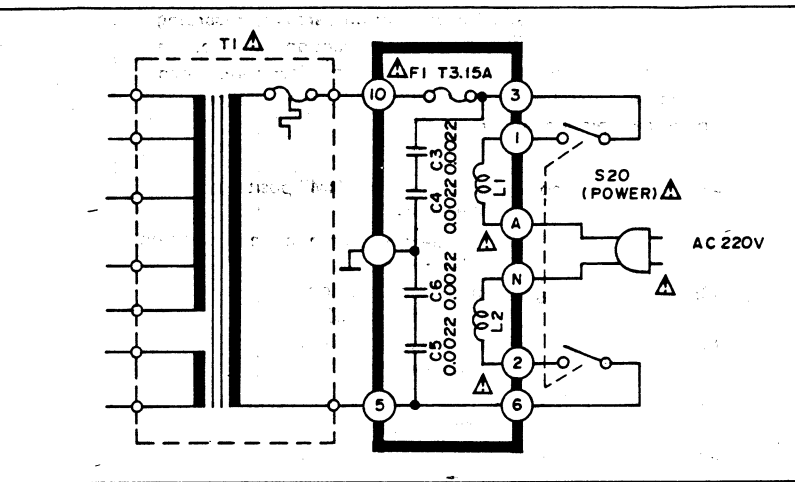

[XA] area

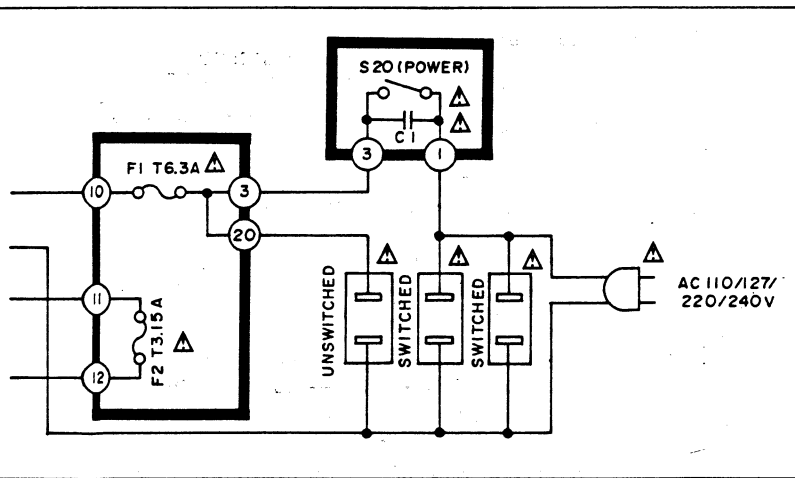

REPLACEMENT PARTS LIST

- Notes: 1. Part numbers are indicated on most mechanical parts. Please use this part number for parts orders.
2. Important safety notice: Components identified by Δ mark have special characteristics important for safety. When replacing any of these components use only manufacturer's specified parts.
3. Bracketed indications in Ref. No. columns specify the area. Parts without these indications can be used for all areas.
4. The "S" mark is service standard parts and may differ from production parts.
5. The unit of resistance is OHM (Ω).
K = 1000 Ω , M = 1000K Ω
6. The unit of capacitance is MICROFARAD (μ F).
P = 10⁻⁶ μ F
7. The parenthesized numbers in the column of description stand for the quantity per set.

Resistor Type	Wattage	Tolerance
ERD : Carbon	10 : 1/8W	J : $\pm$ 5%
ERG : Metal Oxide	25 : 1/4W	G : $\pm$ 2%
ERC : Solid	S2 : 1/4W	K : $\pm$ 10%
	S1 : 1/2W	
	12 : 1/2W	

Capacitor Type	ECEA Type	Other	Tolerance
ECEA...N : Non-polar Electrolytic	2R3 : 2.3V	05 : 50V DC	C : $\pm$ 0.25pF
ECEA : Electrolytic	DC	1H : 50V DC	J : $\pm$ 5%
ECCD : Ceramic	OJ : 6.3V	1 : 125V DC	K : $\pm$ 10%
ECKD : Ceramic	1C : 16V	2H : 500V DC	Z : +80%, -20%
ECQM : Polyester	1E : 25V	DKC : 125V AC	M : $\pm$ 20%
ECQV : Polyester	1V : 35V		
ECOP : Polypropylene	1H : 50V		
EECW : Liquid electrolyte	50 : 50V		
ECKF : Ceramic	25 : 25V		
	2A : 100V		

RESISTORS AND CAPACITORS

Ref.No.	Part No.	Value	Ref.No.	Part No.	Value	Ref.No.	Part No.	Value	Ref.No.	Part No.	Value
R101, 102	ERDS2TJ473	47K	R307, 308	ERDS2TJ563	56K	R577, 578	ERDS2TJ391	390	R687	ERD25FJ472	4.7K
R103, 104	ERDS2TJ221	220	R309, 310	ERDS2TJ273	27K	R579, 580	ERDS2TJ824	820K	R691, 692	ERDS2TJ124	120K
R105, 106	ERDS2TJ220	22	R311, 312	ERDS2TJ824	820K	R581, 582	ERDS2TJ824	820K	R693, 694	ERDS2TJ223	22K
R107, 108	ERDS2TKG2701	2.7K	R313	ERDS2TJ334	330K	R583, 584	ERDS2TJ824	820K	R695, 696	ERDS2TJ273	27K
R109, 110	ERDS2TKG2701	2.7K	R314	ERDS2TJ561	560	R585, 586	ERDS2TJ824	820K	R697	ERDS2TJ223	22K
R111, 112	ERDS2TJ101	101	R351	ERDS2TJ477	4.7	R587, 588	ERDS2TJ824	820K	R701, 702	ERD25FJ561	560
R113, 114	ERDS2TJ272	2.7K	R352	ERD2ANJ471	470	R589, 590	ERDS2TJ824	820K	R703, 704	ERD25FJ331	330
R115, 116	ERDS2TJ820	82	R401, 402	ERDS2TJ820	82	R591, 592	ERDS2TJ824	820K	R705, 706	ERD25FJ272	2.7K
R117, 118	ERDS2TJ566	5.6	R403	ERDS2TJ820	82	R593, 594	ERDS2TJ824	820K	R707	ERDS2TJ822	8.2K
R119, 120	ERDS2TJ473	47K	R404	ERDS2TJ104	100K	R595	ERDS2TJ561	560	R708	ERDS2TJ333	33K
R121, 122	ERDS2TJ392	3.9K	R405	ERDS2TJ820	82	R601, 602	ERDS2TJ102	1K	R709, 710	ERDS2TJ184	180K
R123, 124	ERDS2TJ561	560	R406, 407	ERDS2TJ104	100K	R603, 604	ERDS2TJ124	120K	R711	ERDS2TJ333	33K
R125, 126	ERDS2TJ121	120	R408, 409	ERDS2TJ104	100K	R605, 606	ERDS2TJ822	820	R712	ERDS2TJ822	8.2K
R127, 128	ERDS2TJ470	47	R410	ERDS2TJ104	100K	R607, 608	ERDS2TJ103	10K	R713, 714	ERDS2TJ223	22K
R129, 130	ERDS2TJ224	220K	R411	ERDS2TJ391	390	R609, 610	ERD25FJ820	82	R715	ERDS2TJ273	27K
R203, 204	ERDS2TJ471	470	R412	ERDS2TJ271	270	R611, 612	ERDS2TKG1203	120K	R716	ERDS2TJ683	68K
[EGA] only			R413	ERDS2TJ821	820	R613, 614	ERDS2TJ392	3.9K	R717	ERDS2TJ103	10K
R205, 206	ERDS2TJ471	470	R414	ERDS2TJ391	390	R615, 616	ERD25FJ470	47	R718	ERDS2TJ273	27K
[EGA] only			R415	ERDS2TJ271	270	R617, 618	ERD25FJ272	2.7K	R719	ERDS2TJ124	120K
R207, 208	ERDS2TJ471	470	R416	ERDS2TJ821	820	R619, 620	ERDS2TJ681	680	R720	ERDS2TJ123	12K
[EGA] only			R417	ERDS2TJ561	560	R623, 624	ERD25FJ102	1K	R721	ERDS2TJ822	8.2K
R209, 210	ERDS2TJ471	470	R418	ERDS2TJ331	330	R625, 626	ERDS2TJ823	82K	R722	ERD2ANJ681	680
[EGA] only			R419, 420	ERDS2TJ104	100K	R627, 628	ERDS2TJ474	470K	R723	ERDS2TJ103	10K
R211, 212	ERDS2TJ471	470	R421, 422	ERDS2TJ104	100K	R629, 630	ERDS2TJ474	470K	R802, 803	ERDS2TJ333	33K
[EGA] only			R423, 424	ERDS2TJ822	8.2K	R635, 636	ERD25FJ272	2.2	R804	ERDS2TJ472	4.7K
R213, 214	ERDS2TJ471	470	R425, 426	ERD25FJ272	2.7K	R637, 638	ERD25FJ272	2.2	R805	ERDS2TJ333	33K
[EGA] only			R428	ERDS2TJ822	8.2K	R639, 640	ERD25FJ561	560	R806	ERDS2TJ103	10K
R215, 216	ERDS2TJ471	470	R429, 430	ERDS2TJ181	180	R641, 642	ERD25FJ272	2.2	R807	ERDS2TJ822	8.2K
[EGA] only			R431, 432	ERDS2TJ470	47	R643, 644	ERD25FJ272	2.2	R808, 809	ERDS2TJ333	33K
R217, 218	ERDS2TJ471	470	R433, 434	ERDS2TJ820	82	R649, 650	ERD25FJ477	4.7	R810	ERDS2TJ183	18K
[EGA] only			R501, 502	ERDS2TJ101	100	R651, 652	ERGI1ANJ100	10	R811	ERDS2TJ333	33K
R251, 252	ERDS2TJ104	100K	R503, 504	ERDS2TJ224	220K	R653, 654	ERGI1ANJ151	150	R812	ERDS2TJ103F	3.3
R253, 254	ERDS2TJ104	100K	R505, 506	ERDS2TJ472	4.7K	R655, 656	ERGI1ANJ151	150	R813	ERDS2TJ472	4.7K
R255, 256	ERDS2TJ101	100	R507, 508	ERDS2TJ472	4.7K	R675	ERD25FJ392	3.9K	R814	ERD25FJ330	33
R257	ERDS2TJ101	100	R509, 510	ERDS2TJ221	220	R676	ERDS2TJ822	8.2K	R901	ERD25FJ101	100
R258	ERDS2TJ221	220	R511, 512	ERDS2TJ472	4.7K	R677	ERDS2TJ473	47K	R903	ERDS2TJ183	18K
R259	ERDS2TJ472	4.7K	R513, 514	ERDS2TJ224	220K	R678	ERD25FJ472	4.7K	R904	ERDS2TJ152	1.5K
R260	ERDS2TJ473	47K	R525, 526	ERDS2TJ562	5.6K	R679	ERD25FJ221	220	R905	ERDS2TJ183	18K
R261	ERDS2TJ472	4.7K	R527, 528	ERDS2TJ102	1K	R680	ERDS2TJ104	100K	R951	ERGI1ANJ220	22
R262	ERDS2TJ824	820K	R529, 530	ERDS2TJ223	22K	R681	ERDS2TJ223	22K	R952	ERDS1FJ101	100
R263	ERDS2TJ101	100	R533, 534	ERDS2TJ392	3.9K	R682	ERDS2TJ391	390	R953	ERDS1FJ820	82
R264	ERDS2TJ221	200	R535, 536	ERDS2TJ273	27K	R683	ERDS2TJ123	12K	R1001, 1002	ERDS2TJ102	1K
R301, 302	ERDS2TJ223	22K	R545, 546	ERDS2TJ272	2.7K	R685	ERDS2TJ333	33K	R1003, 1004	ERDS2TJ332	3.3K
R303, 304	ERDS2TJ332	3.3K	R575, 576	ERDS2TJ222	2.2K	R686	ERD25FJ221	220			
R305, 306	ERDS2TJ332	3.3K									
C1	ECCKDK103PF2	0.01	C213, 214	ECCD1H181K	180P	C627, 628	ECCKD1H681K	680P	C702	ECEA1HU3R3	3.3
[EGA] except			[EGA] only			C629, 630	ECCKD2H820K	82P	C703	ECEA1HU3R3	3.3
C3, 4	ECCKDK222MF2	0.0022	C215, 216	ECCD1H181K	180P	C631, 632	ECCKD2H270K	27P	C704	ECCKD1H103ZF	0.01
[EGA] only			[EGA] only			C633, 634	ECCKD1H473JZ	0.047	C801	ECEA1U100	10
C5, 6	ECCKDK222MF2	0.0022	C217, 218	ECCD1H181K	180P	C635 [EGA] only	ECCKD1H102MD	0.01	C802, 803	ECEA1U100	10
[EGA] only			[EGA] only			C636 [EGA] only	ECCKD2H102ZEM	0.01	C804	ECCKD1H151K	150P
C101, 102	ECCKD1H820K	82P	C219, 220	ECCD1H181K	180P	C651, 652	ECCD1H681K	680P	C805	ECCKD1H333ZF	0.033
[EGA] only			[EGA] only			C653, 654	ECCD1H681K	680P	C901, 902	ECCTT1R103Y	10000
C103, 104	ECCKD1H820K	82P	C223, 224	ECCD1H820K	82P	[EGA] only			C903, 904	ECCTT1R103Y	10000
[EGA] except			[EGA] only			C655, 656	ECCD1H103ZF	0.01	C905, 906	ECEA1U330	33
C105, 106	ECQW1H222JZ	0.0022	C251	EECV2R3A3R3E	3.3F	C657, 658	ECCD1H103ZF	0.01	C907, 908	ECEA1U330	33
C107, 108	ECEA1U332	3300	C253	ECCKD1H102MD	0.001	C685, 686	ECCD1H820K	82P	C909	ECEA1U332	3300
C109, 110	ECQW1H683JZ	0.068	C254	ECCKD1H471K	470P	C687, 688	ECCKD1H681K	680P	C910	ECEA1U471	470
C111, 112	ECQW1H183JZ	0.018	C255	ECCKD1H471K	470P	C689, 610	ECCKD1H681K	680P	C912 [EGA] only	ECQW2104MS	0.1
C113, 114	ECQW1H182JZ	0.0018	C256	ECEA1CU100	10	C611, 612	ECCKD1H060CC	6P	C951, 952	ECEA1HU471	470
C115, 116	ECEA1H3R3S	3.3	C303, 304	ECQW1H273JZ	0.027	C613, 614	ECCKD1H060CC	6P	C953	ECEA1HU471	470
C117, 118	ECEA1EU101	100	C305	ECEA50NR22R	0.22	C615, 616	ECEA1CU100	10	C991	ECCKD1H103ZF	0.01
C119, 120	ECQW1H562JZ	0.0056	C351, 352	ECEA1CU470	47	C617, 618	ECCKD1H102MD	0.001			
C201	ECCKD1H103ZF	0.01	C353, 354	ECCKD1H121K	120P	C623, 624	ECEA2AU100	10			
C203, 204	ECCKD1H333ZF	0.033	C355, 356	ECQW1H563JZ	0.056	C625, 626	ECCKD1H681K	680P			
C209, 210	ECCD1H181K	180P	C357	ECEA1CU470	47						
[EGA] only			C401, 402	ECEA1AU471	470						
C211, 212	ECCD1H181K	180P	C403	ECEA1AU471	470						
[EGA] only			C404	ECEA1AU102	1000						

Ref.No.	Part No.	Description
INTEGRATED CIRCUITS		
IC101	M5218P	Integrated Circuit
IC201	TC9163M	Integrated Circuit
IC202	TC9164M	Integrated Circuit
IC251	UPD7506C043	Integrated Circuit
IC252, 403	MN4069UB	Integrated Circuit
IC253, 254	DN74LS145	Integrated Circuit
IC401, 402	UPD4066BC	Integrated Circuit
IC501	M5219P	Integrated Circuit
IC601	AN7062	Integrated Circuit
IC603	M5218P	Integrated Circuit
IC801	MN1421STA	Integrated Circuit
IC901	AN78M05	Integrated Circuit

Ref.No.	Part No.	Description
TRANSISTORS		
Q101~104	2SK360-GR	Transistor
Q251, 252	UN4211	Transistor
Q253	2SA722-S	Transistor
Q301, 302, 352	2SK301-S	Transistor
Q351	2SD1265-0	Transistor
Q401~404	2SA722-S	Transistor
Q405, 406	2SC3112	Transistor
Q501~504	2SK170-GR	Transistor
Q601, 602	2SA1123-R	Transistor
Q603, 604	2SC2631-R	Transistor
Q605, 606	2SC1685-QNC	Transistor
Q607, 608	2SC3467-D	Transistor
Q609, 610	2SA1370-D	Transistor
Q611, 612	2SC3288A-Y	Transistor
Q613, 614	2SA1306A-Y	Transistor
Q615~618	2SC3280-R	Transistor
Q619~622	2SA1301-R	Transistor
Q675	2SD592ANC-Q	Transistor
Q676, 701, 702	2SC1845-E	Transistor
Q679	2SA992E	Transistor
Q680	2SB621	Transistor
Q703, 704, 706, 801, 905	2SC1685-QNC	Transistor
Q705, 707, 708	2SA722-S	Transistor
Q709, 803	2SC3112	Transistor
Q802	UN4212	Transistor
Q901	2SD1265-0	Transistor
Q902	2SB941-Q	Transistor
Q903, 904	2SK301-S	Transistor

DIODES		
D101, 102, 251~254, 407, 708, 709, 801	MA165	Diode
D255~261	LN41YCPHL	LED
D262~269	LN81CPHL	LED
D270, 301	⊗20A90	Diode
D271, 272	MA27V-A	Diode
D351, 401	MA4150H	Diode
D352, 353, 575, 576	LN846RP	LED
D402	MA4068M	Diode
D403~406	MC911	LED
D601, 602	⊗MA162A	Diode
D603~606, 609~612	⊗20A90	LED
D607, 608, 613, 614	MA27V-A	Diode
D675, 906	MA4180M	Diode
D677	MA4200M	Diode
D701~707, 710	MA167	Diode
D708, 709, 801	MA165	Diode
D901	△SVDS10VB20F	Rectifier
D902~905, 951~954	△1SR35200	Rectifier
COILS		
L1, 2[EGA] only	ELQ050D15	Choke Coil
L201~204	SLQV471-1P3	Choke Coil
[EGA] only		
L601, 602	SLQY18G-10	Choke Coil
L651~654	SLQY07G-30	Choke Coil
[EGA] only		
L1001, 1002	SLW1Z37-P	Choke Coil


■ EXPLODED VIEW

Ref. No.	Part No.	Description
CRYSTAL		
X251	SVFCSB400P-M	Crystal
VARIABLE RESISTORS		
VR351	EWJKA054B15	Volume, 100k Ω (B)
VR501	EWHFKA002G15	Balance, 100k Ω (G)
VR502, 503	EVCKEA000C15	Tone, 100k Ω (C)
VR601, 602	EVNKA6A00B13	TC Adj, 1k Ω (B)
COMPONENT COMBINATIONS		
Z401	EXPB85223K	22k Ω
Z601~604	ERF3GBKR22N	0.22 Ω ($\times 2$)
Z901	Δ SXRF203ZSM	0.01 μF ($\times 2$)
[EGA] except		
THERMISTERS		
TH601, 602	ERTD2ZHL103S	Thermistor, 10k Ω
RELAY		
RLY701	Δ SSV124	Speaker
THERMAL DETECTOR		
PS801	SRPBG47101	Posistor
LAMP		
PL801	XAMS12S500	Safety Ind.
FUSE		
F1 [EK]	Δ XBA2C63T80	250V, T 6.3A
F1 [EGA]	Δ XBA2C31TR0	250V, T 3.15A
F1 [other]	Δ XBA2C63TR0	250V, T 6.3A
F2 [EK]	Δ XBA2C31T80	250V, T 3.15A
F2 [EGA]	Δ XBA2C31TR0	250V, T 3.15A
except		
SWITCHES		
S1, 4~6	SSH486	Phono Selector, Mode, Loudness, Filter
S2	SSH1183	Aux2
S3	SSH1184	Muting
S7	SSH2090	Tone Control
S8, 9	SSR225	Turnover
S10~17	SSG13	Frequency
S18, 19	SSH2089	Input Selector
S20	Δ ES890227S	Power Source
S20 [other]	Δ SSH1109	Power Source
S21	Δ SSH1158	Impedance Selector
S22 [EGA]	Δ ESE37262	Voltage selector
except		
S23	RSS42A	Filter


Ref. No.	Part No.	Description
CABINET and CHASSIS PARTS		
1	SGE1729	Terminal Cover (1)
2	SGWUV10X-KM	Front Panel Ass'y (1)
3	SGWUV10X-KM1	Indication Plate (1)
4	SDU270	Filter (1)
5	SBCUV10X-KM	Button, Input Selector (1)
6	SUS782	Spring (1)
7	SBN1192	Knob, Volume (1)
8	SGXUV10X-KN	Sub panel Ass'y (1)
9	SGXUV10X-KM1	Sub panel Ass'y (1)
10	SBN1193	Knob, Balance (3)
11	SBC439-2	Button, Speaker (2)
12	SJJ638	Headphone Jack (1)
13	SBC686	Button, Phone (1)
14	SMCUV10X-KM	Power Source Shield Cover (1)
15	SDU268	Filter, Lamp (1)
16	SMP388	Lamp Case (1)
17	SMP387-1	LED Case (1)
18	SBC719-1	Button (7)
19	SJF3061-2N	Terminal Board (1)
20	SBC708	Button, Muting (1)
21	SHR9756	Spacer (1)
22	SBN1194	Knob (2)
23 [EK]	SKCUV10X-KK	Cabinet (1)
23 [other]	SKCUV10X-KM	Cabinet (1)
24 [EGA]	SJT347	Fuse Holder (2)
24 [other]	SJT347	Fuse Holder (4)
25	SKU8990-5	Bottom Board (1)

Ref. No.	Part No.	Description
CABINET and CHASSIS PARTS		
26	SK1295	Foot (4)
27	SHR9755	Holder (1)
28	SGWUV10X-KM	Bracket (1)
29	SUV2910-1	Bracket (1)
30	SML107-12	Bracket, Power Transformer (1)
31	SHG6355	Rubber, Power Transformer (2)
32	SUV2909	Bracket (1)
33	SHG1635	Rubber (2)
34	SMN1953	Bracket (1)
35	SUV2915	Bracket (1)
36 [EK]	SHR129	Bushing, AC Cord (1)
36 [other]	SHR127	Bushing, AC Cord (1)
37 [EW, XA]	Δ SJA111	AC Cord (1)
37 [EK]	Δ QFC1205M	AC Cord (1)
37 [XL]	Δ RJA79ZA	AC Cord (1)
37 [other]	Δ SJA97	AC Cord (1)
38 [XA]	Δ SJS601-3	AC Outlet only (1)
39 [D]	SGP6390-7A	Rear Panel (1)
39 [EGA]	SGP6390-8A	Rear Panel (1)
39 [XA]	SGP6390-9A	Rear Panel (1)
39 [EK]	SGPUV10X-KK	Rear Panel (1)
39 [other]	SGPUV10X-KF	Rear Panel (1)
40	SJF4817	Terminal Board, Speaker (1)
41	SJF3059N	Terminal Board (1)
42	SJF3057N	Terminal Board (2)
43	SJS104	Socket (5)
44	SJP9205-2	Pin (2)
45	SBC165	Button (1)
46	SHR9766	Holder (1)
47	SHR9767	Holder (1)
48	SUV2951	Bracket (1)
49	SHR401-1	Look Pin (1)
50	SMC1206	Shield Plate (1)
51	SUV2828	Bracket (1)
52	SUV2952	Bracket (1)
53	SHR401-1	Look Pin (4)
SCREWS, NUT and WASHERS		
N1	XTB3-8JFZ	Tapping, $\phi 3 \times 8$ (7)
N2	XTB3-8GFZ	Tapping, $\phi 3 \times 8$ (6)
N3	SNE4021	Nut (4)
N4	ϕ XSXN3-6BVS	$\phi 3 \times 6$ (12)
N5	ϕ XWA3BFZ	Washer, $\phi 3$ (12)
N6	XTBS3-8JFZ1	Tapping with Detent, $\phi 3 \times 8$ (15)
N7	SNE2095-5	Cabinet (6)
N8	XTW3-8T	Tapping with Washer, $\phi 3 \times 8$ (10)
N9	XTBS3-8BFR1	Tapping with Detent, $\phi 3 \times 8$ (4)
N10	XTW3-8TFR	Tapping with Washer, $\phi 3 \times 8$ (4)
N11	XTW3-8TFZ	Tapping with Washer, $\phi 3 \times 8$ (2)
N12	SNE2117-1	Transistor (8)
N13	XTB4-8F	Tapping, $\phi 4 \times 8$ (4)
N14	ϕ XSXN3-6BVS	Tapping, $\phi 3 \times 6$ (4)
N15	ϕ XWA3BFZ	Washer, $\phi 3$ (4)
N16	SHV40L150	Washer (1)
N17 [EGA]	XTBS3-8JFZ1	Tapping with Detent, $\phi 3 \times 8$ (1)
N17 [other]	XTW3-8T	Tapping with Washer, $\phi 3 \times 8$ (1)

Ref.No.	Part No.	Description
ACCESSORIES		
A1 [XA]	SQF12429	Instruction Book (1)
A1 [EGA]	SQF12430	Instruction Book (1)
A1 [other]	SQF12428	Instruction Book (1)
A2	SKL281-1	Foot (2)
A3	SHV39K50	Washer (2)
A4	XTB3+14J	Tapping Screw, $\varnothing 3 \times 14$ (2)
A6 [XA] only	Δ SJP5213-1	Plug (1)
A7 [XA] only	Δ SJP5215	Plug (1)
PACKING PARTS		
P1 [EV, XA]	SPG5334	Carton Box (1)
P1 [E]	SPG5337	Carton Box (1)
P1 [EX]	SPG5338	Carton Box (1)
P1 [other]	SPG5336	Carton Box (1)
P2 [EV, EK, XA]	SPS4553-1	Pad, Left (1)
P2 [other]	SPS4553-3	Pad, Left (1)
P3 [EV, EK, XA]	SPS4554-1	Pad, Right (1)
P3 [other]	SPS4554-3	Pad, Right (1)
P4	SPS4488	Pad, Upper (1)
P5	SPP730	Polyethylene Bag (1)

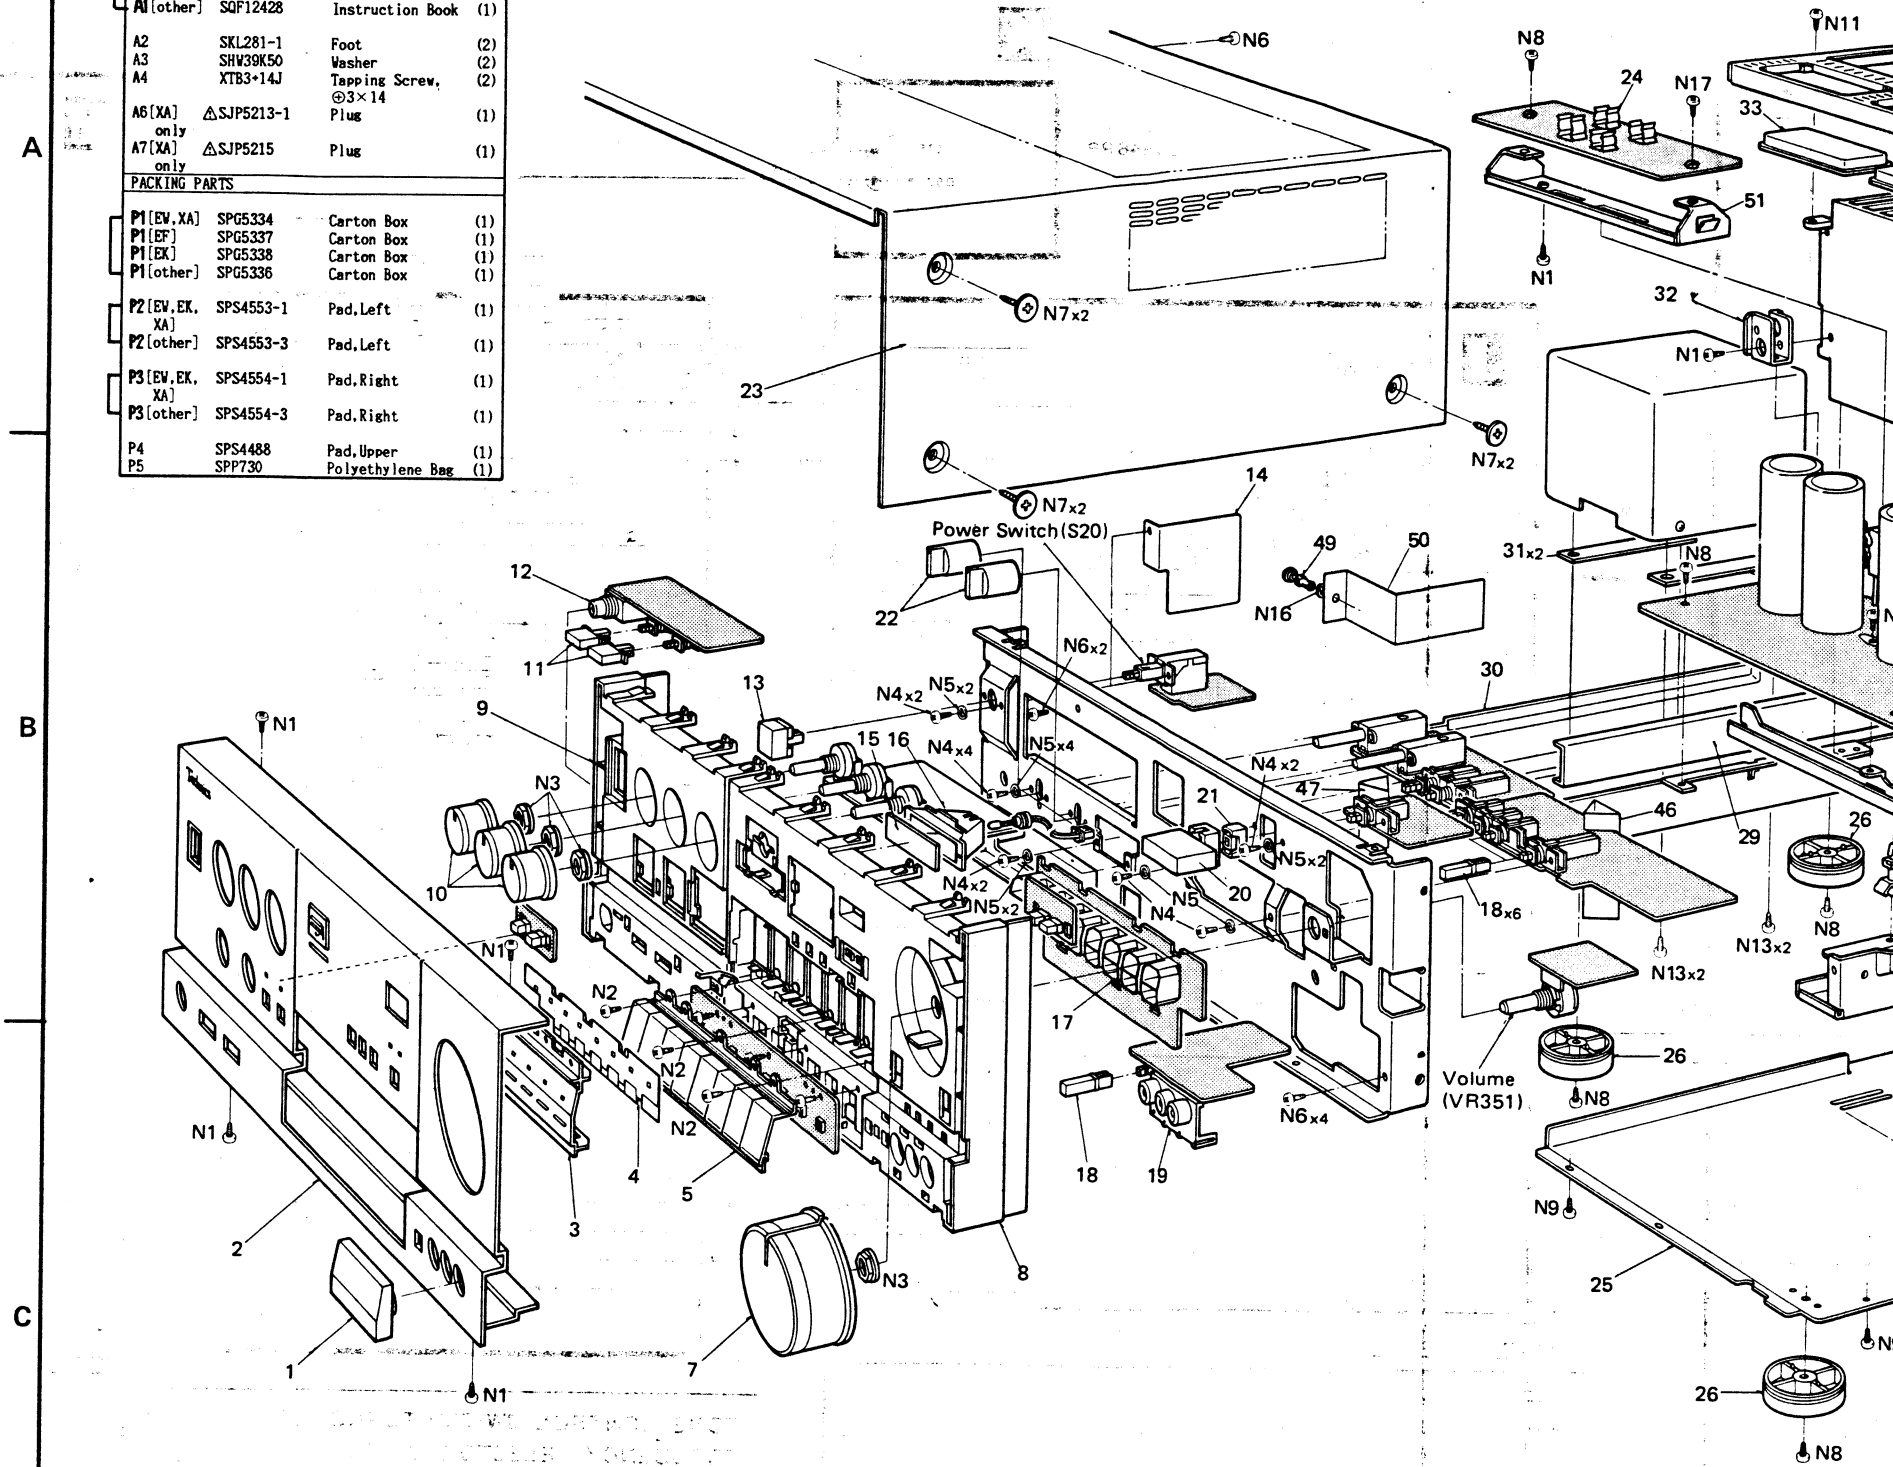





A	23																																	
B	10 9 12 11										13 15 22 16								21 20 14 47 49 50 18 30 31										24	32	51 33			
C	2 1		3 4 5 7										8 17 18								19												25	26 26

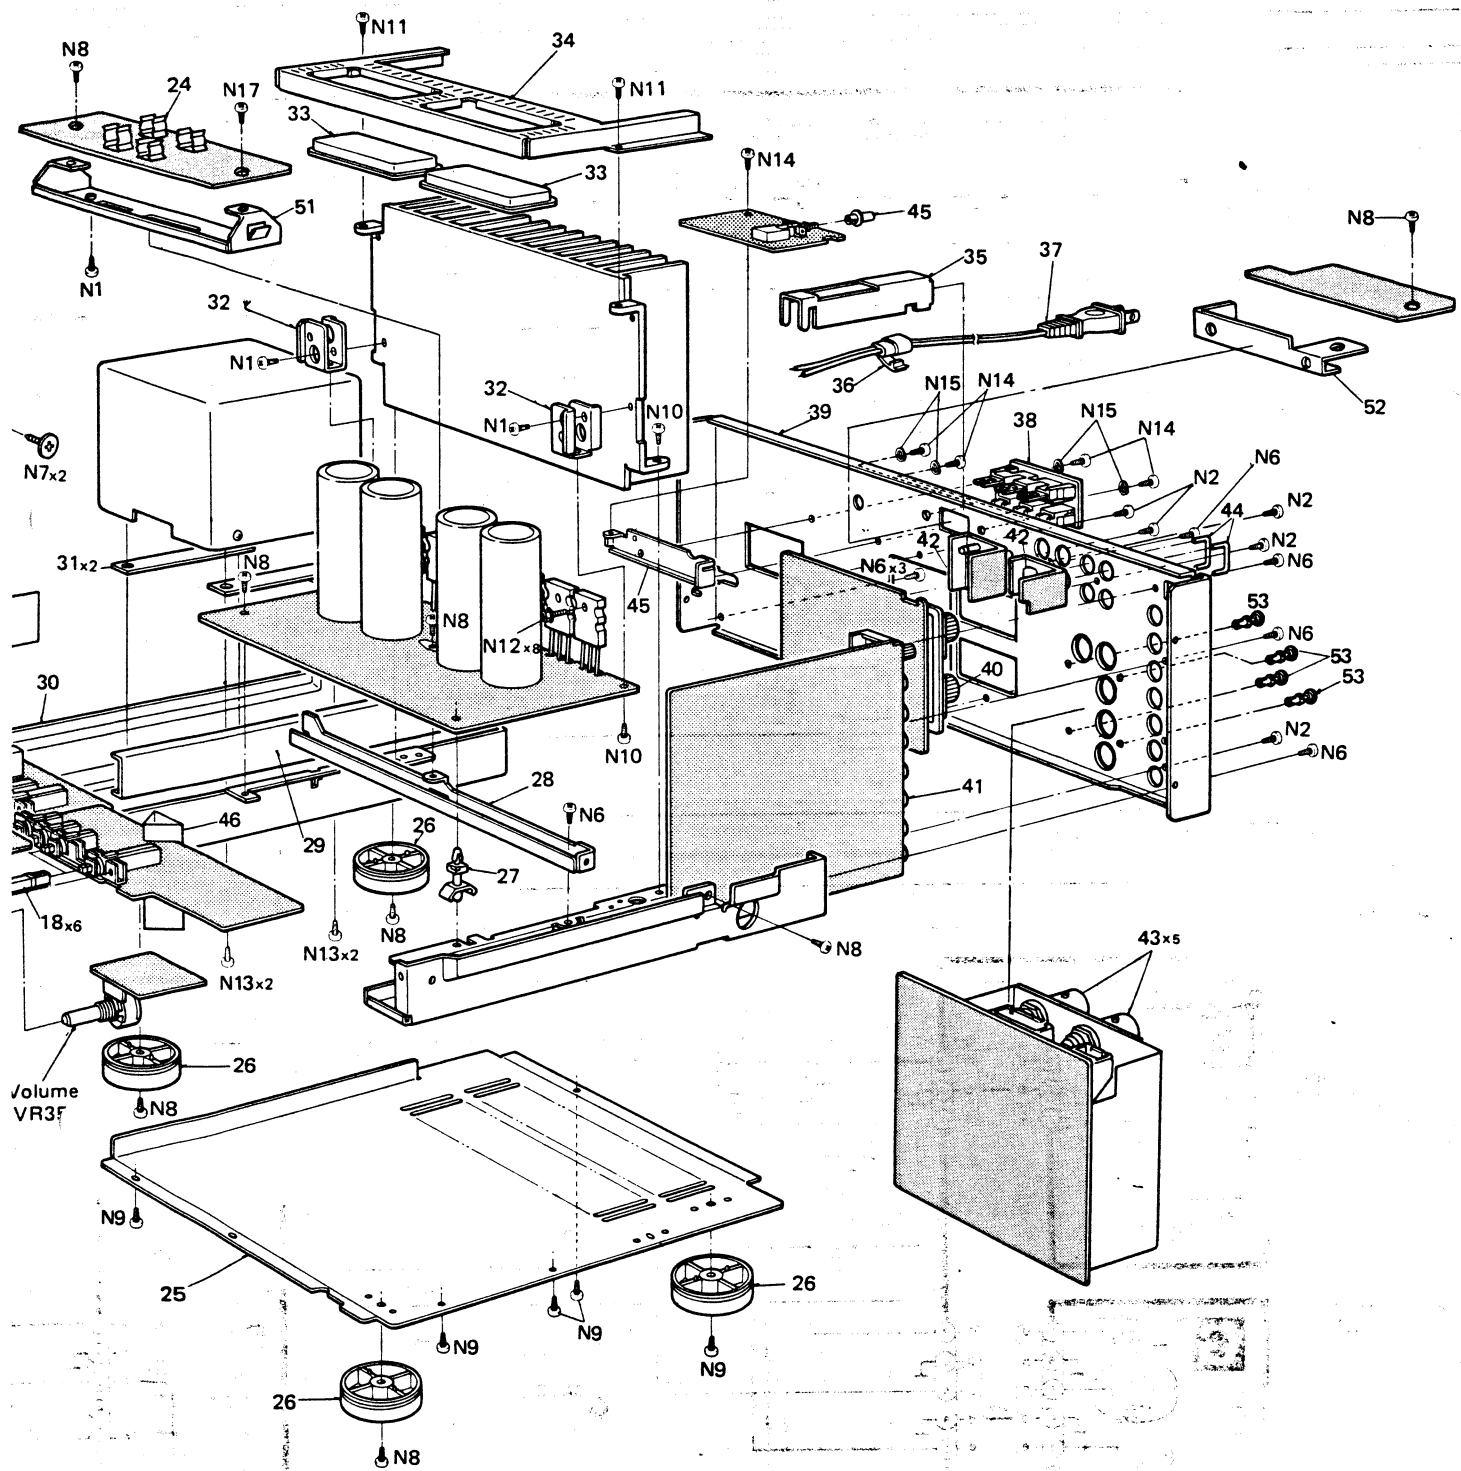

24	32	51 33	32	34 33	39 36	45	35 38	37	52
18 30 31	46	29	26	27 28	46	42 41 40	43	44	53
25	26 26				26				



INPUT LED

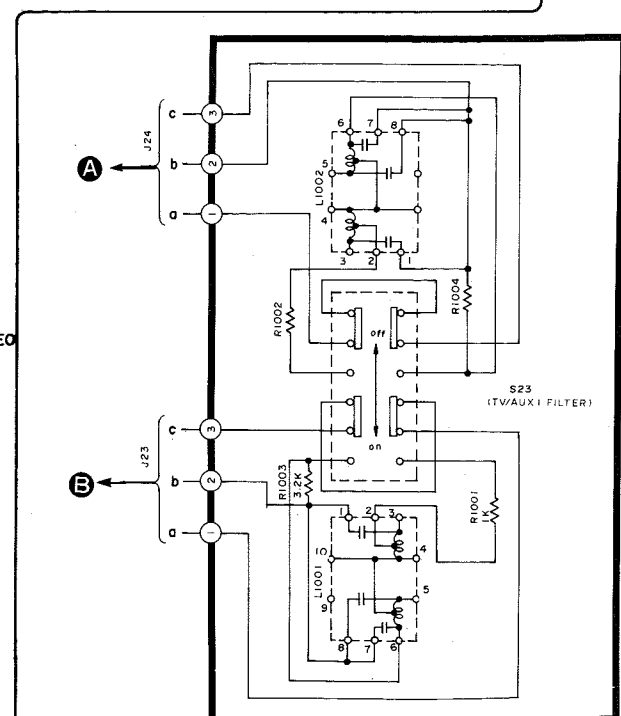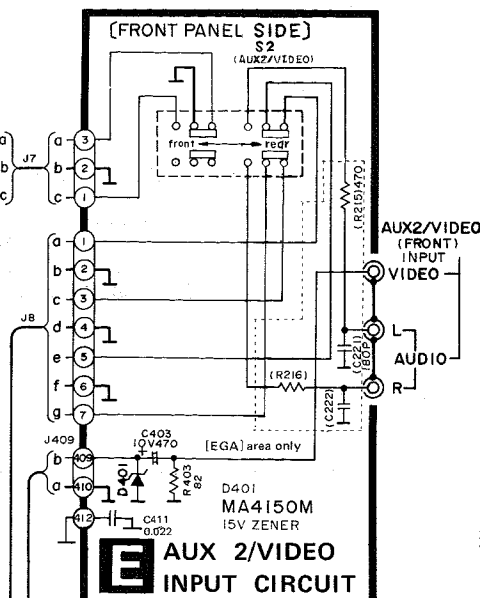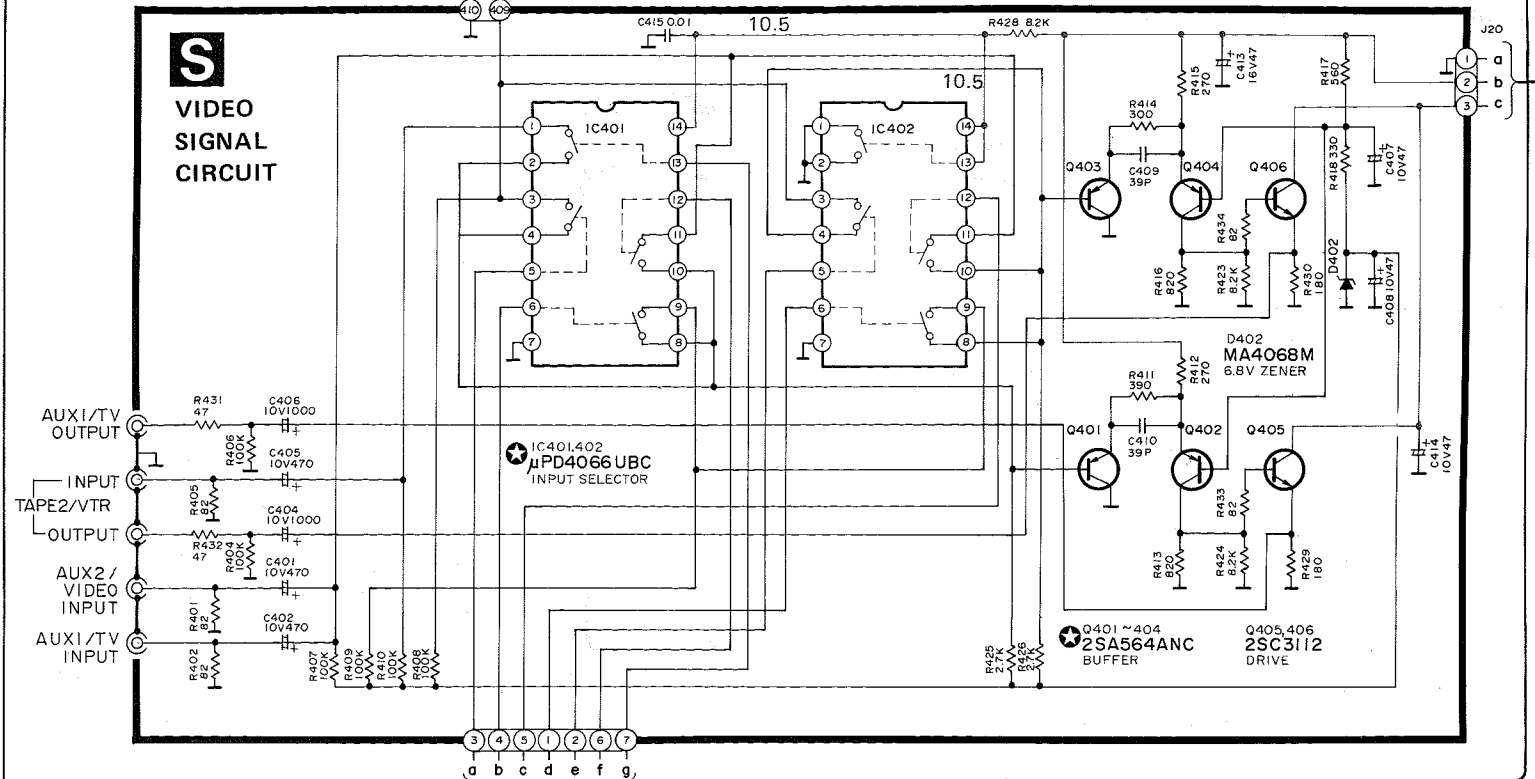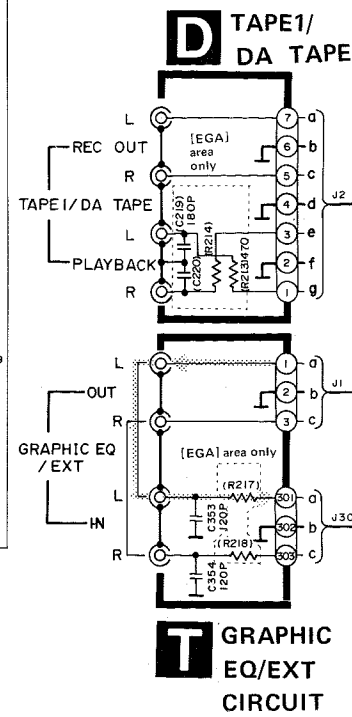

R TV/AUX1 INPUT CIRCUIT

SYNCHRO BIAS/POWER AMPLIFIER CIRCUIT

REGULATOR/RECTIFIER CIRCUIT


SPEAKER SELECTOR CIRCUIT

IMPEDANCE SELECTOR CIRCUIT

VOLTAGE AMPLIFIER

DC SERVO AMP CIRCUIT

ICQ BIAS CONTROL CIRCUIT

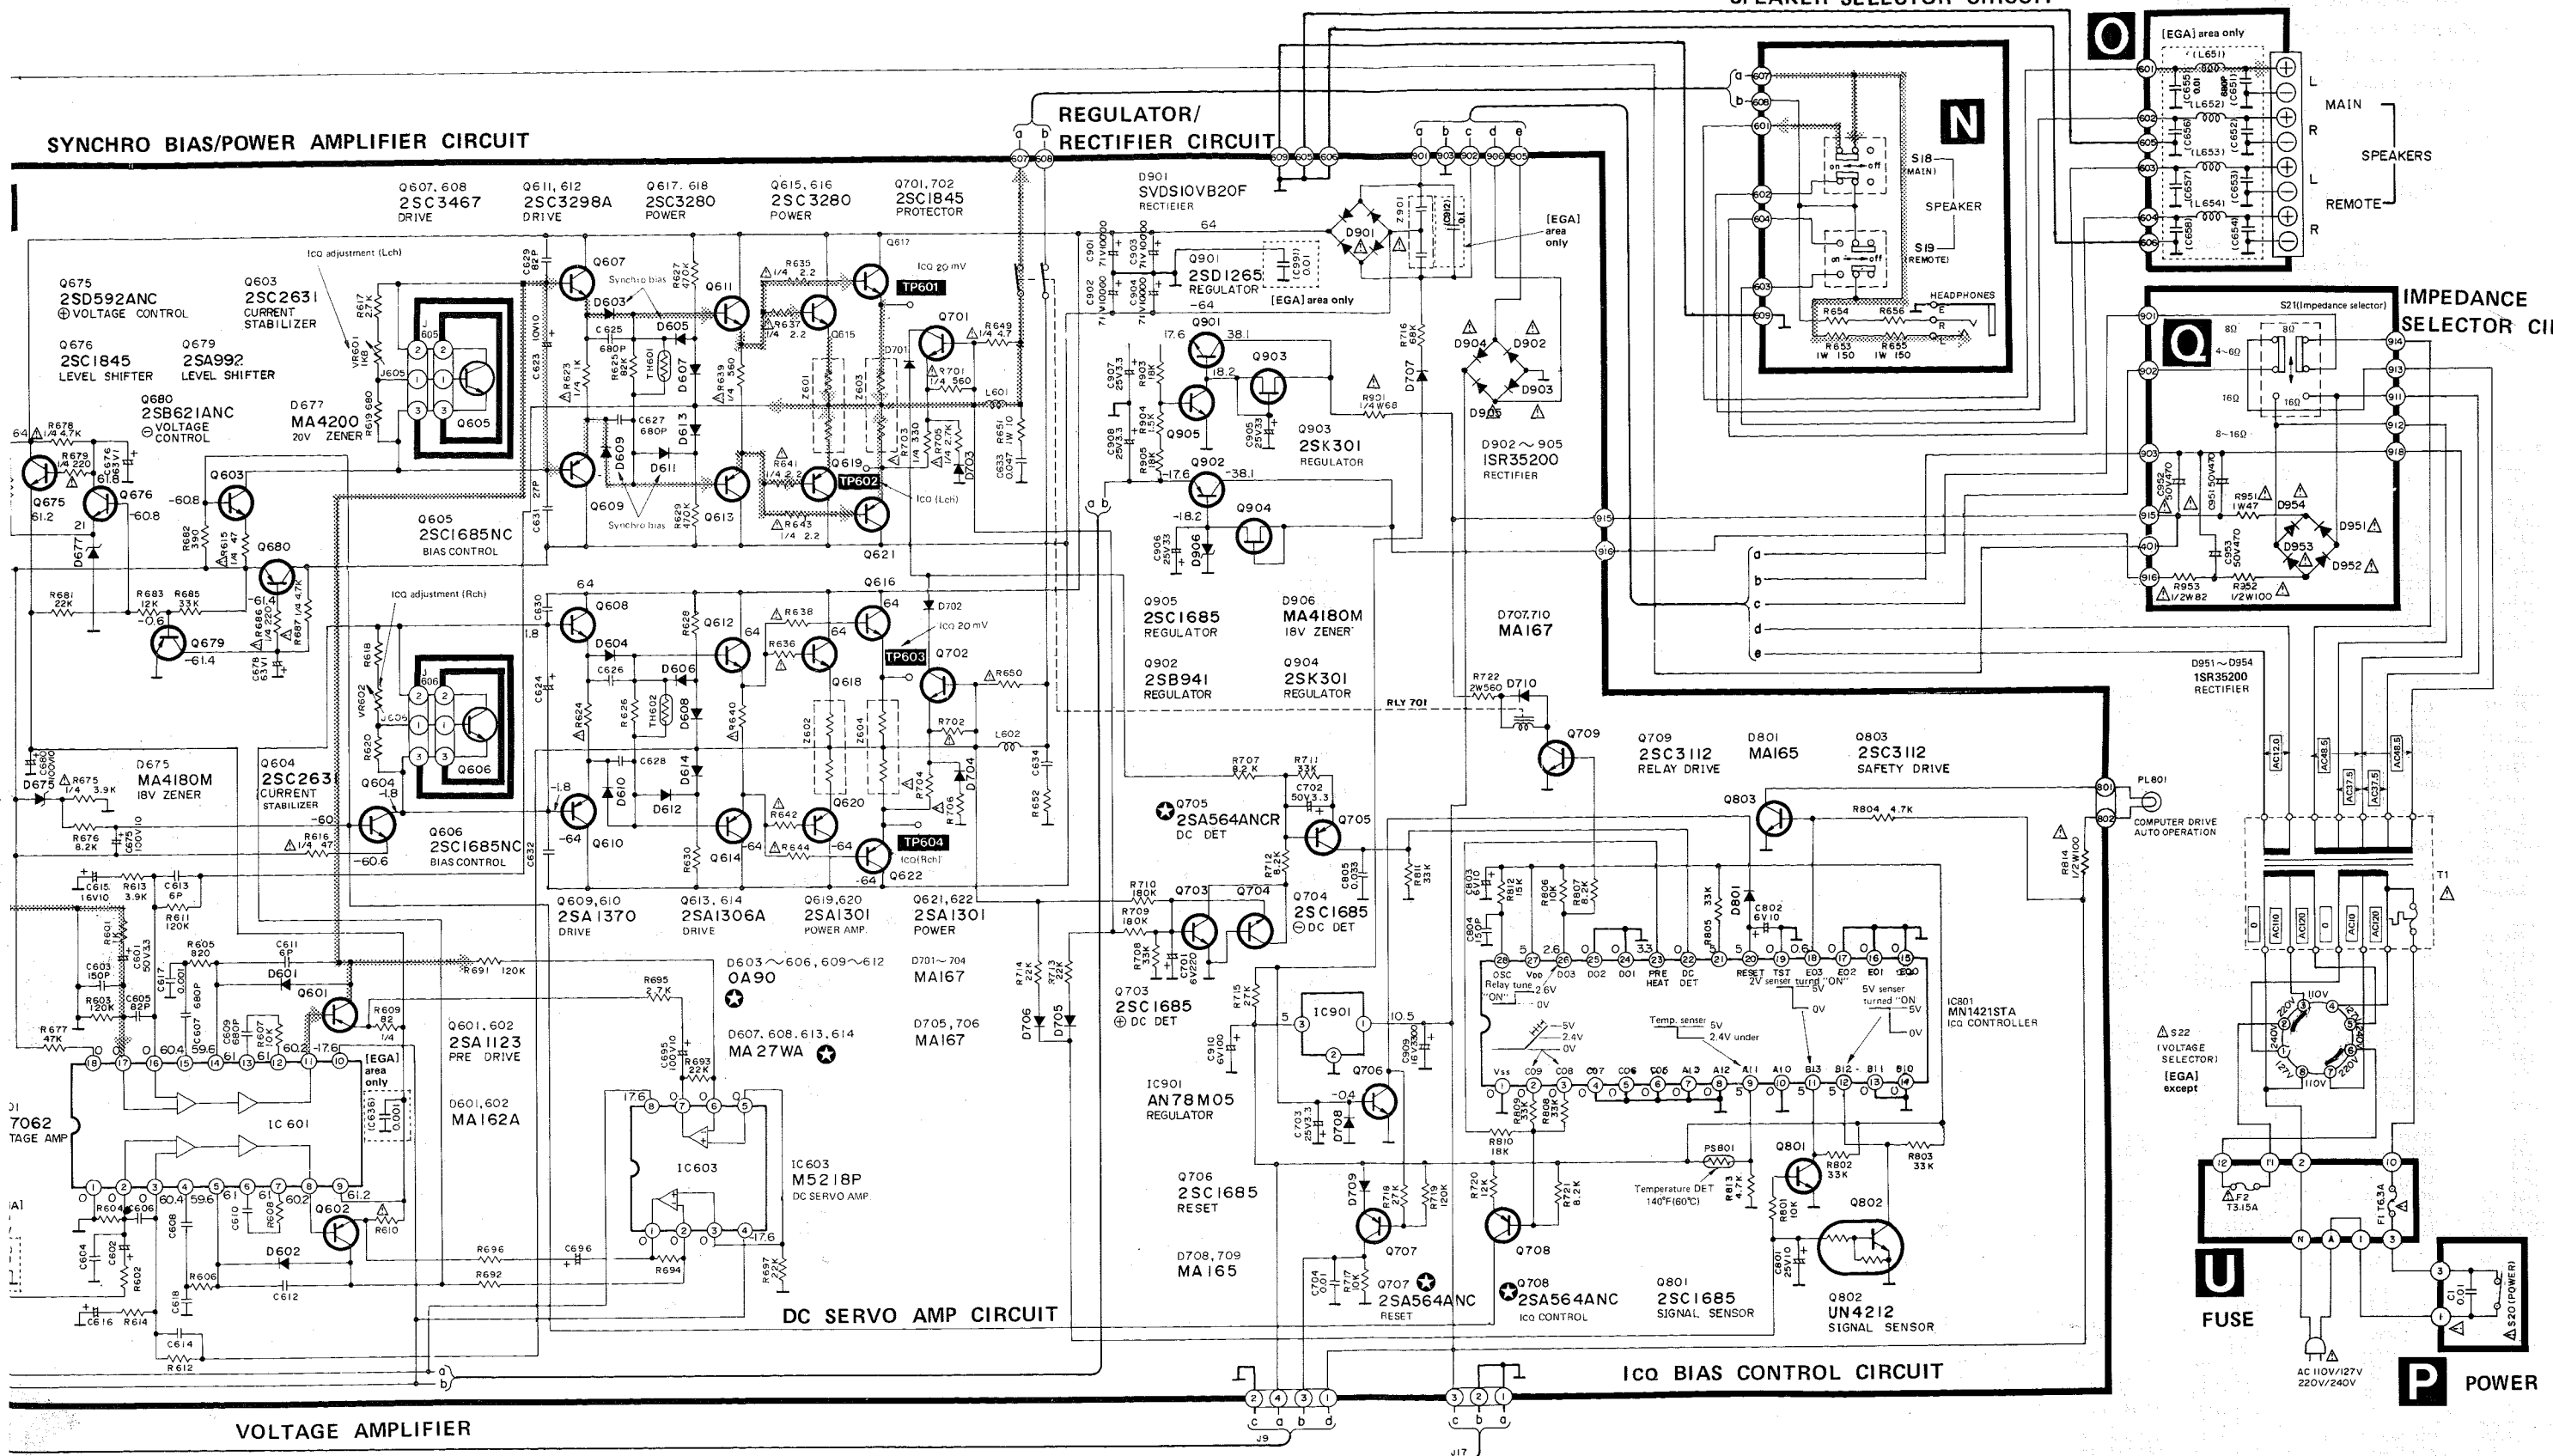



- The part No. of transistors, IC and diodes mentioned in the schematic diagram stand for production part No. Regarding the part No. with  mark, the production part No. are different from the replacement part No. Therefore, when placing an order for replacement part, please use the part No. in the replacement parts list.
1. **S1:** Phono selection switch in "MM" position.
MM ↔ MC
 2. **S2:** AUX 2 / Video selection switch in "rear" position.
front ↔ rear
 3. **S3:** Muting switch in "off" position.
off ↔ on (-20dB)
 4. **S4:** Mode switch in "stereo" position.
stereo ↔ mono
 5. **S5:** Loudness switch in "off" position.
off ↔ on
 6. **S6:** Subsonic switch in "off" position.
off ↔ -20Hz
 7. **S7-1, 7-2:** Tone control switch in "on" position.
tone on ↔ defeat
 8. **S8:** Bass turnover switch in "500Hz" position.
500Hz ↔ 250Hz ↔ 125Hz
 9. **S9:** Treble turnover switch in "8kHz" position.
8kHz ↔ 4kHz ↔ 2kHz
 10. **S10-S17:** Input selection switch
S10: Phono, **S11:** tuner, **S12:** CD,
S13: AUX 2 / Video, **S14:** AUX 1 / TV,
S15: TAPE 2 / VCR,
S16: TAPE 1 / DA TAPE, **S17:** REC mode
 11. **S18:** Main speaker switch in "on" position.
on ↔ off
 12. **S19:** Remote speaker switch in "off" position.
on ↔ off
 13. **S20:** Power switch in "on" position.
 14. **S21:** Impedance selection switch in "4 ~ 6Ω / 8Ω" position.
4 ~ 6Ω ↔ 8 ~ 16Ω
8Ω ↔ 16Ω
 15. **S22 (Except for [EGA]):** Voltage selector switch "220V" position.
127 ↔ 110V ↔ 220V ↔ 240V
 16. **S23:** TV/AUX 1 input filter switch in "on(TV)" position.
off ↔ on(TV)
 17. Indicated voltage values are the standard values for the unit measured by the DC electronic circuit tester (high-impedance) with the chassis taken as standard. Therefore, there may exist some errors in the voltage values, depending on the internal impedance of the DC circuit tester.
 18.  Phono signal (Lch)
 19.  Positive voltage lines or Negative voltage lines.
 20. Important safety notice:
Components identified by  mark have special characteristics important for safety. When replacing any of these components use only manufacturer's specified parts.